



WALL INTERIOR TV STAND

---

V3 [ LOW TYPE ]

Parts List 部品リスト

# Accessory parts 付属部品

Some parts are included in case of loss.

The extra parts are spares.- The number in the tables is the required number.






 



 
 

- Use M, N and O that match the TV you are installing.
- Please keep any extra parts as you may need them when you replace the TV.

紛失の時の為に、余分に入れている部品もあります。余った部品は予備です。表の数は、必要数です。

- M,N,O は取り付けるテレビに合ったものをお使いください。
- テレビを交換する際に必要になる場合がありますので、余った部品を保管することをおすすめします。







## Body assembly parts
 
### 本体組立用部品

<b>A</b>	 × 4	<b>B</b>	 × 4	<b>C</b>	 × 14 (large 大)
<b>D</b>	 × 4 (small 小)	<b>E</b>	 × 4 (small 小)	<b>F</b>	 × 6 (large 大)
<b>G</b>	 × 2	<b>H</b>	 × 2	<b>I</b>	 × 2
<b>J</b>	 × 1 (thick 太)	<b>K</b>	 × 1 (thin 細)	<b>L</b>	 × 1 (large 大)

 

 
 

## TV installation parts

### テレビ取付用部品

<b>M</b>	 × 4 (small 小)	<b>N</b>	 × 4 (medium 中)	<b>O</b>	 × 4 (large 大)
	 × 4 each (15,25,35mm) × 4 each ずつ		 × 4 each (15,25,35,45,55mm) × 4 each ずつ		 × 4 each (15,25,35,45mm) × 4 each ずつ

## Fall prevention parts

### 転倒防止用部品

 
 

 
<b>P</b>	 × 1	<b>Q</b>	 × 1	<b>R</b>	 × 1
<b>S</b>	 × 2	<b>T</b>	 × 1 (small 小)		

paper measure  
紙メジャー

screw hole measurement tool  
ネジ穴計測ツール



spacer (large)  
スペーサー (大)

spacer (small)  
スペーサー (小)

 × 1	 × 1	 × 8	 × 8
---	---	---	---

# Main body parts 本体部品の確認
  
## Completion 完成図

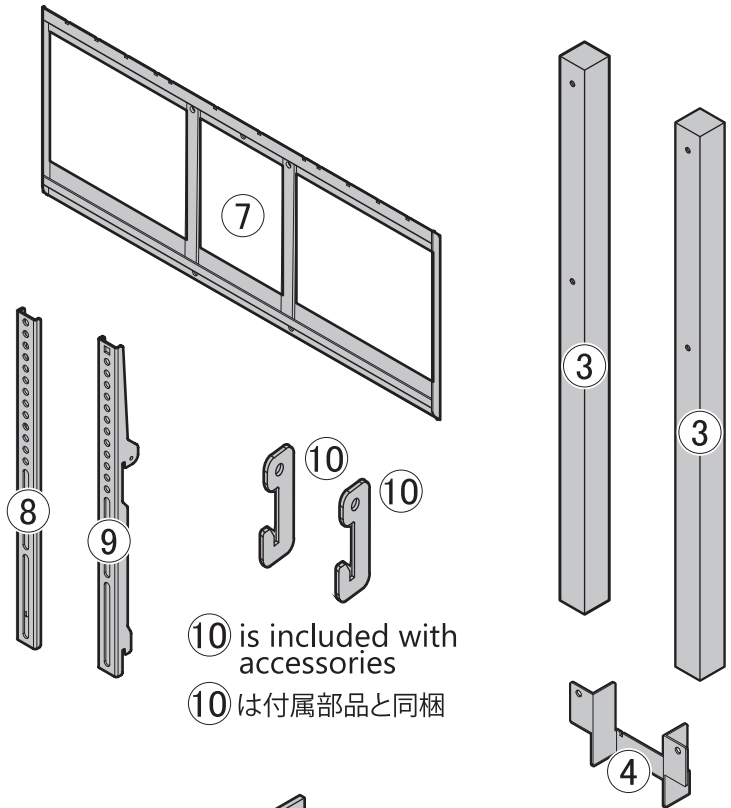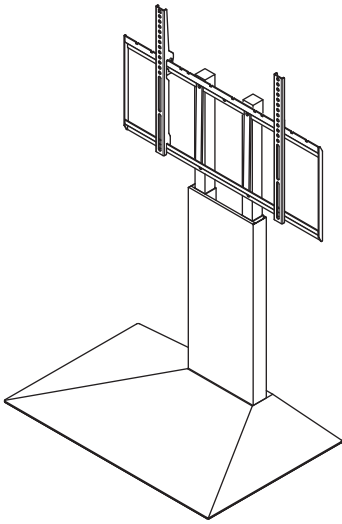


⑩ is included with accessories

⑩は付属部品と同梱

## Sold separately 別売

 
Options to install during assembly  
組み立て中に取り付けるオプション

SHELF  
棚板

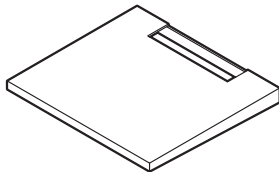


Before attaching ⑦ to the stand  
⑦をスタンドに取り付ける前

 MULTI DEVICE HOLDER  
マルチデバイスホルダー



Before attaching ⑧⑨ to the TV  
⑧⑨をテレビに取り付ける前

 
HDD HOLDER  
HDDホルダー

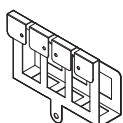

Before attaching the TV to the stand  
テレビをスタンドに取り付ける前

⑤ and ⑥ are packed in layers

 ※⑤⑥は重ねて梱包されています。

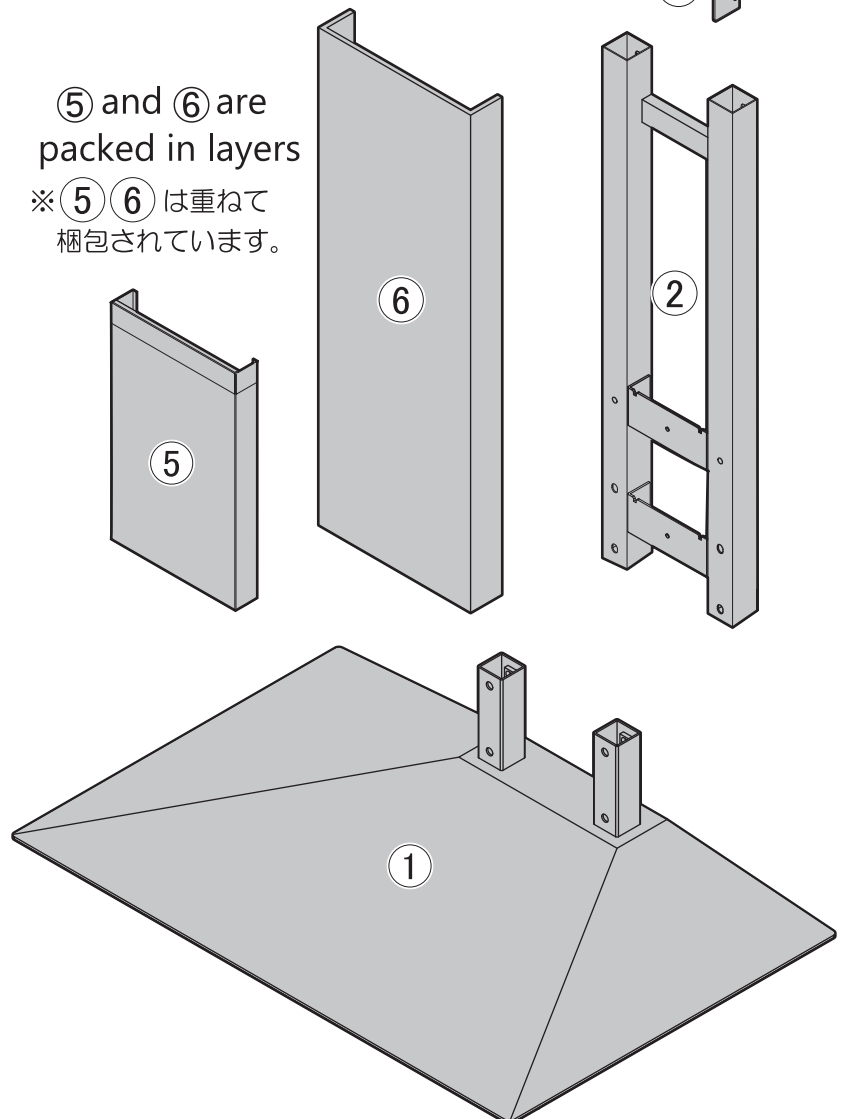



# WALL INTERIOR TV STAND

---

## V3 [ LOW TYPE ]

## 組立説明書 (第4版)

この度は、お買い上げいただき誠にありがとうございました。  
この商品を末永く、安全にお使いいただくために、  
この「組立説明書」をよく読み正しくご使用ください。  
また、これらを必要に応じて見られるよう、大切に保管してください。

### 免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



注意

- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。
- ・小さなお子様がいらっしゃるご家庭では、誤ってスタンドやテレビを転倒させてしまう可能性があるため、必ず転倒防止金具で固定してご使用ください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

この商品は日本の株式会社ナカムラの企画・品質管理によって中国（原産国）で製造しました。  
品質向上の為に改良に伴い一部仕様異なる場合があります。

販売元 株式会社ナカムラ  
〒145-0065 東京都大田区東雪谷 4-20-10

公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ [info@equals.tokyo](mailto:info@equals.tokyo)

お問い合わせフォーム



**⚠ 組立の前に必ずご確認ください。**

 
**本製品は、テレビの機種によってお取り付けできないものがあります。  
下記を参考に、組み立てる前に取り付けが可能か必ずご確認ください。**

**1. お手持ちのテレビが下記3項目すべてに該当することをご確認ください。**

- 1-1. テレビのサイズが 32V ~ 80V であること
  - 1-2. テレビの重量 (スタンドを含まず) が 50kg 以下であること
  - 1-3. テレビメーカーが壁掛け対応としているテレビであること
- ※背面形状などの諸条件があっていたとしても、壁掛け非対応としているテレビがあります。

**2. お手持ちのテレビの背面形状をご確認ください。**

2-1. 4カ所のネジ穴の間隔が、下記 A.B の条件を満たしている。

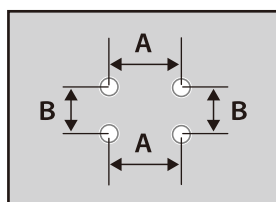


**A : 10, 20, 30, 40, 50, 60 cm**  
(いずれかに該当)  
**B : 10 ~ 40 cm の範囲内**




2-2. 上記の条件を満たし、下記のいずれかに該当すること。

 
**4カ所のネジ穴が凸部分に  
すべてある**

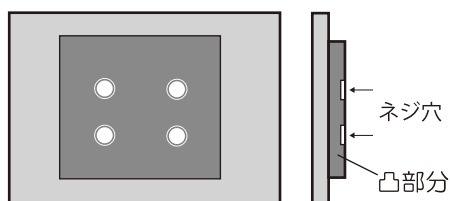

**4カ所のネジ穴の面に  
凸部分がない**

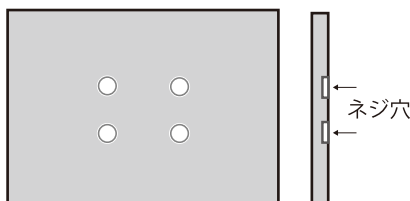 


**4カ所のネジ穴の下にある  
凸部分の段差が 4cm 以下**

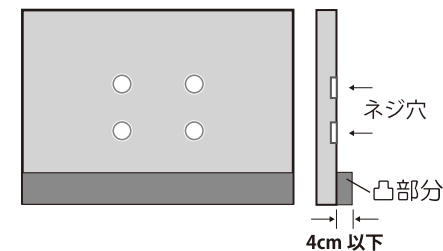 


**✗** 下記のようなテレビは取り付けできません。

 
**4カ所のネジ穴の一部が  
凸部分にある**

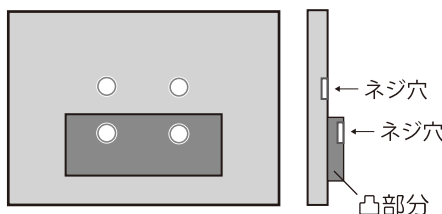



**4カ所のネジ穴の間に  
凸部分がある**

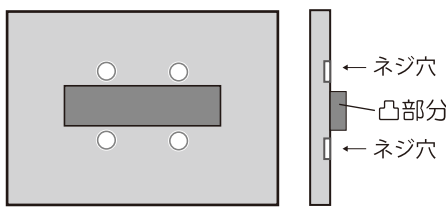 


**4カ所のネジ穴の下にある  
凸部分の段差が 4cm 以上ある**

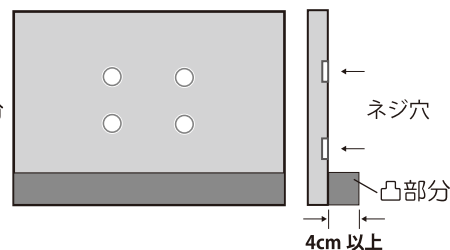 

### 3. 耐荷重と棚板の取り付けについてのご注意

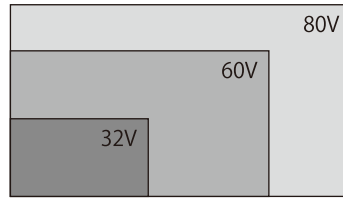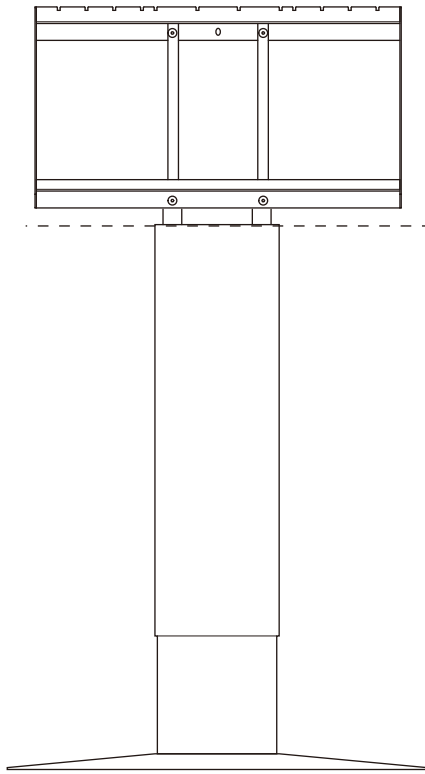  

 1. テレビの重量 (スタンドを含まず) が **50kg** 以下であること

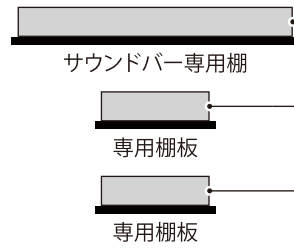

2. 棚板に載せる総重量は **15kg** まで


3. 棚板の取り付けは**最大3枚**まで

※種類を問わず


#### 各棚板の耐荷重



 
※2022年8月現在

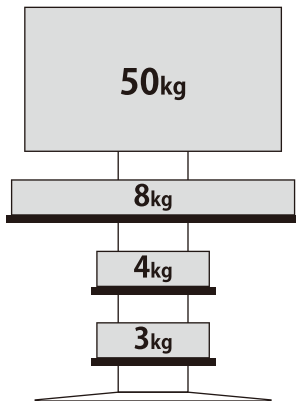


棚板の有無に関わらず、  
テレビの重量は**50kg**以下

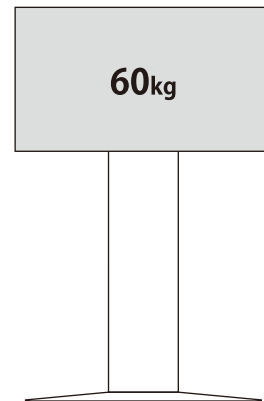 

棚板に載せる総重量は**15kg**まで

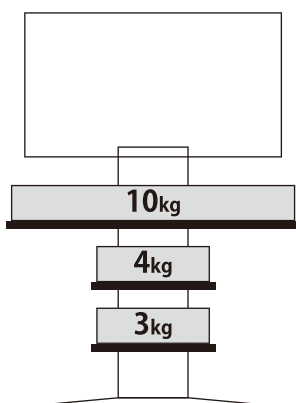 


棚板の取り付けは**最大3枚**まで

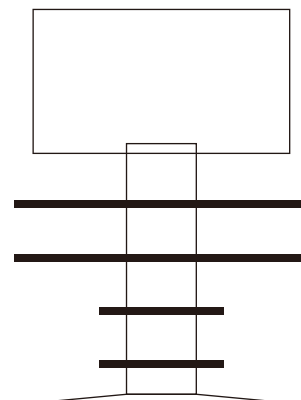 

## 安全上のご注意




 人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。  
人への危害、財産の損害を防止するため、必ずお守りください。

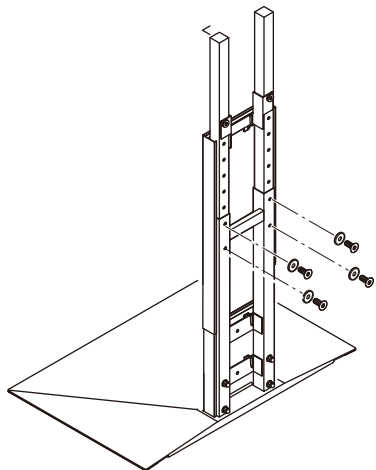


**ボルトやネジ類は所定の場所に  
確実に締めつける。**

 テレビスタンドが倒れたり、テレビが脱落して、  
破損やけがの原因となります。

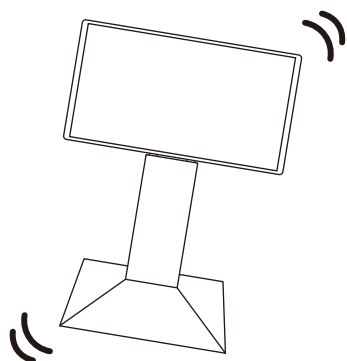


**不安定な場所に設置しない。**

 十分な耐荷重強度のある、平坦で安定した場所に設置する。  
(傾斜面や平坦でない面、カーペット・畳などの安定しない面、  
変形する面などに設置しない)

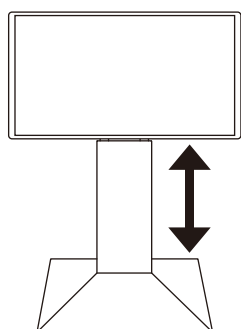


**テレビを設置したまま  
高さ調整をしない。**

 テレビスタンドが倒れたり、テレビが脱落して、  
破損やけがの原因となります。

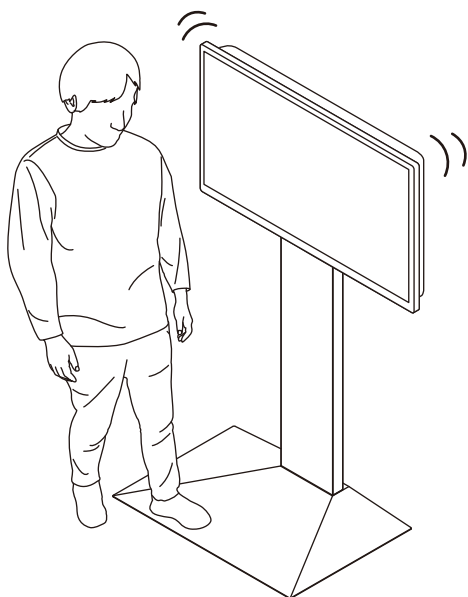


### ベースの上に乗らない。

 テレビスタンドが倒れたり、テレビが脱落して、破損やけがの原因となります。

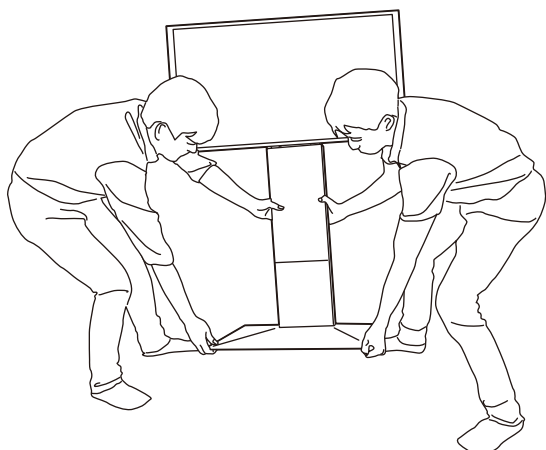

### テレビを設置したまま テレビスタンドを移動しない。

 テレビスタンドが倒れたり、テレビが脱落して、破損やけがの原因となります。

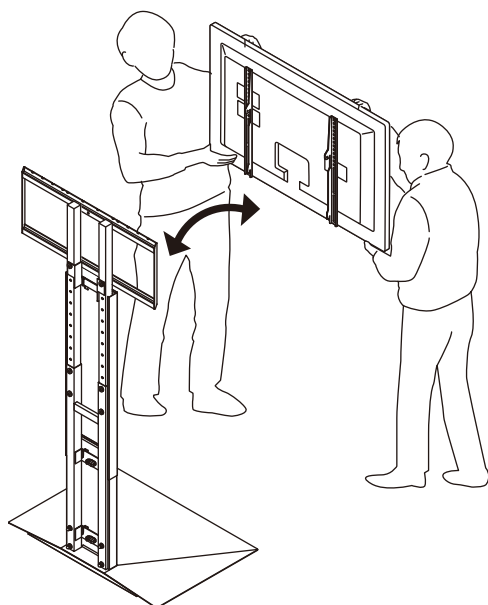

### テレビスタンドの移動や テレビの設置・取り外しは、 必ず2人以上で行う。

テレビスタンドが倒れたり、テレビが脱落して、破損やけがの原因となります。



### テレビ画面に強い力が加わる ような持ち方をしない。

テレビの持ち方は、テレビの取扱説明書でご確認ください。





## 注意

注意を無視した取扱いをすると、物質損害を被ったり、障害を負う可能性があります。

### 1 組立・設置の注意

#### 1-1. 転倒、破損の原因

組み立て、設置の際は、必ず安定した平らな場所でおこなう。床や壁などをキズつけないように、厚手の布や梱包のダンボールなどを敷く。

#### 1-2. 転倒、破損の原因

壁に寄せた状態で設置する。(ワイヤーを取り付けて転倒防止の処置をおすすめします。)

#### 1-3. 変色や破損の原因

屋内で使用する。直射日光や熱、冷暖房の風が直接あたらない場所に置く。

フローリングやその他柔らかい素材の床で使用になりますと、床面に保護材の跡が付いたり、色移りしたりする可能性があります。

フロアメーカーの取扱上のご注意をご確認の上、“変色”などを防ぐため、保護材を入れてご使用することをおすすめします。

#### 1-4. 火災や故障の原因

薄型テレビの通風孔をふさぐと内部に熱がこもり、火災の原因となることがあるので、壁との間に十分に間隔をあける。

間隔が足りない場合は、付属のスペーサーで壁とテレビの間隔を調節可能です。(スペーサーなしの場合、壁からテレビまで約8cm)

#### 1-5. 火災や感電の原因

薄型テレビを本製品に取り付けたり取り外す場合は、必ず薄型テレビの電源スイッチを切り、電源プラグをコンセントから抜き、

アンテナ線接続機器間のコードなど外部の接続コードを外してから行ってください。コードが傷つき、火災、感電の原因となる恐れがあります。

### 2 使用の注意

#### 2-1. 転倒、けが、破損の原因

商品に乗ったり、ぶらさがったり、テレビスタンド以外の使用をしない。テレビスタンドに集中的に荷重をかけない。(傾斜の可能性)

移動の際は、薄型テレビを取外し、必ず2人以上でゆっくり移動する。

#### 2-2. けがの原因

手や指などを挟まないように注意する。

#### 2-3. 火災や変色の原因

ストーブなど火のそばで使わない。

#### 2-4. におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

### 3 お手入れの注意

#### ひび割れや変色、変形の原因

表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)

※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1カ月に1度が目安です。)



# WALL INTERIOR TV STAND

## V3 [ LOW TYPE ]

 
 
 
 
 
	Satin White	Satin Black	Walnut	White Oak	Black Base	Walnut Base	White Oak Base
製品コード	WLTVB5111	WLTVB5119	WLTVB5238	WLTVB5232	WLTVB5W19	WLTVB5W38	WLTVB5W32
製造 No.	X04000016	X04000017	X04000018	X04000019	X04000053	X04000054	X04000055
種類	ロータイプ						
サイズ	W70 D46 H102.5 - 122.5 cm						
材質	スチール						
表面加工	粉体塗装						
重量	17kg						
原産国	中国						
耐荷重	80V (50kg 相当)						

### INDEX

※ 2人以上で組み立ててください。  
必要な工具: ドライバー (+)


	<p><b>テレビスタンドを組み立てる</b> P.05~</p>
<p>別売: マルチデバイスホルダー</p>	<p><b>テレビの取付け準備をする</b> P.08~</p> <p>マルチデバイスホルダーの取付け [別売]</p>
<p>別売: 棚板</p>	<p><b>テレビの設置高さを決めて組み立てる</b> P.14~</p> <p>専用棚板の取付け [別売] HDDホルダーの取付け [別売]</p>
<p>別売: HDDホルダー</p>	<p><b>テレビをテレビスタンドに取付ける</b> P.18~</p>
	<p><b>テレビの傾き調整方法</b> P.22</p>

# テレビスタンドを組み立てる






ステッカーを正面に向けて取り付ける。

 Point

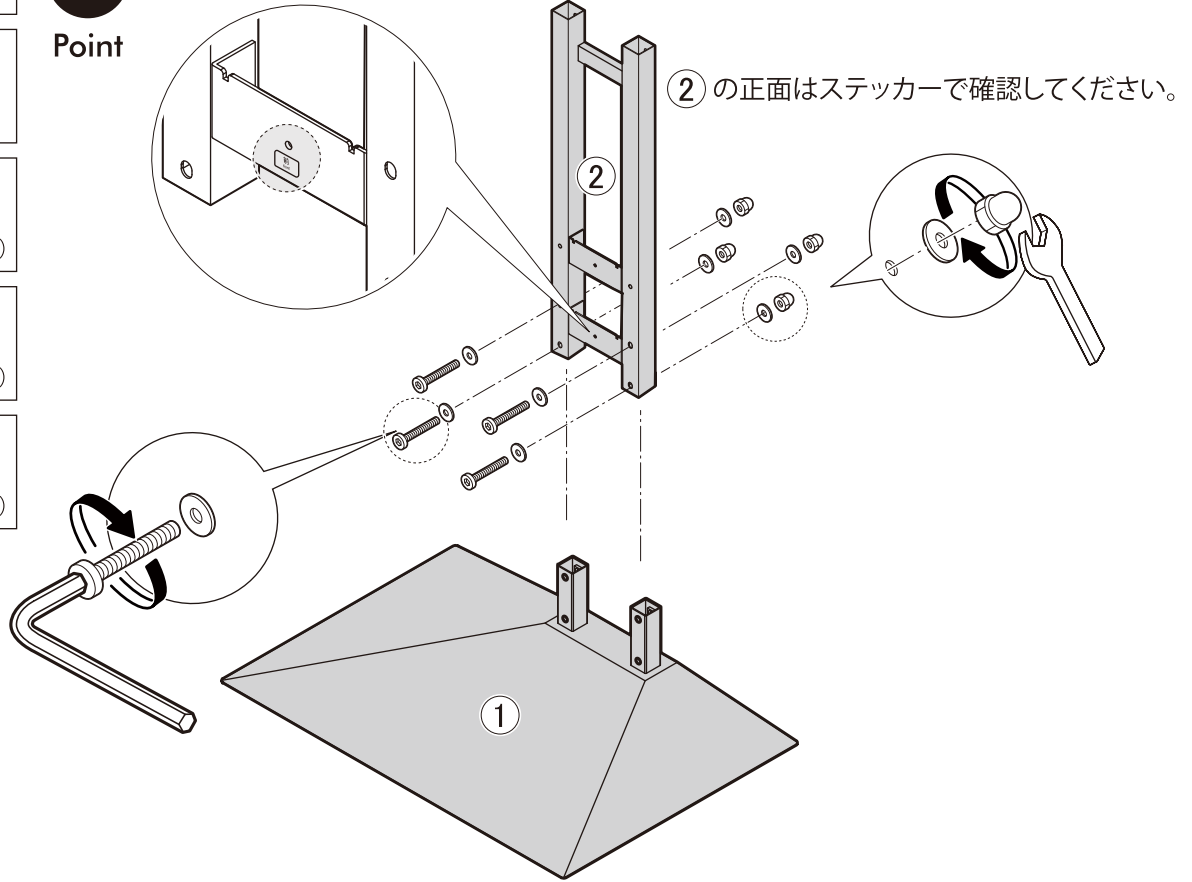


1

   2

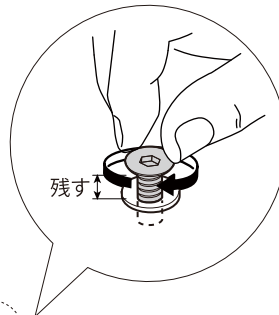


⊘ ネジをきつく締めない

 本締めすると、あとの手順で  
③が②に入らなくなります

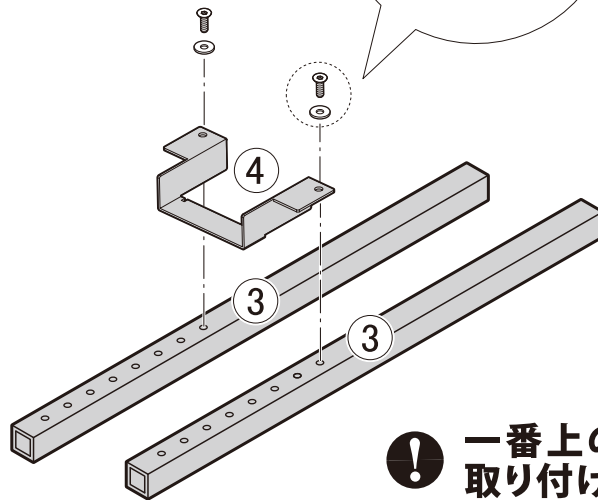


❗ 一番上のネジ穴に  
取り付ける

 取付位置によって、本体高さが  
決まるわけではありません。

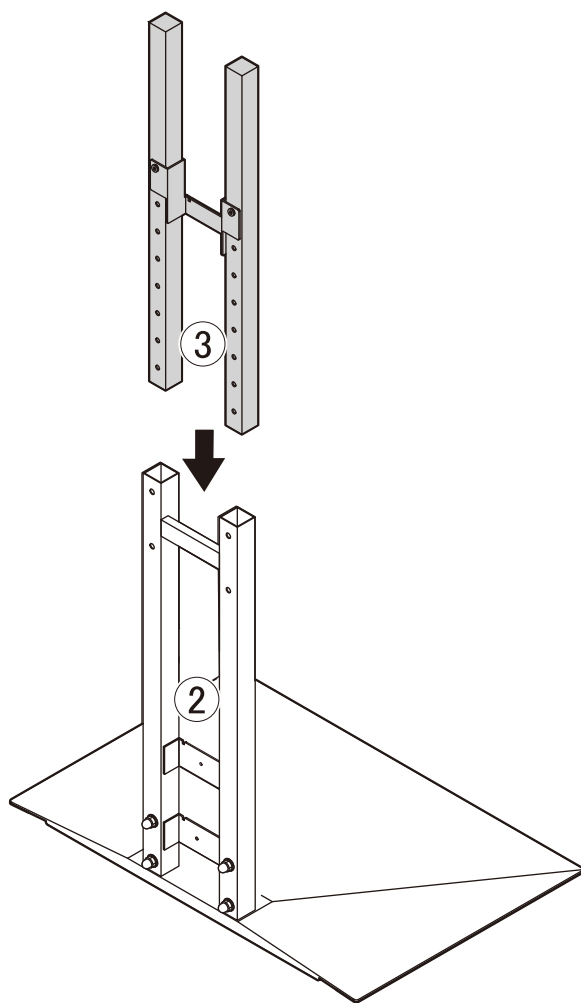


3


 
4

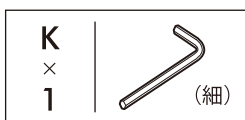

**!** ネジを最後まで締める  
③が②に入っていることを確認してから

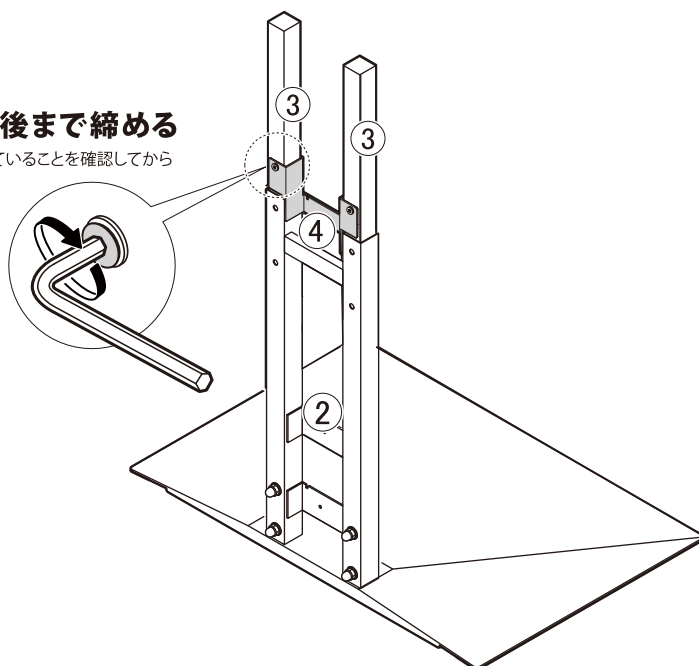 


※ ⑤ ⑥ は重ねて  
梱包されています。

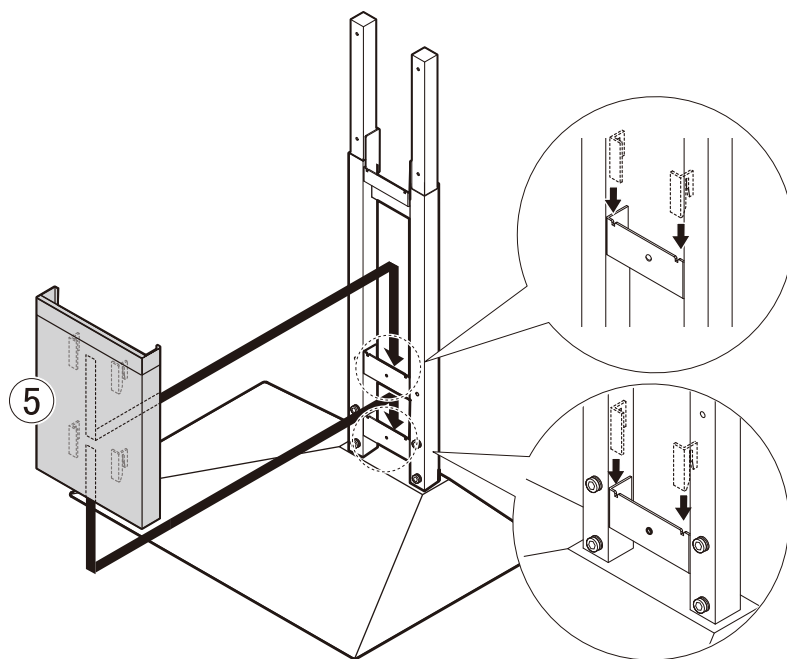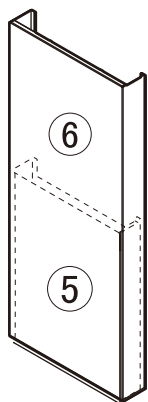  

5

 6

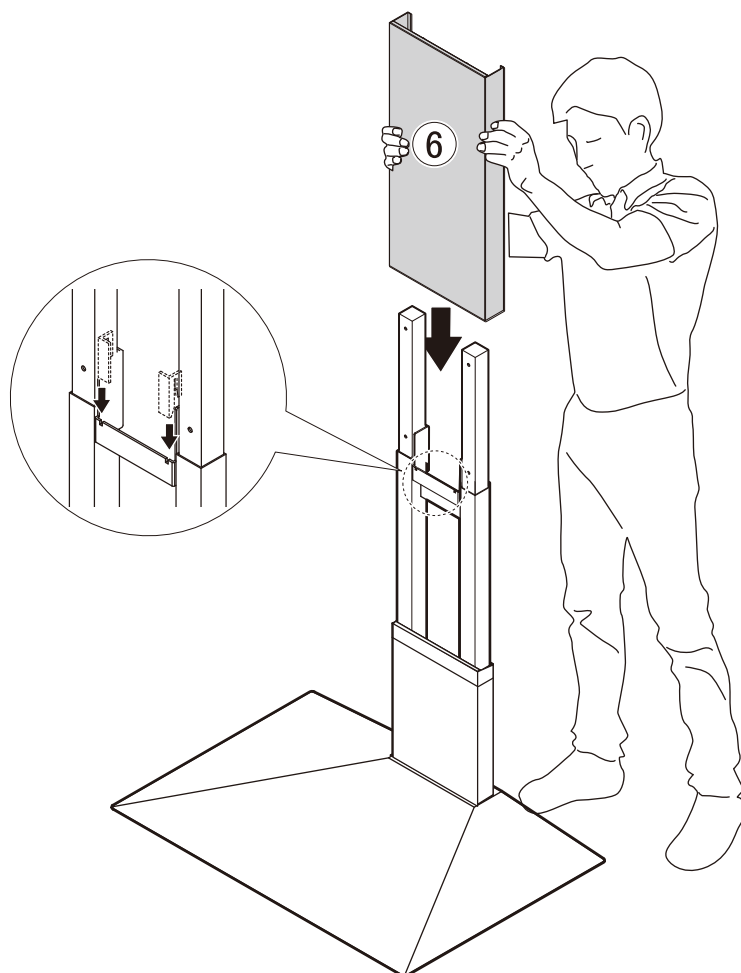


# テレビの取り付け準備をする

## 7 テレビ取付金具をテレビに当ててみる

取り付け可能テレビの詳細はコチラから>



 
テレビの背面形状によって、  
スペーサー(大)を使用するか  
しないかが決まります。



スペーサー(大)





 様々なテレビに取り付けできる設計になっています  
テレビに合った方法で取り付けをお願いします  
専用の取り付け方法を推奨しているテレビもありますので  
テレビの壁掛け設置説明書をご確認ください

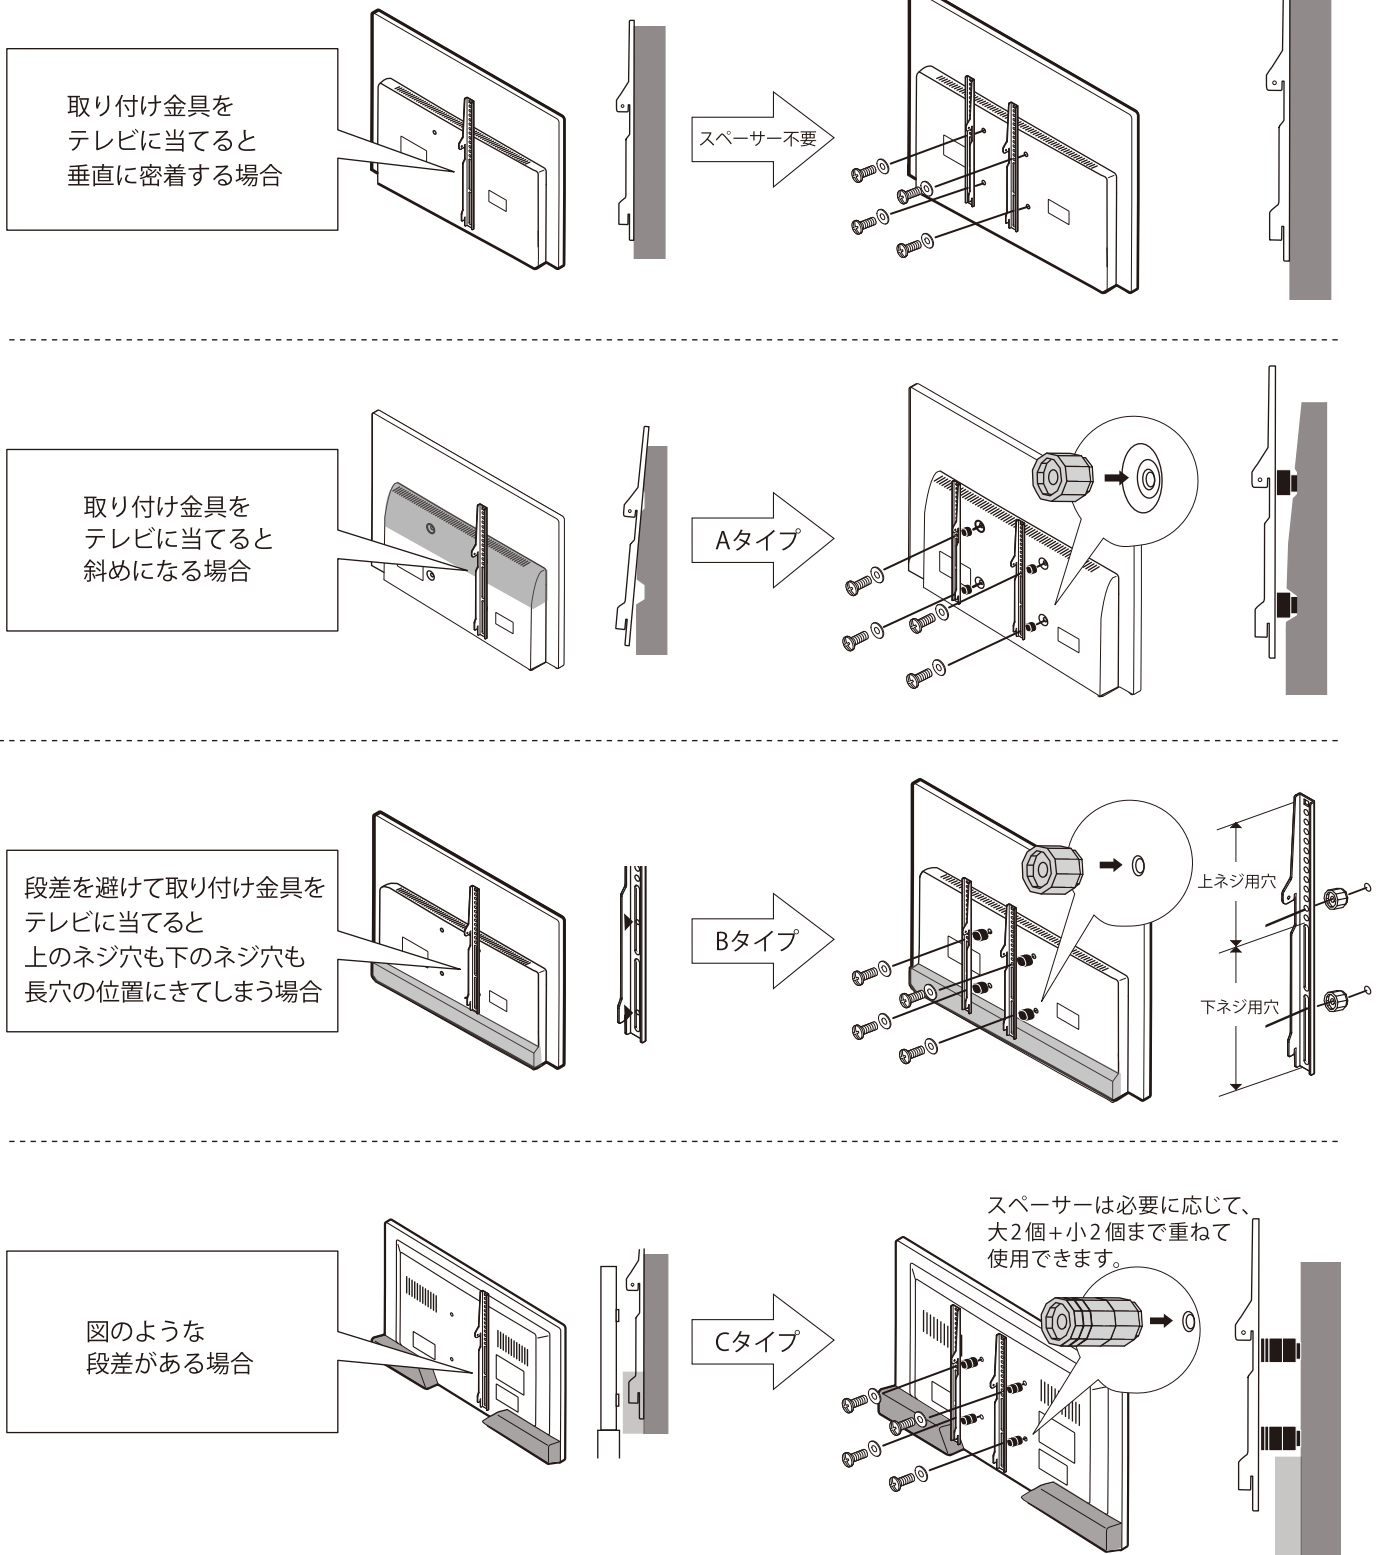


## こんな場合は・・・
  
### ネジ穴が突起の中にあり、取付金具がうまく合わない

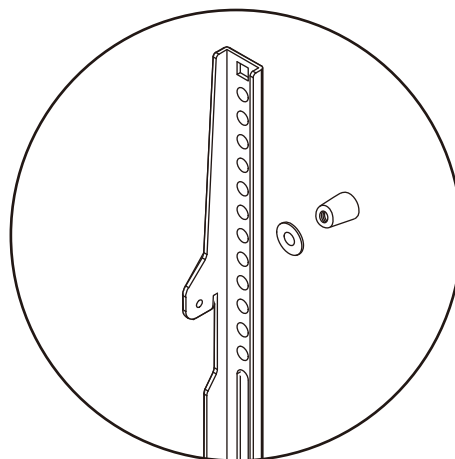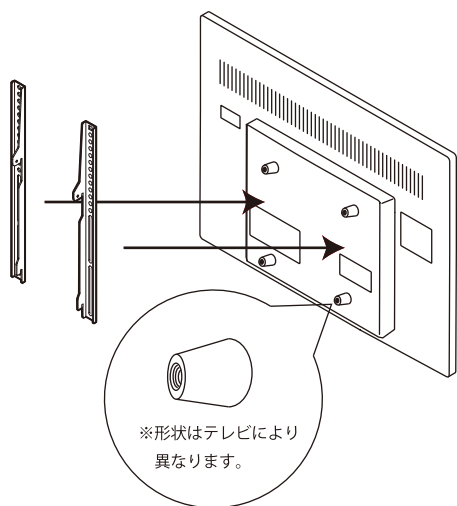


突起部の直径が小さく、取付金具の穴に入り込んでしまう場合は、図のようにスタンドに付属のワッシャーをご使用ください。


### 取付金具がテレビからはみ出してしまう (ショートブラケット対応可能)

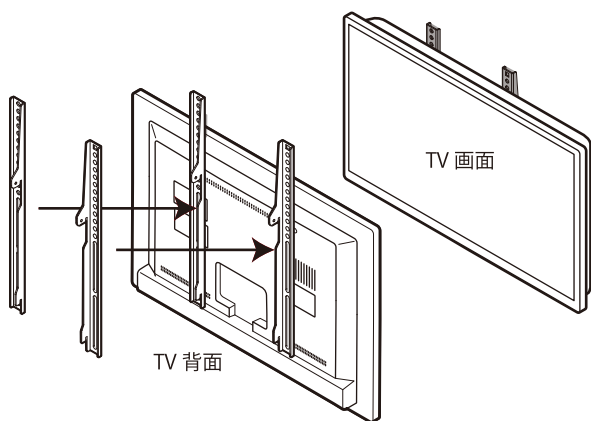 

 部品を交換することで、はみ出しがなくなります。テレビの形状または取付け方によっては、はみ出す場合があります。設置後のテレビ高さは変わりません。

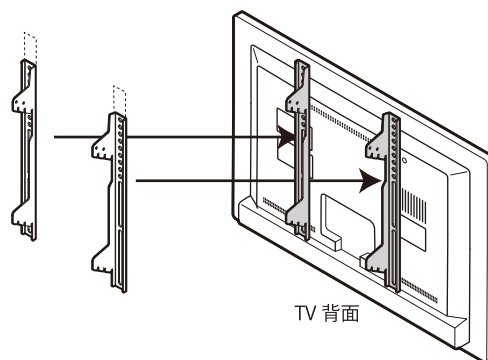

### V3用ショートブラケット

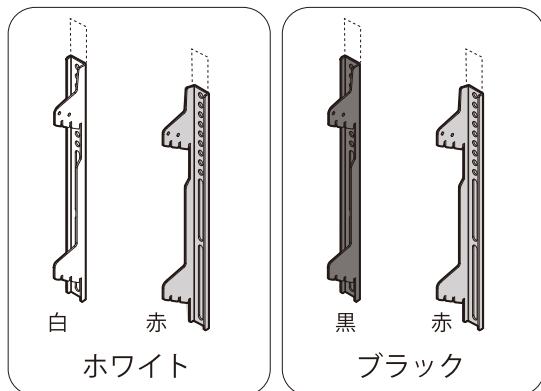 

### 【お問い合わせ先】

公式ブランドサイト  
<https://equals.tokyo/contact/>

 


上記URLのお問い合わせフォームより、ご購入日・購入店名・ご注文番号・お届け先住所等と下記項目を明記しご依頼ください。(無料)

件名: V3用ショートブラケット希望  
ブラケットの色: (ホワイトorブラック)  
テレビのメーカー型番: OOOOO

※弊社お客様サポートにて、ご提供いただくお客様個人情報は、本件についてのみ使用し、その他の目的には一切使用いたしません。

## 8 ネジを入れてみてネジ穴の直径を確認する




テレビによってネジサイズが異なるため、最適なネジとワッシャーを使用します。



パネル割れ防止のため、画面を下に寝かせてはいけないテレビがありますので、テレビの取扱説明書をご確認ください。



 ネジの取り付けは、まだ行わないでください。

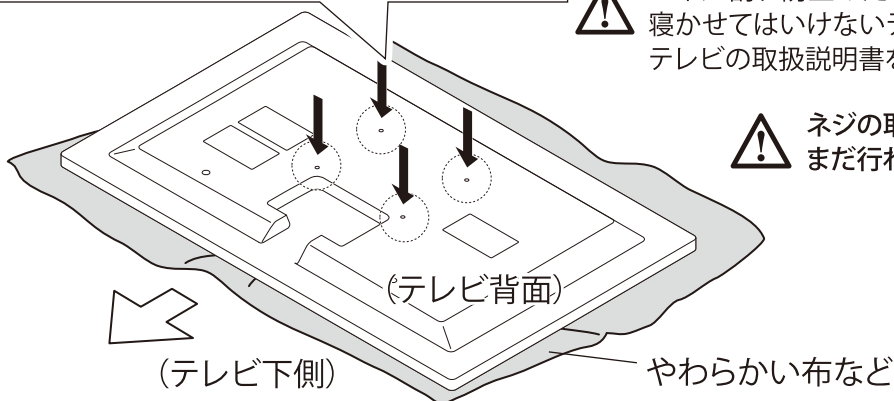


M	(小) × 4	N	(中) × 4	O	(大) × 4
	(15,25,35mm) × 4 ずつ		(15,25,35,45,55mm) × 4 ずつ		(15,25,35,45mm) × 4 ずつ

## 9 ネジ穴の深さを測る




 Info



スペーサーを使用する場合は、イラストのように測ります。

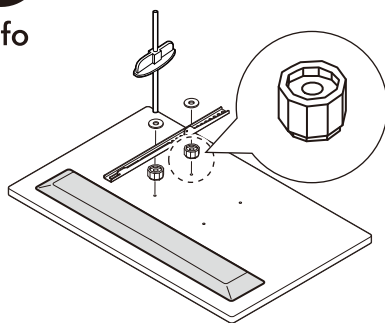

ネジのかわりにネジ穴計測ツールを入れて、必要なネジの長さを測ります。

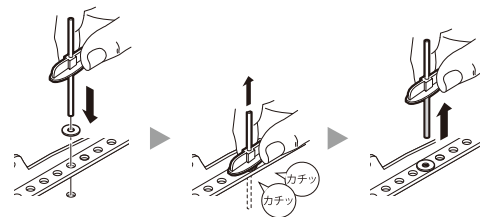 


ツールの戻し方

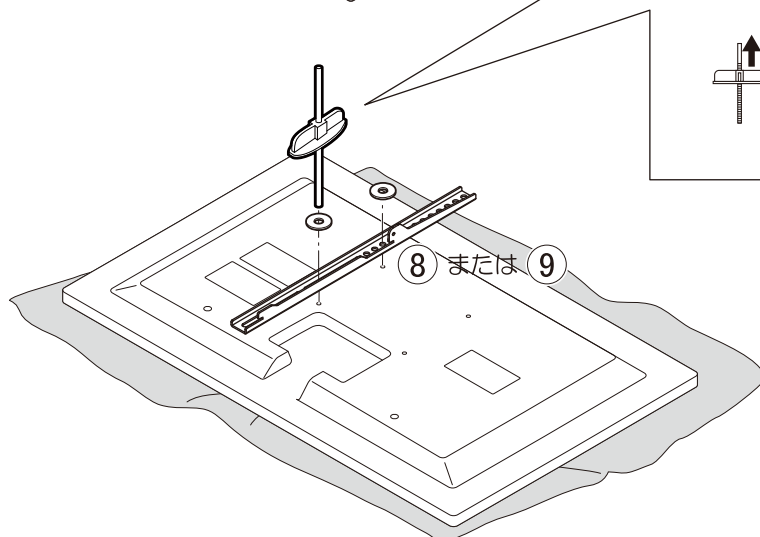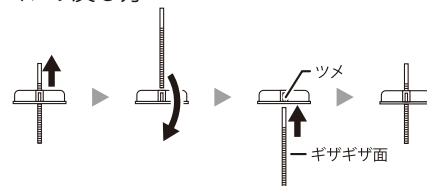  




## 10 必要な長さのネジを選ぶ

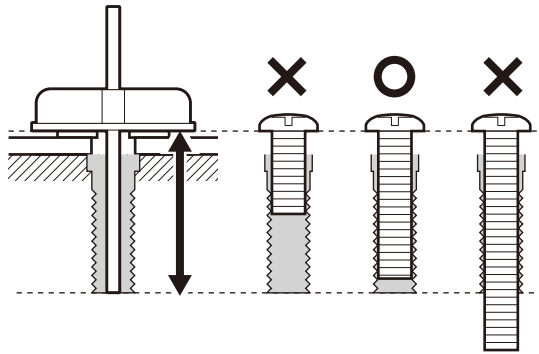 

⊘ ネジの掛かりが浅い ⊘ ネジが長すぎる

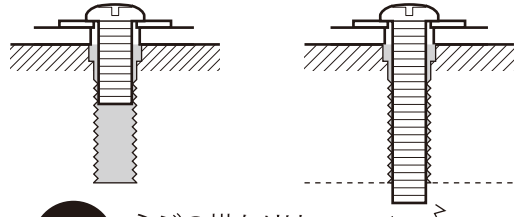 

⊙ ネジの掛かりは、5回転以上であれば問題ありません。

Point



Info

 
ネジセット内のネジの太さが合わない場合とネジの長さが足りない場合は、ホームセンター等で別途お買い求めください。

M\_\_\_ × \_\_\_ (mm)  
太さ 長さ

例) 太さ5mmで長さ15mmの場合 → M5×15mm


※ネジは、[トラスねじ]または[ナベねじ]を使用してください。

必要な長さのネジが見つからない場合、  
スペーサー(小)でネジの長さを調整します。




スペーサー(小)

 
スペーサー(小)で約5mm  
ネジを短く使用できます。

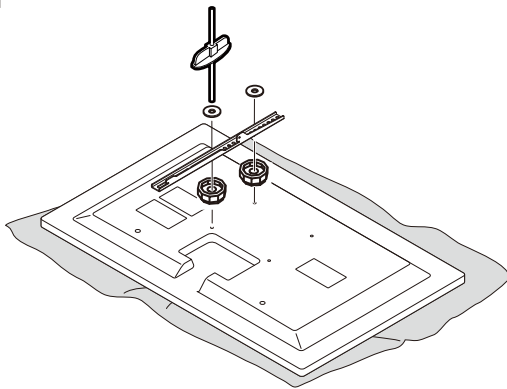


調節後

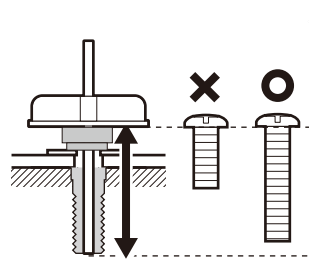 


調節前

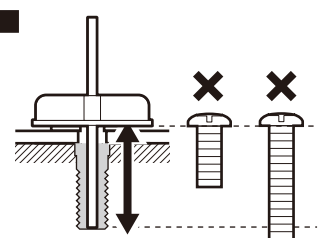 


スペーサー(大)と重ねて使用する場合

 


スペーサー(小)

 


スペーサー(大)

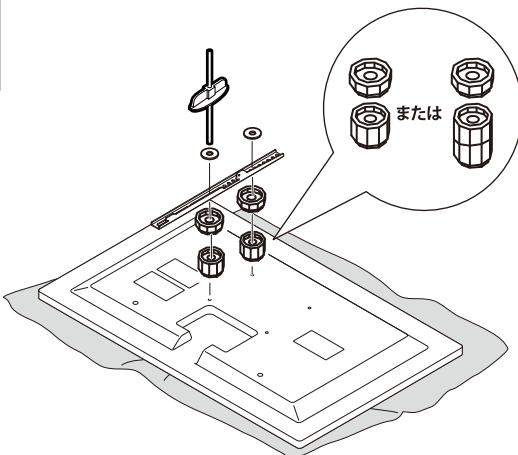 

調節後

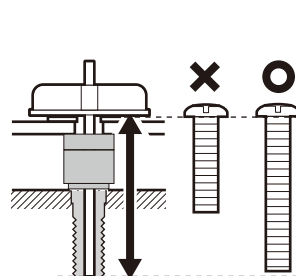 


調節前

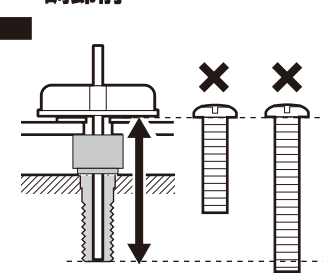 

# テレビ取付金具を取り付ける前に・・・


## ネジとスペーサー

 - ・必要な部品を準備します。
- ・スペーサーは必要な場合のみ

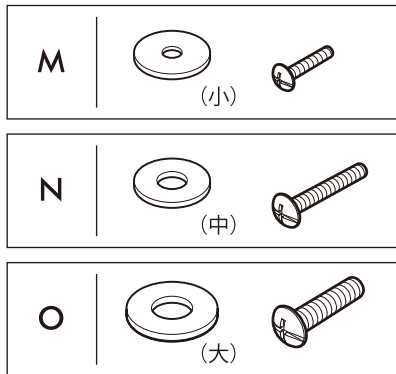

## テレビ取付金具

 
- ・⑧と⑨は同じ形ではありません。
- 取付位置（左右）に注意してください。

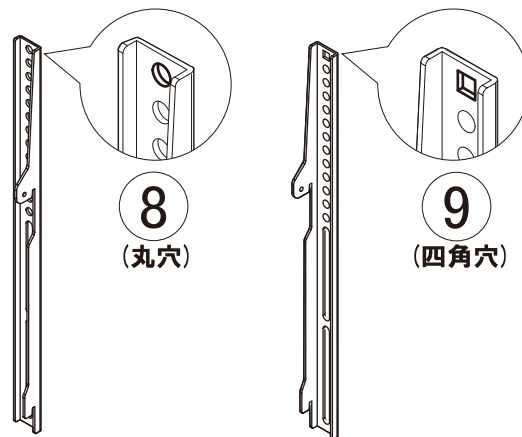


## テレビ取付金具の取り付け位置例

- ・テレビ取付金具はできるだけテレビの中心に近い位置に取り付けてください。
- ・上のネジ穴は金具の丸穴を下のネジ穴は金具の長穴を使用します。

 
### ネジ穴が中央寄りにあるテレビ

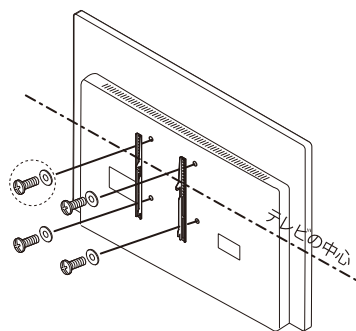


使用する取付穴の目安

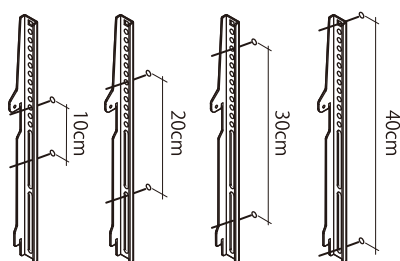 


### ネジ穴が下寄りにあるテレビ

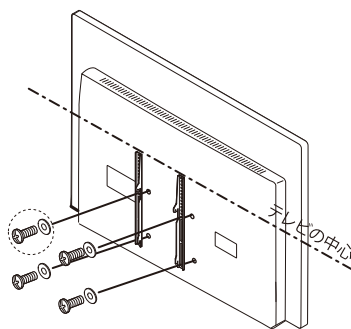 

使用する取付穴の目安

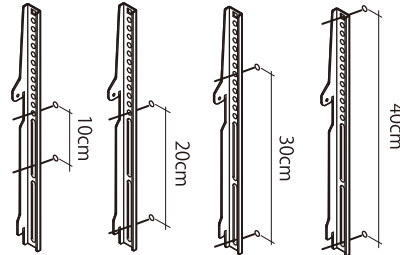 


テレビ取付金具を下寄りに取り付けるとスタンドの支柱が露出する原因となります。

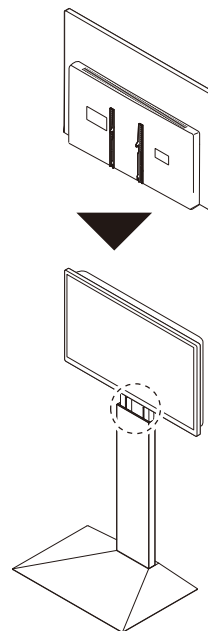 


## 別売：マルチデバイスホルダーの取り付け

 
・別売のマルチデバイスホルダーをご購入された場合は、この段階で取り付ける。

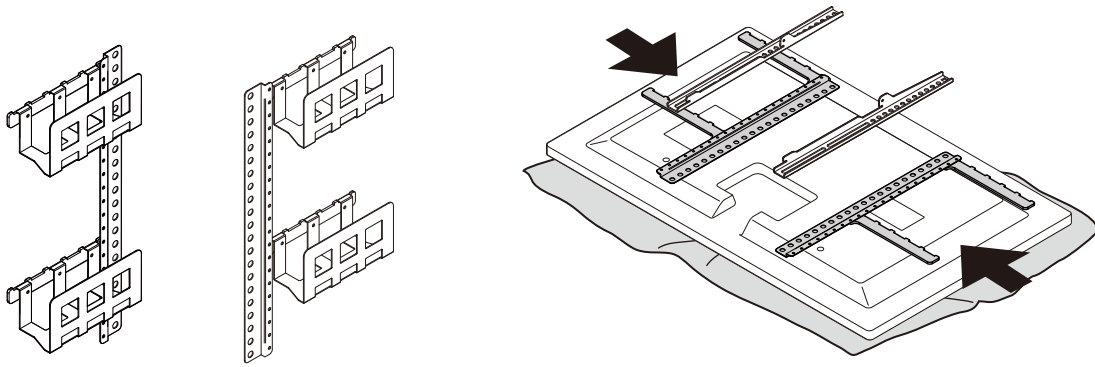

## 11 ネジ穴の間隔を測り、テレビ取付金具を取り付ける

 パネル割れ防止のため、画面を下に寝かせてはいけません  
テレビがありますので、テレビの取扱説明書をご確認ください。

 
 取付穴には余裕があるので上下に動きます。  
左右の高さを合わせる  
設置後にテレビが傾く原因となります。

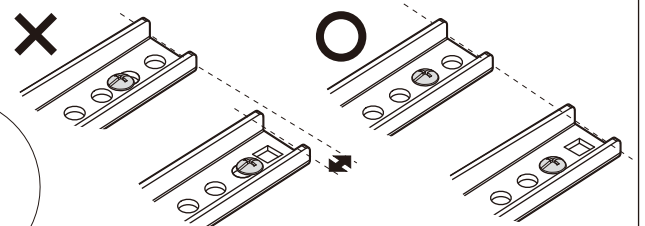

ネジ穴の間隔により、  
⑧と⑨の取付位置が異なります。  
(丸穴) (四角穴)

10、30、40、  
50、60cmの場合

 
20cmの場合

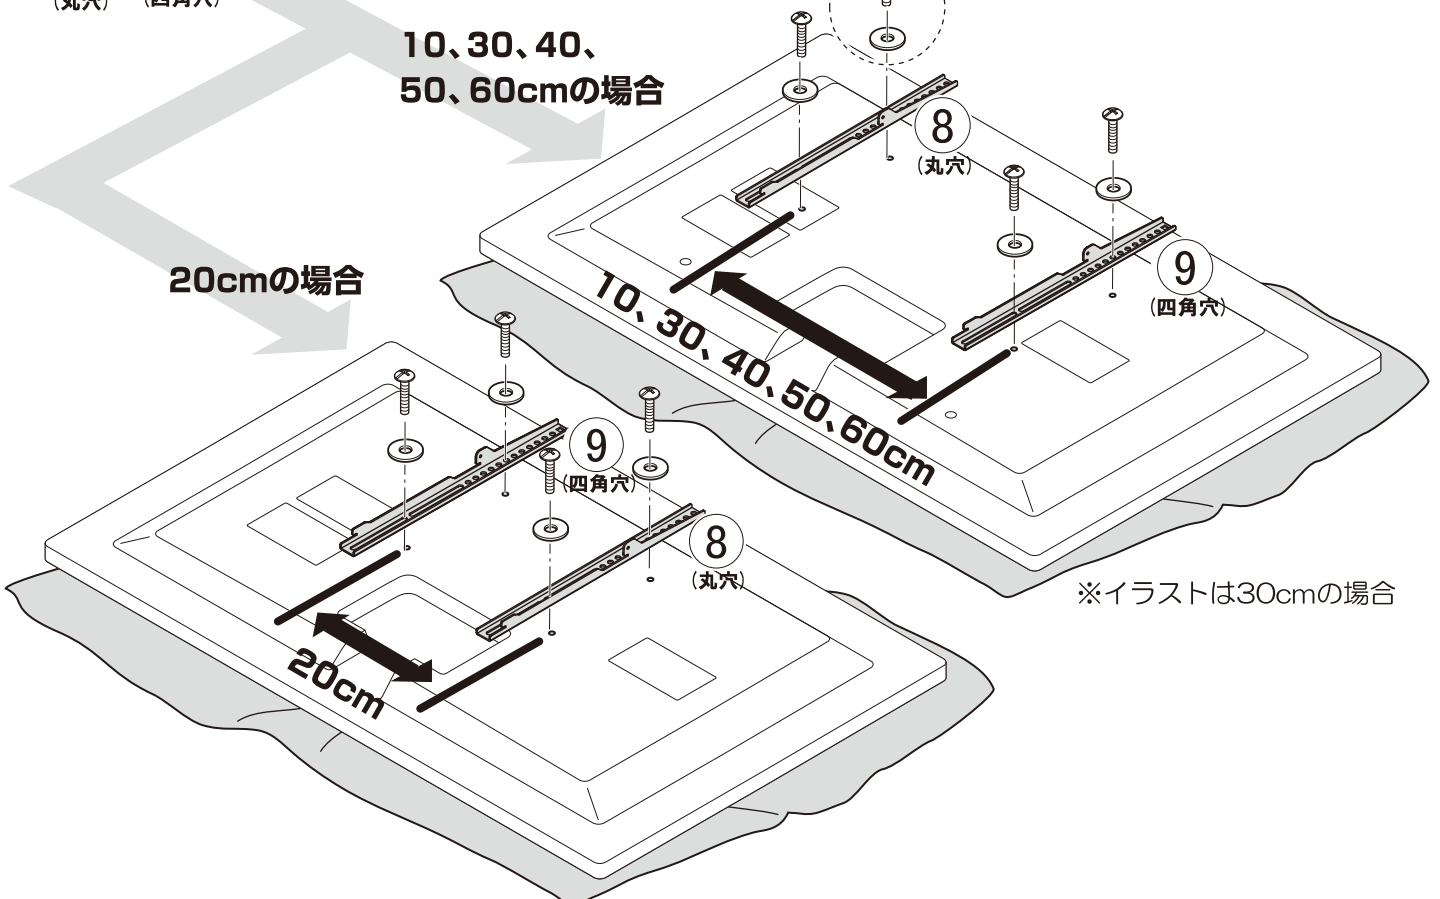

# テレビの設置高さを決めて組み立てる


## STEP-1

 付属の紙メジャーをテレビに当て、印を付け、紙メジャーをテレビに見立てます。

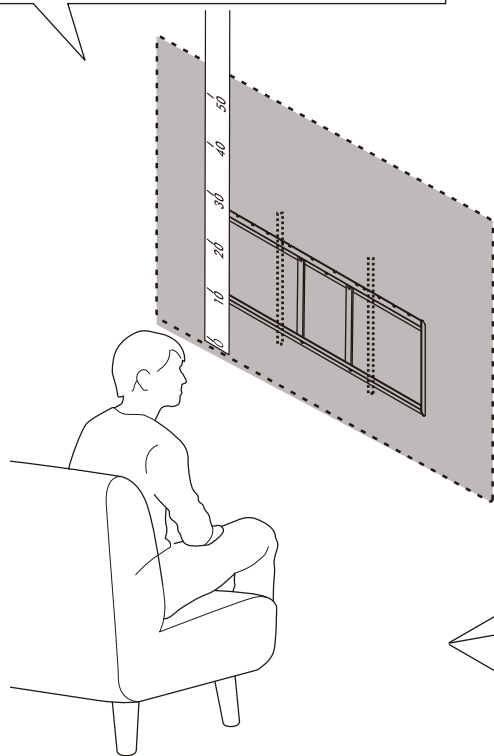

## STEP-2

 紙メジャーをスタンド支柱に当てながら上下させ、テレビ設置後の画面位置をイメージして高さを決めます。

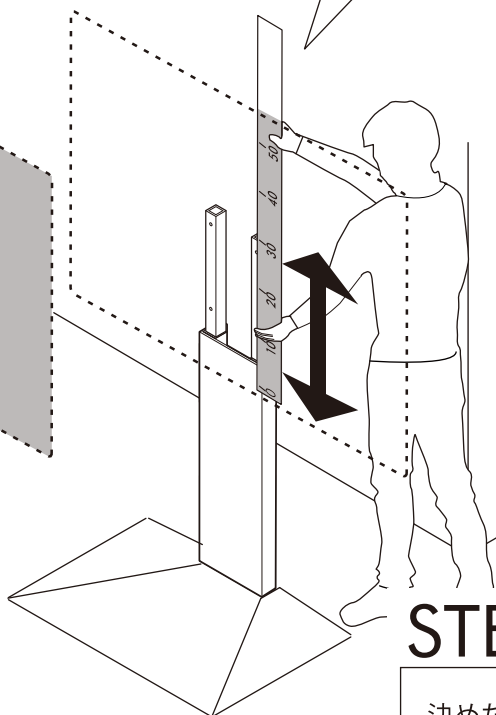



## STEP-3

決めた高さになるようにスタンド本体を組み立てます。

## STEP-1

### 12 紙メジャーに印を付ける

  テレビの大きさと⑧⑨部品を取り付けた位置にペンで印を書いて下さい。

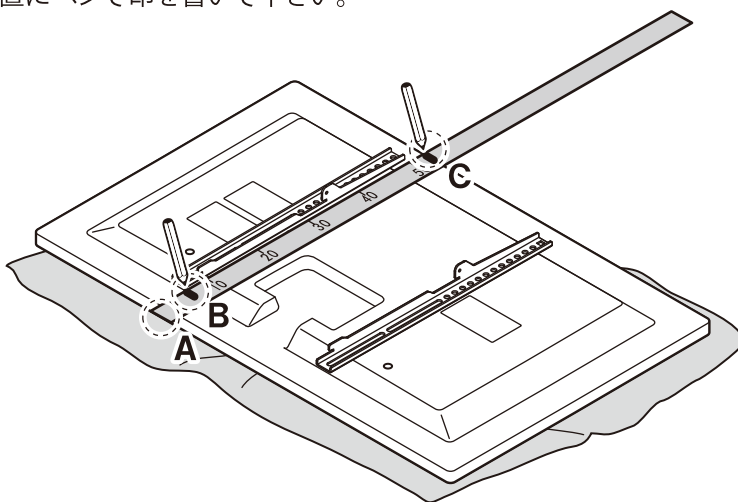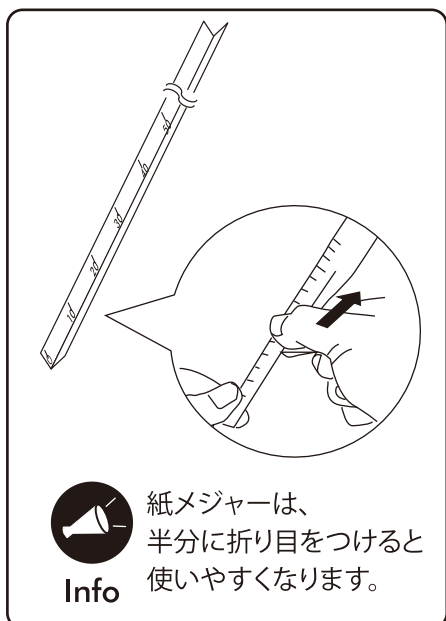

**A** = テレビの下端

**B** = ⑧または⑨の下端

**C** = テレビの上端



Bの印がスタンド本体に合わせる基準となります。



**Info**
  
# STEP-2

**13** 紙メジャーの印をスタンドに当てながら、上下させ希望の高さを決める

**1** Bを支柱の下の穴に合わせる。

**2** メジャーを5cmずつ上げて、高さを決める。

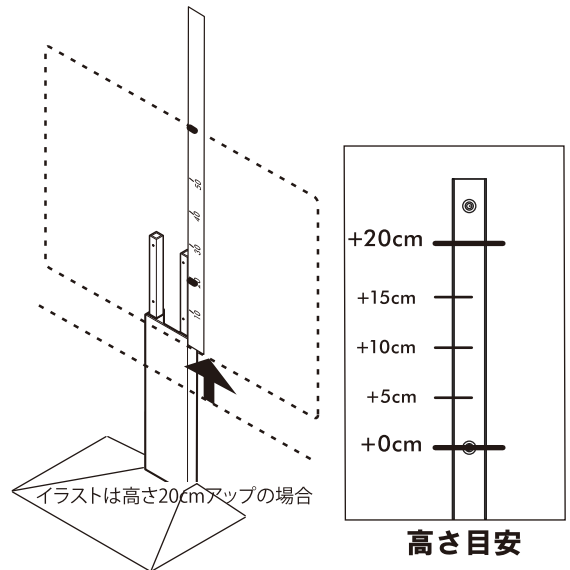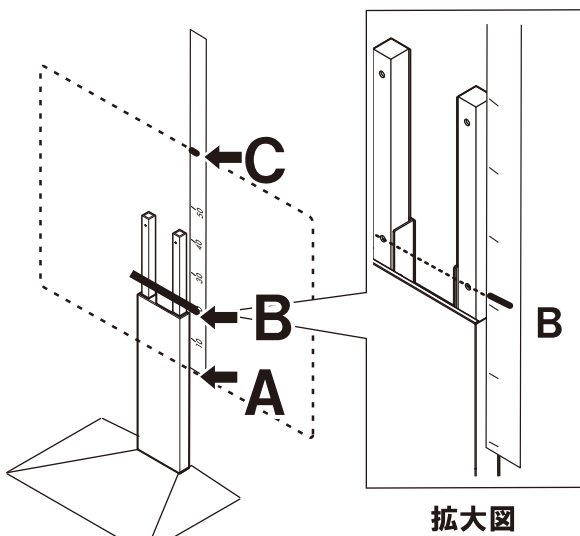

この高さから5cmずつ、最大20cmまで高さを上げることができます。





Info

# STEP-3

    **14** 希望の高さで組み立てる

高さ調整表で、希望の高さの列を確認してください。  
支柱の背面で使用する取付ネジ穴がわかります。

高さ調整表	+0cm	+5cm	+10cm	+15cm	+20cm
	—	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u> (MAX)

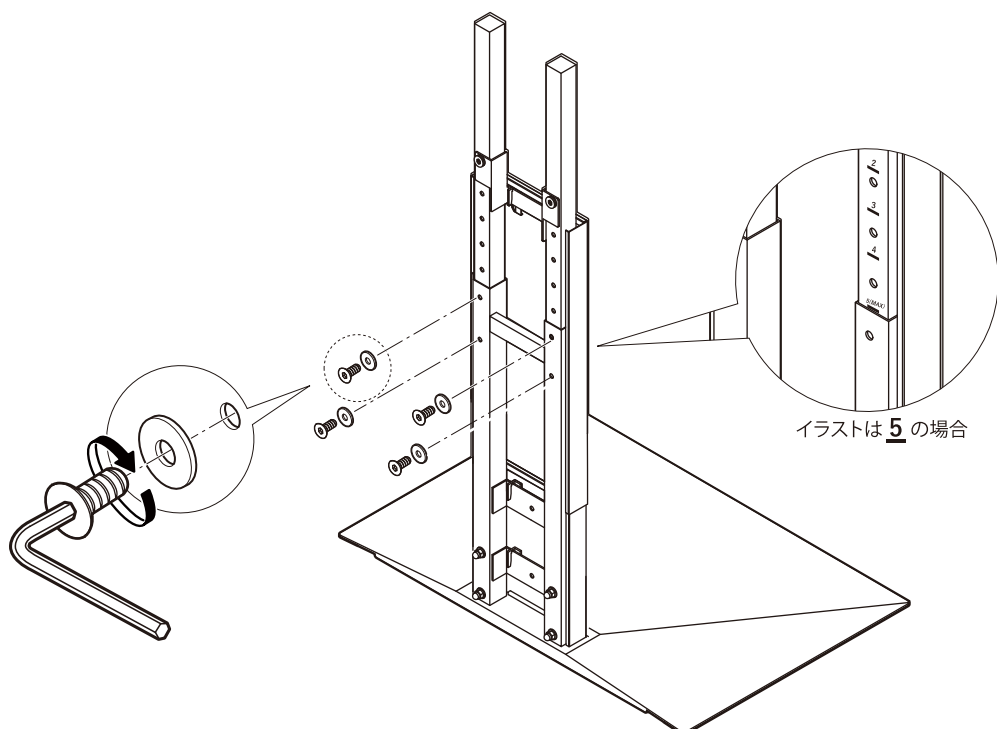


## 別売：専用棚板の取り付け





・別売の専用棚板をご購入された場合は、この段階で取り付ける。



 棚板の取り付けは2人以上でおこなう

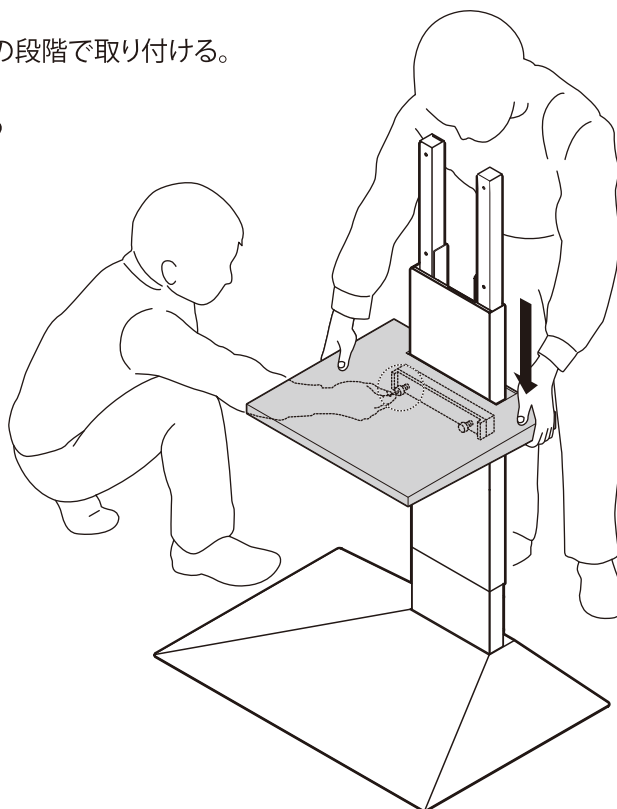

15

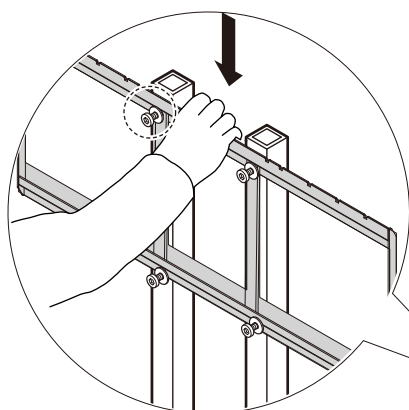   
 


⑦の上下前後をシールで確認してください。




Point

  上から軽く押さえながら締める。

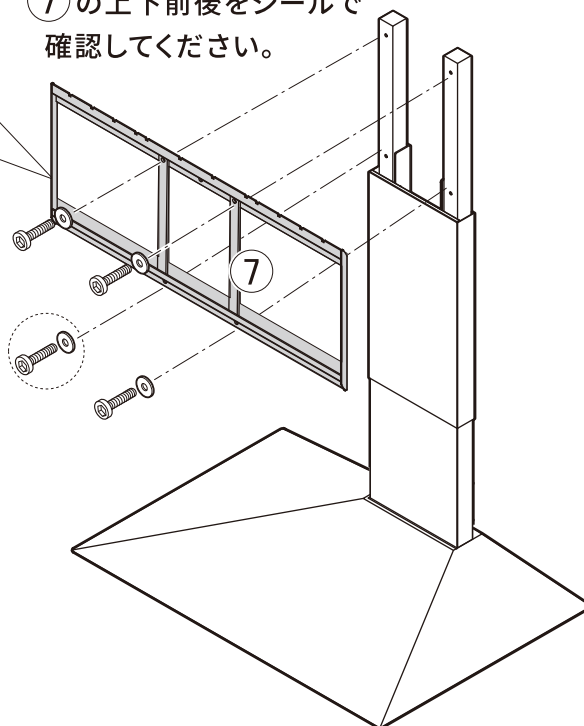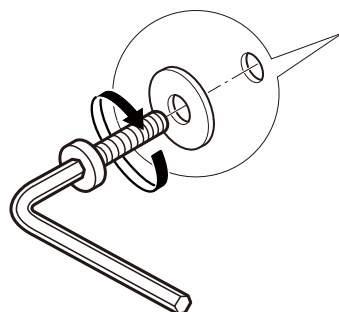








## 別売：専用HDDホルダーの取り付け

 ・別売の専用 HDD ホルダーをご購入された場合は、この段階で取り付ける。

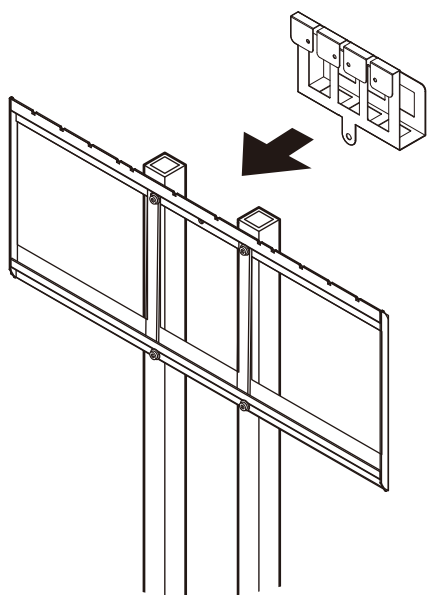


- ・転倒防止用ワイヤーを取り付けるネジ穴と一緒に取り付ける。
- ・フレームの中央または左右にお取り付けが可能です。

## 16 転倒防止金具の取り付け（必要な場合のみ）

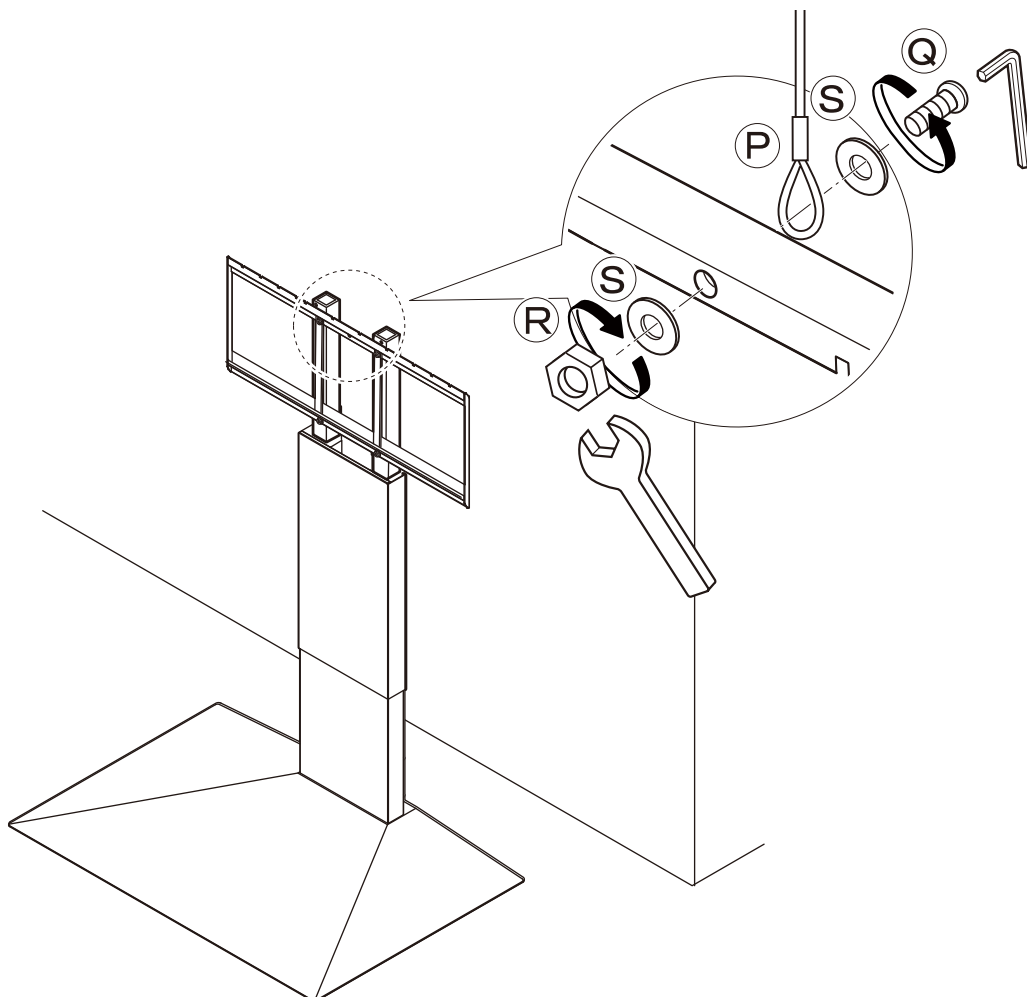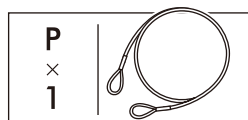       

# テレビをテレビスタンドに取り付ける

 17

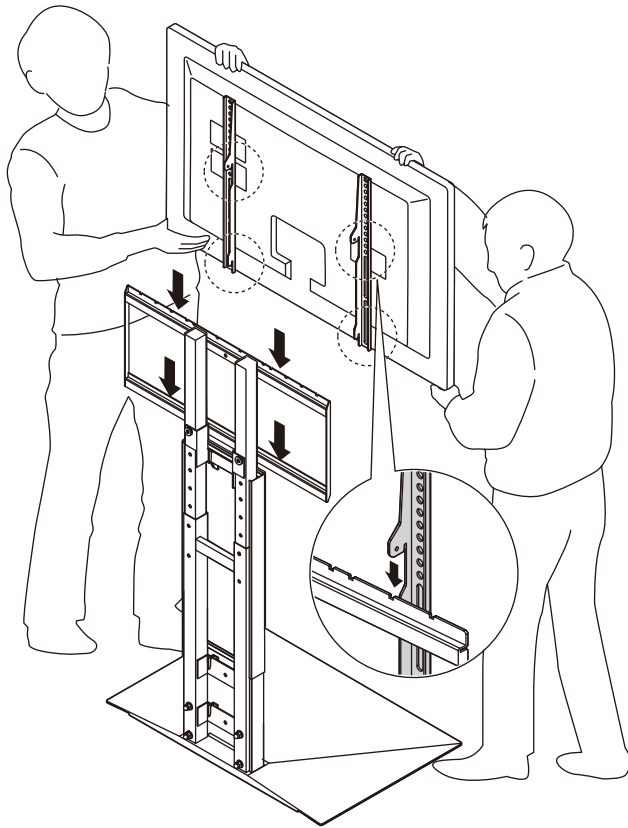

**⊘ テレビ画面に強い力が加わるような持ち方をしない**

 
テレビの持ち方は、テレビの取扱説明書でご確認ください。

**⚠** テレビの設置は2人以上でおこなう

18




## Step1. ストッパーの準備

ネジに抜け止め用ワッシャーを取り付けます。



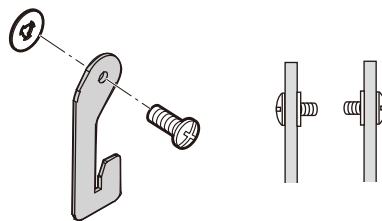


**✓** ネジの取り付け向きに注意し、しっかり  
Point 重ねる

## Step2. 取り付け

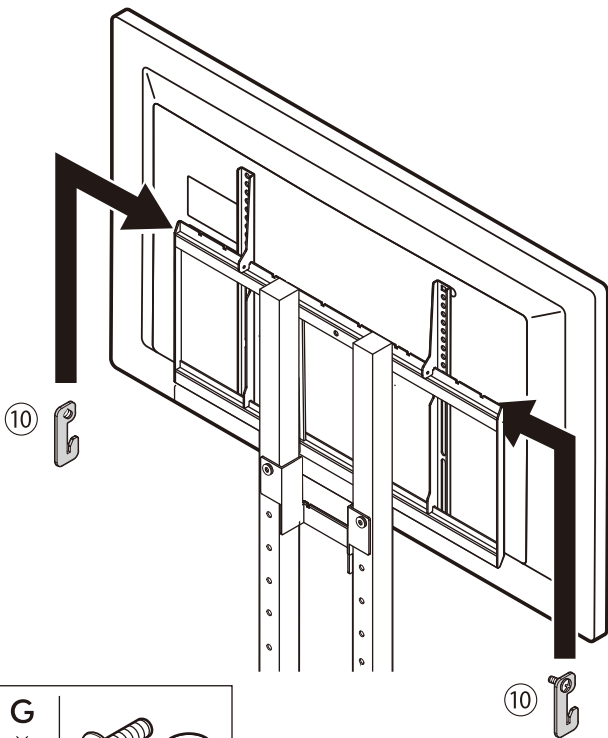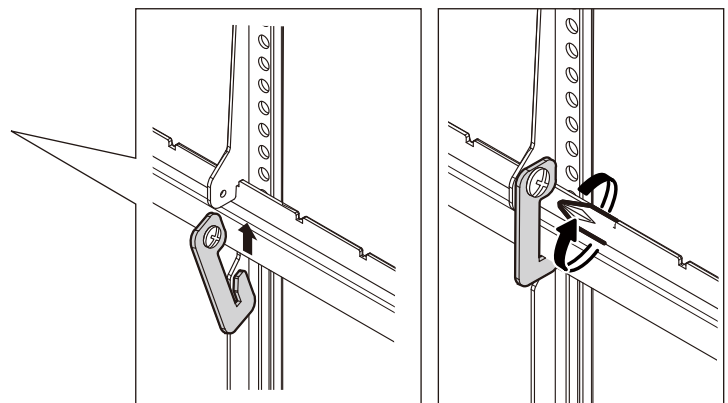   



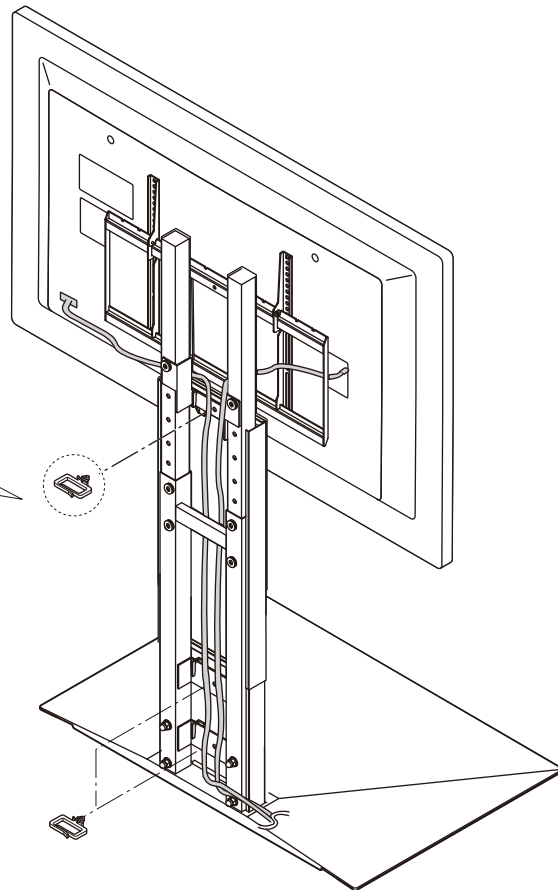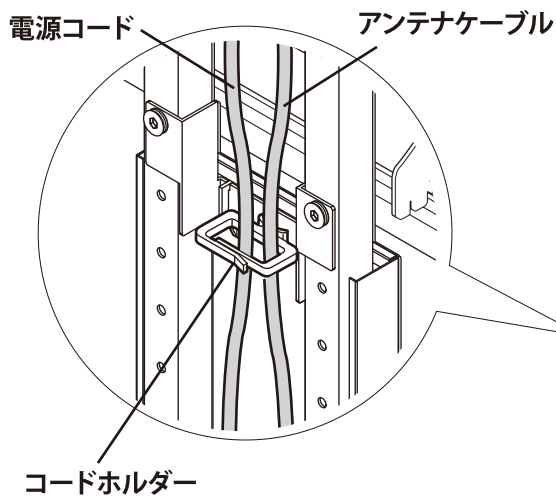   


Info

スタンド背面にケーブルを通すとケーブルの長さが足りない場合は延長コードの使用をご検討ください。


**20** コードバンドの取付（テレビスタンド伸長時に棚板を使用する場合）

 必要により任意の場所に取付けてください。





**外し方**

 左に回しながら引き抜く

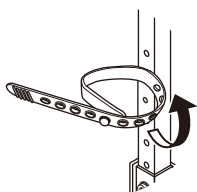


**取り付け方**

  右に回しながら差し込む

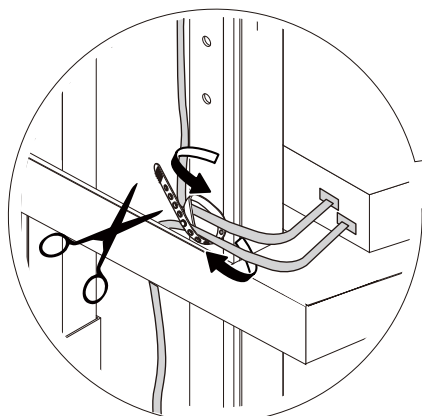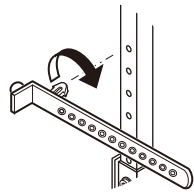


※余ったコードバンドはカットできます

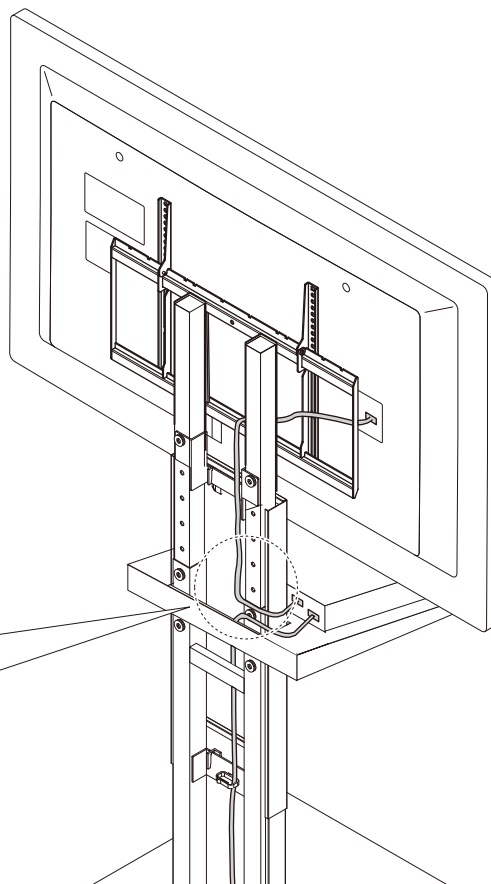 


## 21 テレビスタンドを壁に寄せる

### ⚠ 注意

 本製品は必ず安定した場所で壁に寄せた状態で設置してご使用ください。

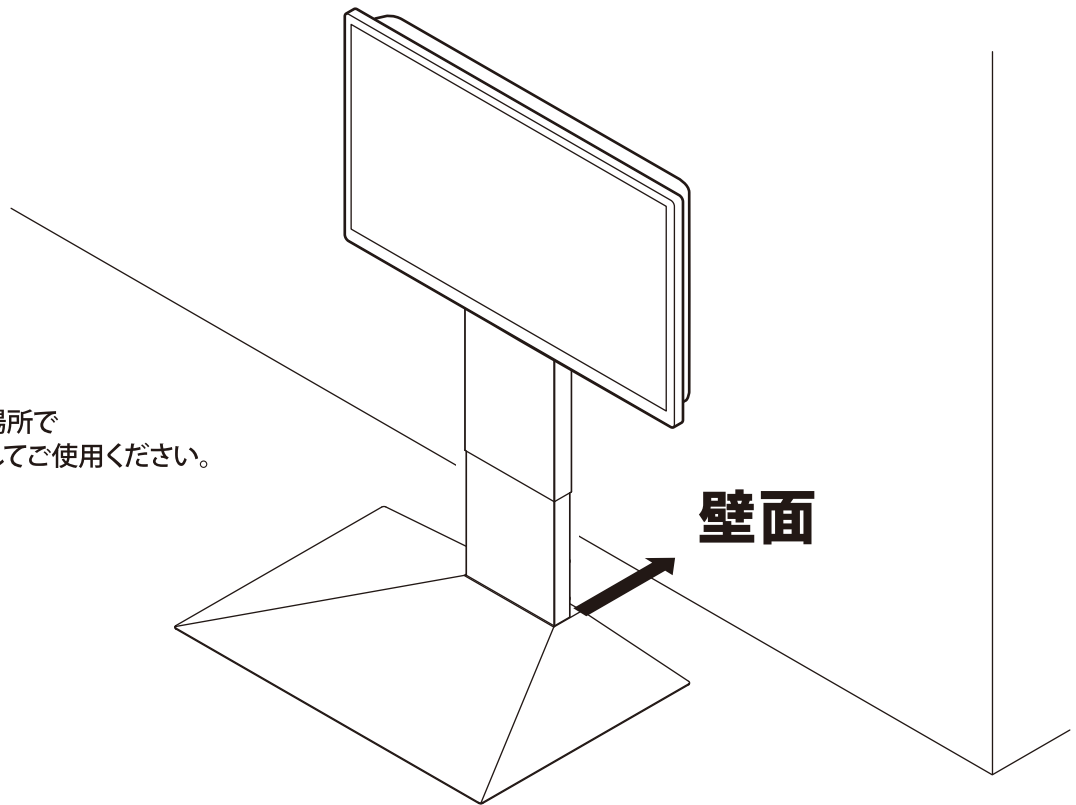

### 転倒防止の処置をする場合

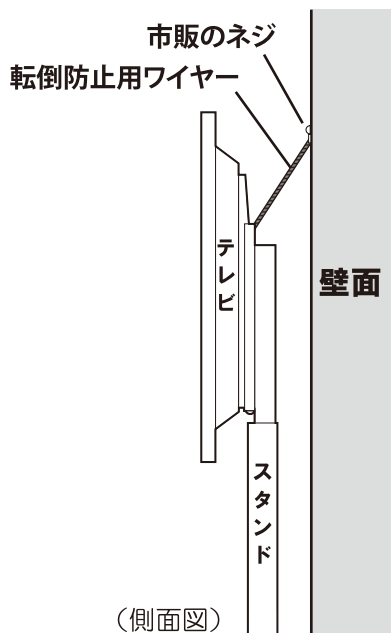 

### ⚠ 注意

壁に寄せた状態で設置し、ワイヤーを取り付けて転倒防止の処置を行う。

転倒防止ワイヤーは十分に強度のある壁面に取り付けてください。壁面の強度が低いと転倒防止機能をはたしません。

壁への取り付けには市販のネジを使用してください。

 
その際は、壁の材質により異なりますのでホームセンターなどで固定方法をご相談ください。

転倒防止ワイヤーはたるまないように設置してください。ワイヤーがたるんだ状態ではスタンドが転倒した際に過度の衝撃が加わり、ワイヤーが破損し転倒するおそれがあります。


## 調整の仕方

床とベースの間に隙間が生じる場合は、下記のように調整してください。

- 1 テレビスタンドを仮置きする。
- 2 指定位置のどちらかに家具安定板を差し込む。

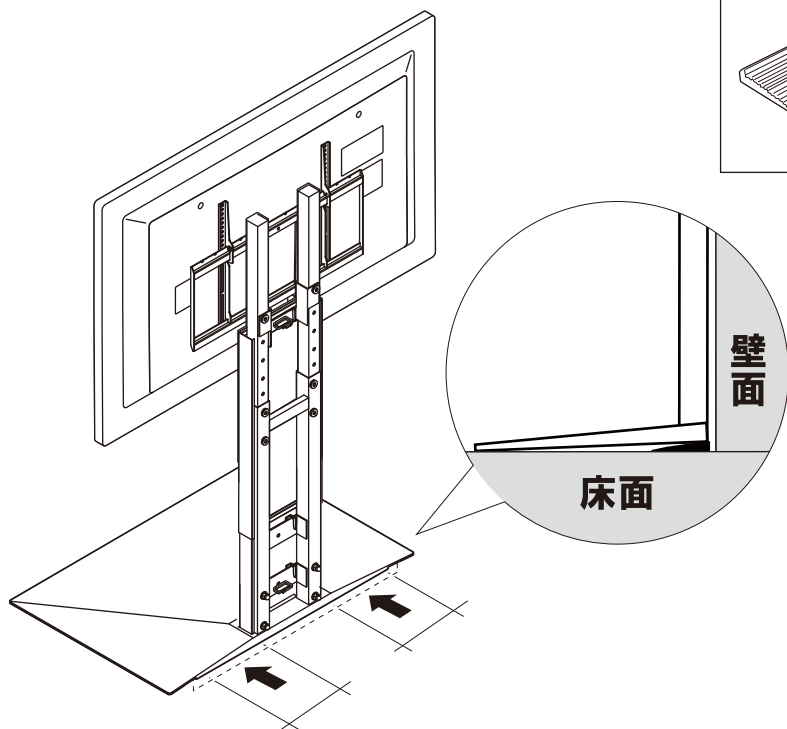


### 家具安定板について

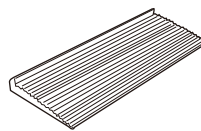 

市販の家具安定板などの使用をおすすめします。床材に合ったものをご使用ください。ご入用の際は、EQUALSサイトからご購入いただけます。


## テレビの傾き調整方法

 取付金具のネジ締め位置を調整することによってテレビの傾きを調整できます。  
ネジとネジ穴のあそびを利用して調整します。

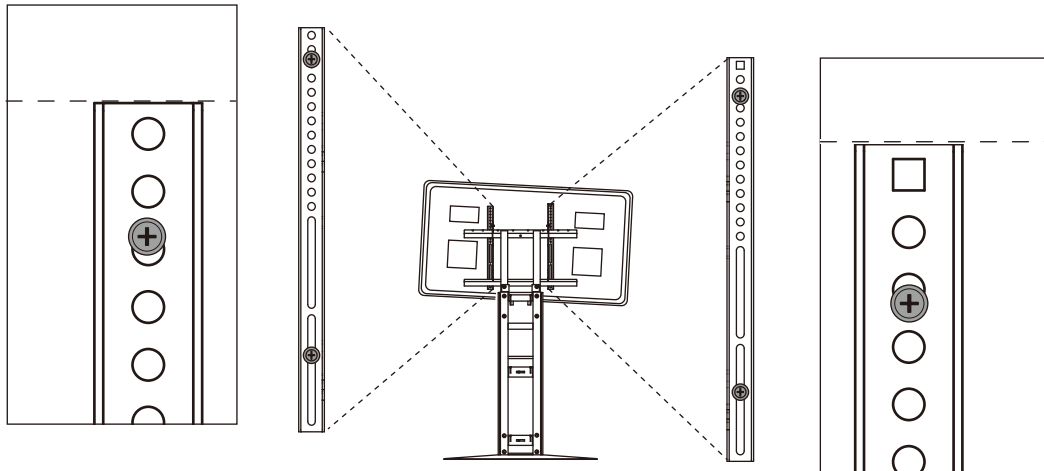


傾いている状態のイメージ図

### 1. 上下のネジを緩める。(片側の取付金具のみ)

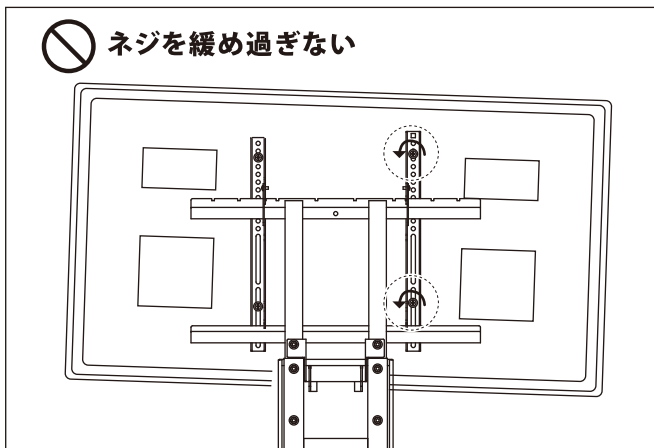 


### 2. テレビが水平になるところまで傾ける。
 
### 3. テレビが動かないように保持した状態で、ネジを締める。

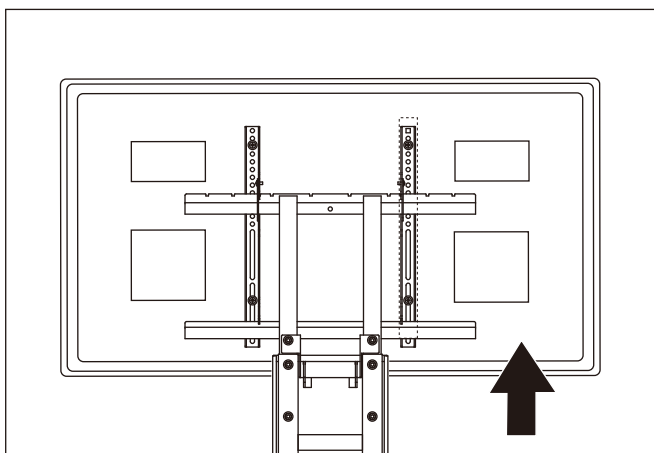

調整前

 調整後

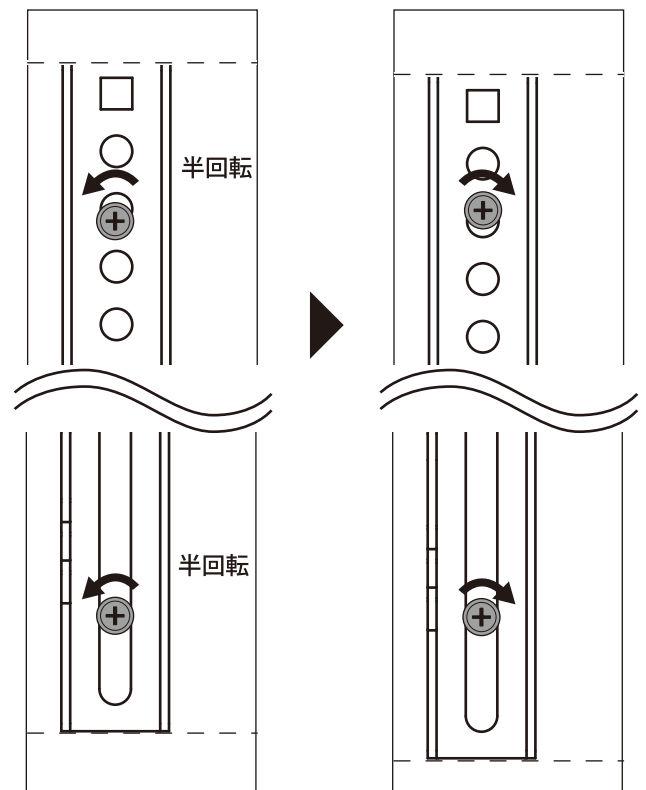

Info

低いほうを上げる方法を説明していますが、  
同じ方法で高いほうを下げることも可能です。





# WALL INTERIOR TV STAND

---

## V3 [ LOW TYPE ]

## Assembly Instructions [4th Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

## Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.



caution

• **THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.**

• **KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.**

• **THIS PRODUCT SHOULD NOT BE USED IN HOMES OR OTHER ENVIRONMENTS WITH SMALL CHILDREN WHO MAY ACCIDENTALLY TIP OVER THE STAND AND TV, UNLESS A WALL STRAP HAS BEEN INSTALLED TO HELP SECURE THE STAND AGAINST TIPPING OVER.**

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)  
under the planning and quality control of Nakamura Corporation of Japan.  
Some specifications may differ due to improvements for better quality.

---

Nakamura Co. Ltd.

Official brand site : <https://equals.tokyo/>

Contact us in English : [info-gl@nakamura-jpn.co.jp](mailto:info-gl@nakamura-jpn.co.jp)

## Be sure to check before assembling

**This product may not be used with certain TV models.**

**Be sure to check this product can be used with your TV before assembling, referring to the following.**

### 1. Make sure that your TV meets all three of the following requirements

1-1. The size of the TV must be between 32" and 80"

 
1-2. The weight of the TV (excluding the stand) must be 110 lbs / 50kg or less

1-3. Written documentation from the TV's manufacturer says it is a wall-mounted TV\*

\*Some TVs do not support wall mounting, even if the back of the TV may appear to support it.

### 2. Check the back side of your TV

2-1. The spacing between the four screw holes meets the conditions A and B below

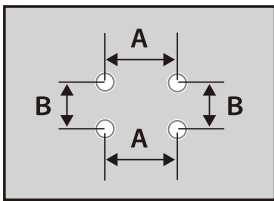


**A : Any of 10, 20, 30, 40, 50 or 60cm**

**B : Within the range of 10 - 40cm**




2-2. Satisfy all of the above conditions, and satisfy any one of the following

 
All 4 screw holes are on the raised part (shaded area) of the TV's back, or

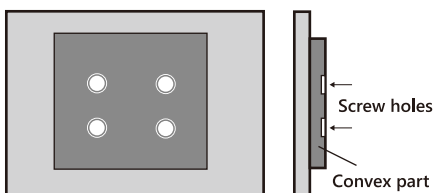

 There is no raised part near the surface of the 4 screw holes, or

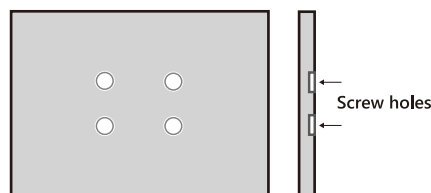


 The difference in height between the raised part (shaded area) and the rest of the TV's back is 4cm or less (if the raised area is located below the 4 screw holes)

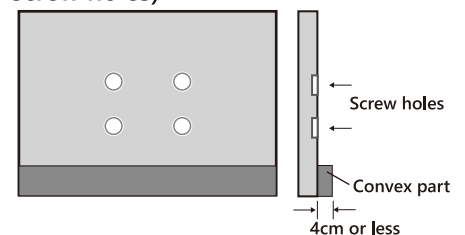


### **✗** The following TVs cannot be installed onto this product:

 
Less than all of the 4 screw holes are located on the raised part (shaded area) of the TV's back

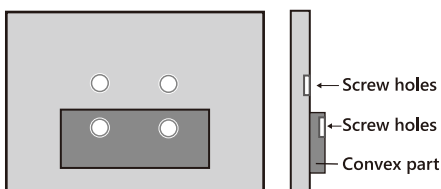


 
There is a raised part (shaded area) between the 4 screw holes

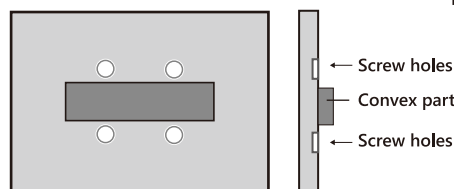

 
There is a difference of 4cm or more between the height of the raised part (shaded part) and the rest of the TV's back (if the raised part is located below the 4 screw holes)

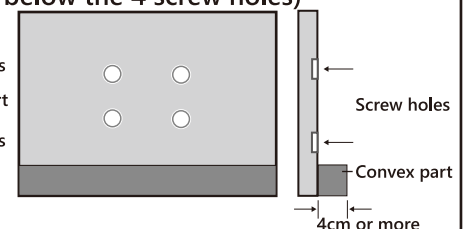

### 3. Precautions regarding load capacity and installation of shelf

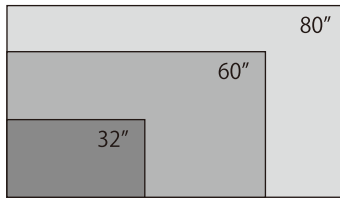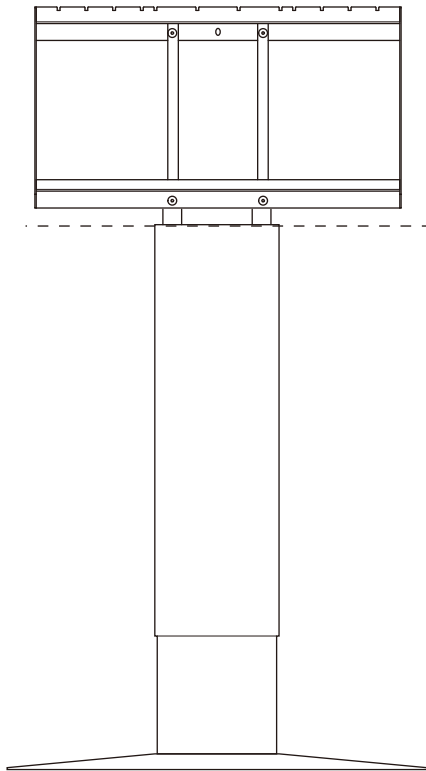  

 
1. The weight of the TV (excluding the stand) must be **110 lbs / 50kg** or less.

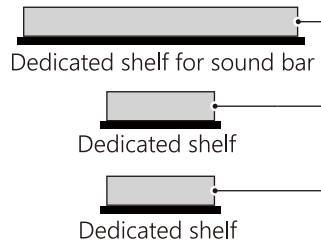


2. The total weight that can be placed on all shelves is up to **33 lbs / 15kg**

3. **Up to 3 shelves** can be attached (Regardless of type)


#### Load capacity of each shelf

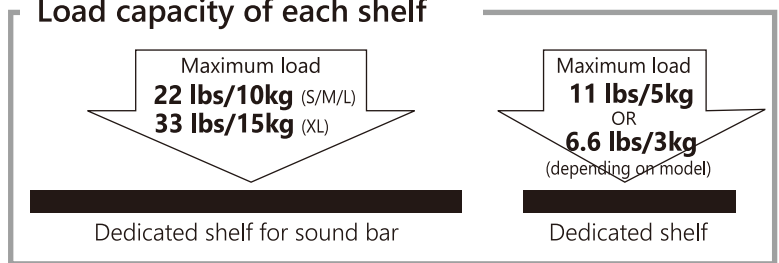 


as of August 2022

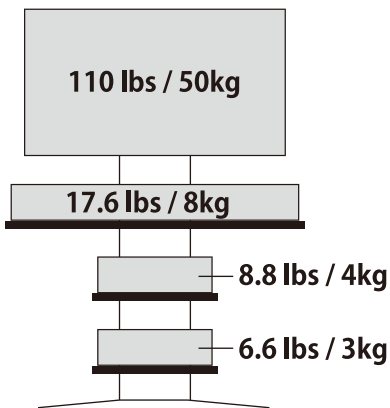 

 
The weight of the TV is **110 lbs / 50kg** or less with or without shelves

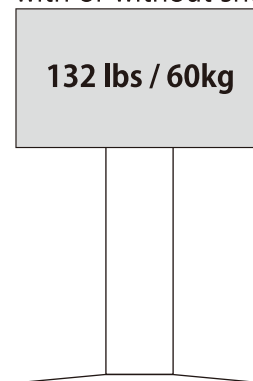

 The total weight on all shelves is no more than **33 lbs / 15kg**

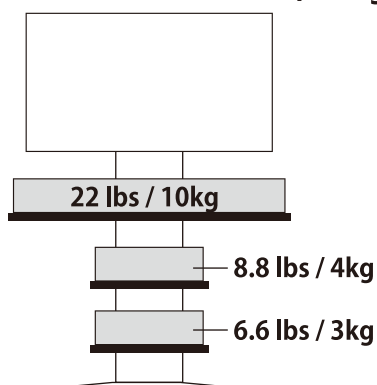

Up to **3 shelves** can be attached

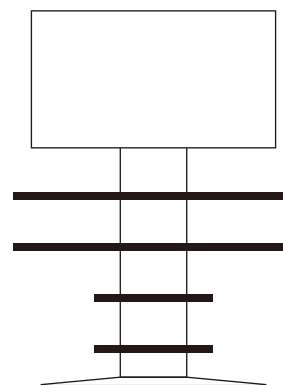 




# Safety precautions




 Failure to abide by the following advisories may result in personal injury or property damage:

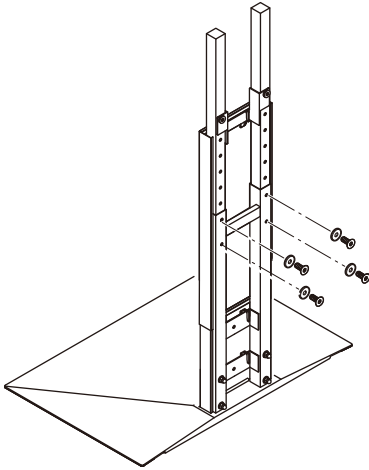


**Securely tighten bolts and screws in place before installing the TV**

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

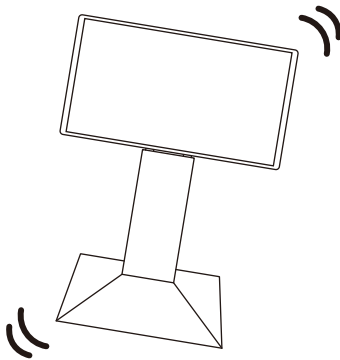


**Do not install the TV stand on a unstable place**

 Install on a flat and stable place with sufficient load bearing strength.  
(Do not install on sloped or uneven surfaces, unstable surfaces such as carpets, or deformed surfaces)

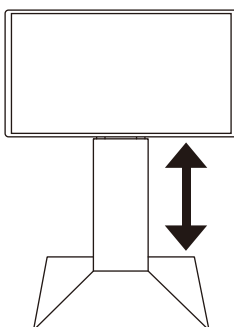


**Do not adjust the height with the TV installed**

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

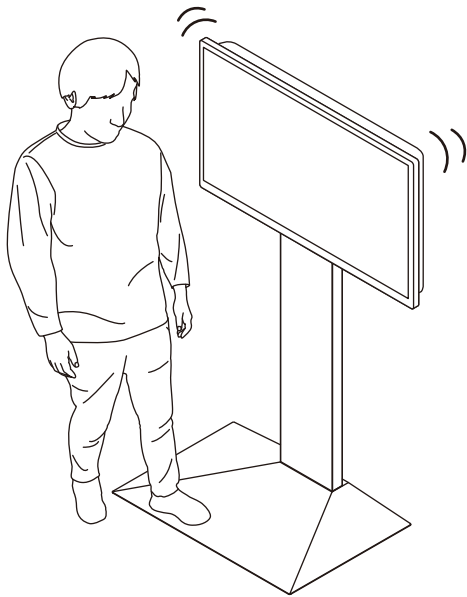


### **Do not step on the base**

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

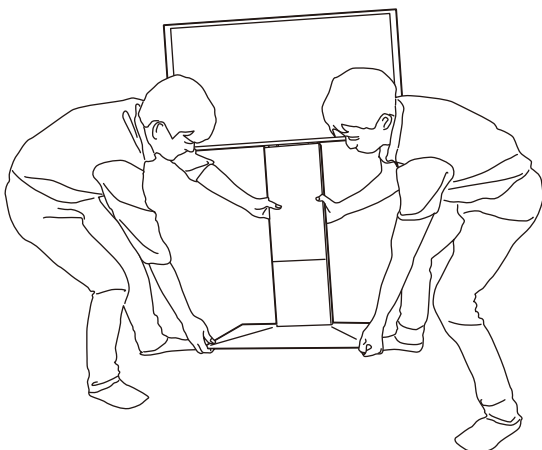

### **Do not move the TV stand with the TV installed**

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

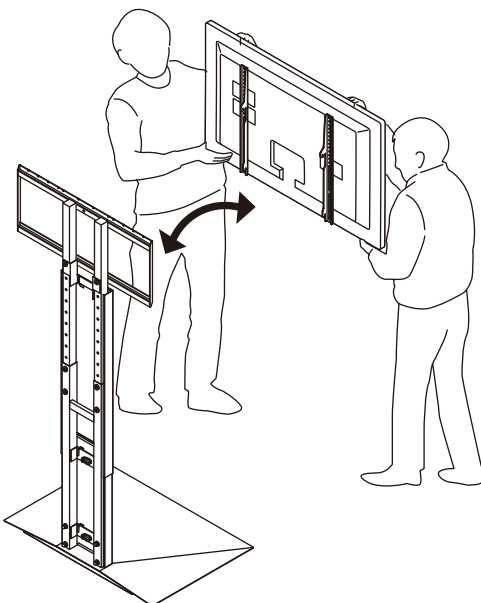

### **Be sure that two or more persons assist in lifting, when moving the TV stand and installing or removing the TV**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.



### **Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard**

Refer to the instruction manual of the TV for how to hold the TV.



## Caution

If the following precautions are not observed, injury or property damage may occur.

### 1 Assembly and installation

---

#### 1-1. Causes of falls and damage

Be sure to assemble and install on a stable and flat surface. Spread a thick cloth or cardboard over the workspace so as not to damage the floor or walls.

#### 1-2. Causes of falls and damage

Install the stand and TV close to the wall, attach a strap, and take measures to prevent it from tipping over.

#### 1-3. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or, air conditioning.

#### 1-4. Cause of fire or malfunction

If you block the ventilation holes of a flat-screen TV, heat may be trapped inside and cause a fire, so leave a sufficient distance from the wall.

#### 1-5. Causes of fire and electric shock

When installing or removing a flat-screen TV from this product, be sure to turn off the power switch of the flat-screen TV, unplug the power plug from the outlet, and disconnect external connection cords (such as the cord between the antenna and TV). Otherwise, the cord may be damaged, resulting in fire or electric shock.

### 2 During use

---

#### 2-1. Causes of falls, injury and damage

Do not stand or hang on the product or use it for anything other than a TV stand.

Do not apply a concentrated load to the TV stand. (It may tilt).

When moving the product, always remove the TV and move it slowly by two or more persons.

#### 2-2. Cause of injury

Be careful not to pinch hands or fingers.

#### 2-3. Causes of fire and discoloration

Do not use near a fire or heat source such as a stove or heater.

#### 2-4. Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

### 3 Care and maintenance

---

#### Causes of cracking, discoloration and deformation

Do not wipe the surface with a damp cloth.

Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.

- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt, and wipe off any residual moisture with a dry cloth.

- Check the screws regularly and tighten them securely if they are loose. (Once a month)

 


# WALL INTERIOR TV STAND


## V3 [ LOW TYPE ]

<b>model number</b>	Satin White WLTVB5111	Satin Black WLTVB5119	Walnut WLTVB5238	White Oak WLTVB5232	Black Base WLTVB5W19	Walnut Base WLTVB5W38	White Oak Base WLTVB5W32
<b>product ID</b>	X04000016	X04000017	X04000018	X04000019	X04000053	X04000054	X04000055
<b>type</b>	low type						
<b>size</b>	W70 X D46 X H102.5 - 122.5cm						
<b>material</b>	steel						
<b>surface finish</b>	powder coating						
<b>weight</b>	37.4 lbs / 17kg						
<b>country of origin</b>	China						
<b>maximum load</b>	80" (110 lbs / 50kg equivalent)						

### INDEX Assemble by two or more people Required tools: screwdriver (+)

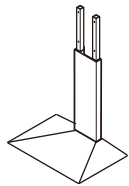


**Assemble the TV stand** P.05~

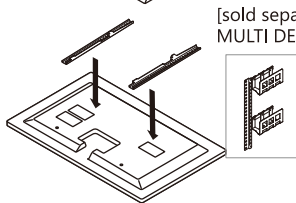 

[sold separately]  
MULTI DEVICE HOLDER

**Prepare to install the TV** P.08~

 Installation of MULTI DEVICE HOLDER [sold separately]

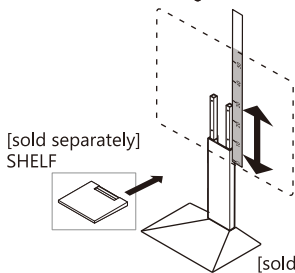


[sold separately]  
SHELF

[sold separately]  
HDD HOLDER

**Determine the installation height of the TV and assemble** P.14~

Installation of SHELF [sold separately]




 
Installation of HDD HOLDER [sold separately]

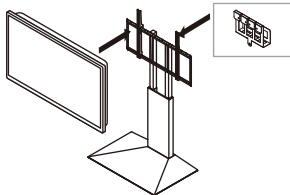


**Install the TV to the TV stand** P.18~

**TV tilt adjustment method** P.22

# Assemble the TV stand

  
 
 


  Install facing the front as shown  
Point

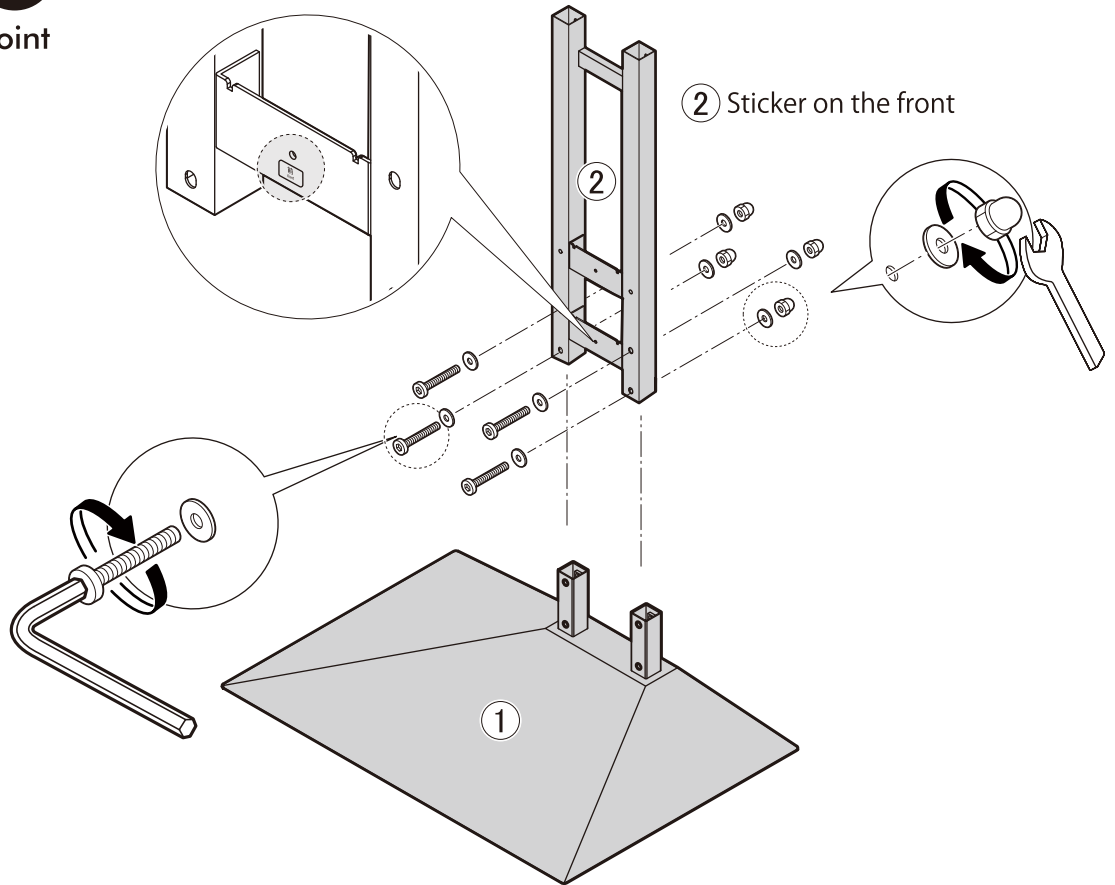

1

   2

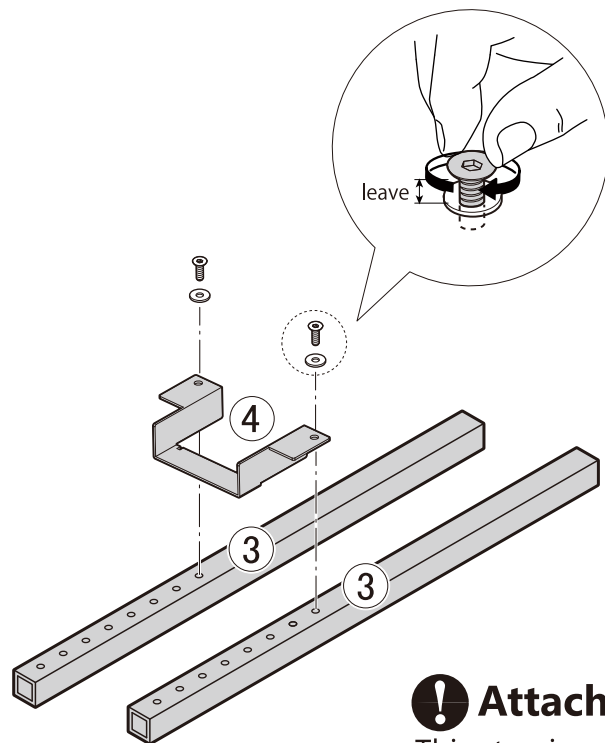


 **Do not fully tighten**

When the final tightening is done, ③ will not be inserted in ② in the next step.


 **Attach it on the top holes**

 This step is not for the height adjustment of TV stand.

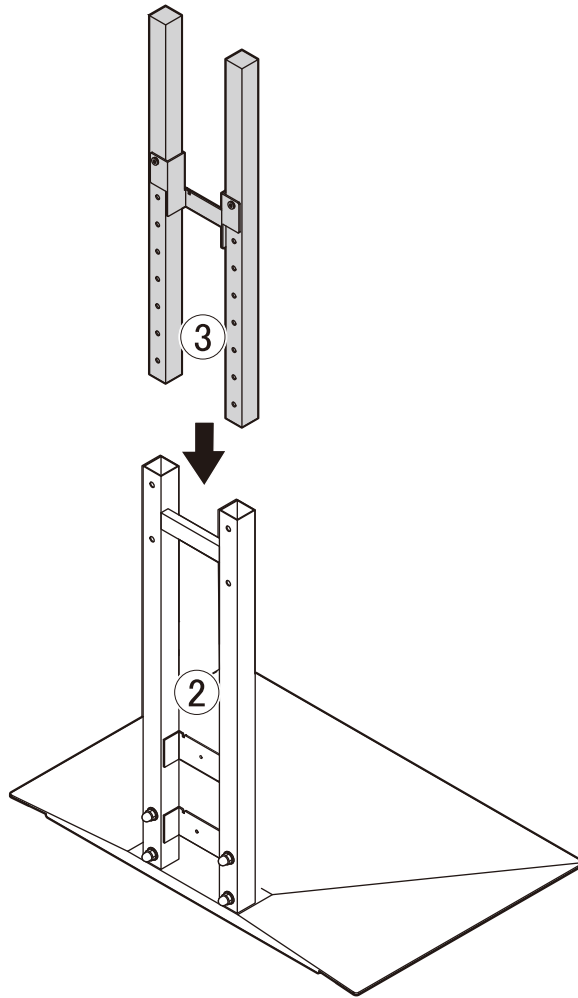


3


 
4

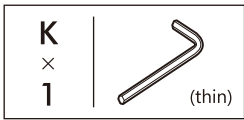

 **!** Fully tighten the screws  
After inserting ③ into ②.

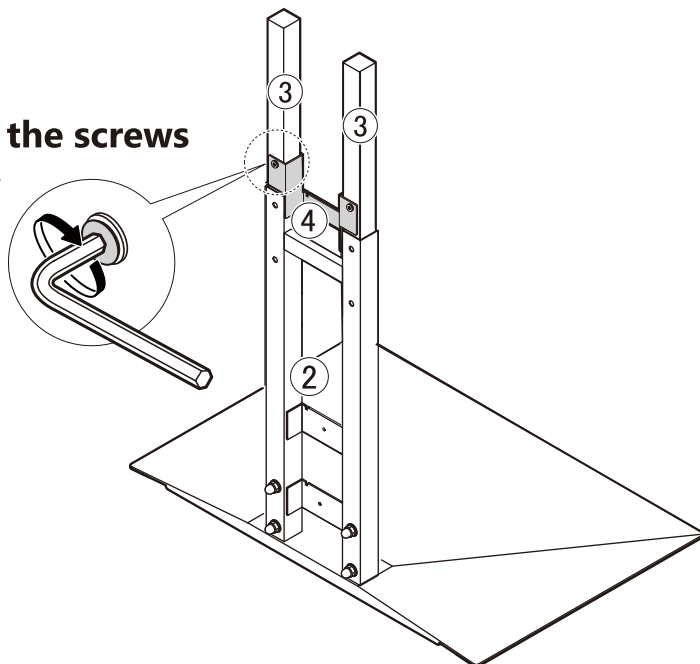


⑤ and ⑥ are packed in layers

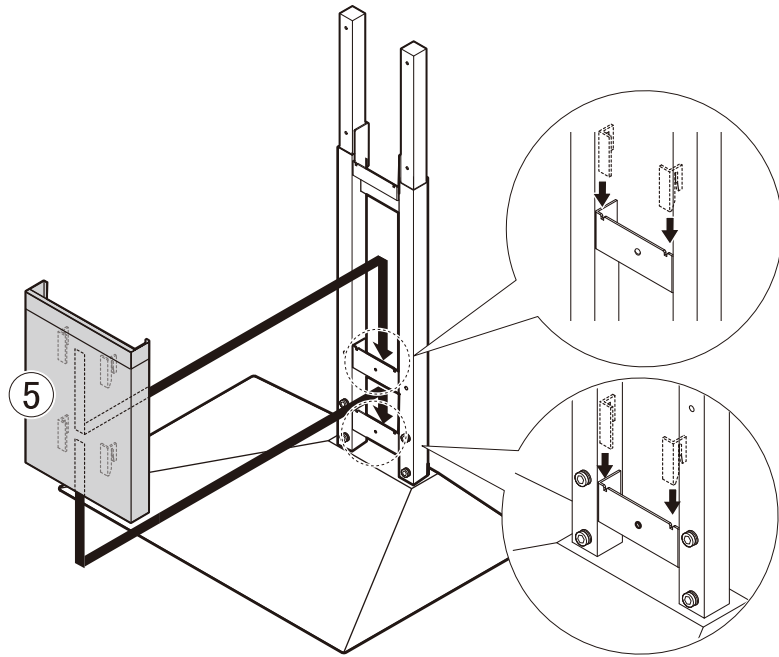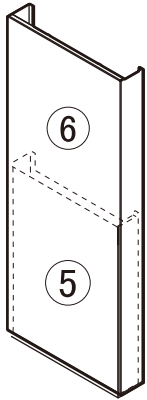  

5

 
6

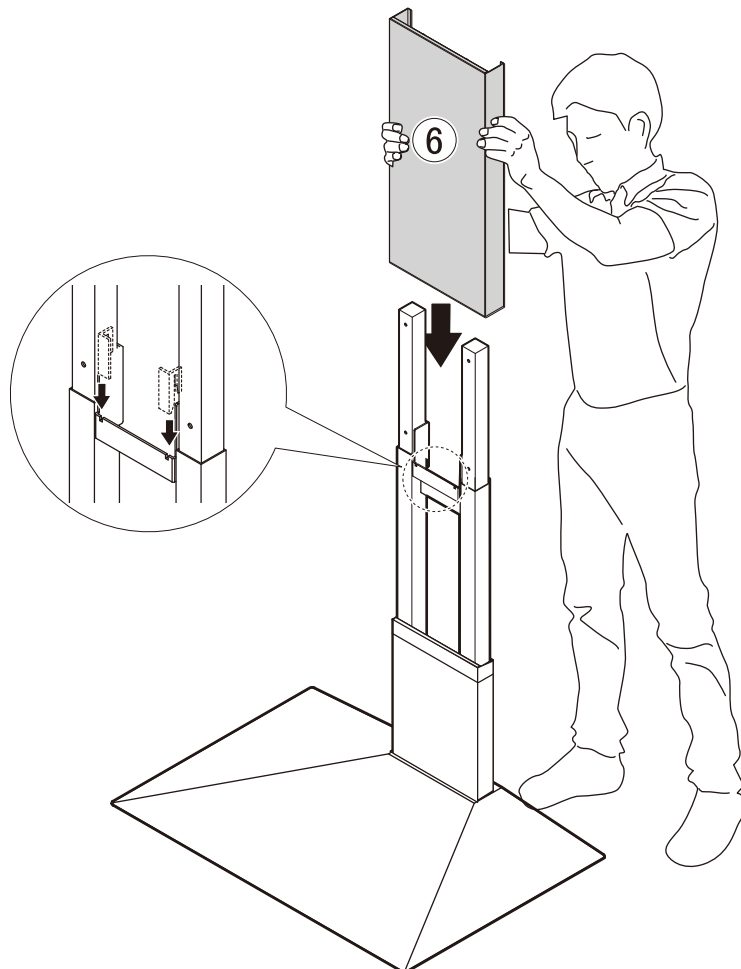


# Prepare to install the TV

## 7 Apply the TV mounting bracket to the TV


 
The shape of the back of the TV determines whether or not the spacer (large) is used.

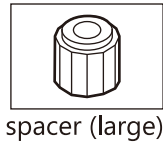


 
It is designed so that it can be attached to various TVs. Please install it according to the installation method that suits your TV. Some TVs recommend a dedicated mounting method, so please check the TV wall-mounted design manual.

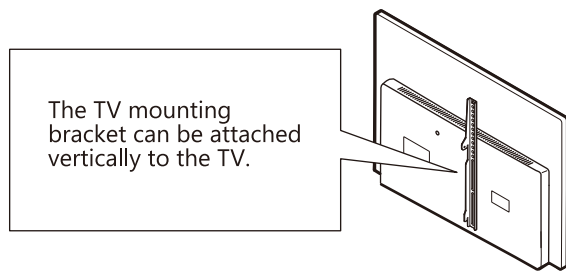



No spacer required

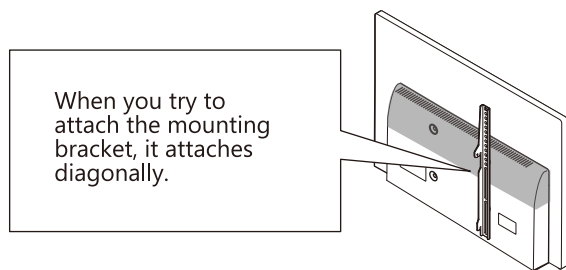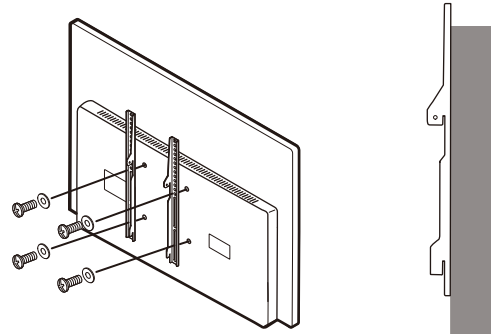  


How to install A

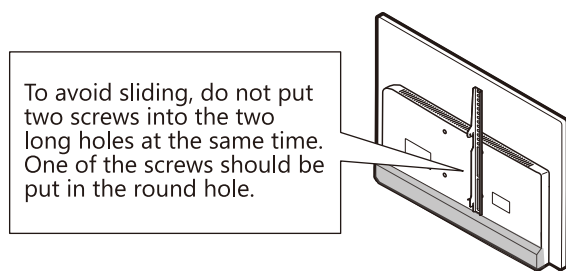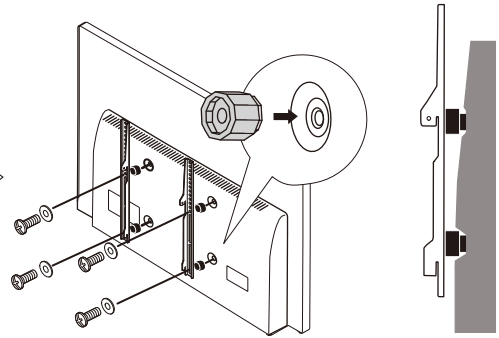  

How to install B

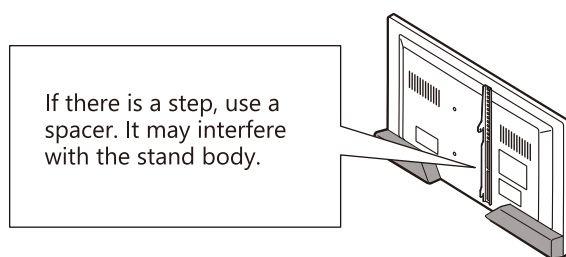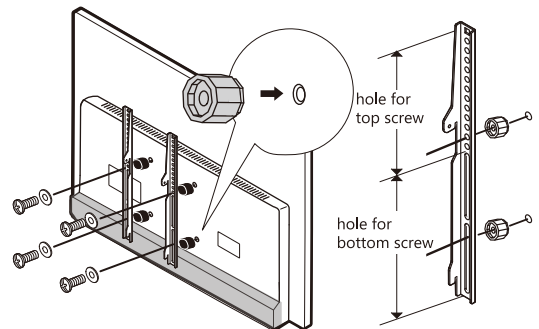  


How to install C

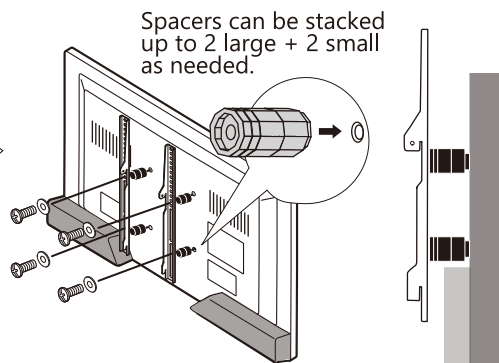 




## In cases like this .....

 There is a screw hole in the protrusion and the TV mounting bracket does not fit well.

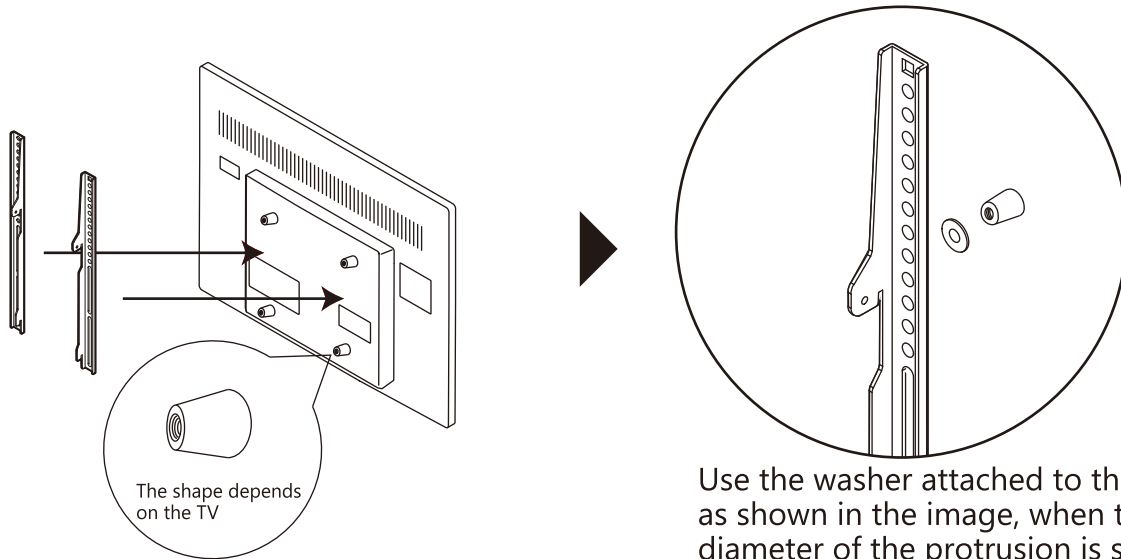

Use the washer attached to the stand as shown in the image, when the diameter of the protrusion is small and it gets into the hole of the mounting bracket.


## 8 Check the diameter of the screw holes

 





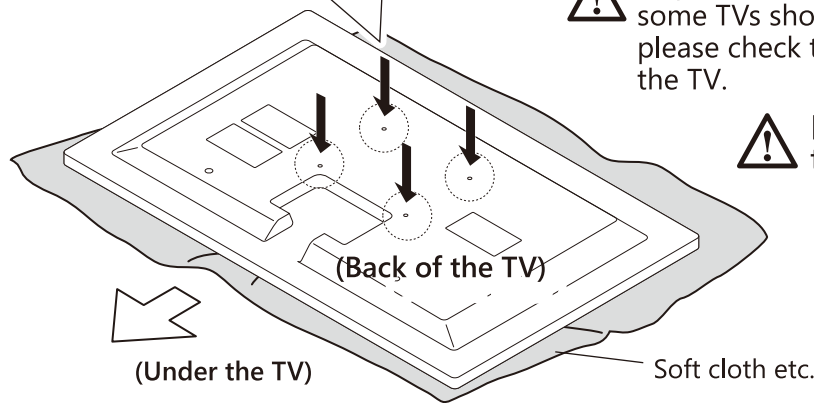 

Use the best screws and washers, as different TVs have different screw sizes




**!** To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.

**!** Do not install the screws yet




M	 × 4 (small)	N	 × 4 (medium)	O	 × 4 (large)
	 × 4 each (15,25,35mm)		 × 4 each (15,25,35,45,55mm)		 × 4 each (15,25,35,45mm)

 
## 9 Measure the depth of the screw hole

M	 (small)
N	 (medium)
O	 (large)


 
**Info** When using a spacer, measure as shown in the illustration.

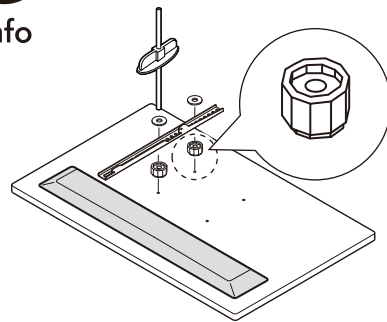

 
Insert a screw hole measurement tool instead of a screw to measure the required screw length.

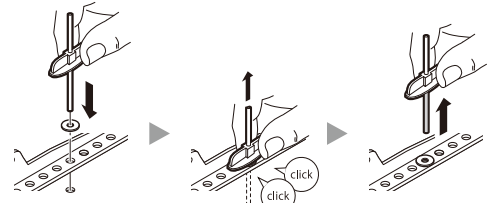

How to reset the tool

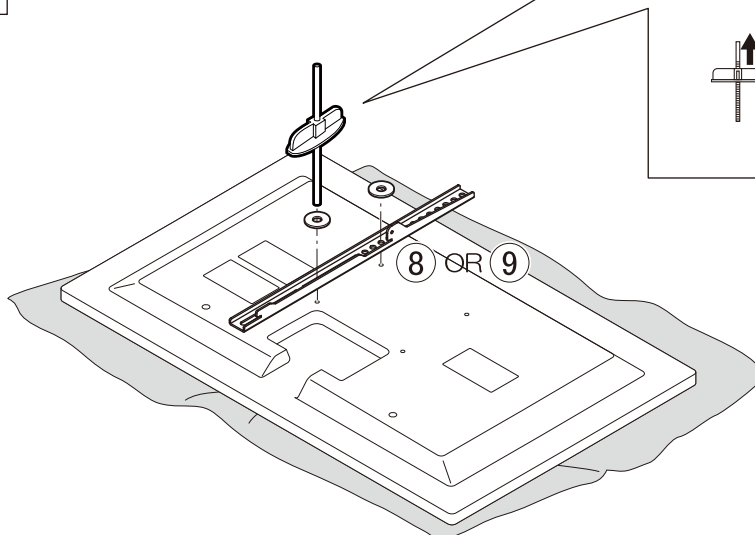 
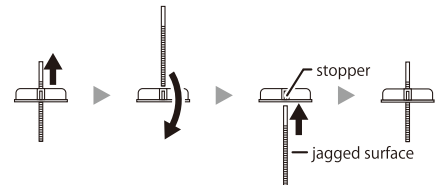 


# 10 Choose the screw of the required length

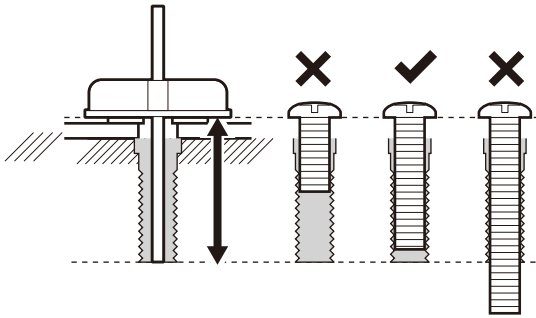 

screw is shallow

  screw is too long

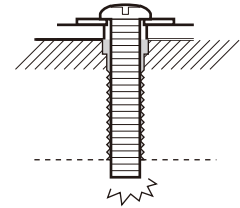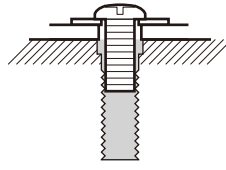

There is no problem if the screw is hooked 5 turns or more.

Point




If the thickness of the screws in the screw set does not match or the length of the screws is not enough, please purchase.


Info

M (diameter) x (length) mm  
 e.g. 5mm diameter, 15mm length  
 --> M5 x 15mm  
 Please select "truss screws" or "pan screws".

## If you can't find a screw of the required length, use spacer (small) to adjust the screw length.


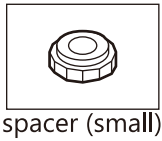 


The thickness is approximately 5mm.



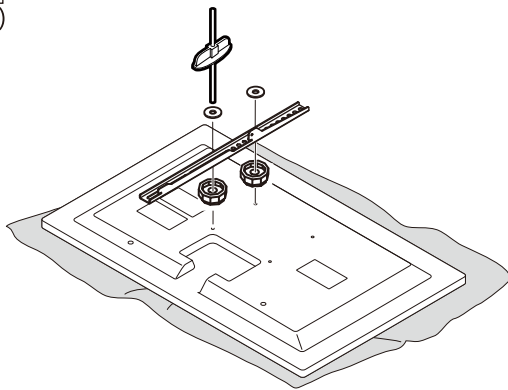 


After adjustment

  Before adjustment

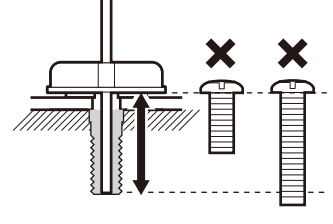
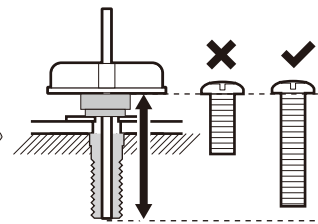


## When used in combination with a spacer (large)

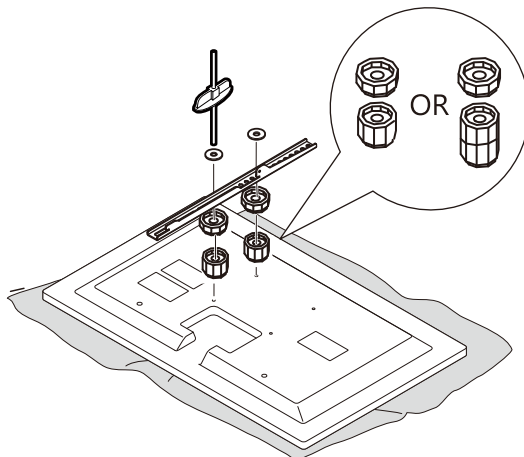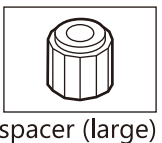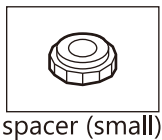   

After adjustment

 
 
Before adjustment

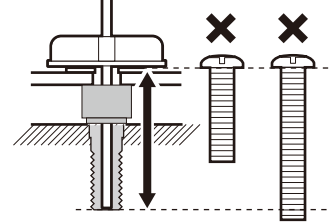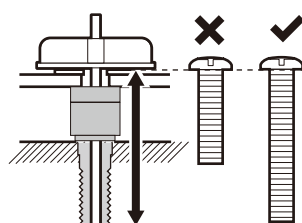

# Before attaching the TV mounting brackets.....


## screws and spcers

  - Prepare the screws and spacers of your choice.
- Spacers only if needed.

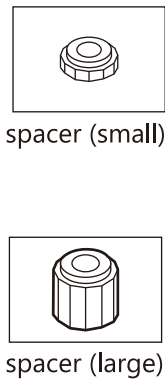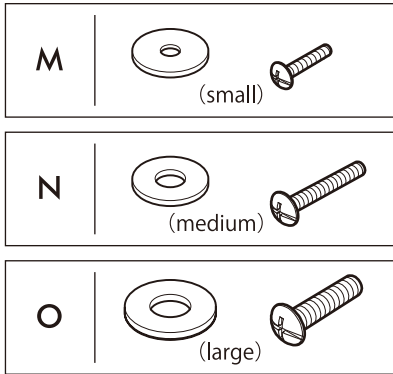

## TV mounting brackets

 
- ⑧ and ⑨ are not the same shape.
- Check the install position (right and Left).

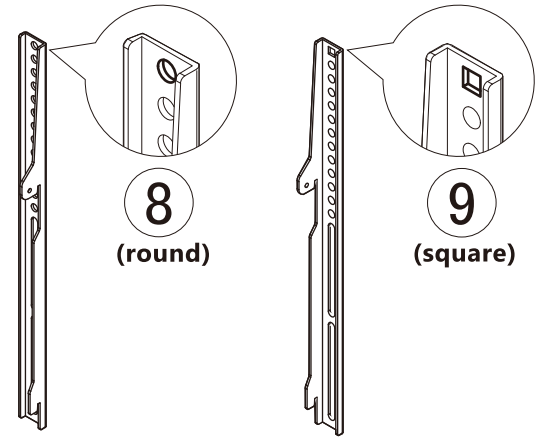


## Example of the install position of TV mounting brackets

- Attach the TV mounting brackets as close as possible to the center of the TV.
- Use the round hole of the TV mounting bracket for the upper screw hole, and use the long hole of the TV mounting bracket for the lower screw hole.

 
TV with screw holes near the center

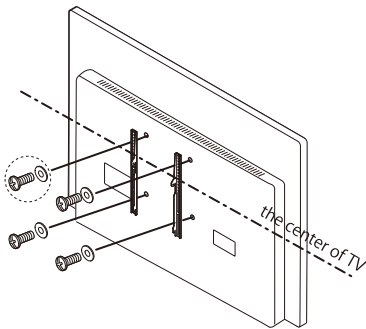


Guide for each screw pitch

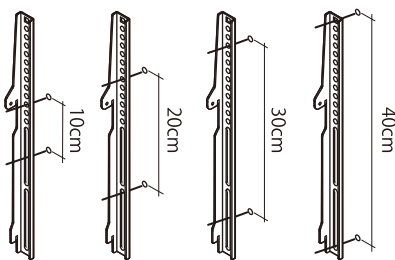 


TV with screw holes at the bottom

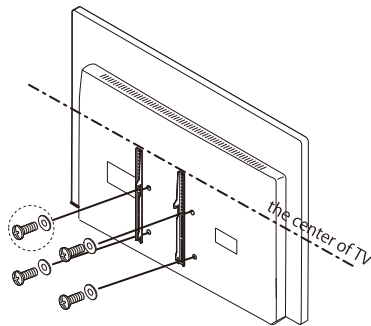 

Guide for each screw pitch

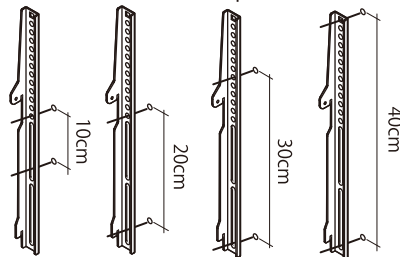 


  Do not attach the TV mounting brackets close to the bottom of the TV. It may cause the exposure of the pillars of the TV stand.

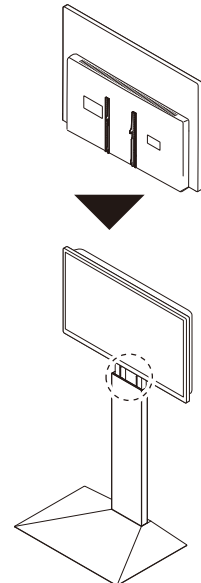


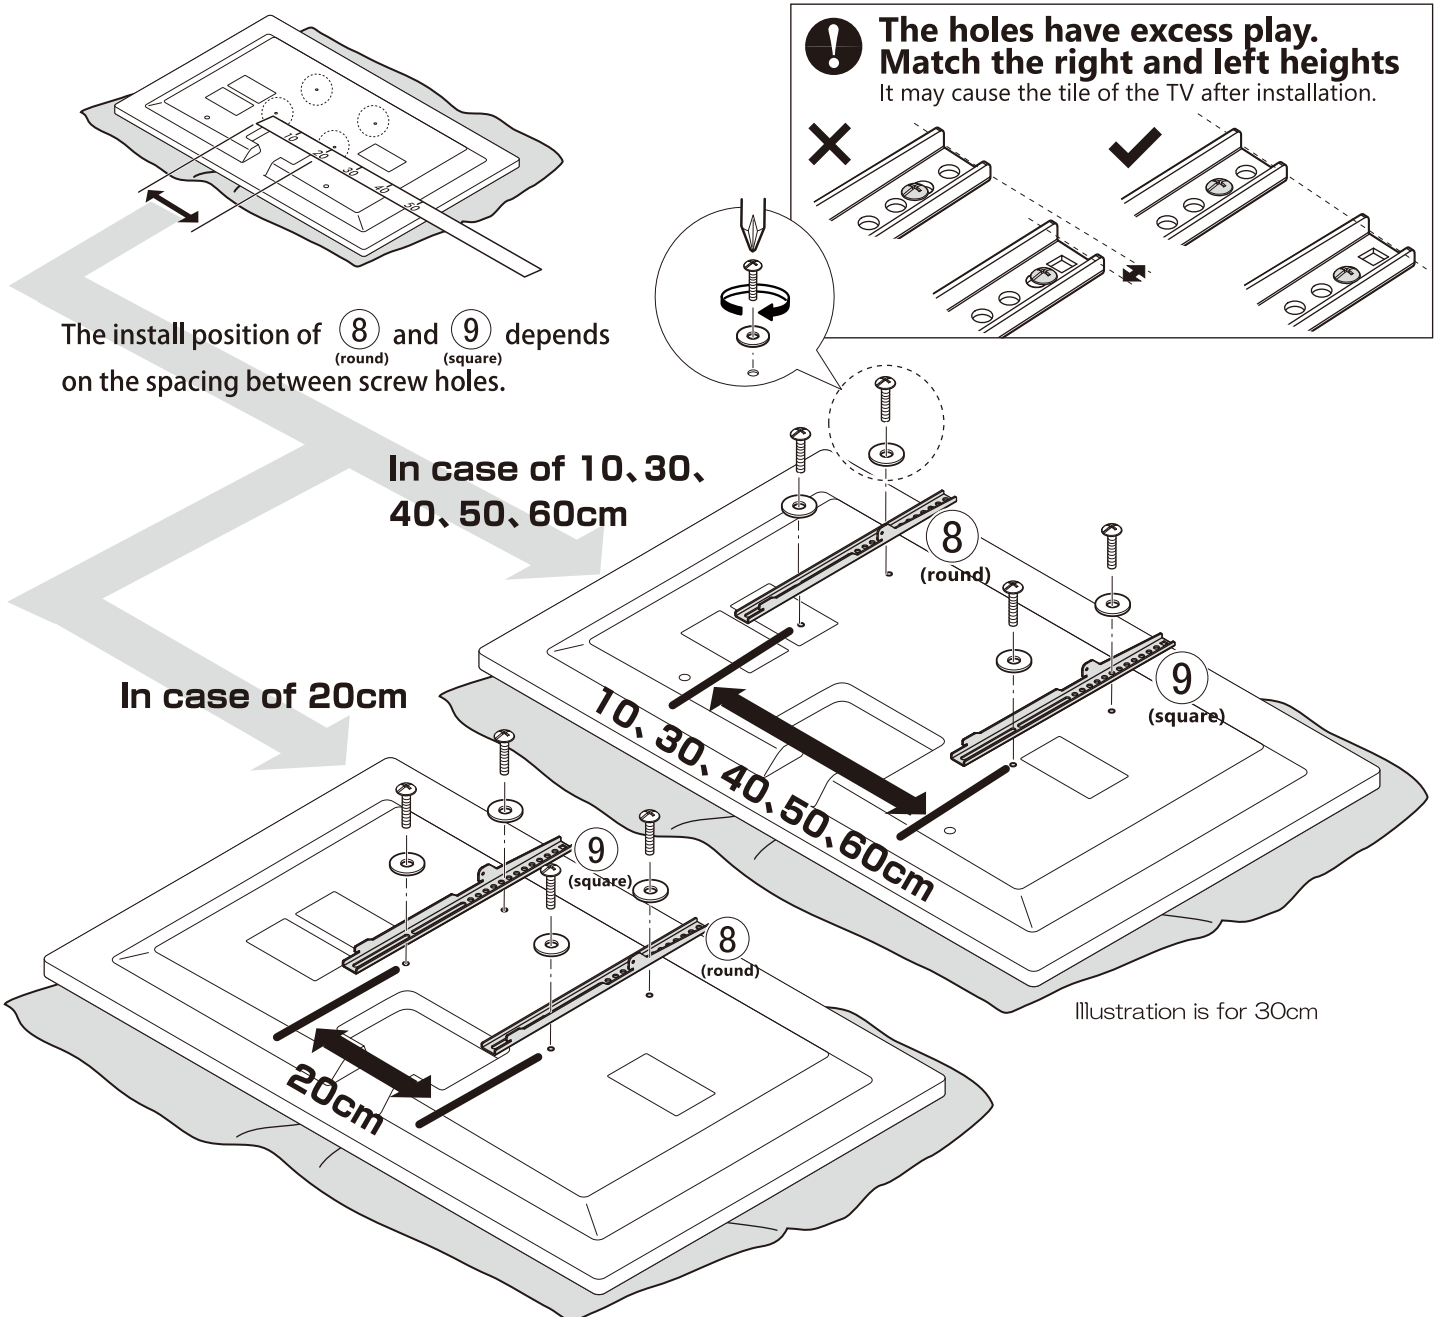 
## [Sold separately] Installation of MULTI DEVICE HOLDER

- Install it here with TV mounting brackets

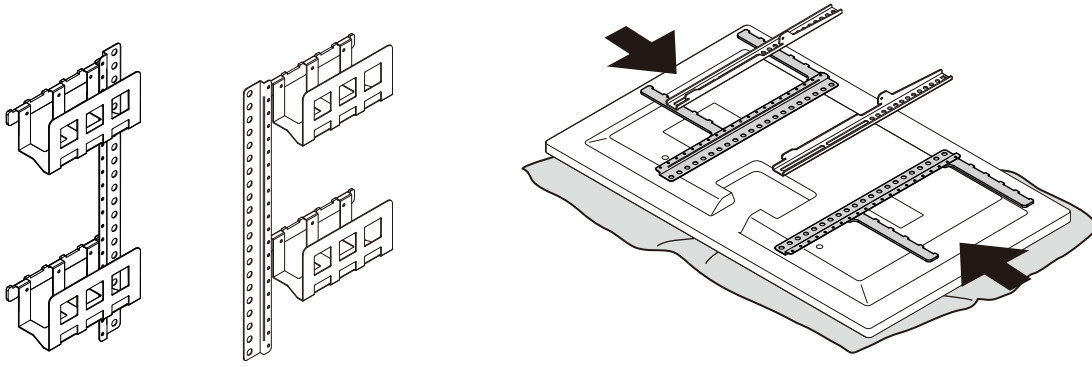

## 11 Measure the spacing between screw holes

 
 To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.



# Determine the installation height of the TV and assemble


## STEP-1

Place the attached paper measure on the TV to mark it, and make the paper measure look like a TV.

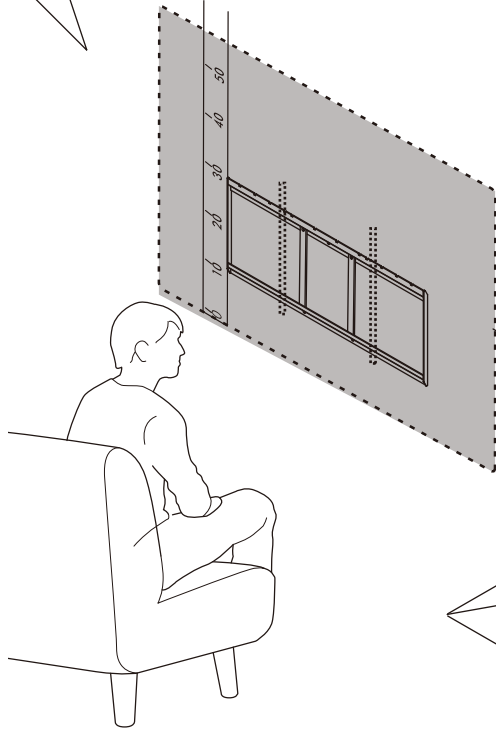

## STEP-2

 Move the paper measure up and down while touching the main pillar of the stand, and determine the height by imagining the screen position after installing the TV.

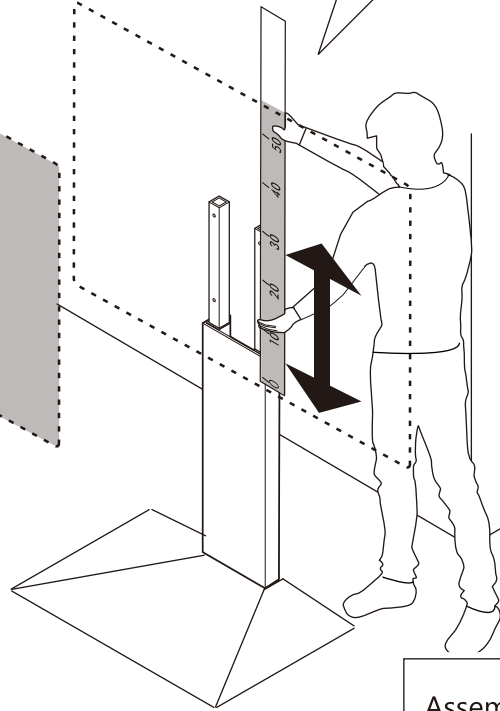



## STEP-3

Assemble the stand body to the determined height.

## STEP-1

### 12 Make marks on a paper measure

  Use a pen to write the marks A and C for the size of the TV and the mark B to match the stand body

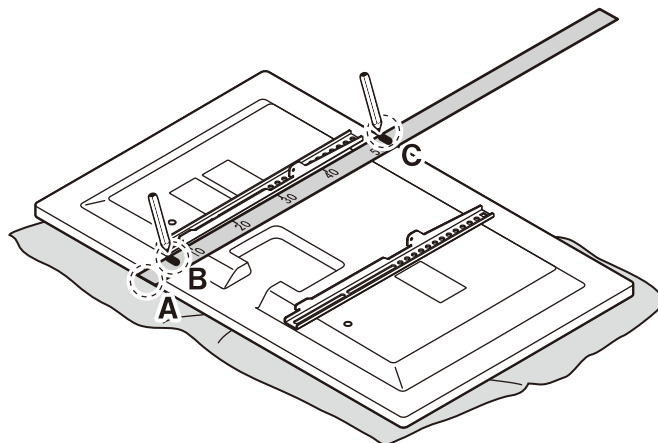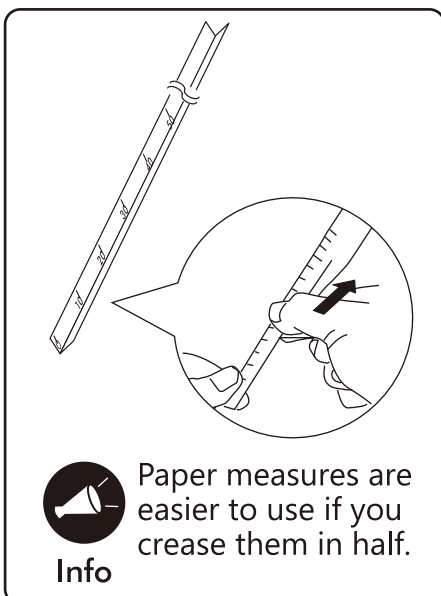


**A** = The bottom of the TV  
**B** = The bottom of ⑧ or ⑨  
**C** = The top of the TV

**Info** The mark B is the level for matching with the stand body.


# STEP-2
 
## 13 Determine the height

**1** Align B with the hole under the stanchion

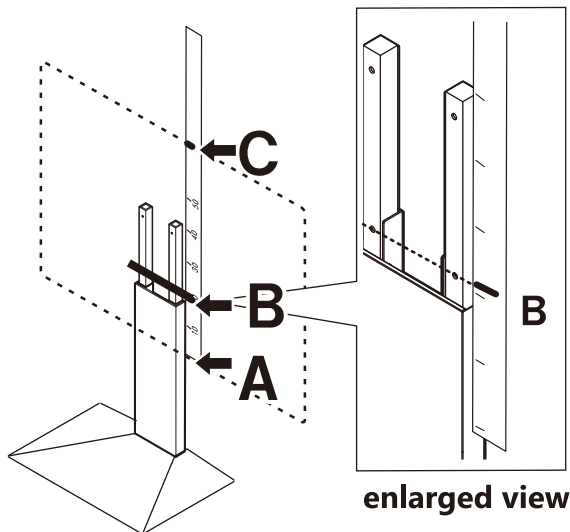

 **2** Raise the tape measure by 5cm to determine the height.

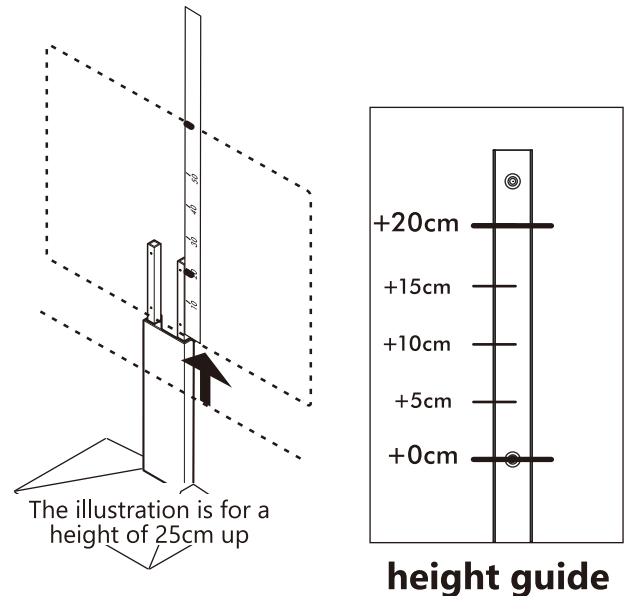

From this height, you can increase the height by 5cm, up to a maximum of 20cm

Info



# STEP-3
  
## 14 Assemble the TV stand to the determined height

Check the height adjustment list for the desired height column. You can see the number on the mounting screw holes.

Height adjustment list


+0cm	+5cm	+10cm	+15cm	+20cm
—	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u> (MAX)

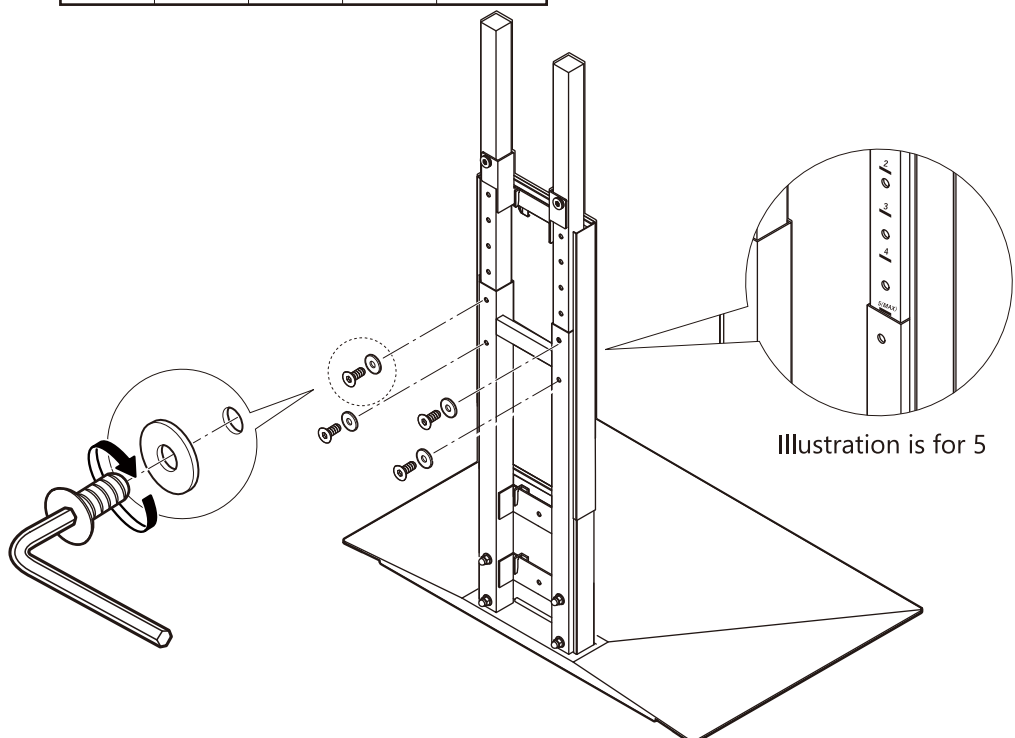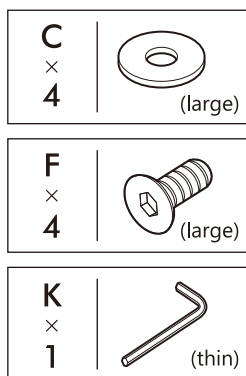





# [Sold separately] Installation of SHELF

• Install it here at the desired height.

 
 Two or more persons do the installation


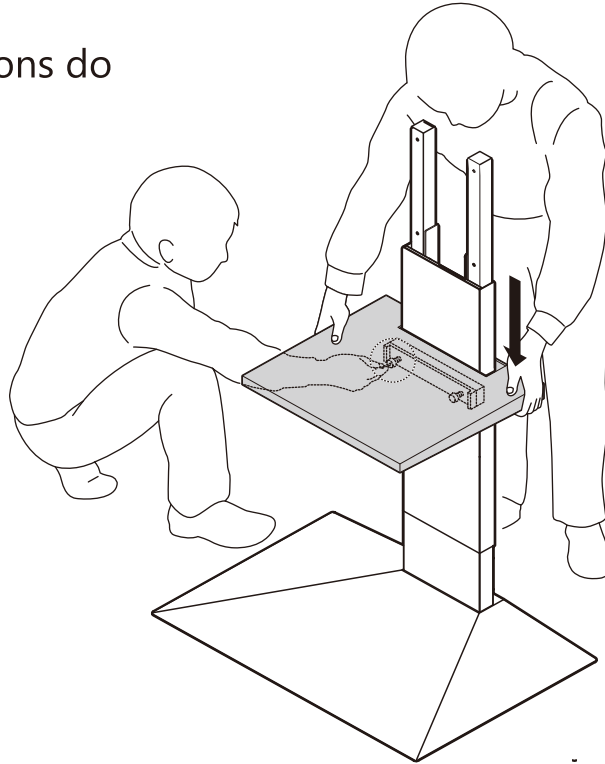


**15**

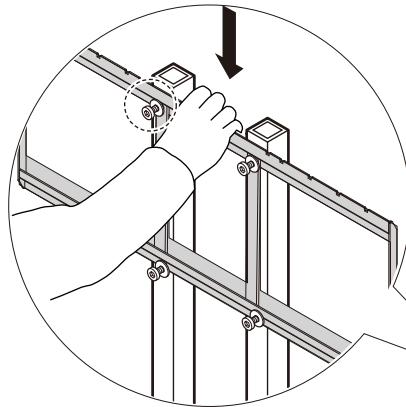    

⑦ Sticker on the bottom of the front

  
 Tighten while lightly pressing from above  
**Point**

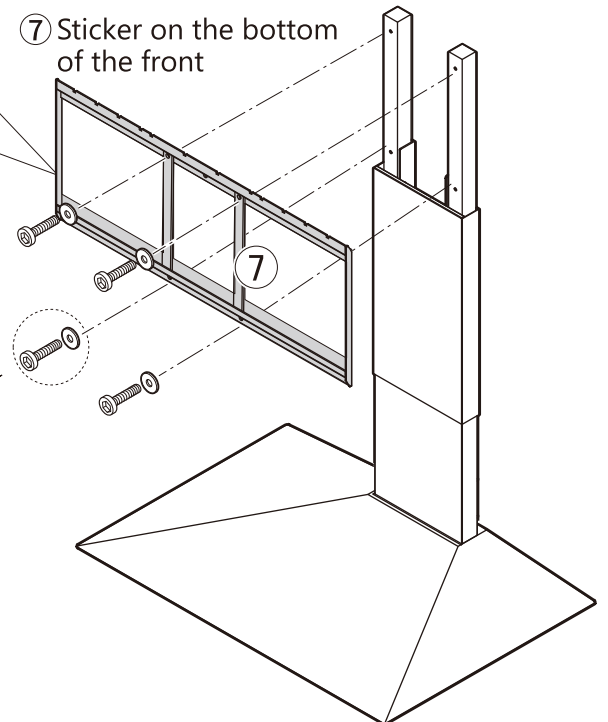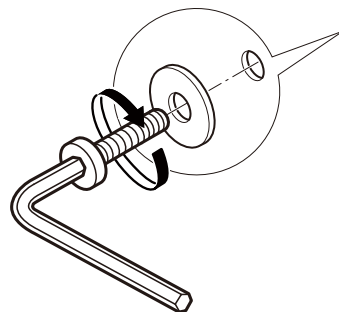









## [Sold separately] Installation of HDD HOLDER

 - Install it here before installing the TV.

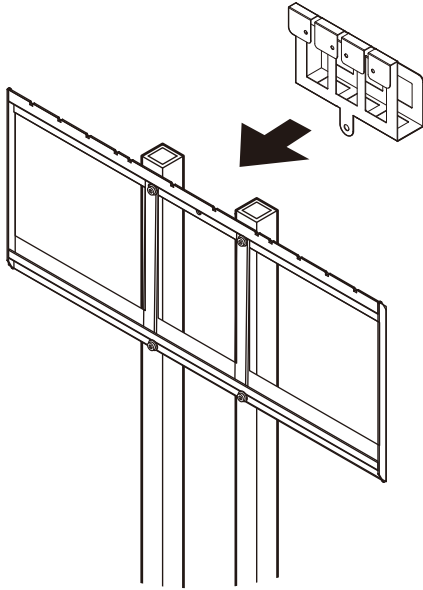


- Attach it together with the screw hole to attach the fall prevention wire.
- It can be mounted in the center of the frame or on the right and left.


## 16 Installation of fall prevention metal fittings (Install it if necessary)

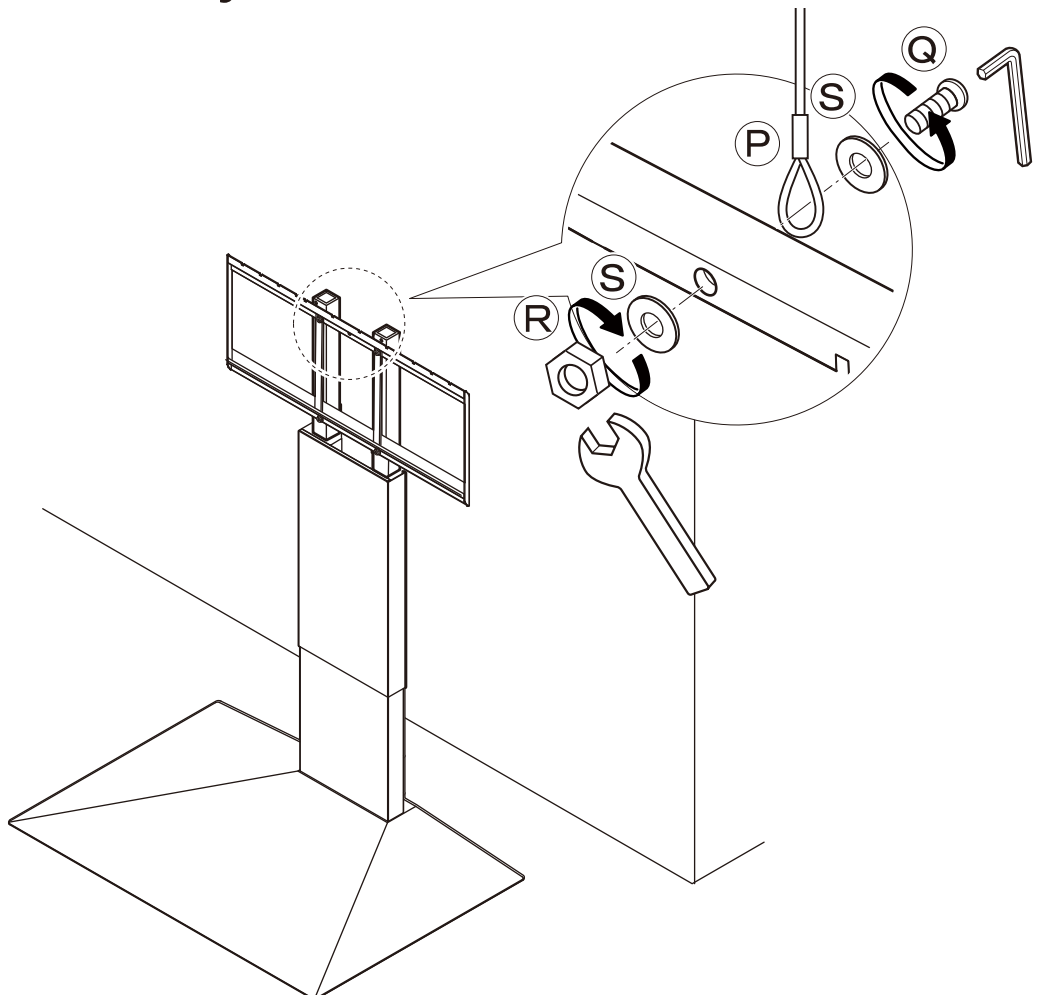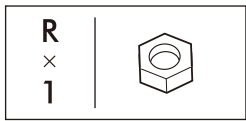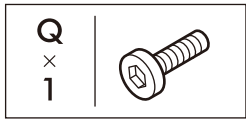      

# Install the TV to the TV stand

 17

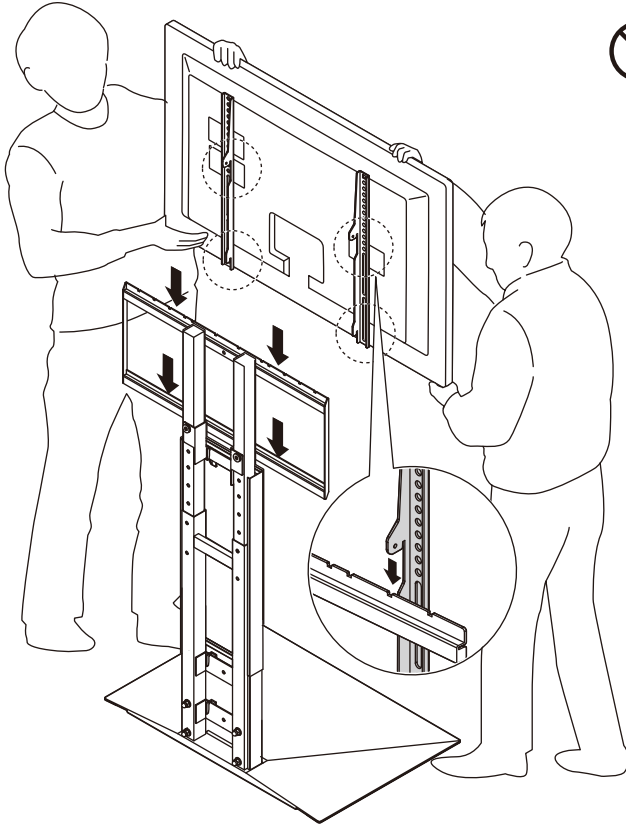

 **Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard.**

 
 
 
Refer to the instruction manual of the TV for how to hold the TV.

 **Two or more persons do the installation**

18




## Step 1. Preparation



Attach a retaining washer to the screw.

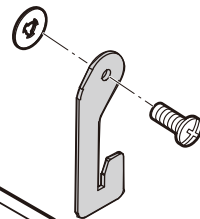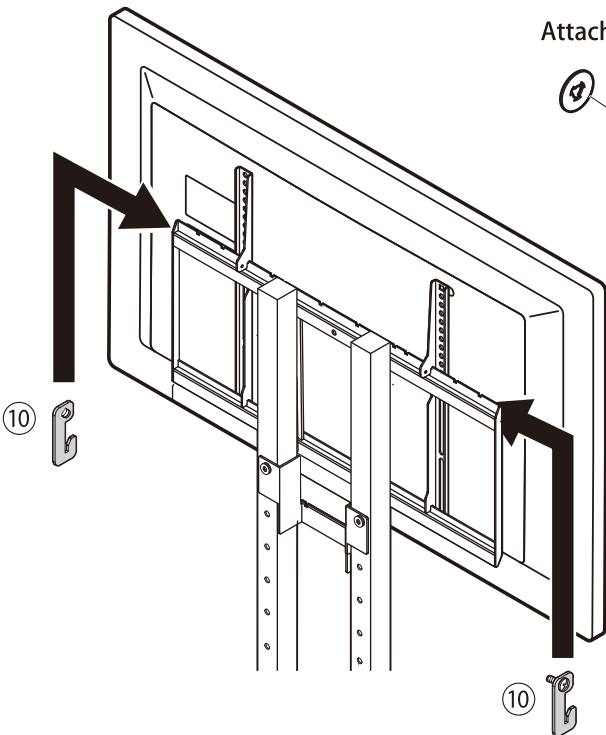

**Point** Pay attention to the inserting direction of the screws and attach them properly.


## Step 2. Installation

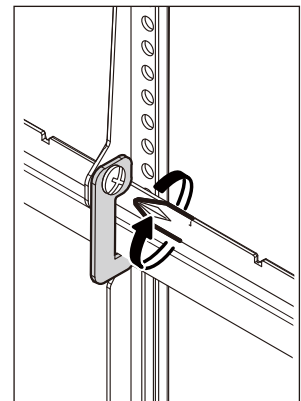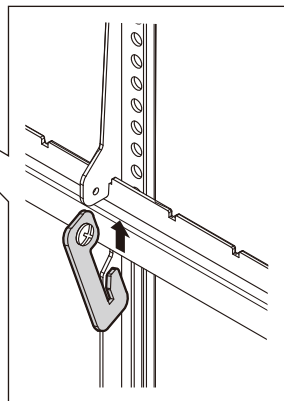   

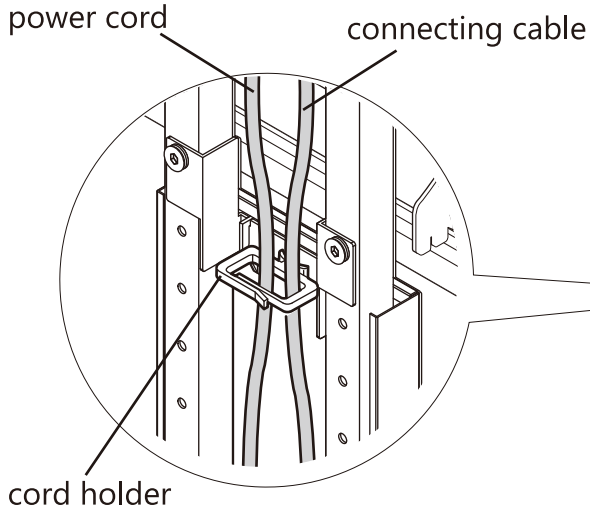  


Info

 If the cable length is not long enough to pass through the back of the stand, consider using an extension cord.

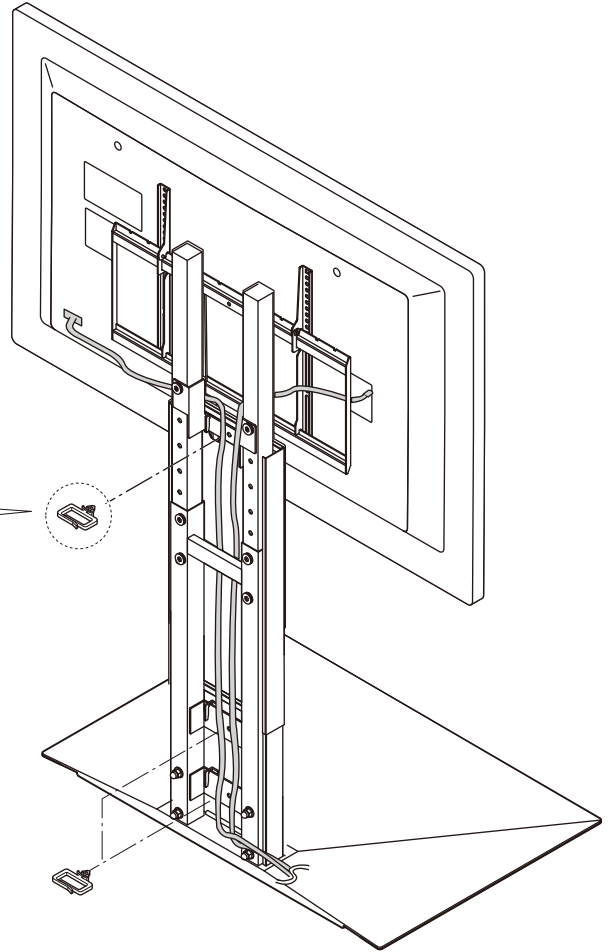


## 20 Attaching the cord band


 
(when the TV stand is extended and the shelf is installed)  
Install it if necessary



 
**How to remove**  
Pull out while turning to the left

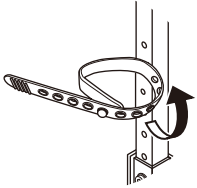

  **How to install**  
Insert while turning to the right

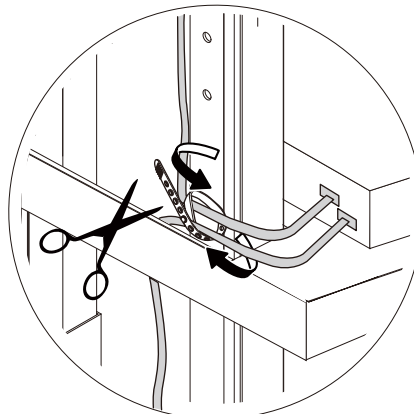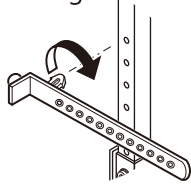


You can cut the excess cord band

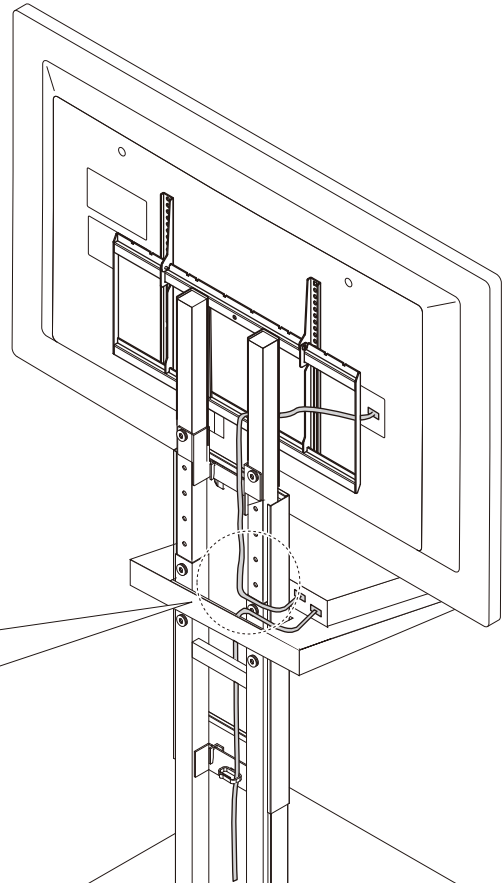 

## 21 Bring TV stand to the wall


### **caution**

 Be sure to install this product in a stable place and bring it close to the wall.

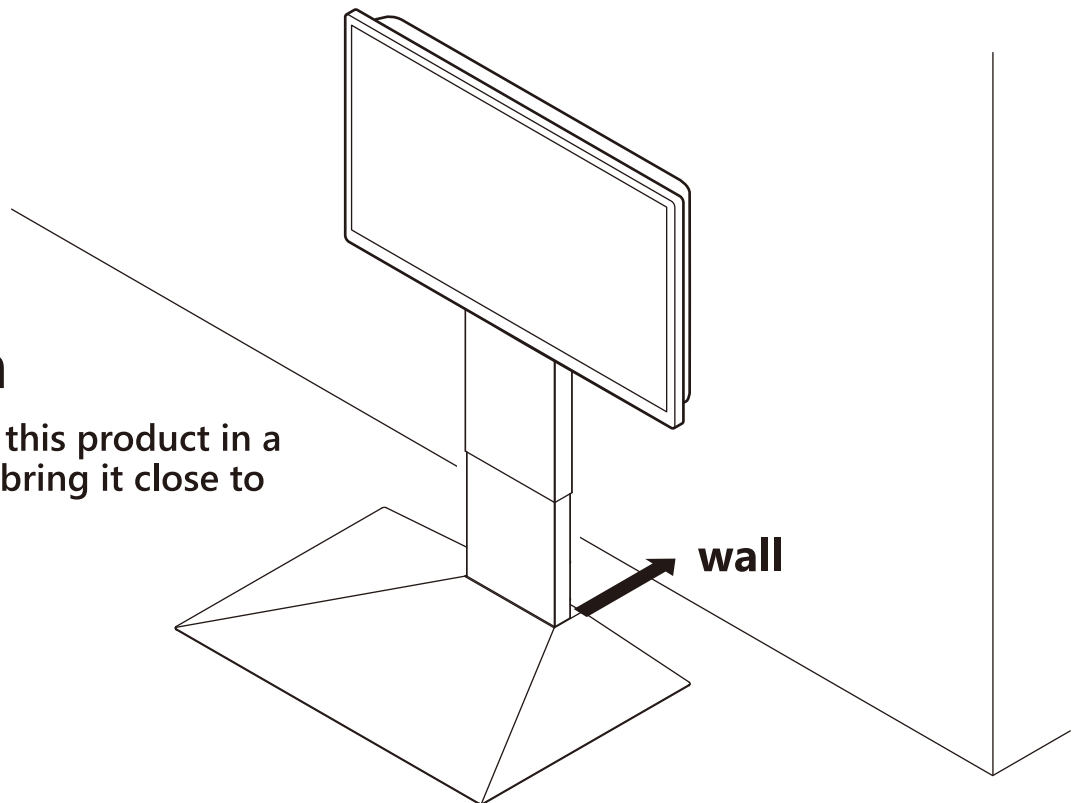

## Measures to prevent falls
 
### **caution**

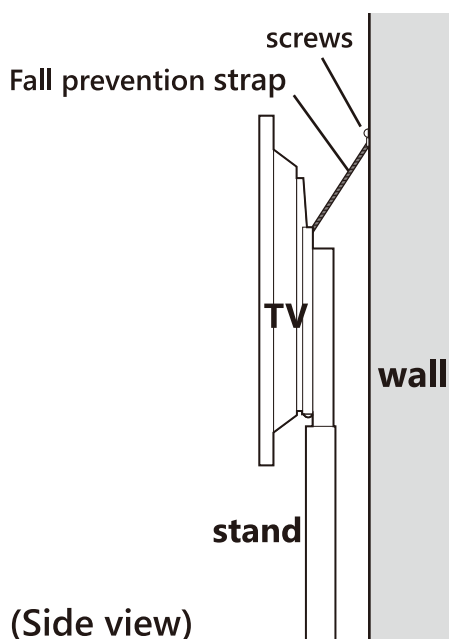

**Install the TV and stand close to the wall and attach a strap to prevent the stand from tipping over**

Attach the fall prevention strap to a sufficiently strong wall surface. If the wall strength is low, the strap will not function as a fall prevention function.

Use commercially available screws for wall mounting.

 
The necessary screws depend on the material of the wall, so please consult a hardware supplier or installation expert on the correct fastening method.

Install the fall prevention strap so that it does not sag. If the strap is slack, this will increase the force of impact when the stand falls, and the strap may be damaged and fall.


## In cases like this .....

If there is a gap between the floor and the base, adjust as follows

**Insert the furniture stabilizer in either of the designated positions**

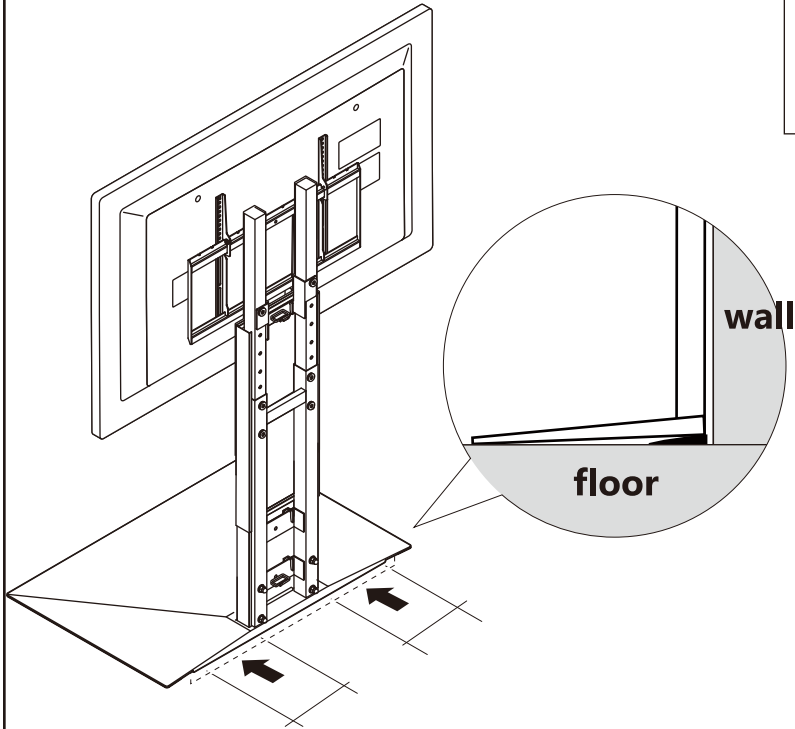

### Furniture stabilizer

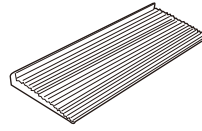 

We recommend using a commercially available furniture stabilizer. Please use the one that matches the floor material.

# How to adjust the tilt of the TV

You can adjust the tilt of the TV by adjusting the screw tightening position of the mounting bracket. Adjust using the space between screws and screw holes.


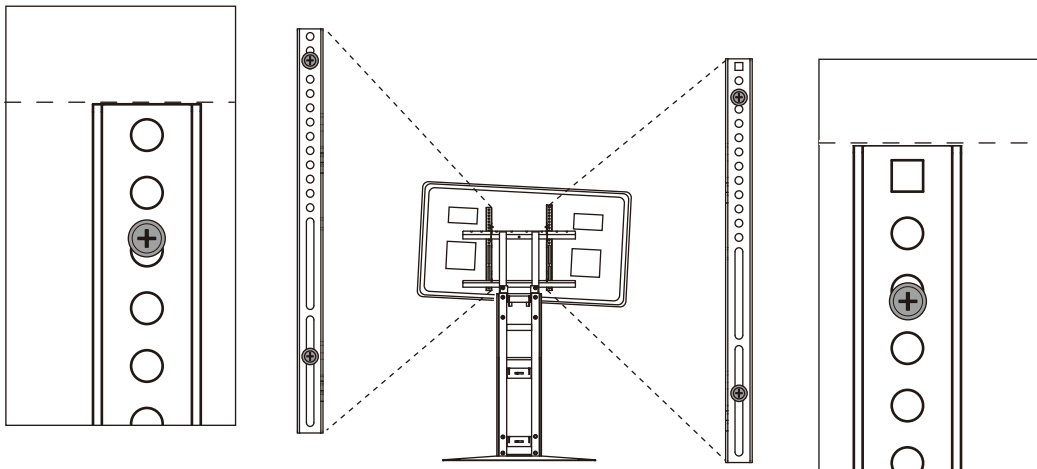 



Image of tilted state

## 1. Tighten the upper and lower screws (only one mounting bracket)

  Do not overloosen the screws

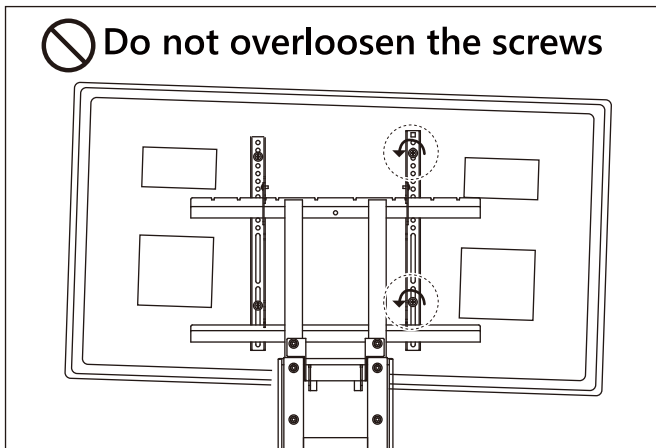


**before adjustment**      **after adjustment**

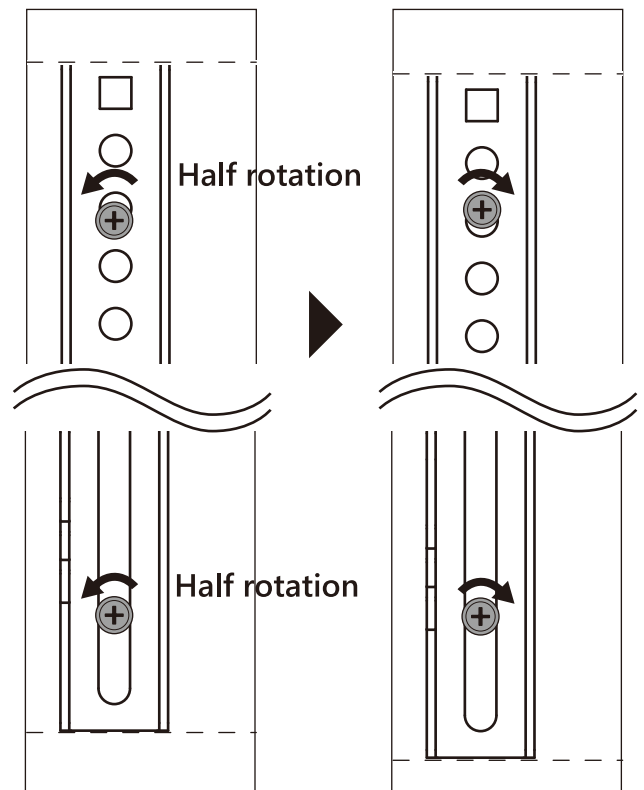 

## 2. Tilt until the TV is level
 
## 3. Tighten the screw while holding the TV so that it does not move

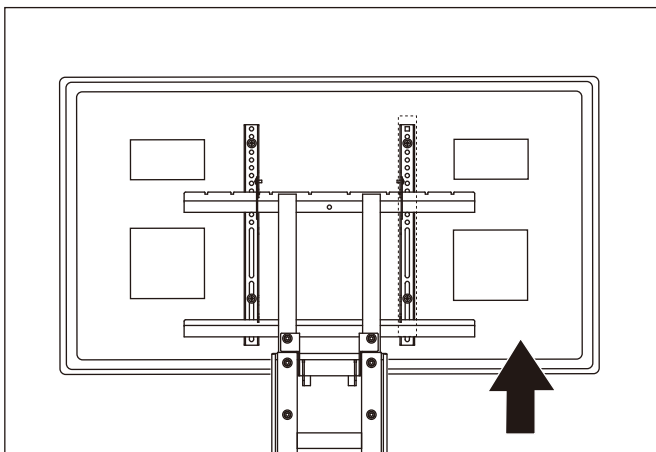

Info

This explains how to raise the lower one, but it is also possible to lower the higher one in the same way.

