

WALL[®] 7

SEVEN STAND

—A2 STAINLESS—

組立説明書 (第1版)

この度は、お買い上げいただき誠にありがとうございました。

この商品を末永く、安全にお使いいただくために、

この「組立説明書」をよく読み正しくご使用ください。

また、これらを必要に応じて見られるよう、大切に保管してください。

免責事項

・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。

・当社は、間接的損害や派生的損害についても一切責任を負いません。



注意

- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。
- ・小さなお子様がいるご家庭では、誤ってスタンドやテレビを転倒させてしまう可能性があるため、必ず転倒防止金具で固定してご使用ください。

・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

この商品は日本の株式会社ナカムラの企画・品質管理によって中国(原産国)で製造しました。

品質向上の為に改良に伴い一部仕様が異なる場合があります。

販売元 株式会社ナカムラ
〒145-0065 東京都大田区東雪谷 4-20-10

公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ info@equals.tokyo

お問い合わせフォーム



当社は製品の安全性向上を目的として各種対策の導入を推進しております。

詳細は当社 Web サイトをご確認ください。

⚠ 組立の前に必ずご確認ください。

本製品は、テレビの機種によってお取り付けできないものがあります。

下記を参考に、組み立てる前に取り付けが可能か必ずご確認ください。

製造ロットや製造場所の違いなどにより商品によって色合いが異なる場合がありますのでご了承ください。

1. お手持ちのテレビが下記3項目すべてに該当することをご確認ください。

1-1. テレビのサイズが45V～80Vであること

 
1-2. テレビの重量(スタンドを含まず)が35kg以下であること

1-3. テレビメーカーが壁掛け対応としているテレビであること

※背面形状などの諸条件があっていたとしても、壁掛け非対応としているテレビがあります。

2. お手持ちのテレビの背面形状をご確認ください。

2-1. 4か所のネジ穴の間隔が、下記A.Bの条件を満たしている

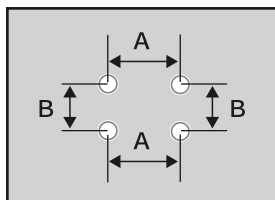



A: 10, 20, 30, 40, 50, 60 cm

(いずれかに該当)


B: 10～40 cmの範囲内

2-2. 上記の条件を満たし、下記のいずれかに該当すること

 
 
4か所のネジ穴が凸部分に
すべてある

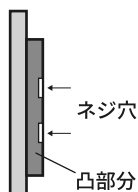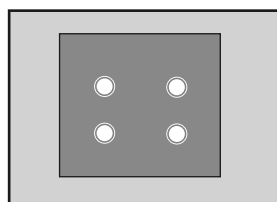

4か所のネジ穴の面に
凸部分がない


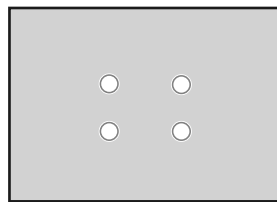 


4か所のネジ穴の下にある
凸部分の段差が4cm以下

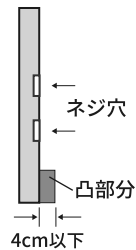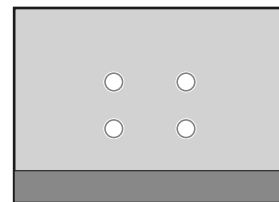  


✕ 下記のようなテレビは取り付けできません。

  
4か所のネジ穴の一部が
凸部分にある

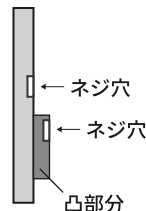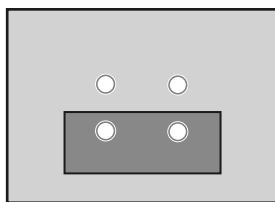



4か所のネジ穴の間に
凸部分がある

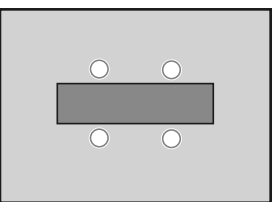 


4か所のネジ穴の下にある
凸部分の段差が4cm以上ある

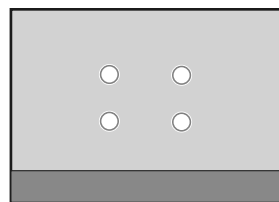 

  
3. 耐荷重と棚板の取り付けについてのご注意

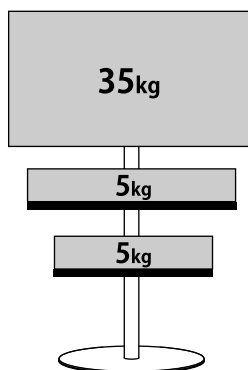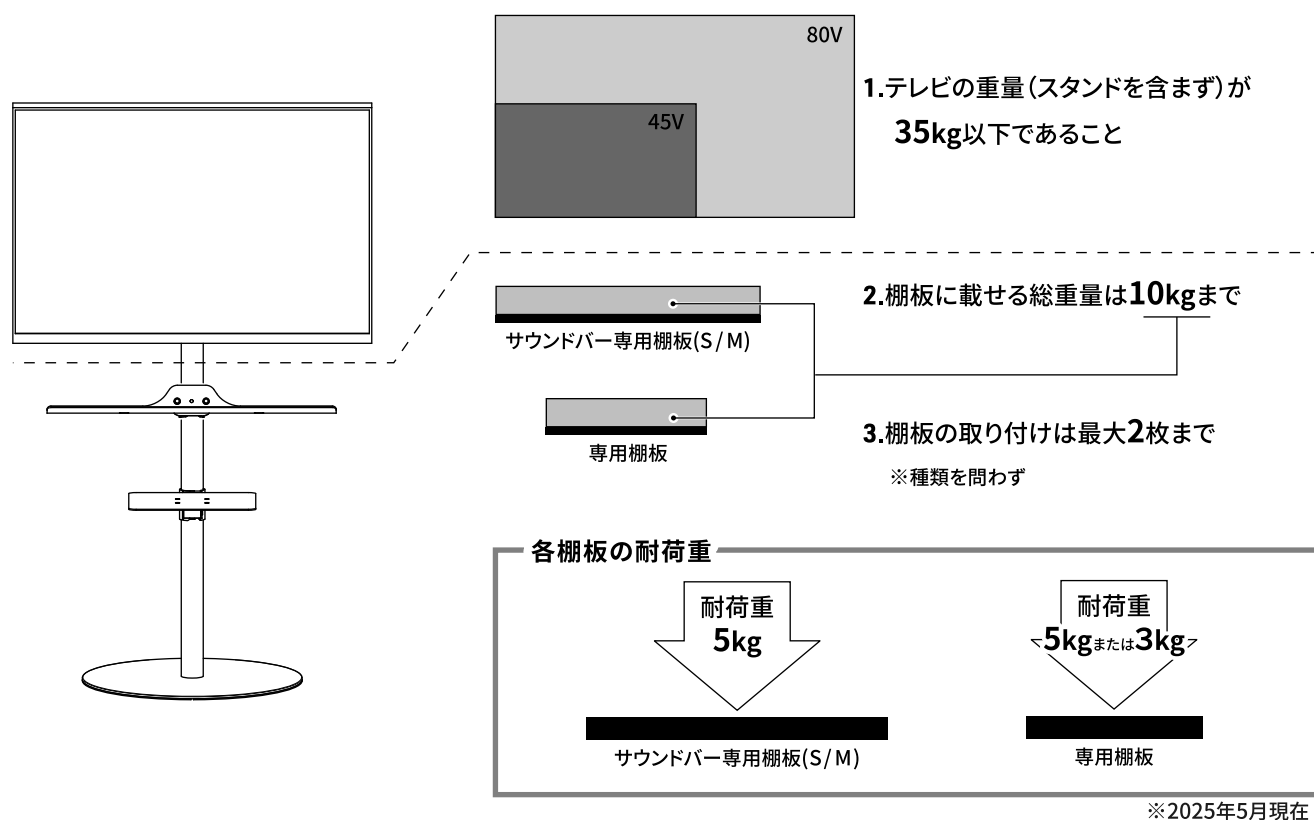


棚板に載せる総重量は**10kg**まで

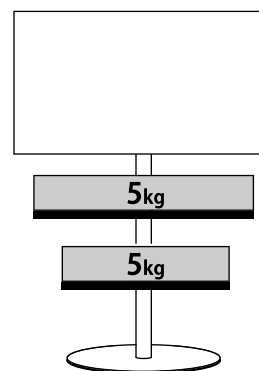 

棚板の有無に関わらず、
テレビの重量は**35kg**以下

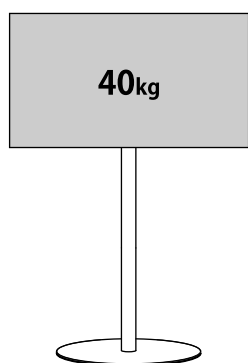 

棚板の取り付けは最大**2枚**まで

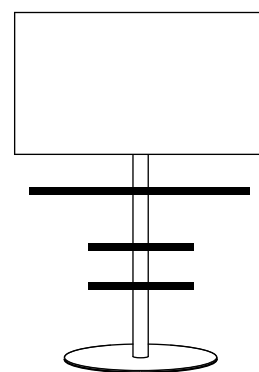 

安全上のご注意

 
人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。

人への危害、財産の損害を防止するため、必ずお守りください。




**ボルトのネジ類は
所定の場所に
確実に締めつける。**

テレビスタンドが倒れたり、
テレビが脱落して、
破損やけがの原因となります。

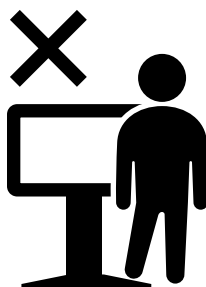

ベースの上に乗らない。

 テレビスタンドが倒れたり、
テレビが脱落して、
破損やけがの原因となります。

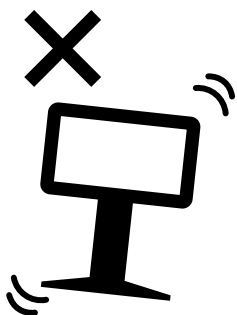


**不安定な場所に
設置しない。**

十分な耐荷重強度のある、
平坦で安定した場所に設置する。
(傾斜面や平坦でない面、カーペット
・畳などの安定しない面、変形する
面などに設置しない)




**お子さまに
テレビスタンドで遊んだり
乗る、ぶら下がる、動かすなど
させない。**

 テレビスタンドが倒れたり、
足の指を巻き込んだりして、
破損やけがの原因となります。

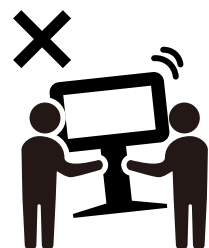


**テレビを設置したまま
高さ調整や移動しない。**

 テレビスタンドが倒れたり、
テレビが脱落して、
破損やけがの原因となります。

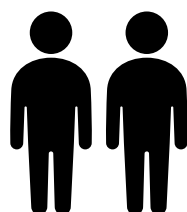


**テレビスタンドの移動や
テレビの設置・取り外しは、
必ず2人以上で行う。**

 テレビスタンドが倒れたり、
テレビが脱落して、
破損やけがの原因となります。

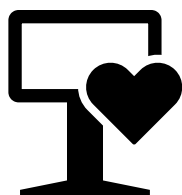

**テレビ画面に
強い力が加わるような
持ち方をしない。**

 テレビの持ち方は、
テレビの取扱説明書でご確認ください。

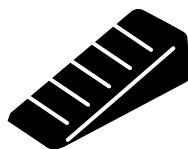

**移動させないときは
安全対策をする。**

転倒防止ワイヤーや
ストッパーの使用をご検討ください。

コード類に引っかかることで、テレビスタンド・テレビ、ご自身やご家族の転倒に繋がる恐れがあります。

特に小さなお子さま、ご高齢者のいる場所でのご使用は十分ご注意ください。

地震・事故による万一の際の転倒・落下によるケガや製品の破損などは弊社では保障できかねます。



注意

注意を無視した取扱いをすると、物質損害を被ったり、障害を負う可能性があります。

1 組立・設置の注意

1-1. 転倒、破損の原因に

組み立て、設置の際は、必ず安定した平らな場所でおこなう。床や壁などをキズつけないように、厚手の布や梱包のダンボールなどを敷く。

1-2. 変色や破損の原因に

屋内で使用する。直射日光や熱、冷暖房の風が直接あたらない場所に置く。

フローリングやその他柔らかい素材の床でご使用になりますと、床面に保護材の跡が付いたり、色移りしたりする可能性があります。

フロアメーカーの取扱上のご注意をご確認の上、“変色”などを防ぐため、保護材を入れてご使用することをおすすめします。

1-3. 火災や感電の原因に

薄型テレビを本製品に取り付けたり取り外す場合は、必ず薄型テレビの電源スイッチを切り、電源プラグをコンセントから抜き、

アンテナ線接続機器間のコードなど外部の接続コードを外してから行ってください。コードが傷つき、火災、感電の原因となる恐れがあります。

2 使用の注意

2-1. 転倒、けが、破損の原因

商品に乗ったり、ぶらさがったり、テレビスタンド以外の使用をしない。テレビスタンドに集中的に荷重をかけない。(傾斜の可能性)

手や指などを挟まないように注意する。

キャスターでの移動は、勢いよく動かしたり回転させたりしない。接続ケーブルで足を引っ掛けたりしないように注意する。

コード類に引っかかることで、テレビスタンド・テレビ、ご自身やご家族の転倒に繋がる恐れがあります。

特に小さなお子様、ご高齢者のいる場所でのご使用には十分ご注意ください。

テレビ・モニターの重さがあるため、移動には少し力が必要な場合があります。

小さなお子様やペットの力では動きづらいのでご注意ください。

2-2. 火災や変色の原因

付近に火気を置いたり、火気付近に設置しないこと。ストーブなど火のそばで使わない。

2-3. におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

3 お手入れの注意

ひび割れや変色、変形の原因

表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)

※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1カ月に1度が目安です。)

WILL[®] 7

SEVEN STAND

—A2 STAINLESS—

製品コード	WLTVP6316
製造 No.	X04000105
区分	自立式
サイズ	W66 D59.5 H94 - 120 cm
材質	スチール
表面加工	粉体塗装
重量	21.5kg
原産国	中国
耐荷重	35kg (80インチまで)

INDEX

※ 2人以上で組み立ててください。
必要な工具: ドライバー (+)

テレビスタンドを組み立てる P.06~

テレビの取付け準備をする P.08~

テレビの設置の高さを決めて組立てる P.11~

テレビをテレビスタンドに取り付ける P.13~

テレビの傾き調整方法 P.15

テレビスタンドを組み立てる

 
※組み立て作業目安:60~90分程度

1




両面テープの台紙を剥がして
貼り付ける

Point
穴を塞がない
注意

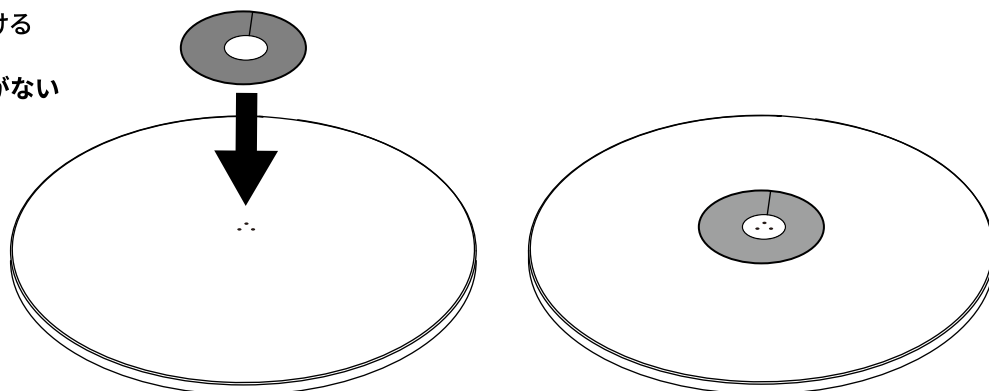


2

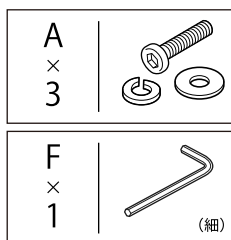 

ネジをきつく締めない


次の手順で保護シート"G"を外すため

 組立て作業は
二人以上で行ってください
注意

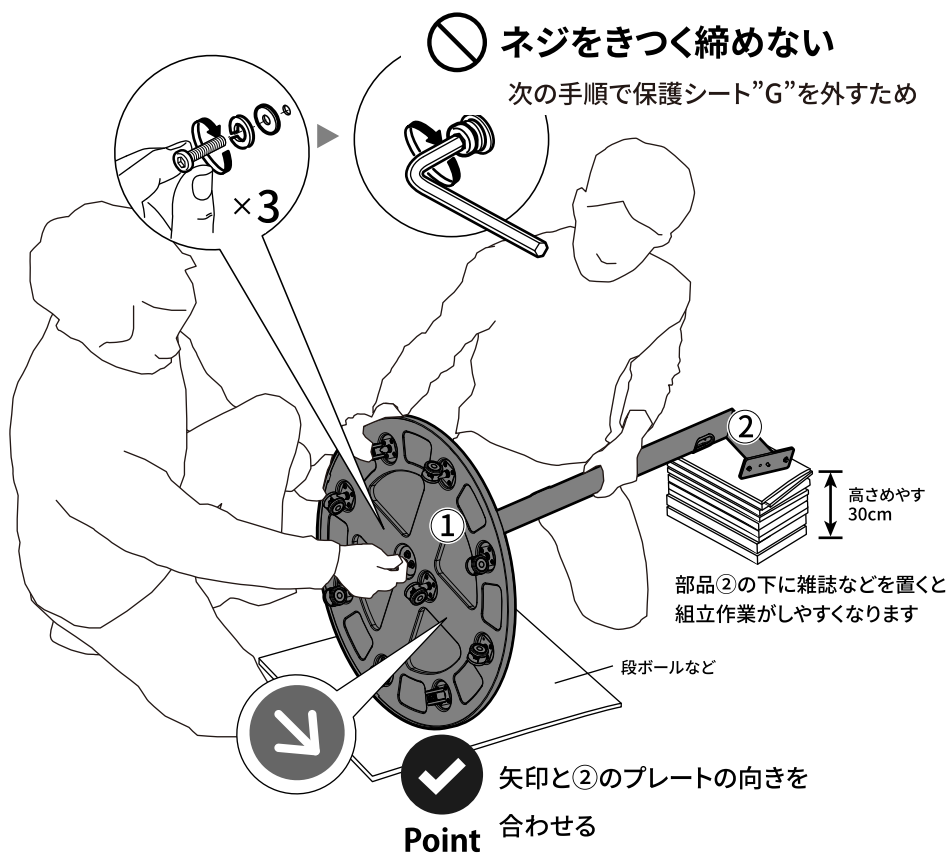

3

 保護パッドを取り外し
ネジを最後までしっかり締める
Point

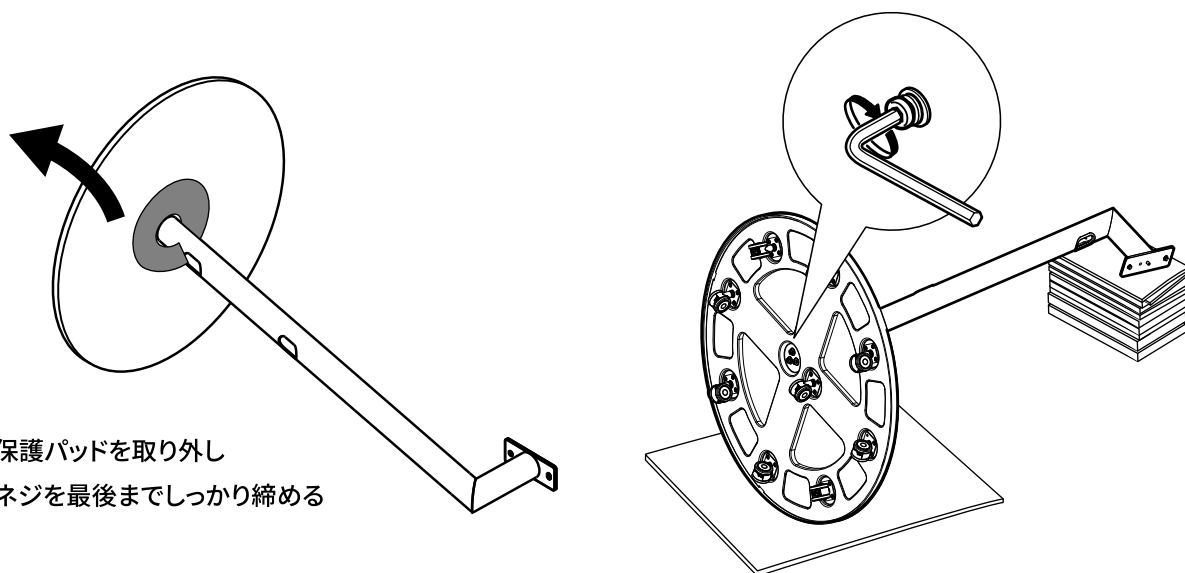

4 テレビを取り付ける前にコードを通す

例) LANケーブル



 
 
例) アンテナケーブル



例) 下記のような電源コード類




その他のコードは
テレビを掛けてから
Point 上の穴から通します

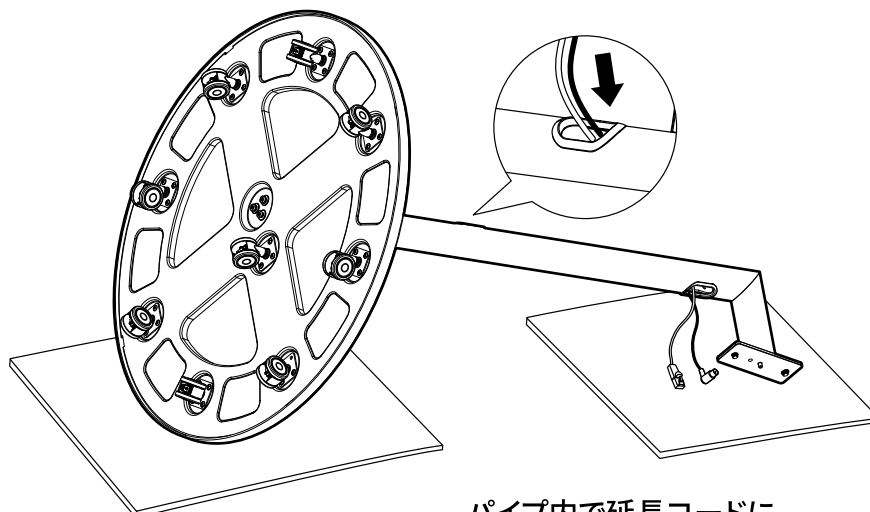



注意

 パイプ内で延長コードに
接続しないでください
接続不良が発生し発火や
故障の原因となります



5

  H
×
1

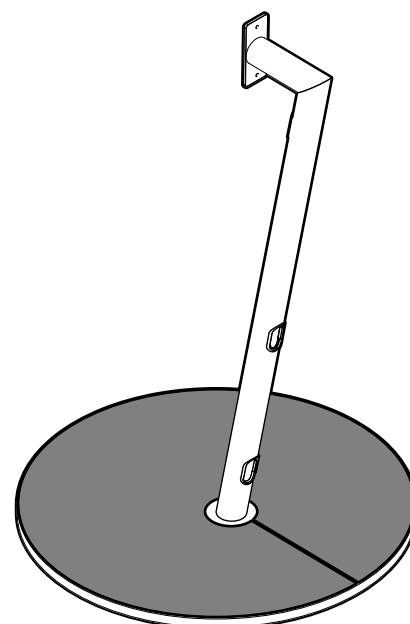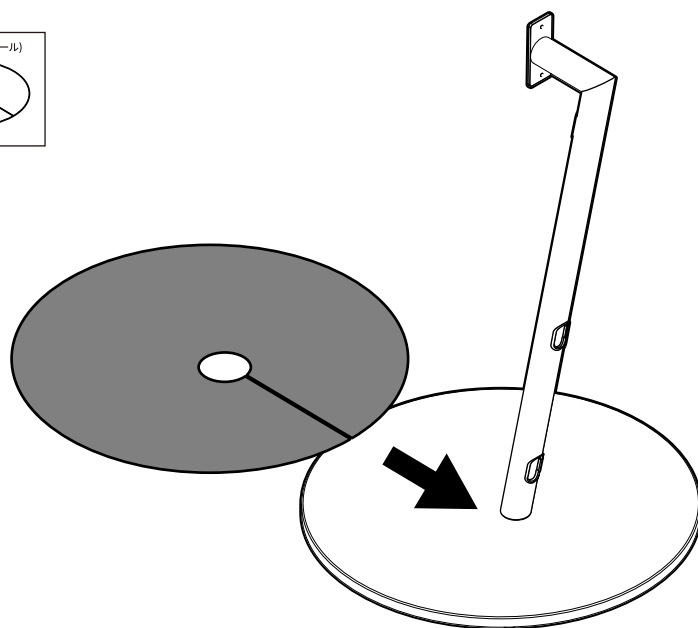

テレビの取り付け準備をする

 
1:テレビ背面の壁掛けネジ穴の確認

お持ちのテレビの説明書で壁掛けネジ穴をご確認ください。



注意

様々なテレビに取り付けできる設計になっています。
テレビに合った方法で取り付けをお願いします。
専用の取り付け方法を推奨しているテレビもありますので
テレビの壁掛け設置説明書をご確認ください。

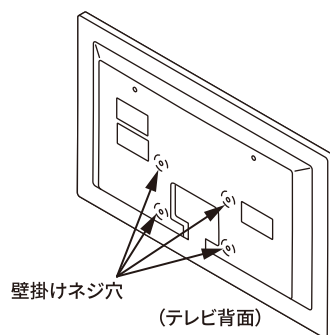


取り付け可能テレビの
詳細はコチラから>




2:テレビ背面の仕様確認

テレビ背面形状によりスペーサーが必要になる場合があります。

 スペーサー(大)




スペーサー(小)

 


フラット

 取り付け金具を
テレビに当てると
垂直になる



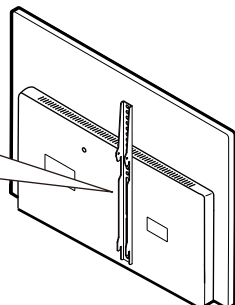


スペーサー不要

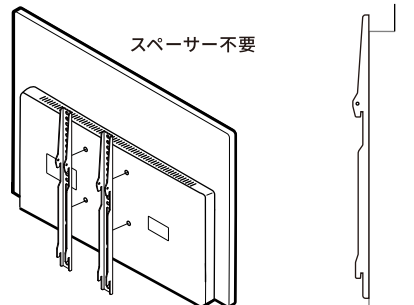 




上部が斜め

   取り付け金具を
テレビに当てると
斜めになる

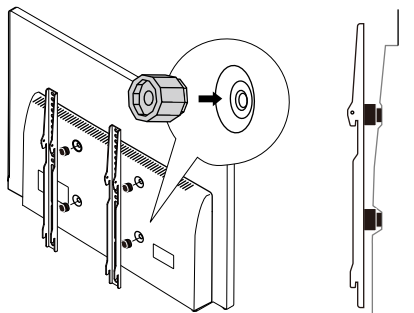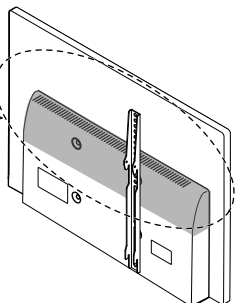




下部に出っ張り

   段差を避けると
上下のネジ穴が両方
長穴の位置になる

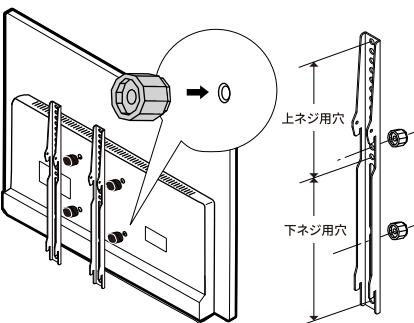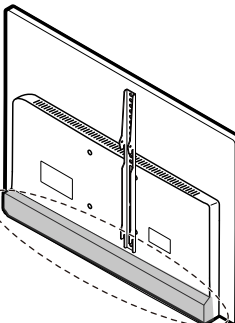

下部の左右に出っ張り

   図のような段差

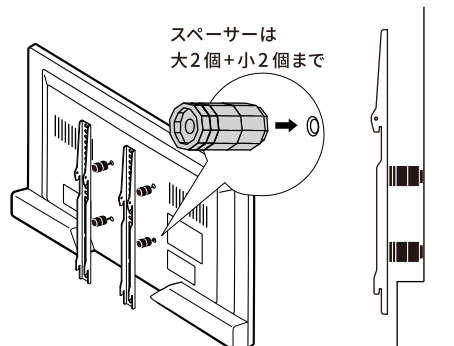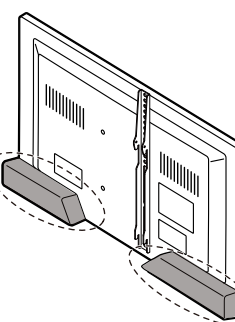


スペーサーは
大2個+小2個まで

3:取り付けネジの確認

テレビによってネジサイズが異なるため、
テレビ取付用部品M、N、Oの中から
最適なネジとワッシャーを選びます。

M  × 4  × 4 ずつ	N  × 4  × 4 ずつ	O  × 4  × 4 ずつ
---	--	---

 ネジの直径 ネジを入れてみる

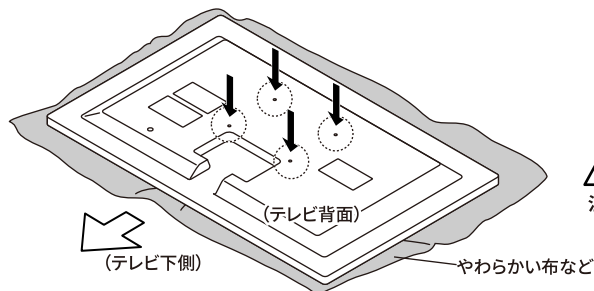

ネジ径やネジ長さが合わない場合は、
ホームセンター等で別途お買い求めください。

Info

例) 太さ5mmで長さ15mmの場合 ➡ M5×15mm
[トラスねじ] または [ナベねじ]





注意 パネル割れ防止のため、画面を下に
寝かせてはいけなないテレビがありますので、
テレビの取扱説明書をご確認ください。


ネジの取り付けはまだ行わないでください。

ネジの長さ ネジ穴計測ツールでネジ穴の深さを測る


M	 (小)
N	 (中)
O	 (大)

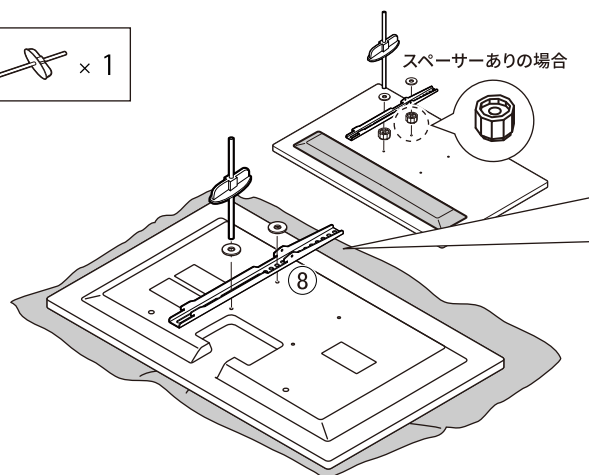  


ネジのかわりにネジ穴計測ツールを入れる

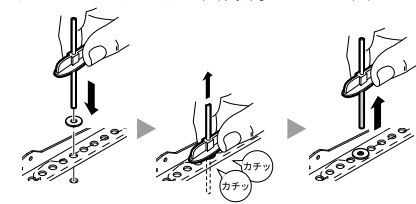 


ツールの戻し方

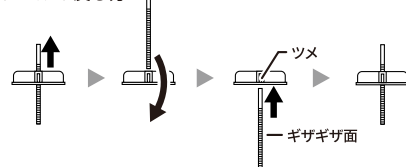 

計測した長さに合うネジを選ぶ

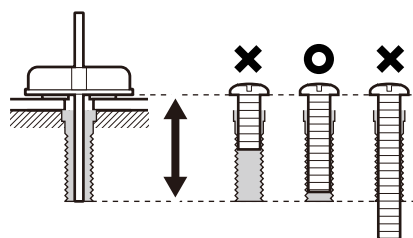 


✕ 掛かりが浅い

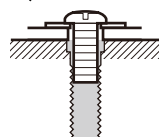 

掛かりの目安は
ネジ5回転以上

 
✕ 長すぎる

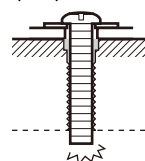


長さが合うネジが見つからない場合、
スパースー(小)で約5mmネジを短く使用できます。



 スパースー(小)

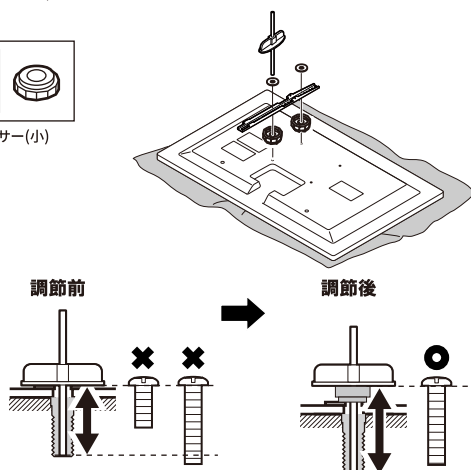

スパースー(大)と合わせての使用

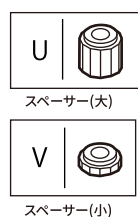 


スパースー(大)

スパースー(小)

調節前


 
調節後

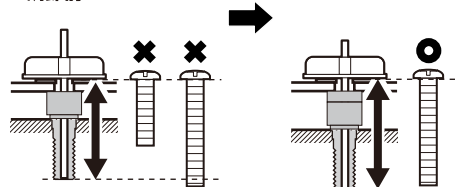

6 選んだネジで取り付ける (スペーサーは必要な場合のみ)

別売り: マルチデバイスホルダーの取り付け

  別売のマルチデバイスホルダーをご購入された場合は、この段階で取り付ける。

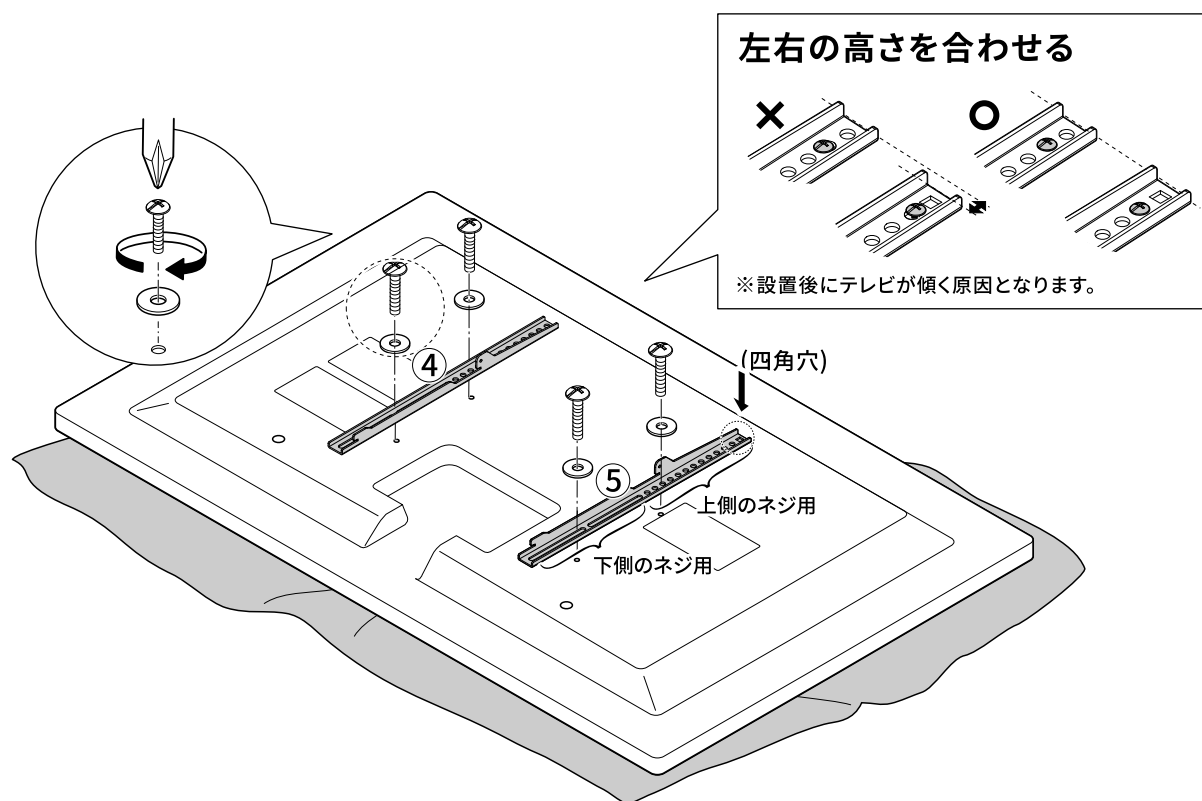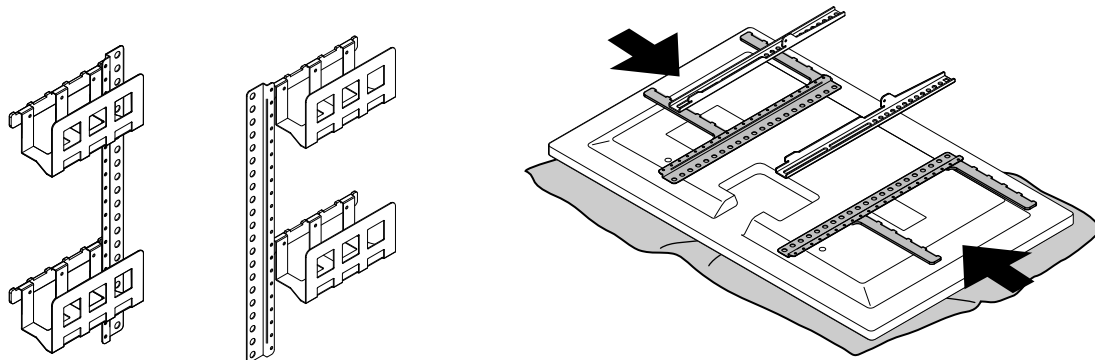


パネル割れ防止のため、画面を下に寝かせてはいけないテレビがありますので
注意 テレビの取扱説明書をご確認ください


M	 × 4 (小)	N	 × 4 (中)	O	 × 4 (大)	U	スペーサー(大)  × 8
	 × 4 ずつ (15,25,35mm)		 × 4 ずつ (15,25,35,45,55mm)		 × 4 ずつ (15,25,35,45mm)	V	スペーサー(小)  × 8

テレビの設置高さを決めて組み立てる

 付属の紙メジャーをテレビに当て、
印を付け、紙メジャーを
テレビに見立てます。

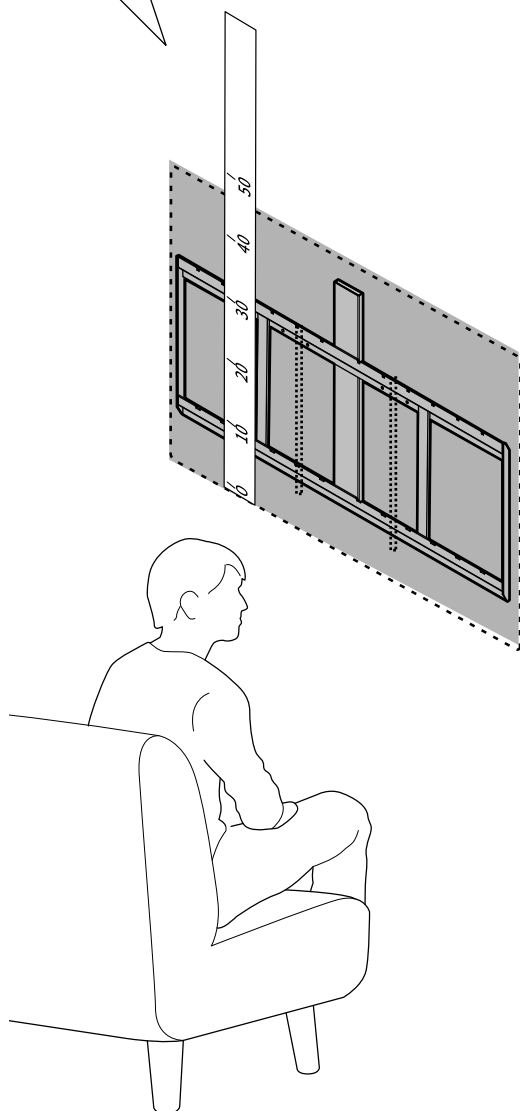


 紙メジャーをスタンド本体に当てながら
上下させ、テレビ設置後の画面位置を
イメージして高さを決めます。

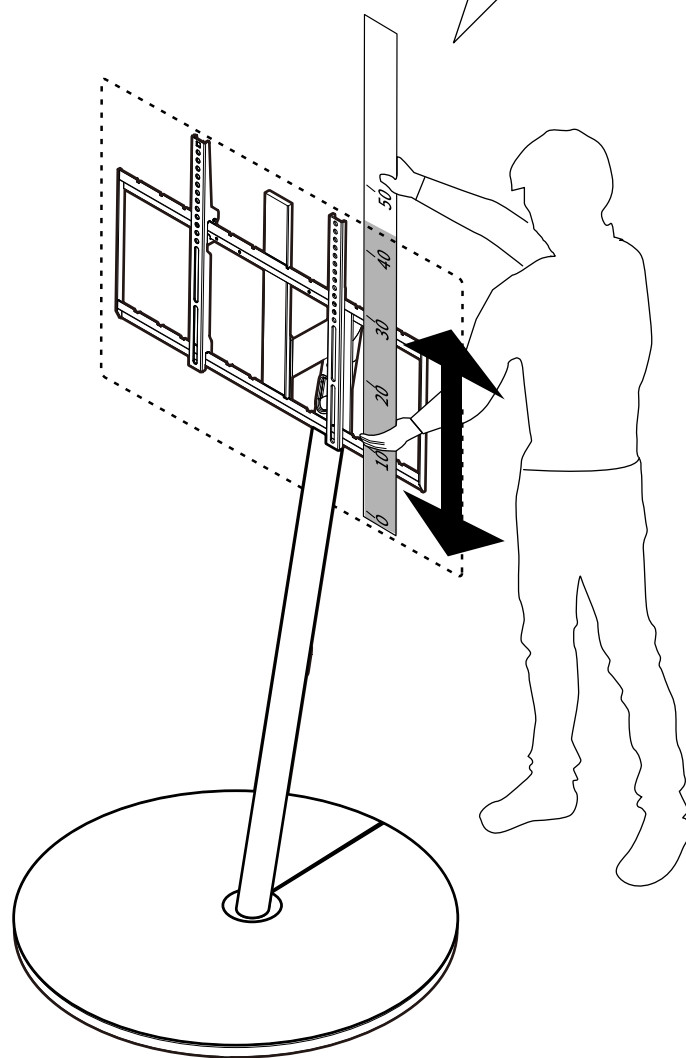

7 紙メジャーでテレビの設置位置を決める

 テレビの大きさと④⑤部品を取り付けた位置に
ペンで印を書いて下さい。

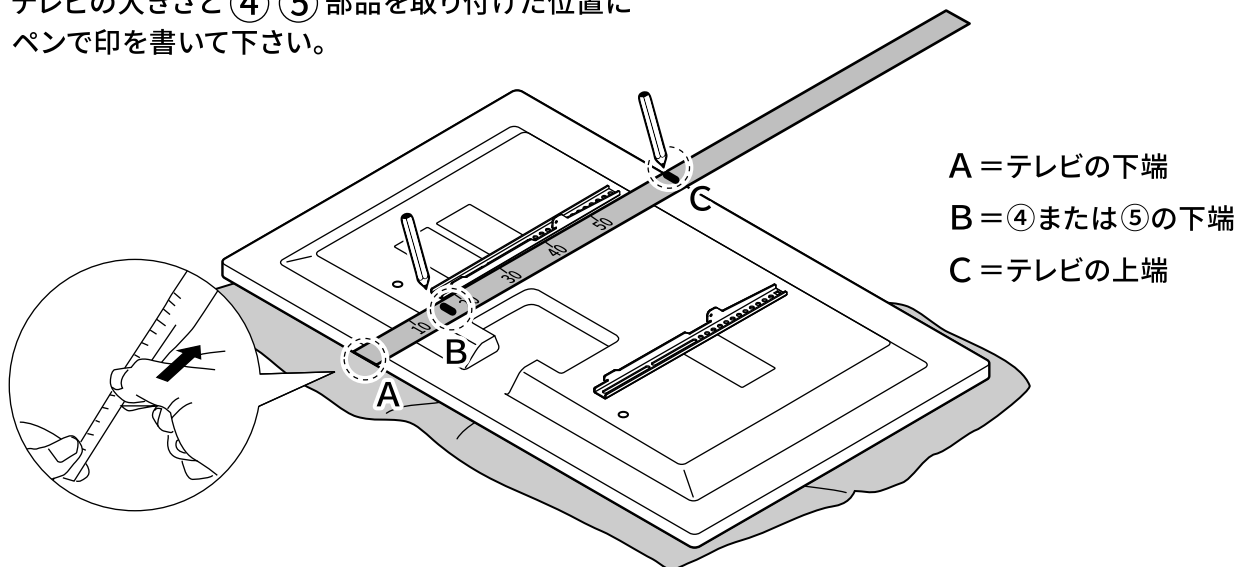


紙メジャーは、半分に折り目をつけると
使いやすくなります

Point Bの印がスタンド本体に合わせる基準となります

8 高さを決めて組み立てる

B × 2	
C × 1	滑り止めシート
E × 1	 (太)

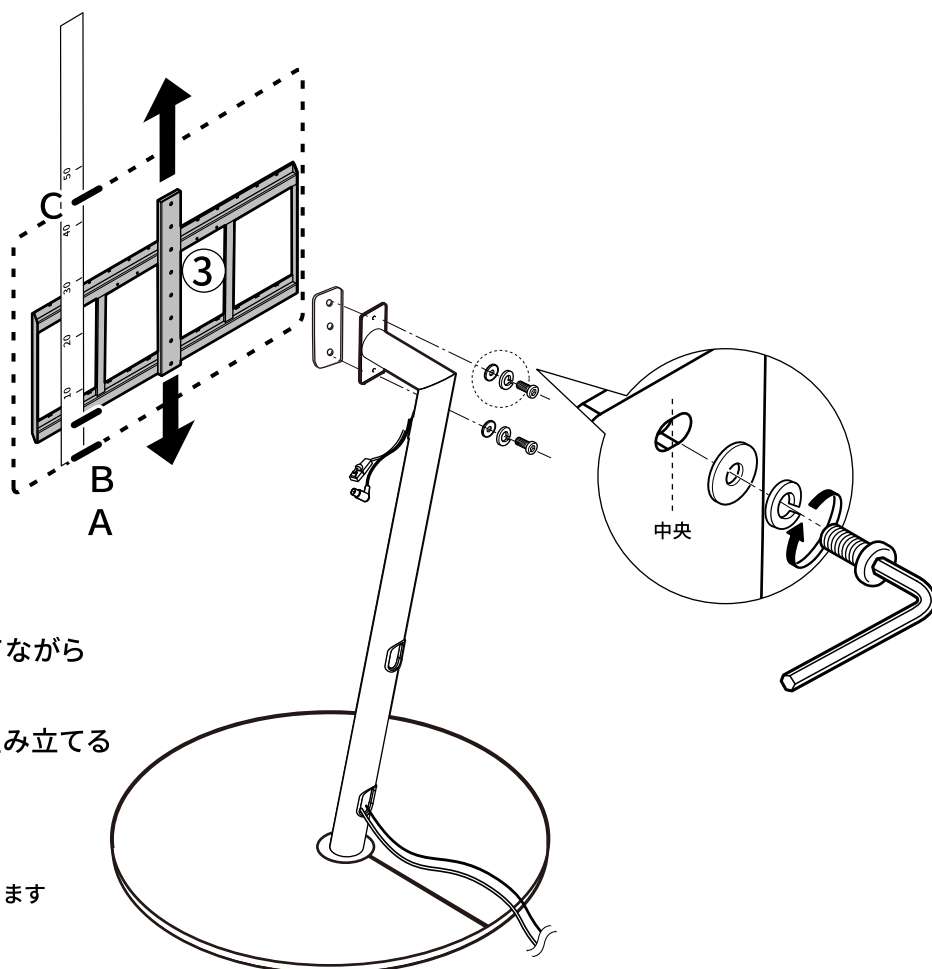 

③の下端にメジャーを当てながら

③の取り付け位置を

Point 上下させて、高さを決めて組み立てる



高さを5cmずつ

最大20cmまで上げることができます

Info

テレビをテレビスタンドに取り付ける

9

 


テレビ画面に
強い力が加わるような
持ち方をしない




注意

テレビの持ち方は、テレビの
取扱説明書でご確認ください
テレビの設置は必ず
2人以上でおこなってください

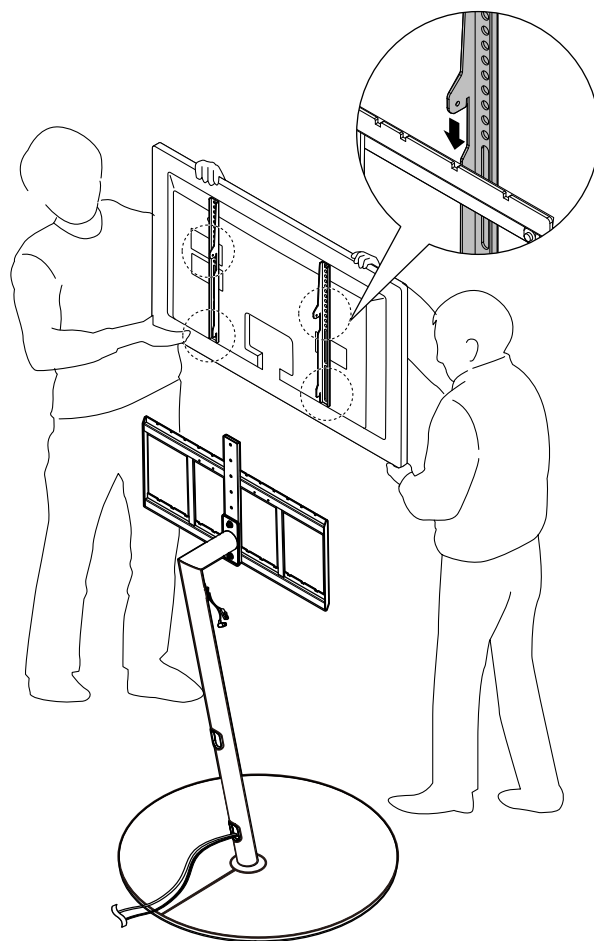



10

 D
×
2



Step1. ストッパーの準備


 
 
ネジに抜け止め用ワッシャーを取り付けます。

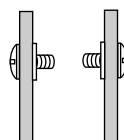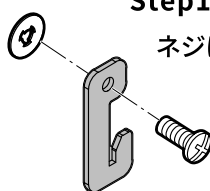


ネジの取り付け向き
に注意し、しっかり

Point 重なる

   Step2. 取り付け

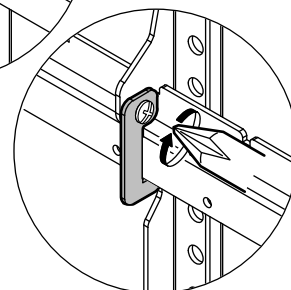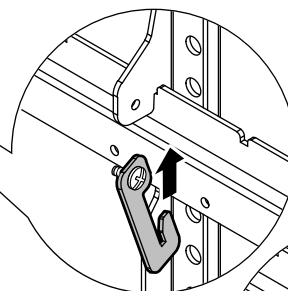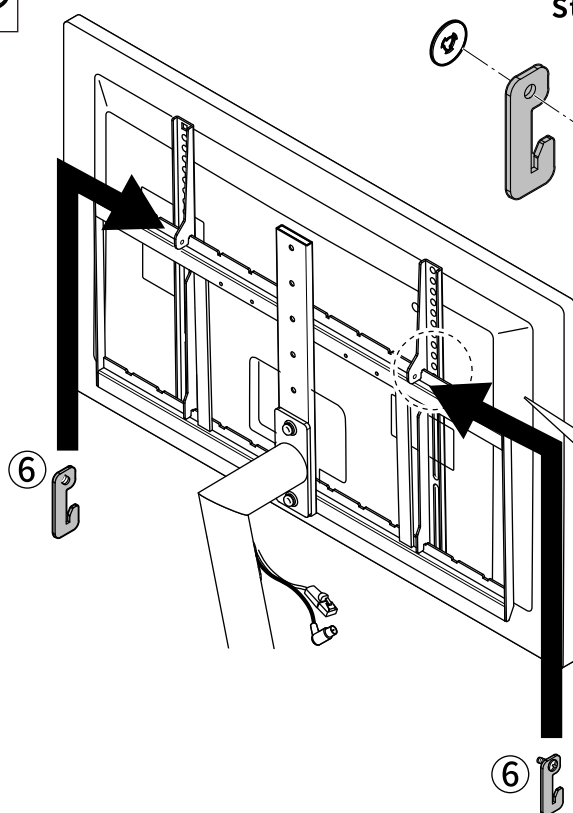

11 コードを通す

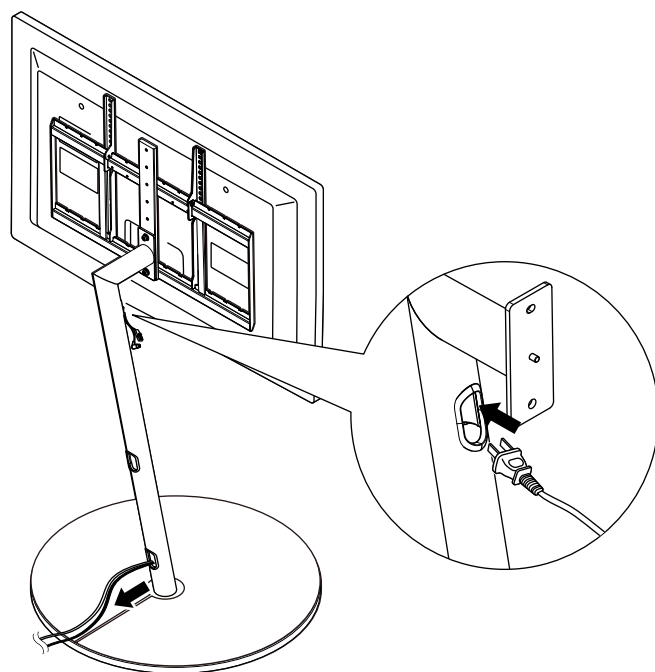 


キャスターにストッパーを かけたい場合...




市販のドアストッパーを
ご使用いただけます
差し込みタイプで床材に
合ったものをご使用ください

 Info




使用例

 
本体と床面の間に
3個差し込みます。

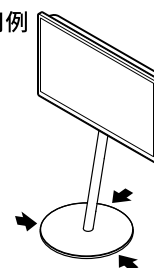


12

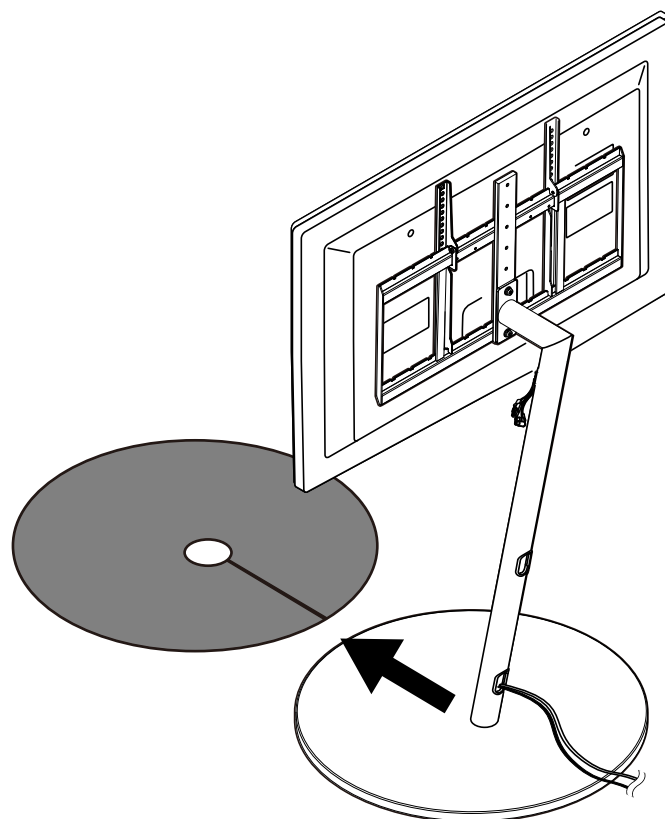 

テレビの傾き調整方法

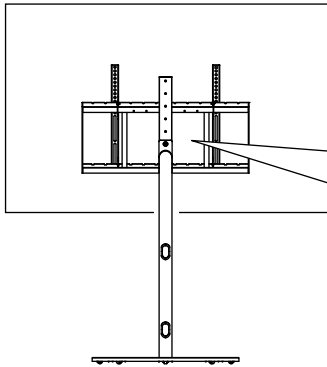 

 1. 上のネジを緩める。
(下のネジはそのまま)
2. テレビが水平になる
ところまで傾ける。
3. ネジを締める。

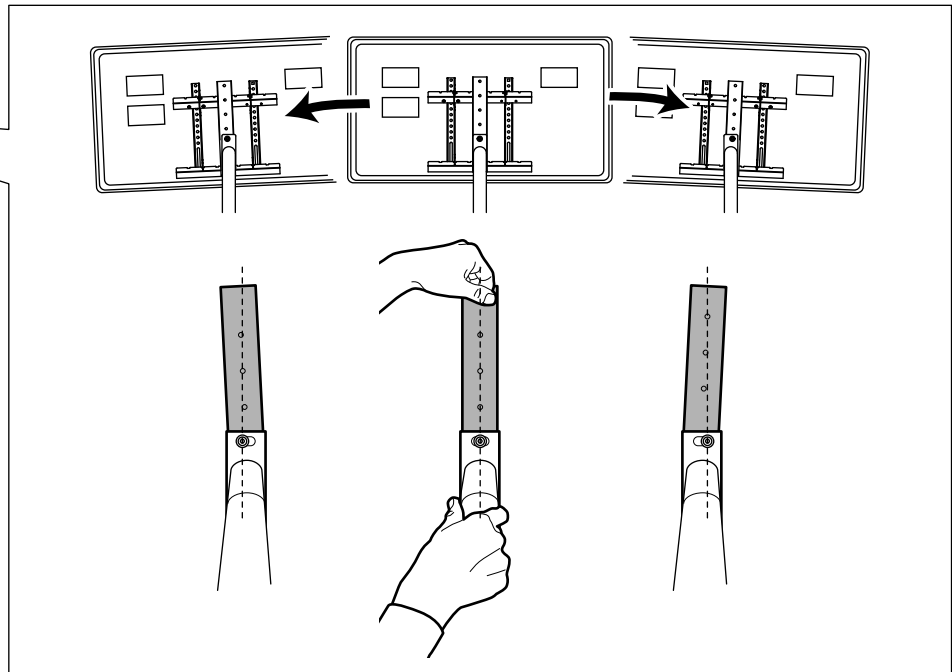

注意

テレビの重さを支えながら調整してください

WALL 7[®]

SEVEN STAND

—A2 STAINLESS—

Assembly Instructions [1st Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.



caution

· THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.

· KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.

· THIS PRODUCT SHOULD NOT BE USED IN HOMES OR OTHER ENVIRONMENTS WITH SMALL CHILDREN WHO MAY ACCIDENTALLY TIP OVER THE STAND AND TV, UNLESS A WALL STRAP HAS BEEN INSTALLED TO HELP SECURE THE STAND AGAINST TIPPING OVER.

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)
under the planning and quality control of Nakamura Corporation of Japan.
Some specifications may differ due to improvements for better quality.

Nakamura Co. Ltd.

Official brand site : <https://equals.tokyo/>

Contact us in English : info-gl@nakamura-jpn.co.jp

Be sure to check before assembling

This product may not be used with certain TV models.

Be sure to check this product can be used with your TV before assembling, referring to the following.

Please note that colors may vary from product to product due to differences in production lots and manufacturing locations.

1. Make sure that your TV meets all three of the following requirements

1-1. The size of the TV must be between 45" and 80"

 
1-2. The weight of the TV (excluding the stand) must be 77 lbs / 35kg or less

1-3. Written documentation from the TV's manufacturer says it is a wall-mounted TV*

*Some TVs do not support wall mounting, even if the back of the TV may appear to support it.

2. Check the back side of your TV

2-1. The spacing between the four screw holes meets the conditions A and B below

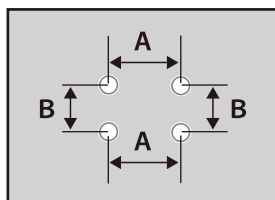


A : Any of 10, 20, 30, 40, 50 or 60cm


B : Within the range of 10 - 40cm

2-2. Satisfy all of the above conditions, and satisfy any one of the following

 
All 4 screw holes are on the raised part (shaded area) of the TV's back, or

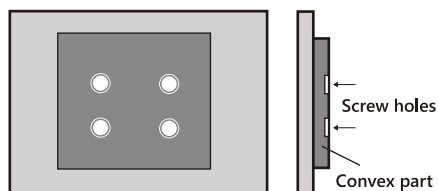

 There is no raised part near the surface of the 4 screw holes, or

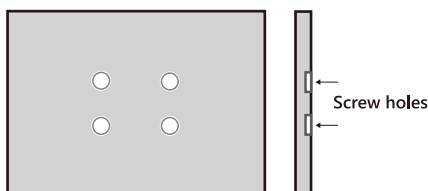


 The difference in height between the raised part (shaded area) and the rest of the TV's back is 4cm or less (if the raised area is located below the 4 screw holes)

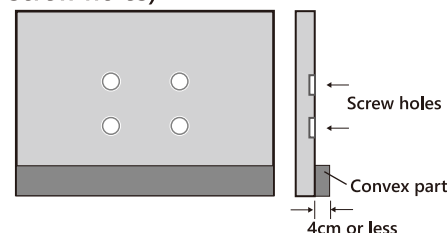


The following TVs cannot be installed onto this product:

 
Less than all of the 4 screw holes are located on the raised part (shaded area) of the TV's back

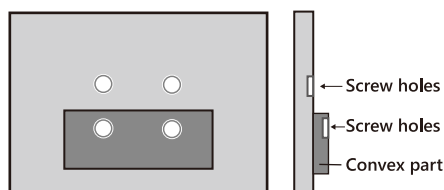


 
There is a raised part (shaded area) between the 4 screw holes

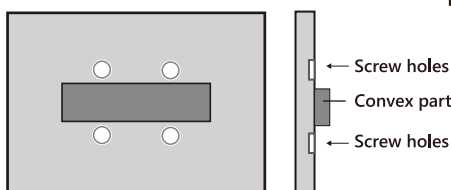

 
There is a difference of 4cm or more between the height of the raised part (shaded part) and the rest of the TV's back (if the raised part is located below the 4 screw holes)

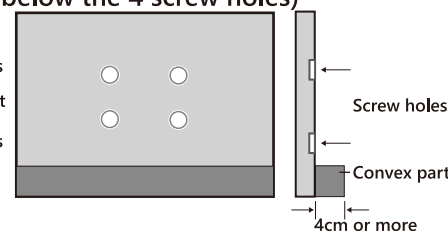

  
3. Precautions regarding load capacity and installation of shelf

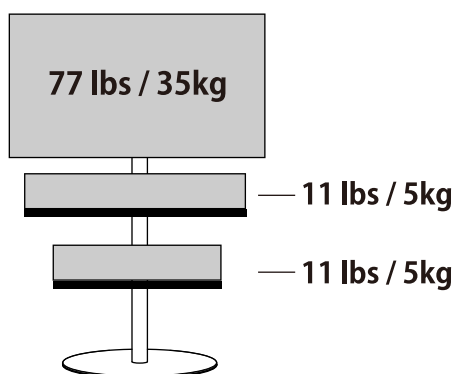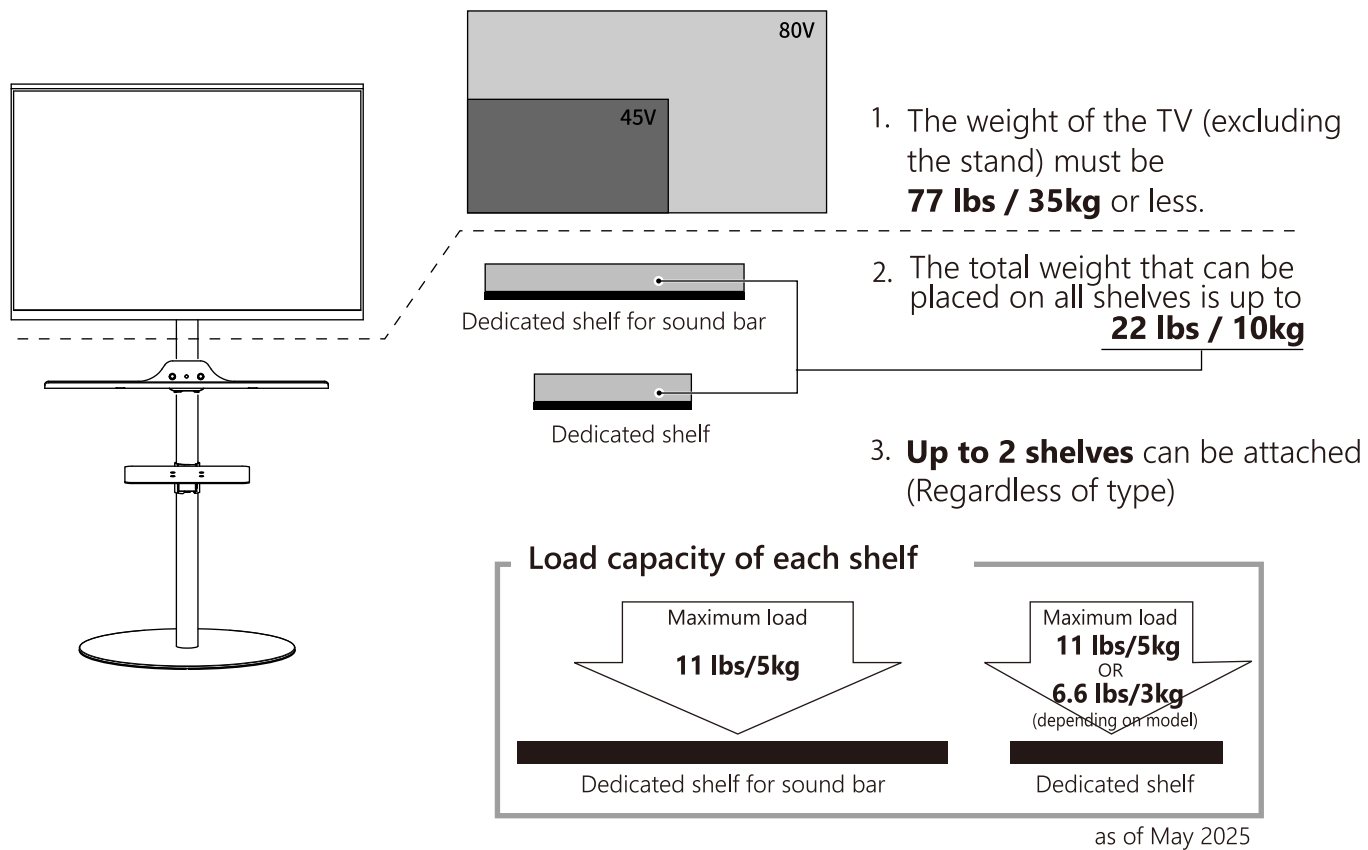

 
The total weight on all shelves is no more than **22 lbs / 10kg**

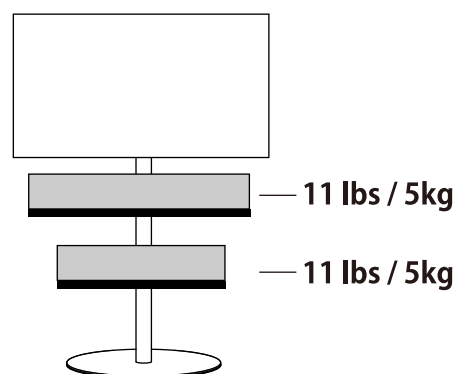

 The weight of the TV is **77 lbs / 35kg** or less with or without shelves

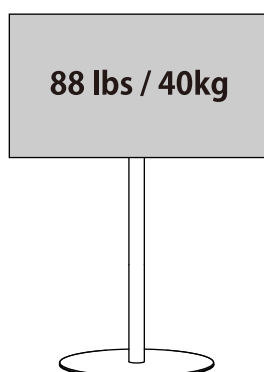

Up to **2 shelves** can be attached

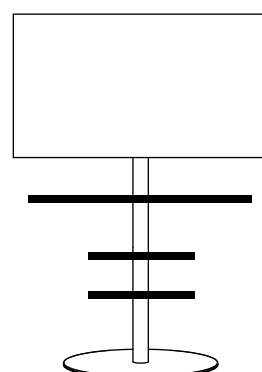 


Safety precautions

Failure to abide by the following advisories may result in personal injury or property damage:




Securely tighten bolts and screws in place before installing the TV

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

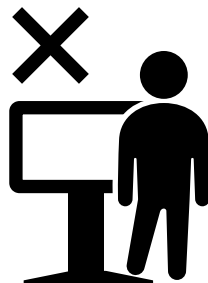

Do not step on the base

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

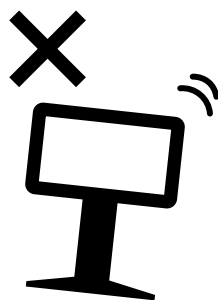


Do not install the TV stand on a unstable place

Install on a flat and stable place with sufficient load bearing strength. (Do not install on sloped or uneven surfaces, unstable surfaces such as carpets, or deformed surfaces)




Never allow children to climb, hang or move the TV stand and TV

 The TV stand may fall over or pinch your toes, resulting in damage or injury.

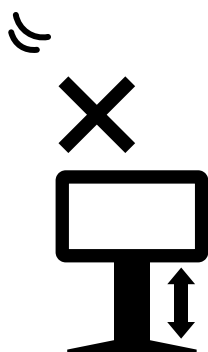


Do not adjust the height with the TV installed

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

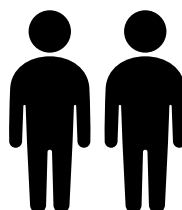

Do not move the TV stand with the TV installed

 The TV stand may fall over or the TV may fall off, resulting in damage or injury.

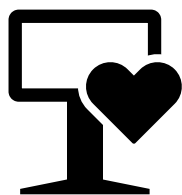

Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard

Refer to the instruction manual of the TV for how to hold the TV. And be careful when you move the TV stand with casters.



Take safety precautions when not moving the TV stand

Consider using the fall prevention strap or some stoppers.

There is a risk of tripping over cords, which could lead to the TV stand or TV falling, posing a danger of tripping for yourself and your family. Please exercise extra caution when using this in places with small children or elderly individuals.

Nakamura Co.Ltd. assumes no responsibility for damage or injury of any kind because of tipping over the stand and TV in case of an earthquake or accident.



Caution

If the following precautions are not observed, injury or property damage may occur.

1 Assembly and installation

1-1. Causes of falls and damage

Be sure to assemble and install on a stable and flat surface. Spread a thick cloth or cardboard over the workspace so as not to damage the floor or walls.

1-2. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or, air conditioning.

In some cases, depending on the type of flooring or floor material, there is a possibility that caster marks or color transfer may occur on the floor surface with use.

1-3. Causes of fire and electric shock

When installing or removing a flat-screen TV from this product, be sure to turn off the power switch of the flat-screen TV, unplug the power plug from the outlet, and disconnect external connection cords (such as the cord between the antenna and TV).

Otherwise, the cord may be damaged, resulting in fire or electric shock.

2 During use

2-1. Causes of falls, injury and damage

Do not stand or hang on the product or use it for anything other than a TV stand.

Do not apply a concentrated load to the TV stand. (It may tilt).

Be careful not to pinch hands or fingers.

When you move the TV stand with casters, not to move it forcefully or rotate it.

Be careful not to trip over a power cord.

There is a risk of tripping over cords, which could lead to the TV stand or TV falling, posing a danger of tripping for yourself and your family. Please exercise extra caution when using this in places with small children or elderly individuals.

Due to the weight of the TV/monitor, it may require some force to move.

Please be assured that it is difficult for small children or pets to move it by force.

2-2. Causes of fire and discoloration

Do not use near a fire or heat source such as a stove or heater.

2-3. Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

3 Care and maintenance

Causes of cracking, discoloration and deformation

Do not wipe the surface with a damp cloth.

Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.

- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt, and wipe off any residual moisture with a dry cloth.

- Check the screws regularly and tighten them securely if they are loose. (Once a month)

WILL[®] 7

SEVEN STAND

—A2 STAINLESS—

model number	WLTVP6316
product ID	X04000105
size	W66 X D59.5 X H94 - 120cm
material	steel
surface finish	powder coating
weight	47.3 lbs / 21.5kg
country of origin	China
maximum load	80" (77 lbs / 35kg equivalent)

INDEX

Assemble by two or more people
Required tools: screwdriver (+)

Assemble the TV stand P.06~

Prepare to install the TV P.08~

Determine the installation height
of the TV and assemble P.11~

Install the TV to the TV stand P.13~

How to adjust the tilt of the TV P.15

Assemble the TV stand

Assembly time (approximate) 60~90min.

 
 
1

✓ Peel off the paper on the tape and put it on.

Point




Do not cover the holes

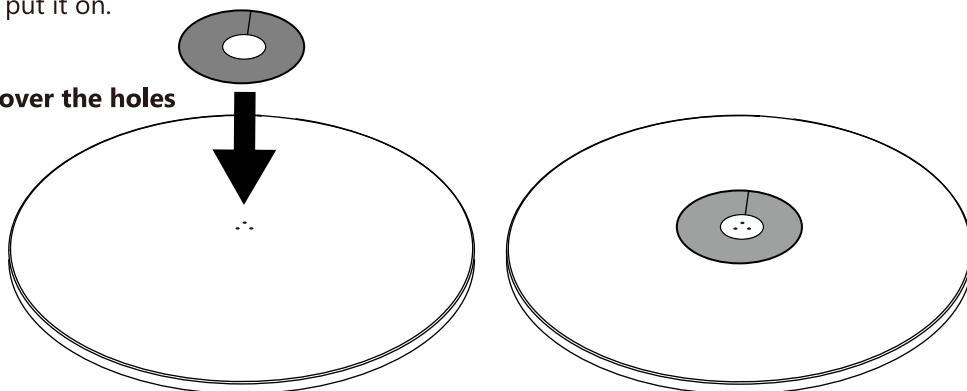


2

⊘ Do not fully tighten

 To remove the protection sheet "G" in the next step.

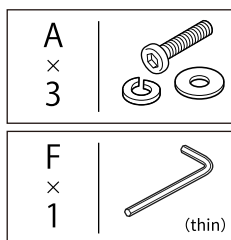

⚠ Two or more persons do the assembly

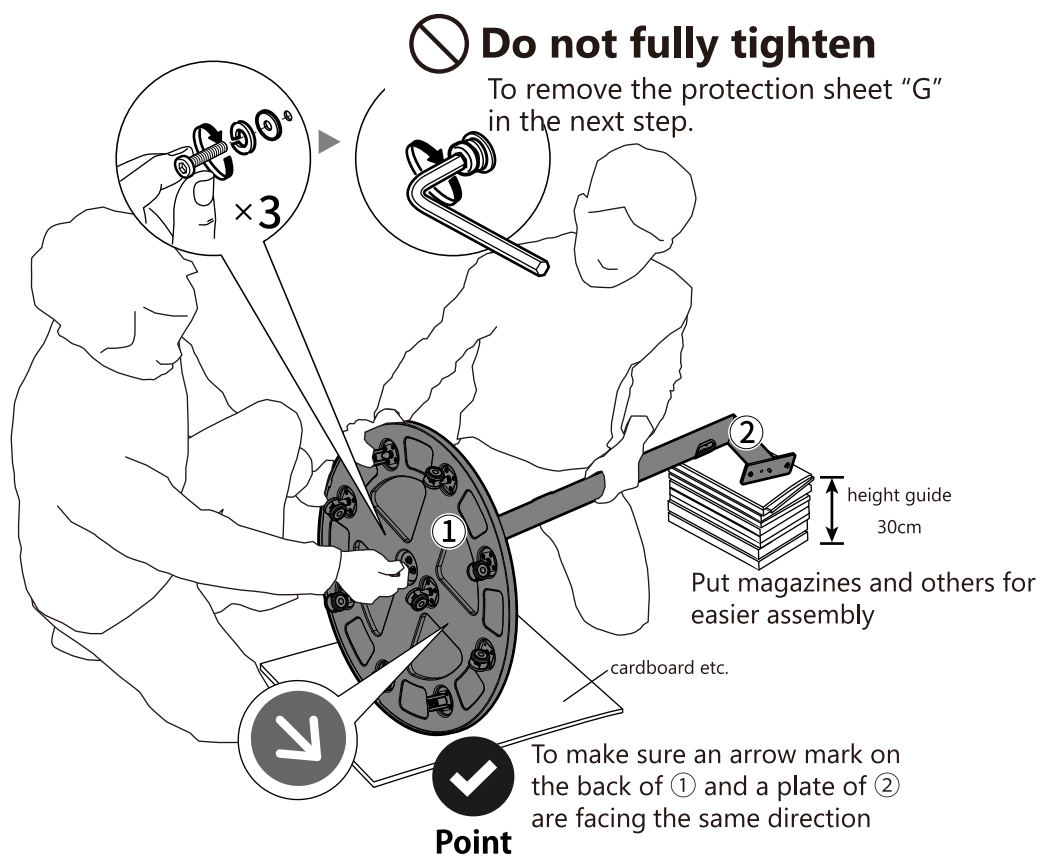 


Point


3

✓
Point


 
Remove the protection pad and tighten the screws firmly to the end.

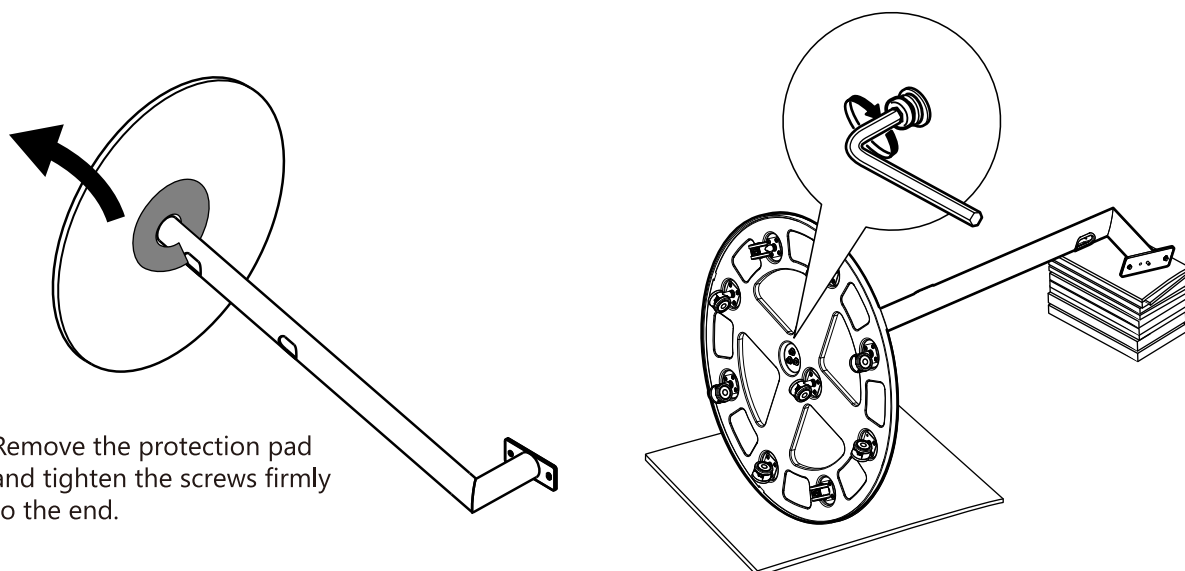

 4 Put through the cables before installing the TV.

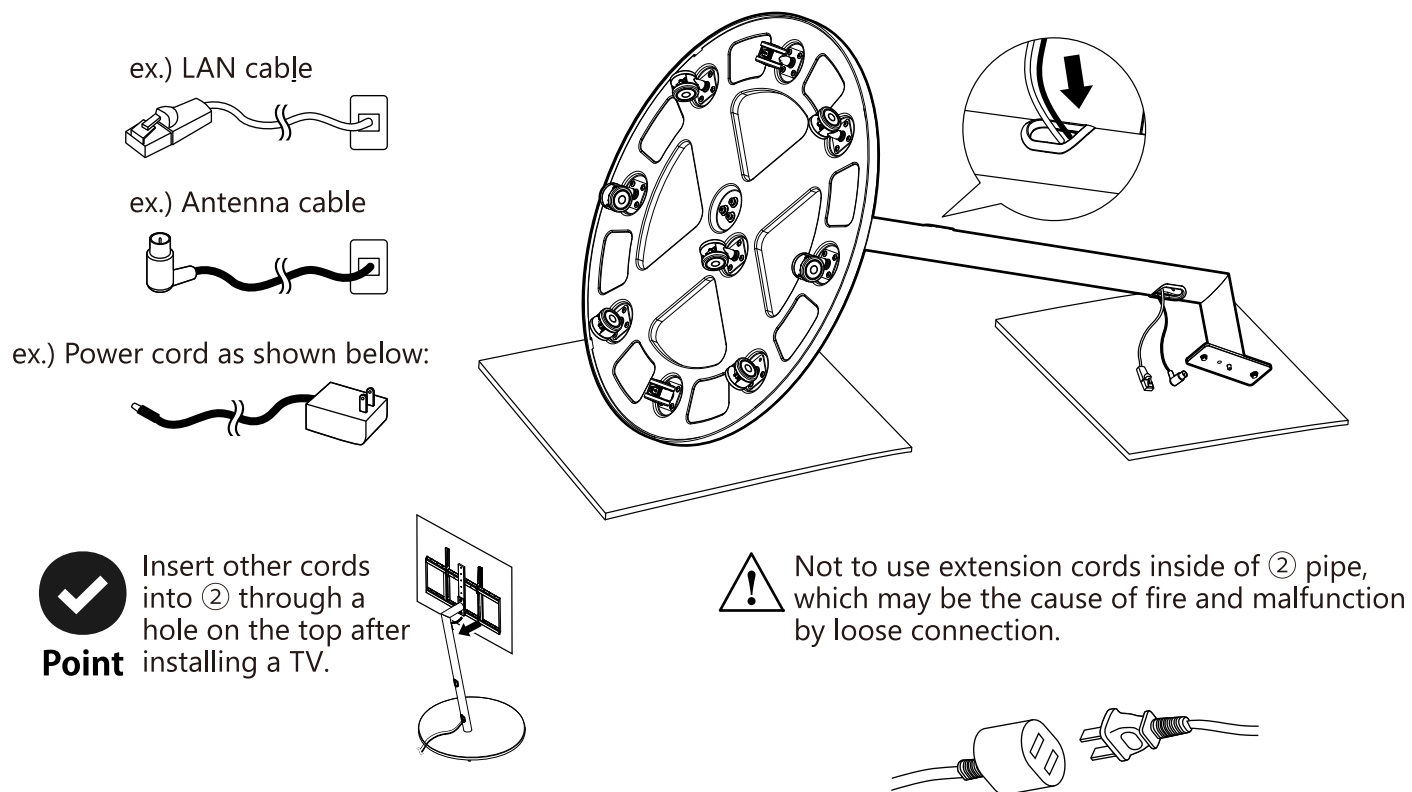

5

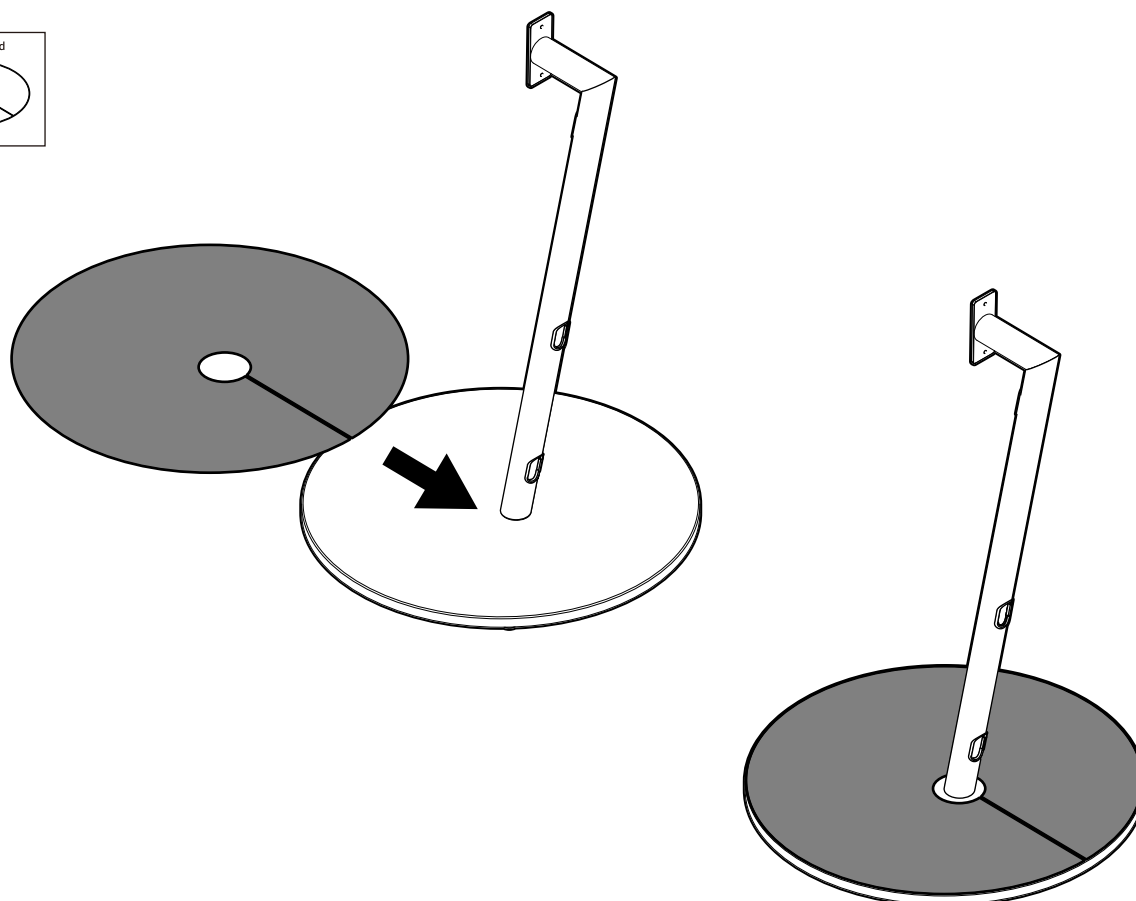  


Prepare to install the TV

1: Check the screw holes on the back of the TV

Please check the instruction manual of your TV to confirm the position of the mounting screw holes for wall-mounting brackets.



 It is designed so that it can be attached to various TVs. Please install it according to the installation method that suits your TV. Some TVs recommend a dedicated mounting method, so please check the TV wall-mounted design manual.

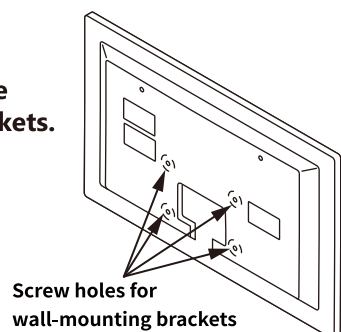

Screw holes for wall-mounting brackets

the backside of TV

Scan here to check TV compatibility



2: Check the shape on the back of the TV

The shape of the back of the TV determines whether or not the spacer is used.

spacer (large)

 
 


spacer (small)



Flat back shape




The TV mounting bracket can be attached vertically to the TV.

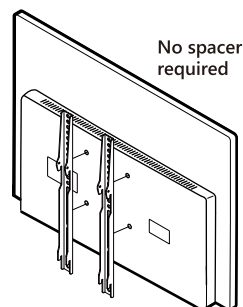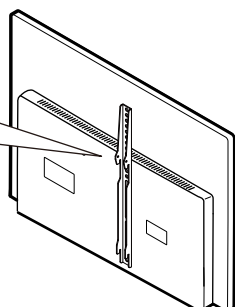

No spacer required




Top of back is slanted

   When you try to attach the mounting bracket, it attaches diagonally.

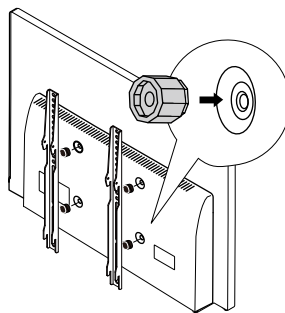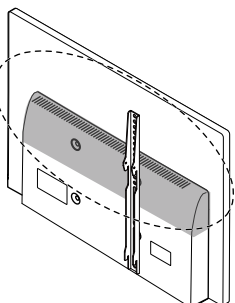

Bottom of back is protruding

   To avoid sliding, do not put two screws into the two long holes at the same time.

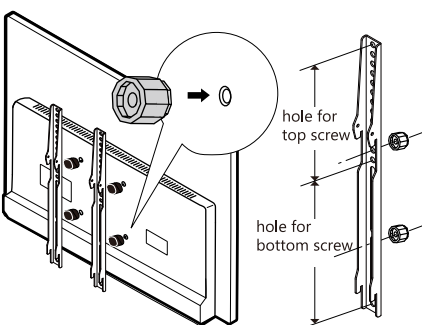

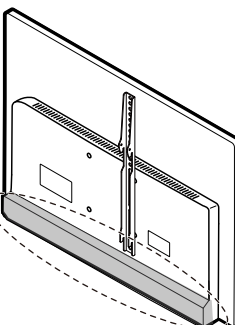


hole for top screw

hole for bottom screw

Bottom of back is protruding partially

   If there is a step, use a spacer. It may interfere with the stand body.

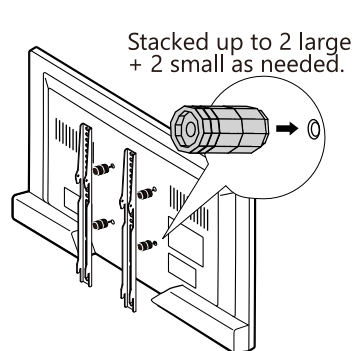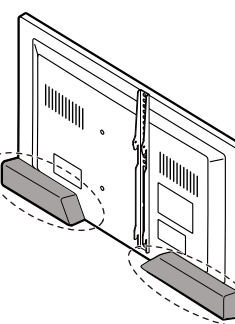


Stacked up to 2 large + 2 small as needed.

3: Check the diameter of the screw holes

Use the best screws and washers among parts "M""N""O", as different TVs have different screw sizes

M  × 4  × 4 each	N  × 4  × 4 each	O  × 4  × 4 each
---	---	---

 Screw diameter Try to put a screw in

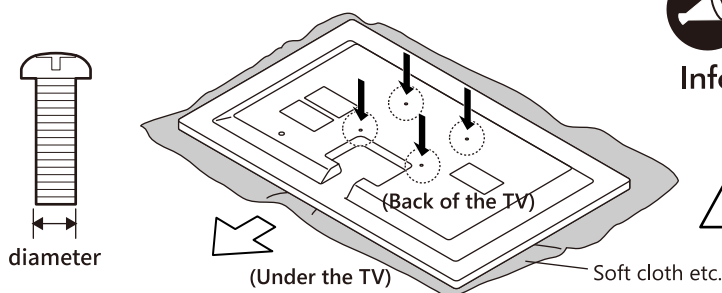

Info


If the diameter or the length of the screws does not match, please purchase.
e.g. 5mm diameter, 15mm length --> M5 x 15mm
Please select "truss screws" or "pan screws"




To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.
Do not install the screw yet.

Screw length Measure the depth of the screw hole


M	N	O
 (small)	 (medium)	 (large)

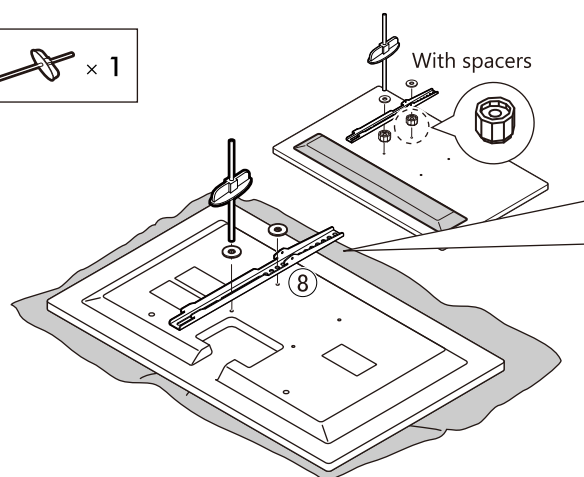 

 
Insert the measurement tool instead of a screw to measure the required screw length.

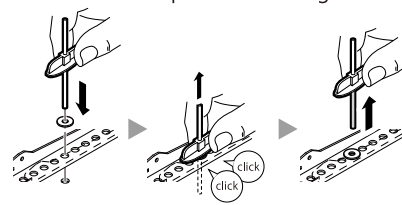


How to reset the tool

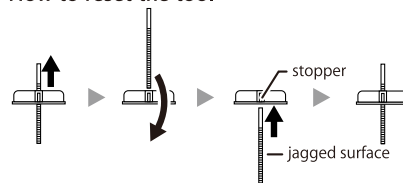 


Choose the screw of the required length

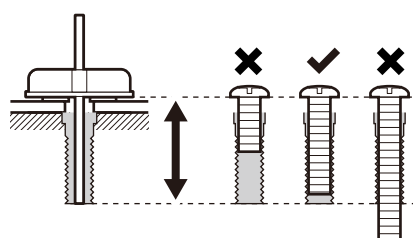 

✗ screw is shallow


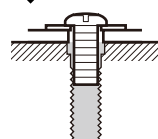 


✗ screw is too long


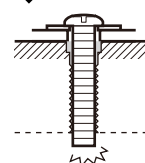 


There is no problem if the screw is hooked 5 turns or more.

  If you can't find a screw of the required length, use spacer(small) to adjust the screw length.

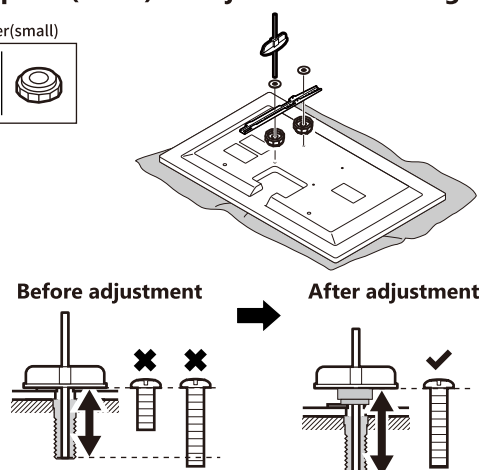

combination with the spacers

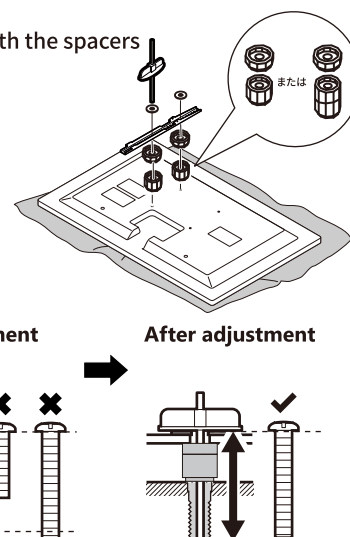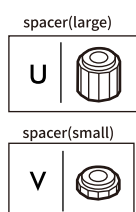  


6 Assemble with suitable screws.


Spacers only if needed.

[Sold separately] Installation of MULTI DEVICE HOLDER

 
- Install it here with TV mounting brackets

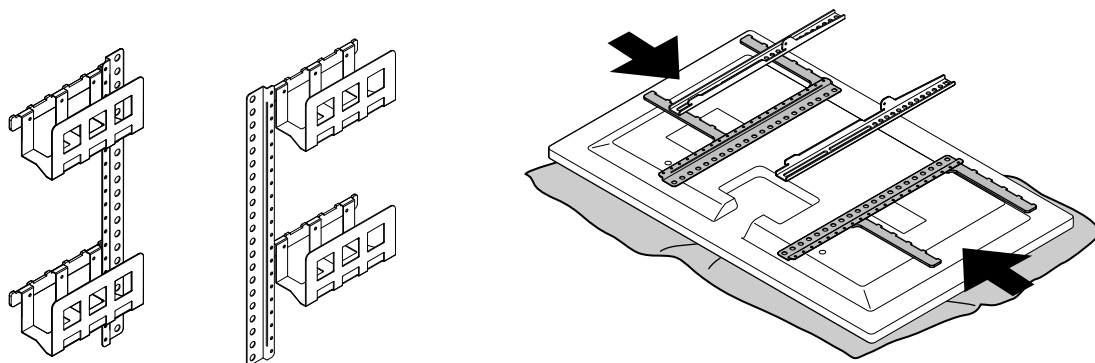

Match the right and left heights

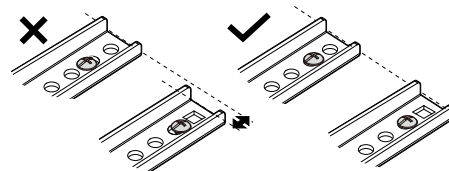 

 It may cause the tilt of the TV after installation.

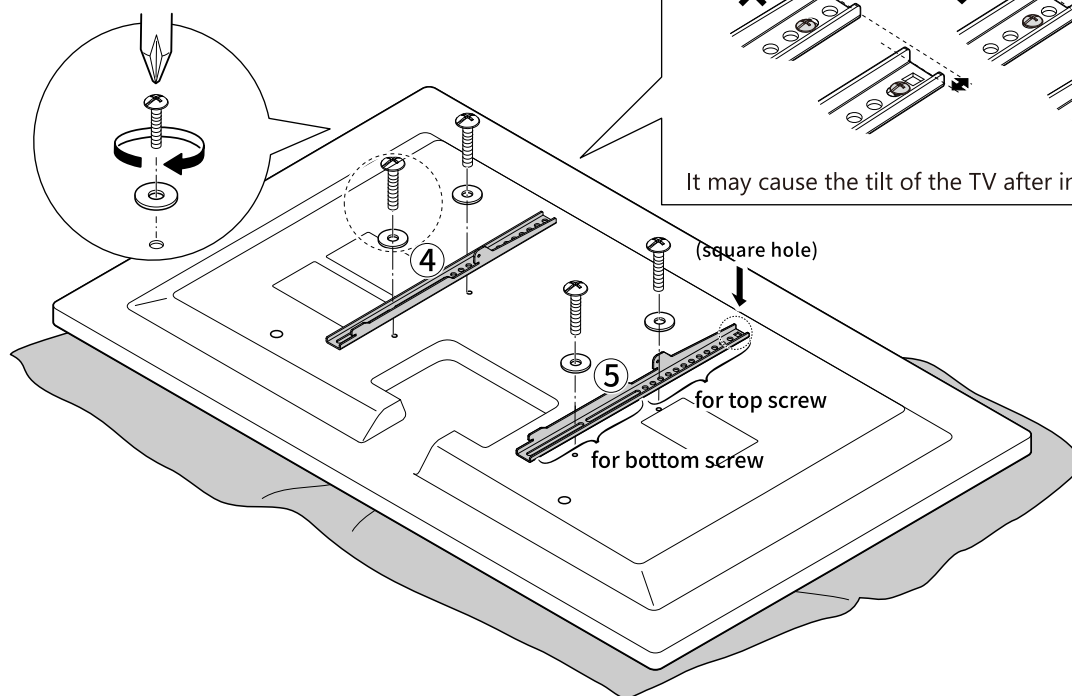


To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.


M	 × 4 (small)	N	 × 4 (medium)	O	 × 4 (large)	U	spacer(large)  × 8
	 (15,25,35mm) × 4 each		 (15,25,35,45,55mm) × 4 each		 (15,25,35,45mm) × 4 each	V	spacer(small)  × 8

Determine the installation height of the TV and assemble

 Place the attached paper measure on the TV to mark it, and make the paper measure look like a TV.

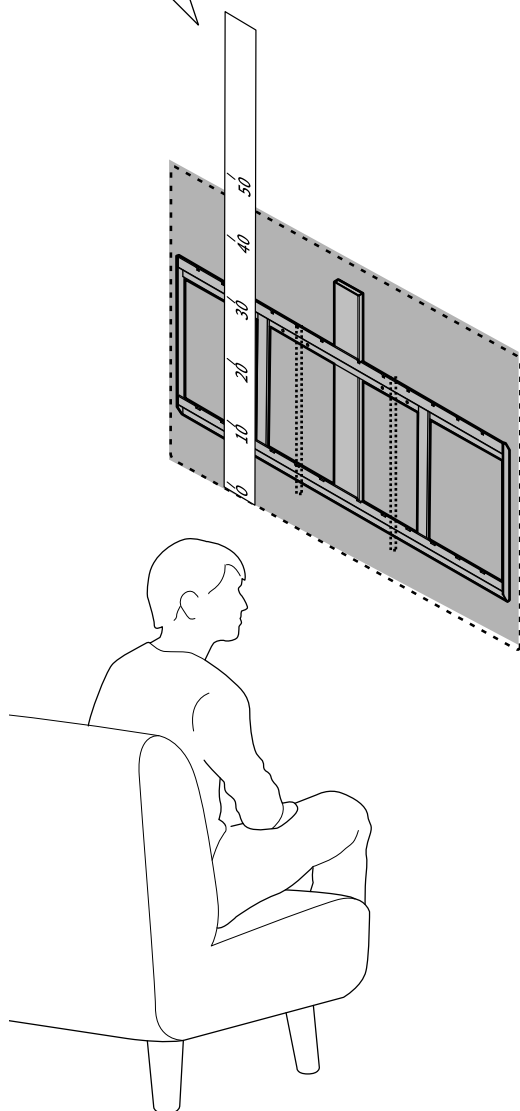


 Move the paper measure up and down while touching the stand, and determine the height by imagining the screen position after installing the TV.

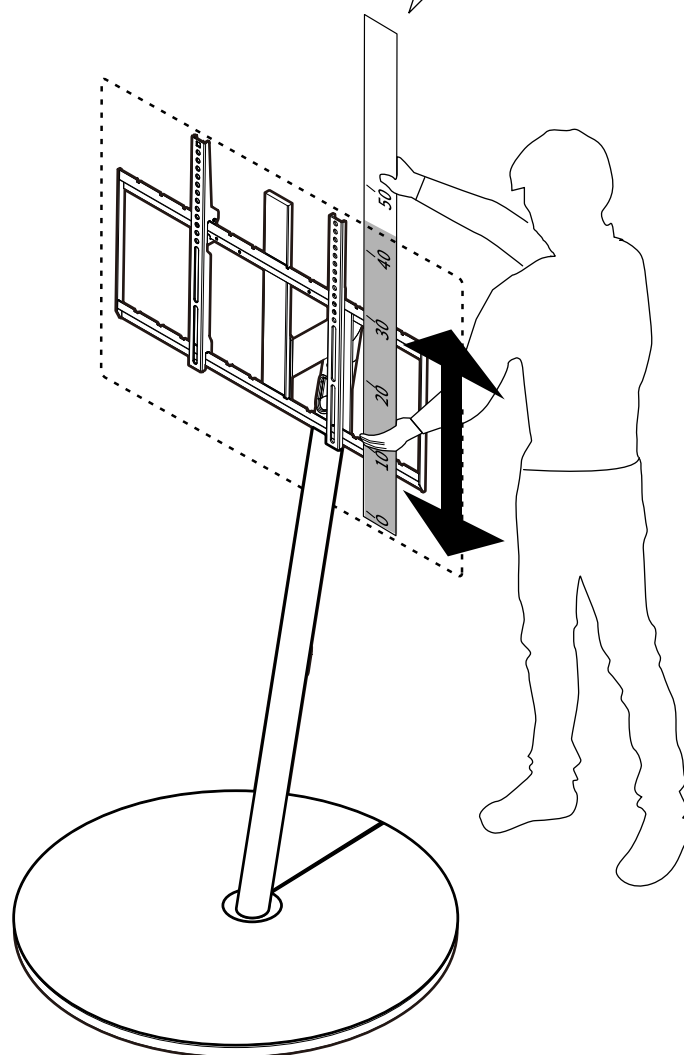

7 Make marks on a paper measure

 Use a pen to write the marks A and C for the size of the TV and the mark B to match the stand body

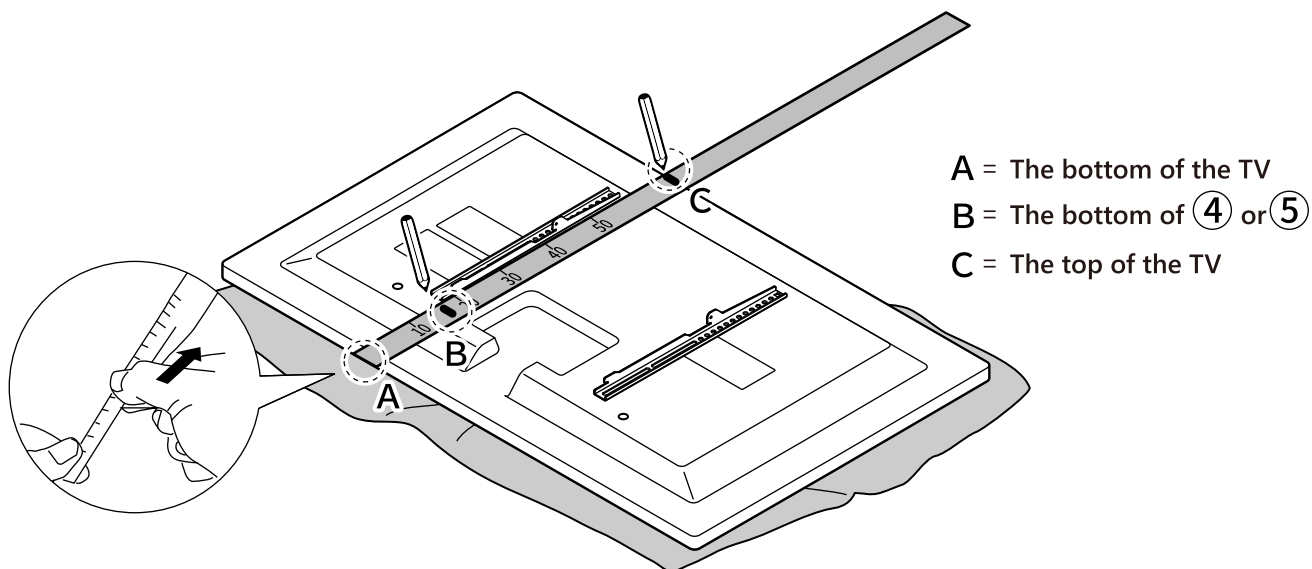


Point

Paper measures are easier to use if you crease them in half. The mark B is the level for matching with the stand body.

8 Determine the height

B × 2	
C × 1	Non-slip sheet
E × 1	

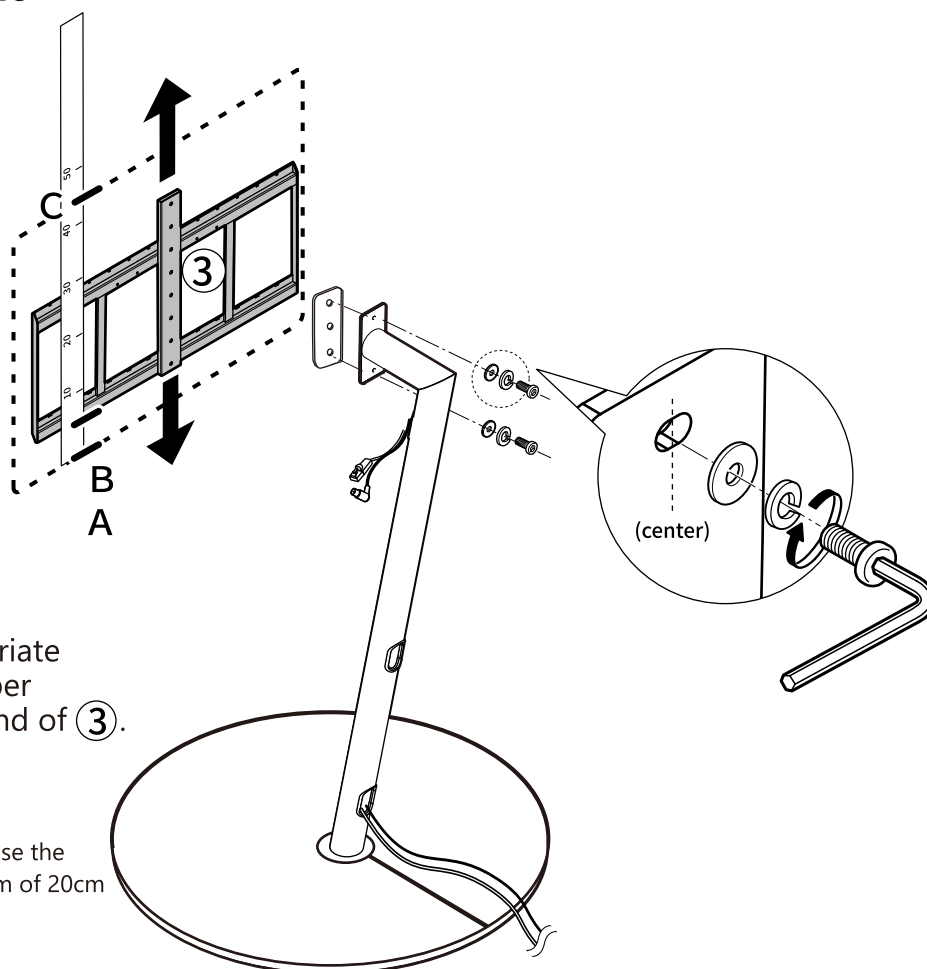 

Point

Attach ③ at an appropriate height by putting a paper measure at the lower end of ③.



Info

From this height, you can increase the height by 5cm, up to a maximum of 20cm

Install the TV to the TV stand

 
9



Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard.




Refer to the instruction manual of the TV for how to hold the TV. Two or more persons do the installation.

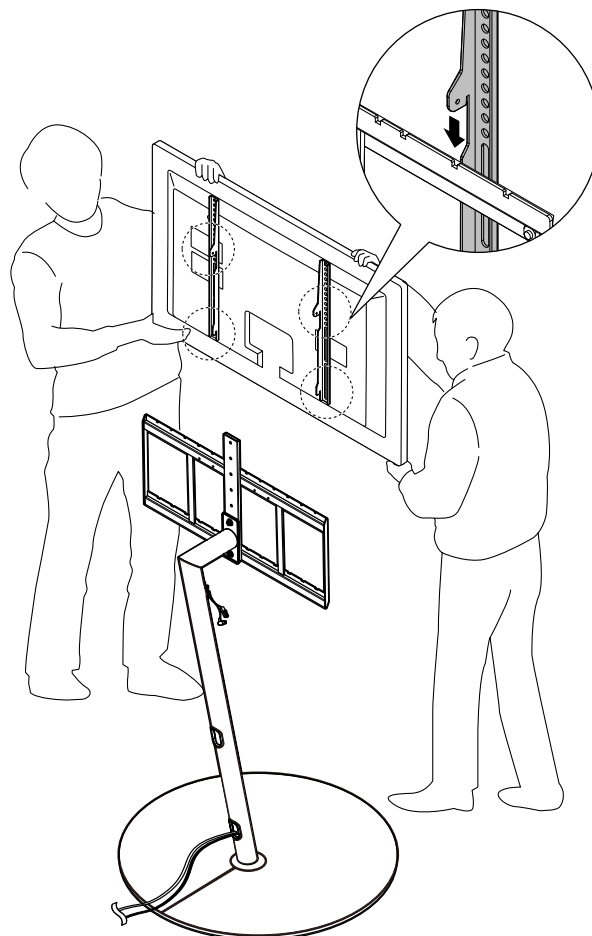



10

 D
×
2



Step1.Preparation


 
 
Attach a retaining washer to the screw.

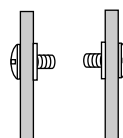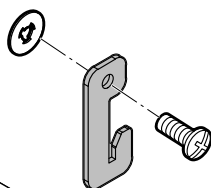


Point

Pay attention to the inserting direction of the screws and attach them properly.

   Step2.Installation

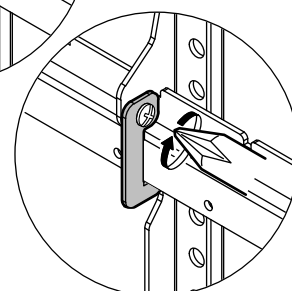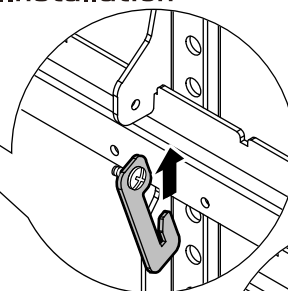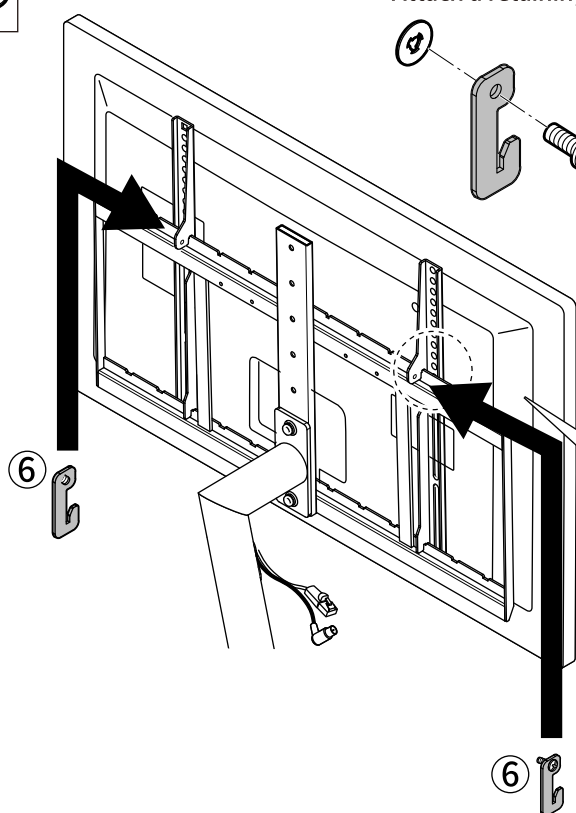

11 Put through the cables

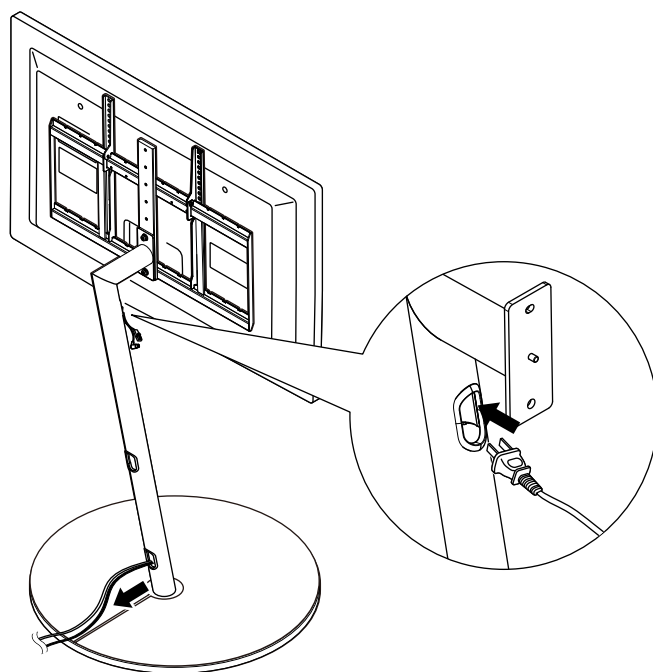 


How to put stoppers on the casters



Info

 We recommend using a commercially available door stopper. Please use the one that matches the floor material.




Examples of Use


Insert 3 stoppers between the TV stand and the floor.



 12

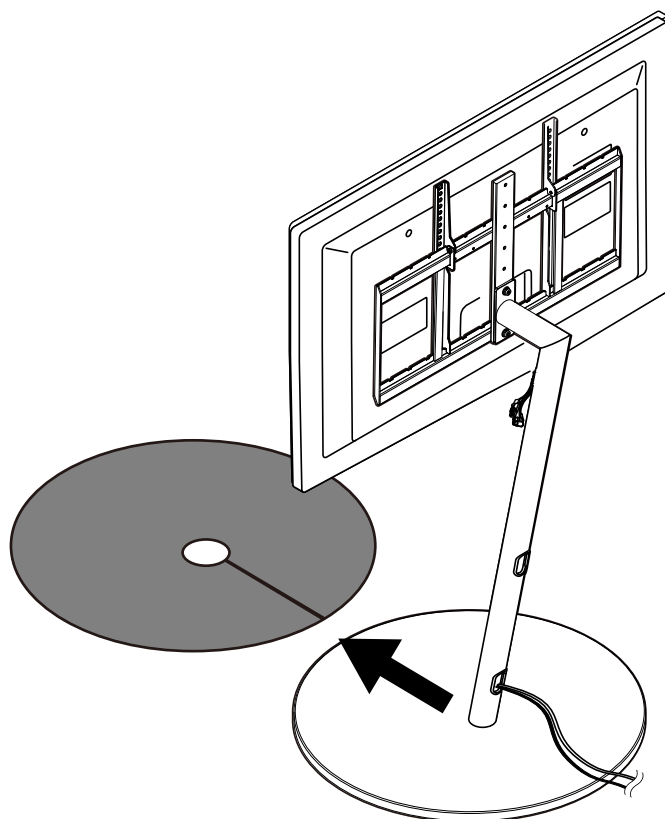


How to adjust the tilt of the TV

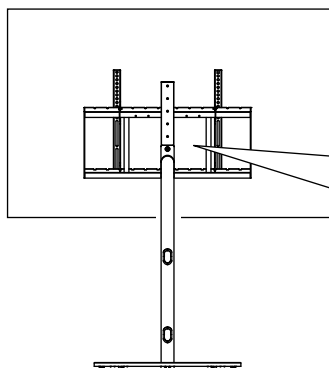 

1. Loosen the upper screw only , not to loose the lower one.

2. Tilt until the TV is level

 3. Tighten the screw

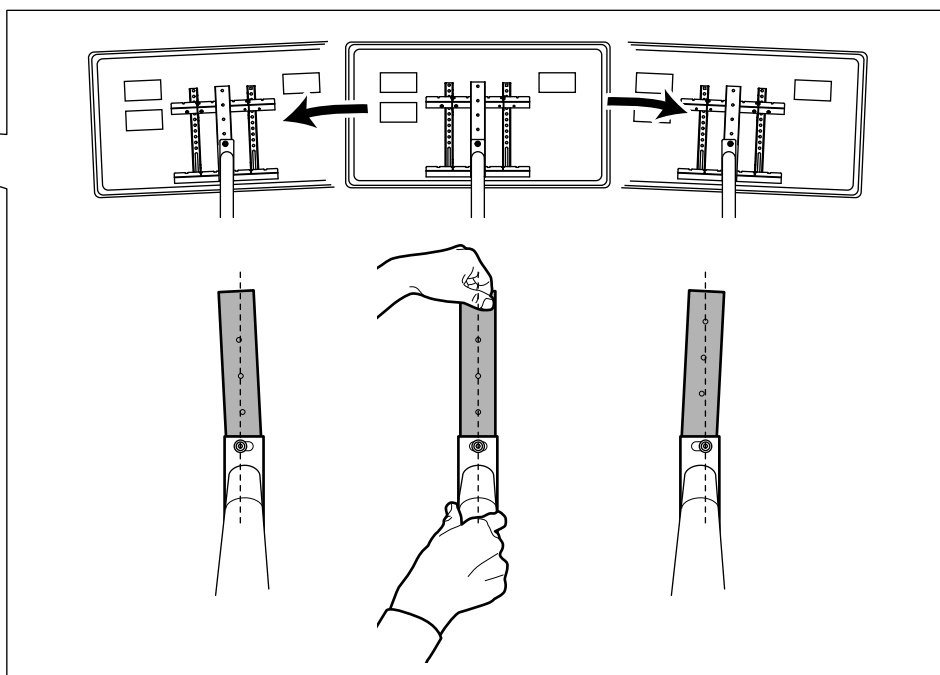

Adjust the tilt while supporting a TV