

**WALL**®

WALL INTERIOR TV STAND

— **FRAMESTAND** —

Parts List 部品リスト

# Accessory parts 付属部品

Some parts are included in case of loss.

The extra parts are spares.- The number in the tables is the required number.













- Use "M", "N" and "O" that match the TV you are installing.
- Please keep any extra parts as you may need them when you replace the TV.

紛失の時の為に、余分に入れている部品もあります。余った部品は予備です。表の数は必要数です。







- M,N,O は取り付けるテレビに合ったものをお使いください。
- テレビを交換する際に必要になる場合がありますので、余った部品を保管することをおすすめします。

Body assembly parts  
本体組立用部品






A Phillips screwdriver is required for assembly.  
組み立てにはプラスドライバーが必要になります。

<b>A</b>	 × 5 (small long 小・長)	<b>B</b>	 × 2 (large 大)	<b>C</b>	 × 2 (large 大)
<b>D</b>	 × 14 (small short 小・短)	<b>E</b>	 × 19 (small 小)	<b>F</b>	 × 2
<b>G</b>	 × 2 each  ずつ	<b>H</b>	 × 4		
<b>J</b>	 × 1 (thin 細)	<b>K</b>	 × 1 (thick 太)	<b>L</b>	 × 1 (large 大)

TV installation parts  
テレビ取付用部品

<b>M</b>	 × 4 (small 小) <hr/>  (15,25,35mm) × 4 each ずつ	<b>N</b>	 × 4 (medium 中) <hr/>  (15,25,35,45,55mm) × 4 each ずつ	<b>O</b>	 × 4 (large 大) <hr/>  (15,25,35,45mm) × 4 each ずつ
----------	---	----------	--	----------	--

Fall prevention parts  
転倒防止用部品





<b>P</b>	 × 1	<b>Q</b>	 × 1	<b>R</b>	 × 1
<b>S</b>	 × 2	<b>T</b>	 × 1 (small 小)		

paper measure  
紙メジャー

screw hole measurement tool  
ネジ穴計測ツール

spacer (large)  
スペーサー (大)

spacer (small)  
スペーサー (小)





 × 1	 × 1	<b>U</b>	 × 8	<b>V</b>	 × 8
---	---	----------	---	----------	---

cushion sticker  
クッションシール

band holder  
バンドホルダー



cord band  
コードバンド

cord cover  
コードカバー

<b>W</b>	 × 1	<b>X</b>	 × 8	<b>Y</b>	 × 10	<b>Z</b>	 × 2
----------	---	----------	---	----------	--	----------	---

# Main body parts 本体部品の確認

## Completion 完成図

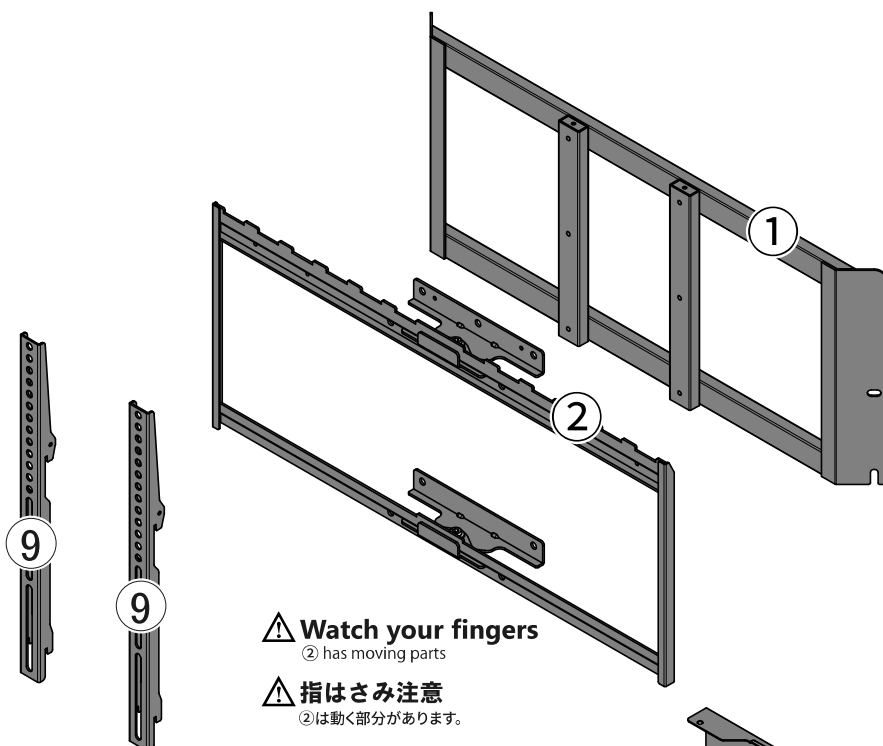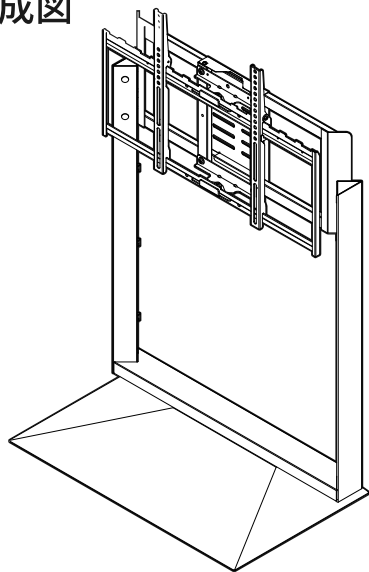


⚠ Watch your fingers  
② has moving parts

⚠ 指はさみ注意  
②は動く部分があります。

## Sold separately 別売



Options to install during assembly  
組み立て中に取り付けるオプション

### HDD HOLDER HDDホルダー

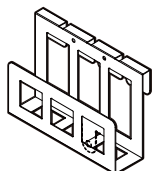


Before attaching the TV to the stand.  
テレビスタンドを取り付ける前

### MULTI-DEVICE HOLDER マルチデバイスホルダー

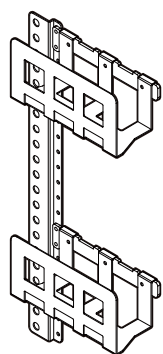

Do not install it on ⑨  
⑨に取り付けない

Assembling it between ① and ②.  
①と②のあいだに取り付ける

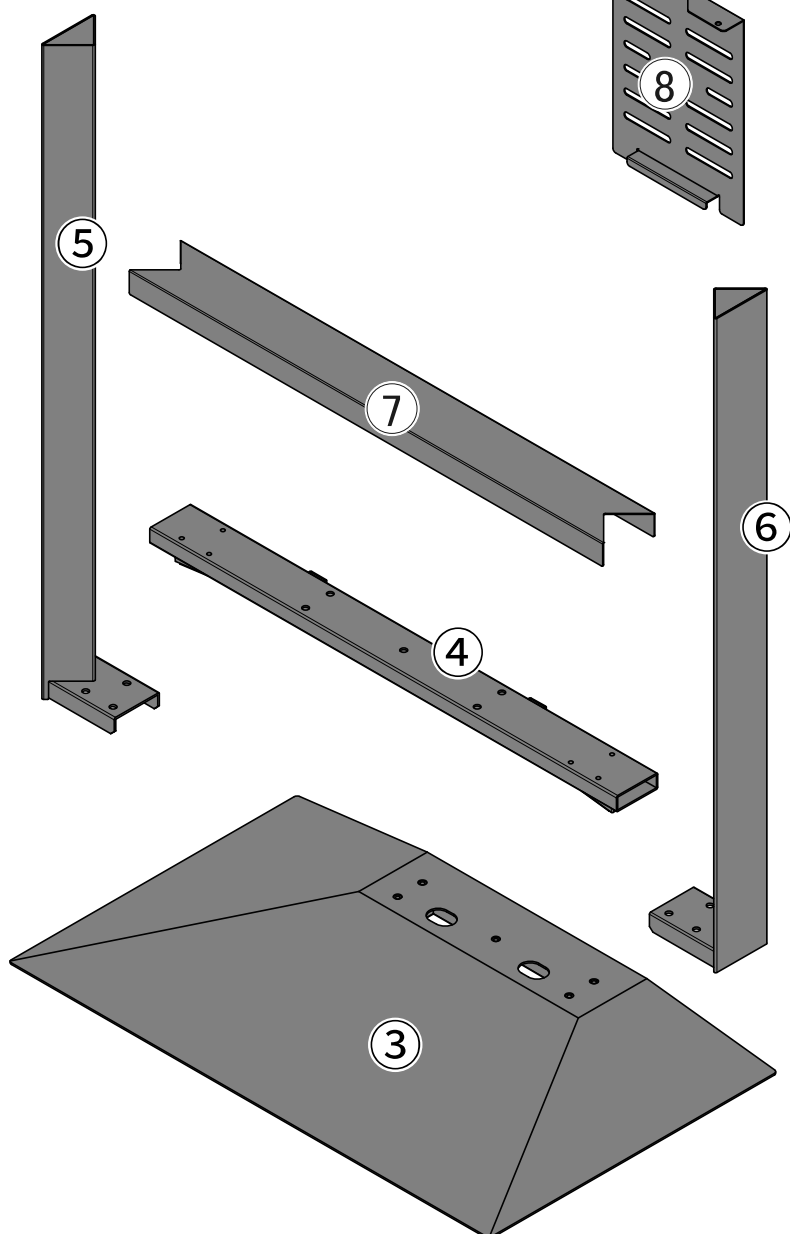

# WALL<sup>®</sup>

## WALL INTERIOR TV STAND

### — FRAMESTAND —

## 組立説明書 (第1版)

この度は、お買い上げいただき誠にありがとうございました。

この商品を末永く、安全にお使いいただくために、

この「組立説明書」をよく読み正しくご使用ください。

また、これらを必要に応じて見られるよう、大切に保管してください。

### 免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



注 意

- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。
- ・小さなお子様がいるご家庭では、誤ってスタンドやテレビを転倒させてしまう可能性があるため、必ず転倒防止金具で固定してご使用ください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

この商品は日本の株式会社ナカムラの企画・品質管理によって中国（原産国）で製造しました。  
品質向上の為の改良に伴い一部仕様が異なる場合があります。

販売元 株式会社ナカムラ  
〒145-0065 東京都大田区東雪谷 4-20-10

公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ

[info@equals.tokyo](mailto:info@equals.tokyo)

お問い合わせフォーム



## ⚠ 組立の前に必ずご確認ください。

本製品は、テレビの機種によってお取り付けできないものがあります。

下記を参考に、組み立てる前に取り付けが可能か必ずご確認ください。

製造ロットや製造場所の違いなどにより商品によって色合いが異なる場合がありますのでご了承ください。


### 1. お手持ちのテレビが下記3項目すべてに該当することをご確認ください。

- 1-1. テレビのサイズが 32V ～ 80V であること
- 1-2. テレビの重量（スタンドを含まず）が 40kg 以下であること
- 1-3. テレビメーカーが壁掛け対応としているテレビであること

※背面形状などの諸条件があっていたとしても、壁掛け非対応としているテレビがあります。

### 2. お手持ちのテレビの背面形状をご確認ください。

2-1. 4 カ所のネジ穴の間隔が、下記 A.B の条件を満たしている

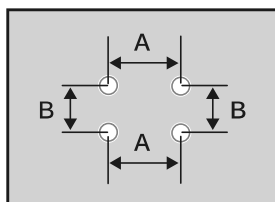


A: 10, 20, 30, 40, 50, 60 cm

(いずれかに該当)


B: 10 ～ 40 cm の範囲内

2-2. 上記の条件を満たし、下記のいずれかに該当すること


4カ所のネジ穴が凸部分に  
すべてある

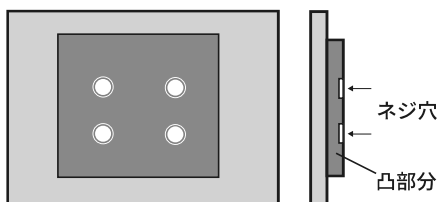

4カ所のネジ穴の面に  
凸部分がない

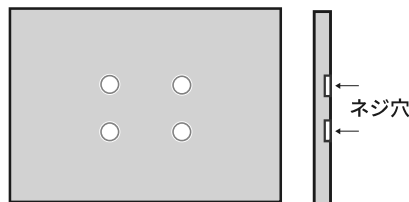


4カ所のネジ穴の下にある  
凸部分の段差が 4cm 以下

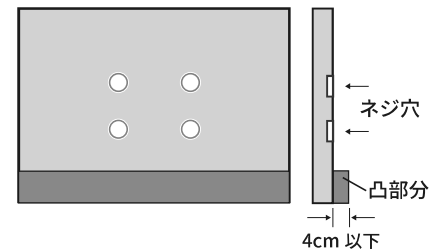


✗ 下記のようなテレビは取り付けできません。


4カ所のネジ穴の一部が  
凸部分にある

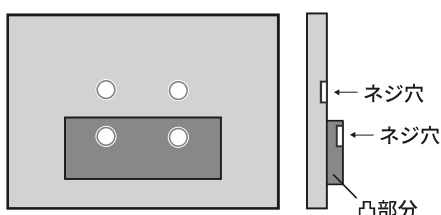



4カ所のネジ穴の間に  
凸部分がある

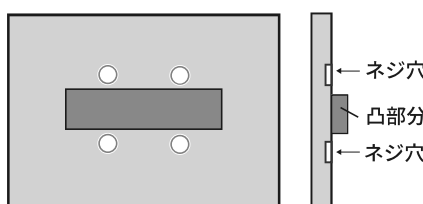

4カ所のネジ穴の下にある  
凸部分の段差が 4cm 以上ある

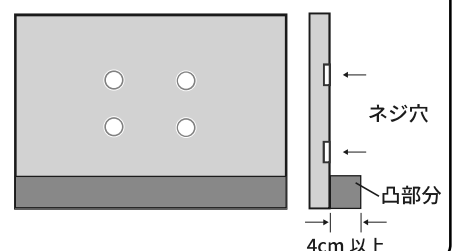


### 3. 耐荷重と棚板の取り付けについてのご注意

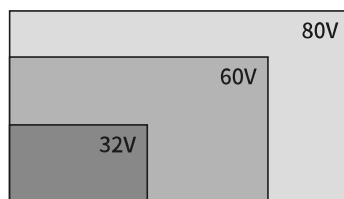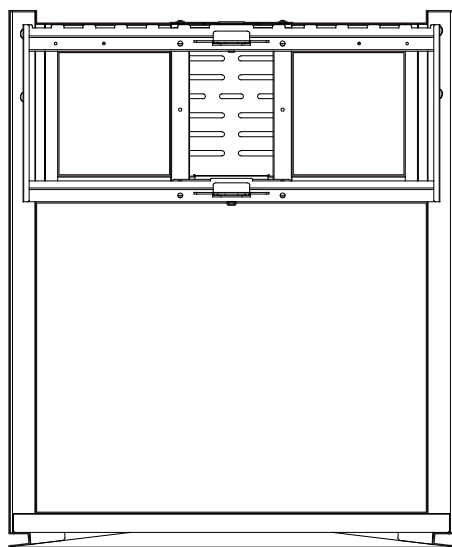


1. テレビの重量 ( スタンドを含まず ) が  
**40kg 以下**であること




2. 棚板に載せる総重量は **15kg** まで

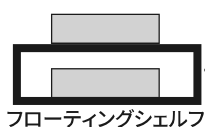


3. 棚板の取り付けは各棚板 **1 枚ずつ**まで  
※種類を問わず

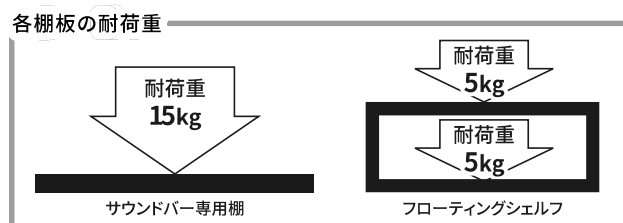


※2025 年 4 月現在

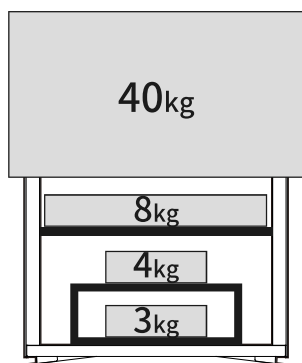


棚板の有無に関わらず、  
テレビの重量は**40kg以下**

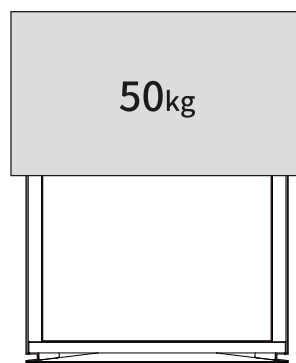

棚板に載せる総重量は**15kg**まで

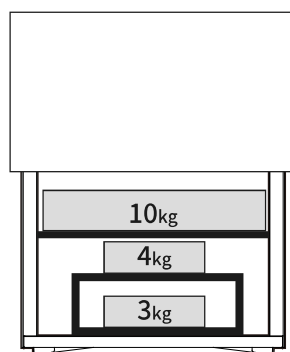


棚板の取り付けは各棚板**1枚ずつ**まで

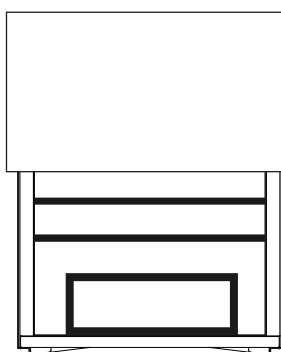


人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。

人への危害、財産の損害を防止するため、必ずお守りください。

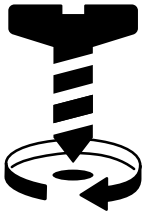


**ボルトのネジ類は  
所定の場所に  
確実に締めつける。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

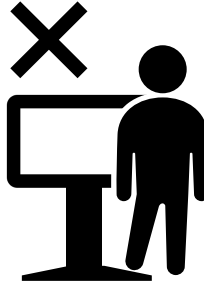


**ベースの上に乗らない。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

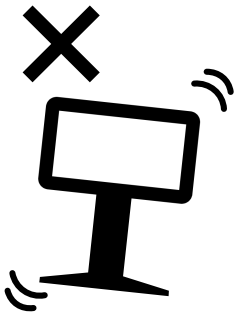


**不安定な場所に  
設置しない。**

十分な耐荷重強度のある、  
平坦で安定した場所に設置する。  
(傾斜面や平坦でない面、カーペット  
・畳などの安定しない面、変形する  
面などに設置しない)

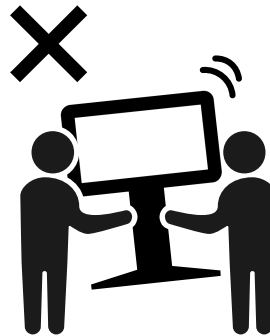


**テレビを設置したまま  
テレビスタンドを移動しない。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

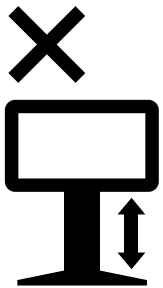


**テレビを設置したまま  
高さ調整をしない。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

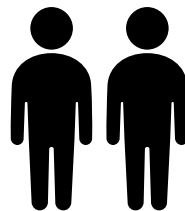

**テレビスタンドの移動や  
テレビの設置・取り外しは、  
必ず2人以上で行う。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

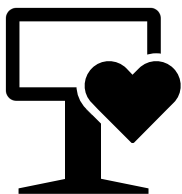

**テレビ画面に  
強い力が加わるような  
持ち方をしない。**

テレビの持ち方は、  
テレビの取扱説明書でご確認ください。



**お子さまが  
テレビスタンドで遊んだり  
動かしたりしないように  
注意する。**

テレビスタンドが倒れたり、  
足の指を巻き込んだりして、  
破損やけがの原因となります。

コード類に引っかかることで、テレビスタンド・テレビ、ご自身やご家族の転倒に繋がる恐れがあります。

特に小さなお子さま、ご高齢者のいる場所でのご使用は十分ご注意ください。

地震・事故による万一の際の転倒・落下によるケガや製品の破損などは弊社では保障できかねます。



## 注意

注意を無視した取扱いをすると、物質損害を被ったり、障害を負う可能性があります。

### 1

#### 組立・設置の注意

##### 1-1. 転倒、破損の原因

組み立て、設置の際は、必ず安定した平らな場所でおこなう。床や壁などをキズつけないように、厚手の布や梱包のダンボールなどを敷く。

##### 1-2. 転倒、破損の原因

壁に寄せた状態で設置する。(ワイヤーを取り付けて転倒防止の処置をおすすめします。)

##### 1-3. 変色や破損の原因

屋内で使用する。直射日光や熱、冷暖房の風が直接あたらない場所に置く。

フローリングやその他柔らかい素材の床でご使用になりますと、床面に保護材の跡が付いたり、色移りしたりする可能性があります。

フロアメーカーの取扱上のご注意をご確認の上、”変色”などを防ぐため、保護材を入れてご使用することをおすすめします。

##### 1-4. 火災や故障の原因

薄型テレビの通風孔をふさぐと内部に熱がこもり、火災の原因となることがあるので、壁との間に十分に間隔をあける。

間隔が足りない場合は、付属のスペーサーで壁とテレビの間隔を調節可能です。(スペーサーなしの場合、壁からテレビまで約 8cm)

##### 1-5. 火災や感電の原因

薄型テレビを本製品に取り付けたり取り外す場合は、必ず薄型テレビの電源スイッチを切り、電源プラグをコンセントから抜き、

アンテナ線接続機器間のコードなど外部の接続コードを外してから行ってください。コードが傷つき、火災、感電の原因となる恐れがあります。

### 2

#### 使用の注意

##### 2-1. 転倒、けが、破損の原因

商品に乗ったり、ぶらさがったり、テレビスタンド以外の使用をしない。テレビスタンドに集中的に荷重をかけない。(傾斜の可能性)

移動の際は、薄型テレビを取外し、必ず 2 人以上でゆっくり移動する。

##### 2-2. けがの原因

手や指などを挟まないように注意する。

##### 2-3. 火災や変色の原因

ストーブなど火のそばで使わない。

##### 2-4. におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

### 3

#### お手入れの注意

##### ひび割れや変色、変形の原因

表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)

※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1 カ月に 1 度が目安です。)



# WILL<sup>®</sup> FRAMESTAND

WALL INTERIOR TV STAND

	SATIN WHITE	SATIN BLACK	WALNUT
製品コード	WLTV45111	WLTV45119	WLTV45238
製 造 No.	D05000302	D05000303	D05000304
サ イ ズ	W70 D42 H87 - 112 cm		
材 質	スチール		
表 面 加 工	粉体塗装		
重 量	19kg		
原 産 国	中国		
耐 荷 重	80V (40 kg 相当)		

## INDEX

※ 2 人以上で組み立ててください。  
必要な工具：ドライバー (+)

テレビスタンドを組み立てる P.06~

---

テレビの取付け準備をする P.09~

---

テレビをテレビスタンドに取り付ける P.12~

---

テレビの左右角度の調整方法 P.18

---




テレビの傾き調整方法 P.19


---

# テレビスタンドを組み立てる


※組み立て作業目安：60～90分程度

1

D × 4	 (小・短)
E × 4	 (小)
J × 1	 (細)

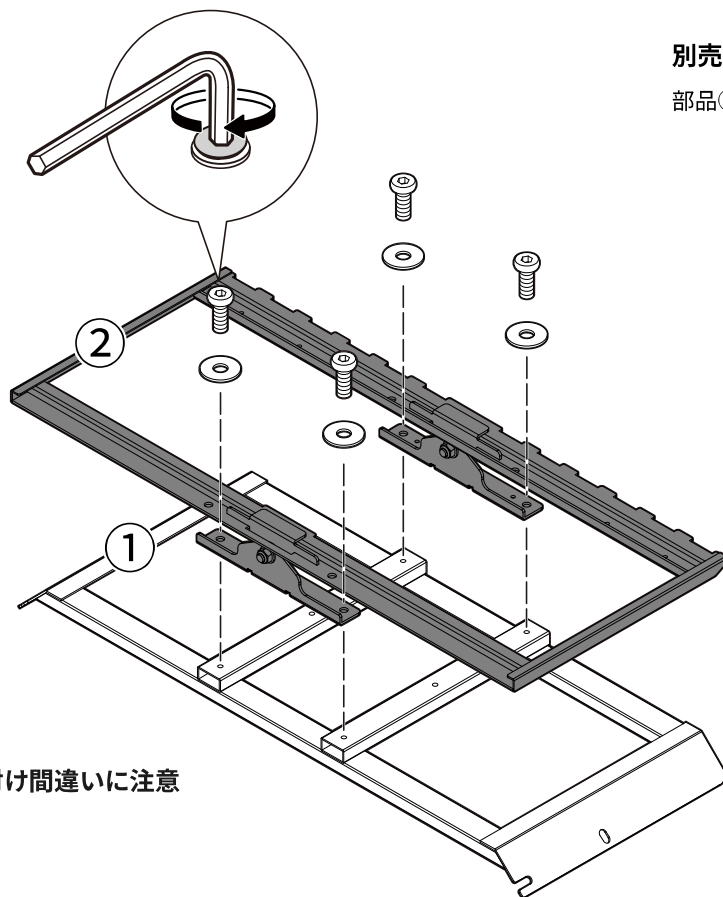

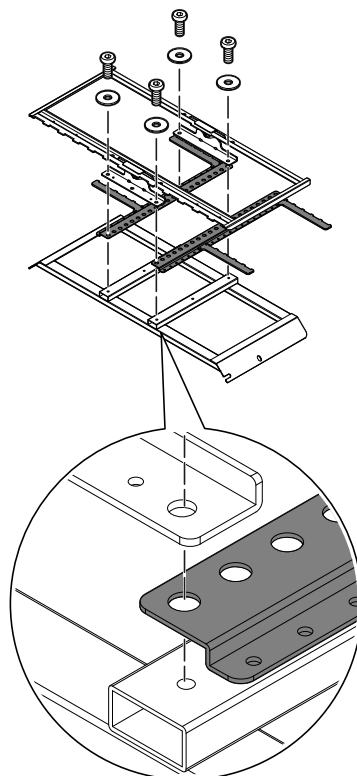


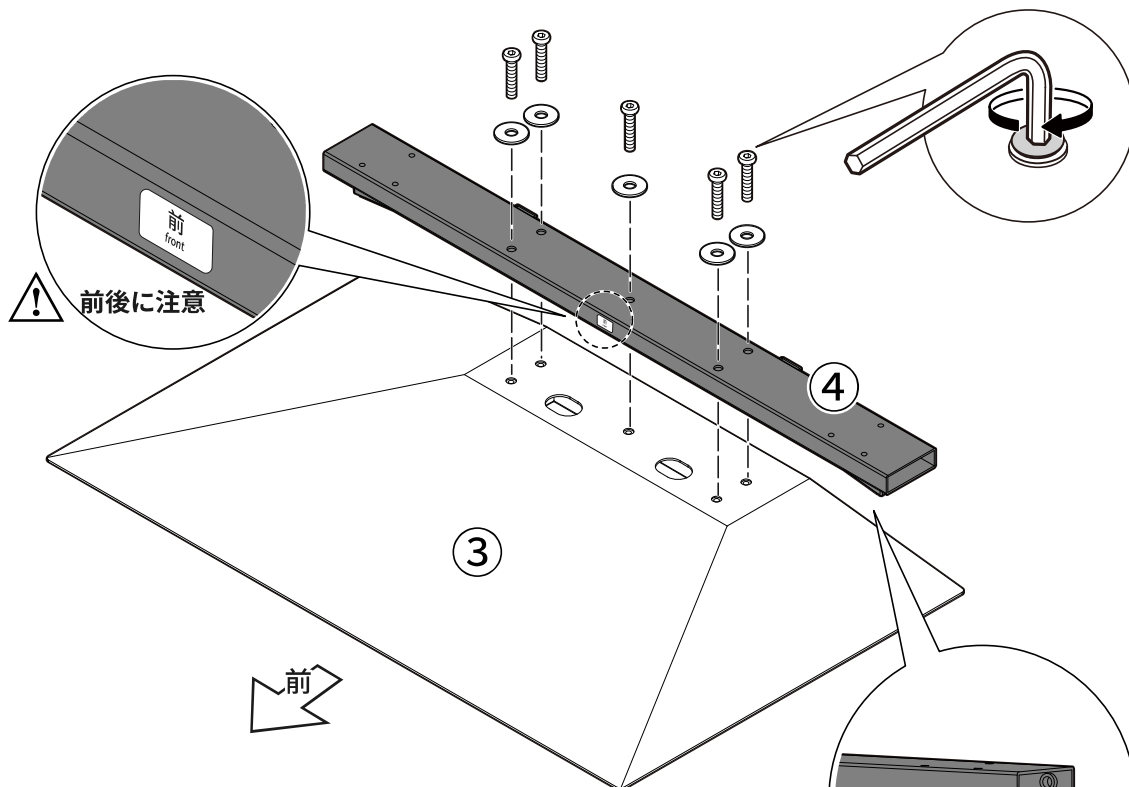
別売：マルチデバイスホルダーの取り付け  
部品①と②のあいだに取り付ける



⚠ 上下取付け間違いに注意

2

A × 5	 (小・長)
E × 5	 (小)
J × 1	 (細)



⚠ 前後に注意






前




③に密着する仕様になっています。  
ネジは最後までしっかり締めてください。




Point


3

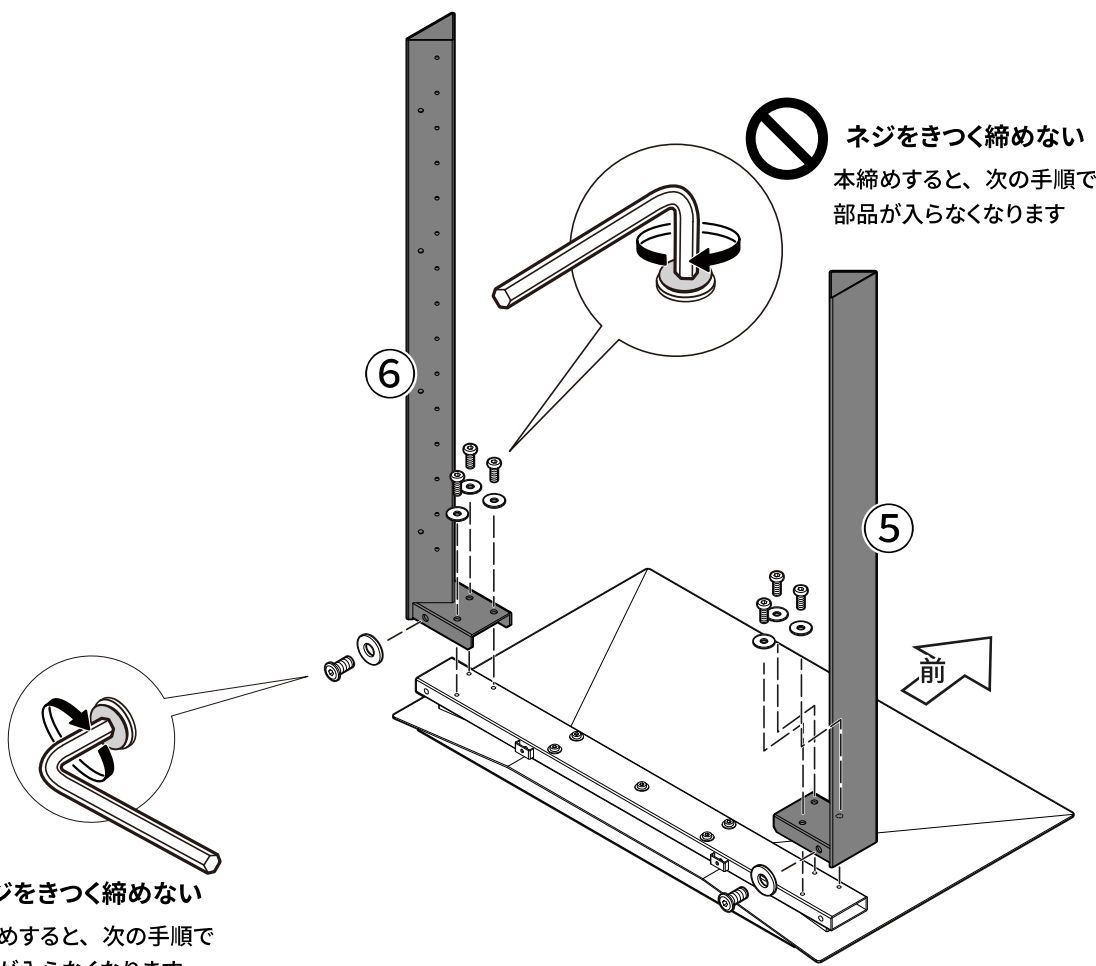B × 2	 (大)
C × 2	 (大)
D × 6	 (小・短)
E × 6	 (小)
J × 1	 (細)





4

D × 4	 (小・短)
E × 4	 (小)
J × 1	 (細)

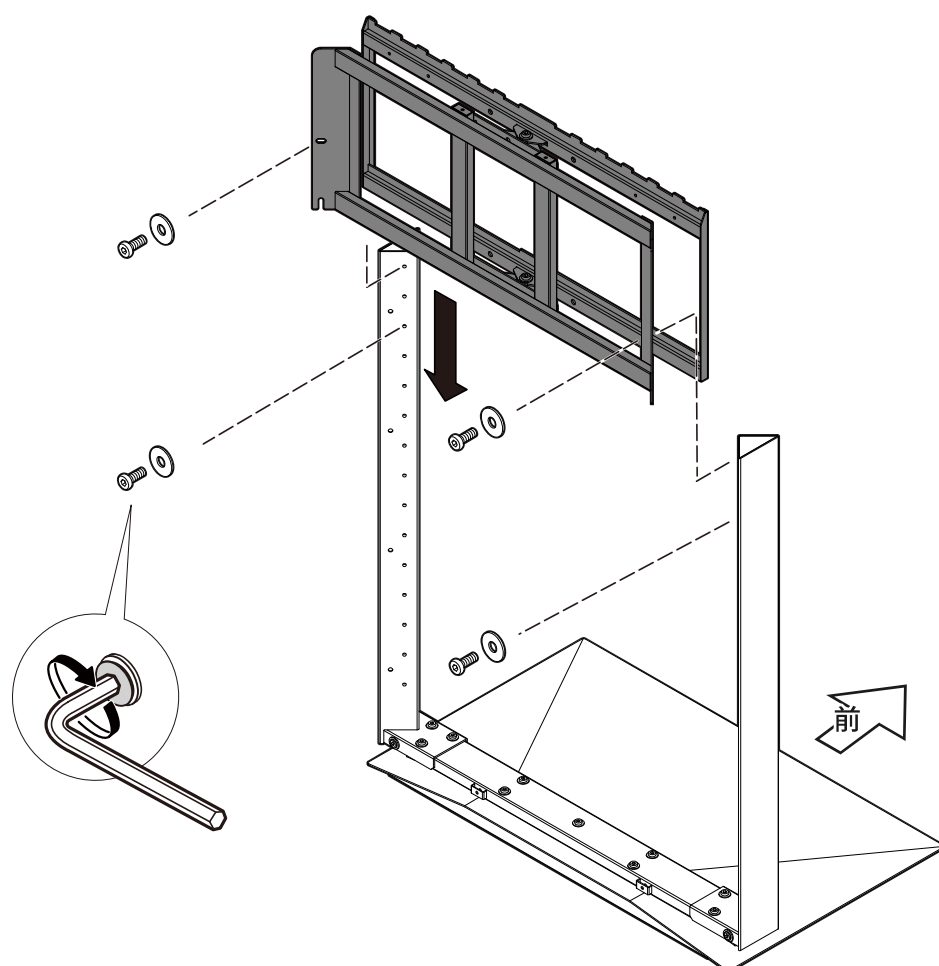


5

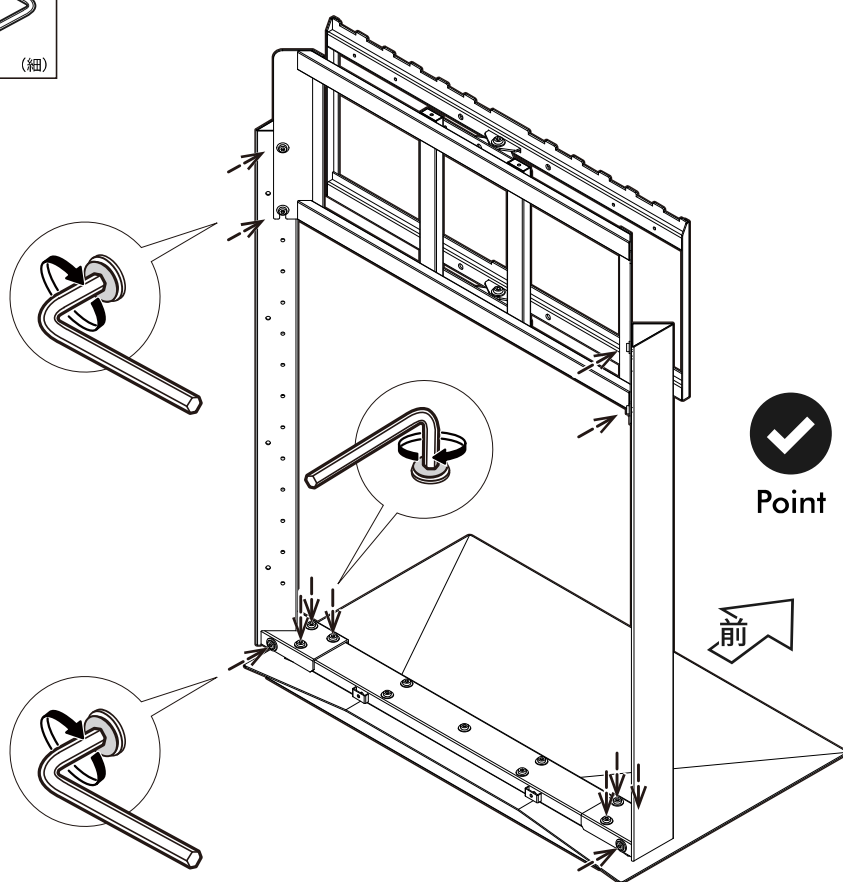

12 か所のネジを少しずつ  
順番に最後まで締める。

Point

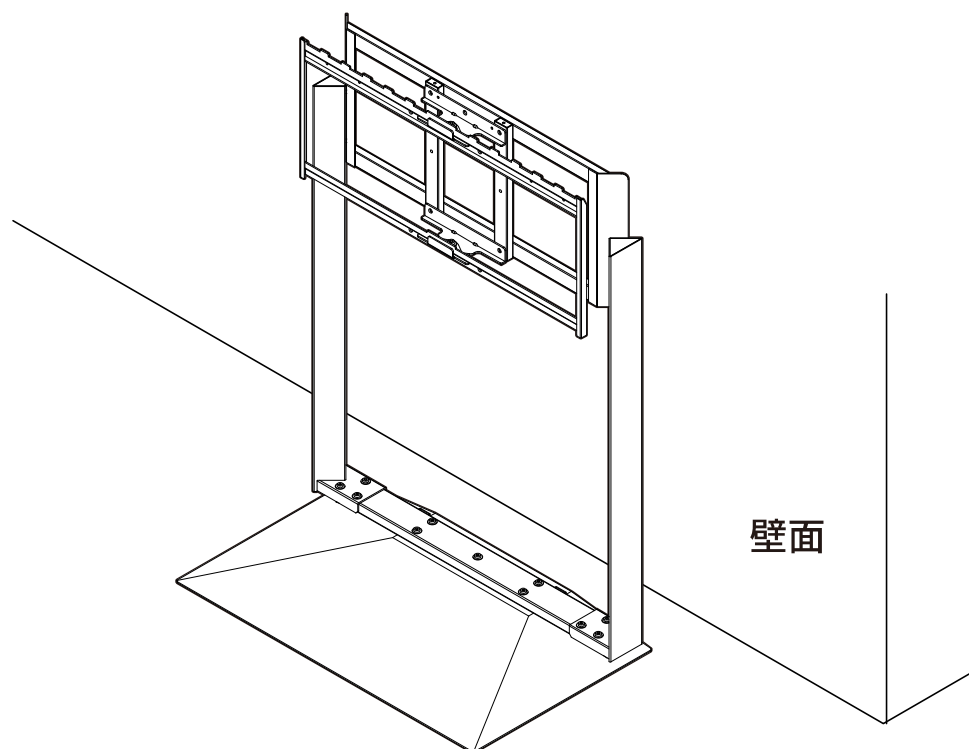

壁面

# テレビの取り付け準備をする


## 1: テレビ背面の壁掛けネジ穴の確認

お持ちのテレビの説明書で壁掛けネジ穴をご確認ください。



注意

様々なテレビに取り付けできる設計になっています。  
テレビに合った方法で取り付けをお願いします。  
専用の取り付け方法を推奨しているテレビもありますので  
テレビの壁掛け設置説明書をご確認ください。

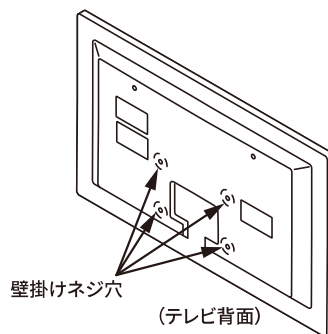

取り付け可能テレビの  
詳細はコチラから>



## 2: テレビ背面の仕様確認

テレビ背面形状によりスペーサーが必要になる場合があります。

スペーサー (大)




スペーサー (小)




フラット

取り付け金具を  
テレビに当てると  
垂直になる



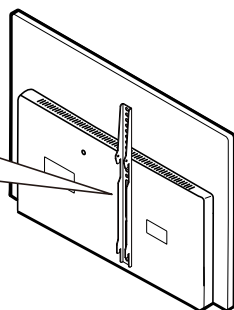


スペーサー不要

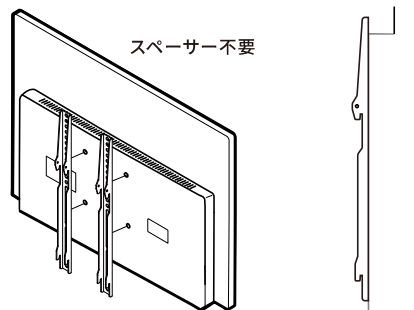




上部が斜め

取り付け金具を  
テレビに当てると  
斜めになる

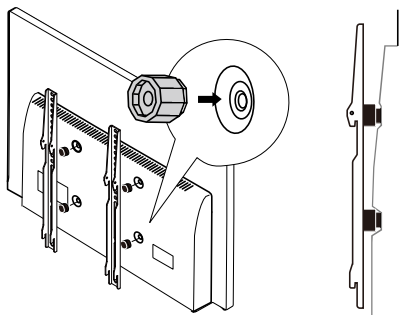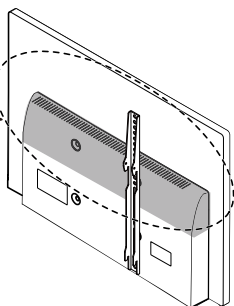




下部に出っ張り

段差を避けると  
上下のネジ穴が両方  
長穴の位置になる

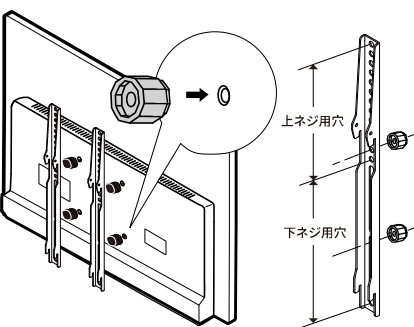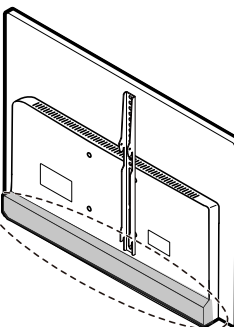





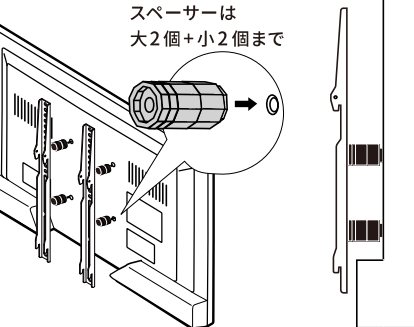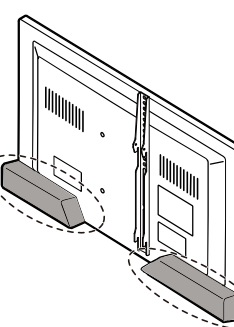

下部の左右に出っ張り

図のような段差




### 3: 取り付けネジの確認

テレビによってネジサイズが異なるため、  
テレビ取付用部品M、N、Oの中から  
最適なネジとワッシャーを選びます。

<b>M</b>  (小) × 4  (15,25,35mm) × 4 ずつ	<b>N</b>  (中) × 4  (15,25,35,45,55mm) × 4 ずつ	<b>O</b>  (大) × 4  (15,25,35,45mm) × 4 ずつ
--	--	---

#### ネジの直径 ネジを入れてみる

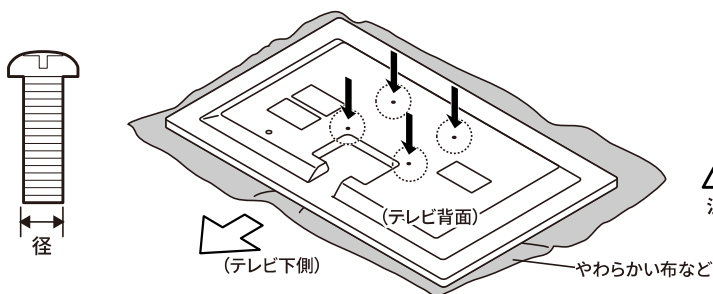

ネジ径やネジ長さが合わない場合は、  
ホームセンター等で別途お買い求めください。

**Info**




例) 太さ5mmで長さ15mmの場合 → M5×15mm  
[トラスねじ]または[ナベねじ]






パネル割れ防止のため、画面を下に  
寝かせてはいけないテレビがありますので、  
テレビの取扱説明書をご確認ください。


ネジの取り付けはまだ行わないでください。

#### ネジの長さ ネジ穴計測ツールでネジ穴の深さを測る


M	 (小)
N	 (中)
O	 (大)

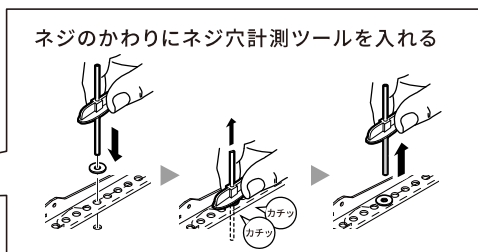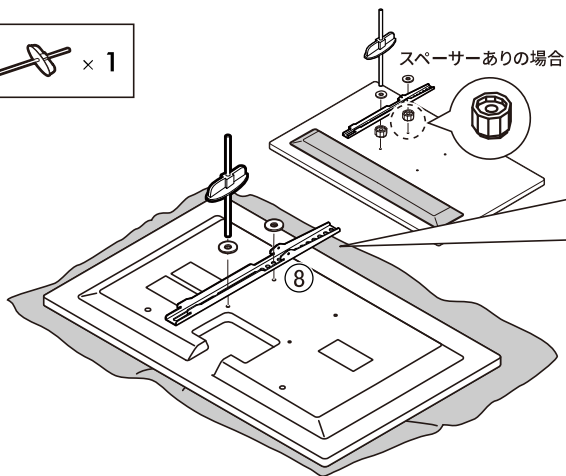


ツールの戻し方

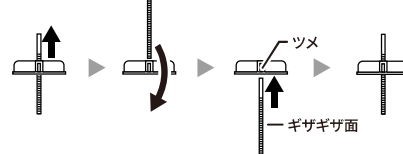


計測した長さに合うネジを選ぶ

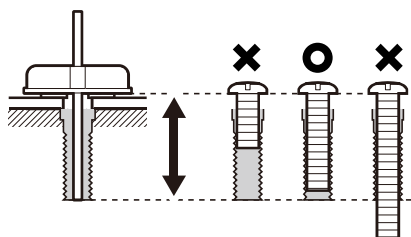

✗ 掛かりが浅い


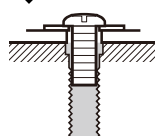


✗ 長すぎる



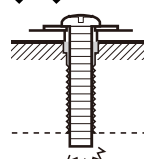



掛かりの目安は  
ネジ 5 回転以上

長さが合うネジが見つからない場合、  
スペーサー(小)で約5mmネジを短く使用できます。

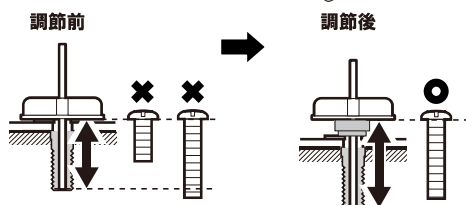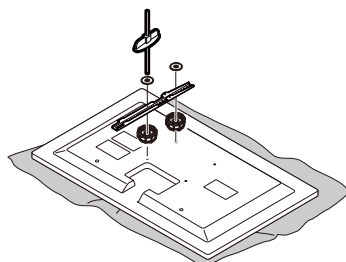


スペーサー(大)と合わせての使用

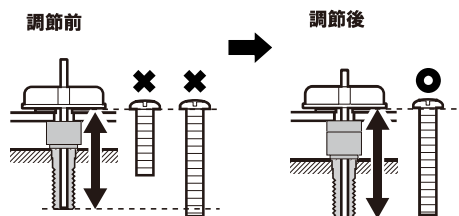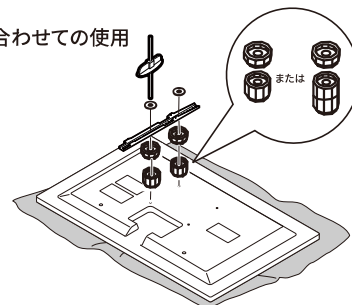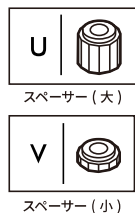

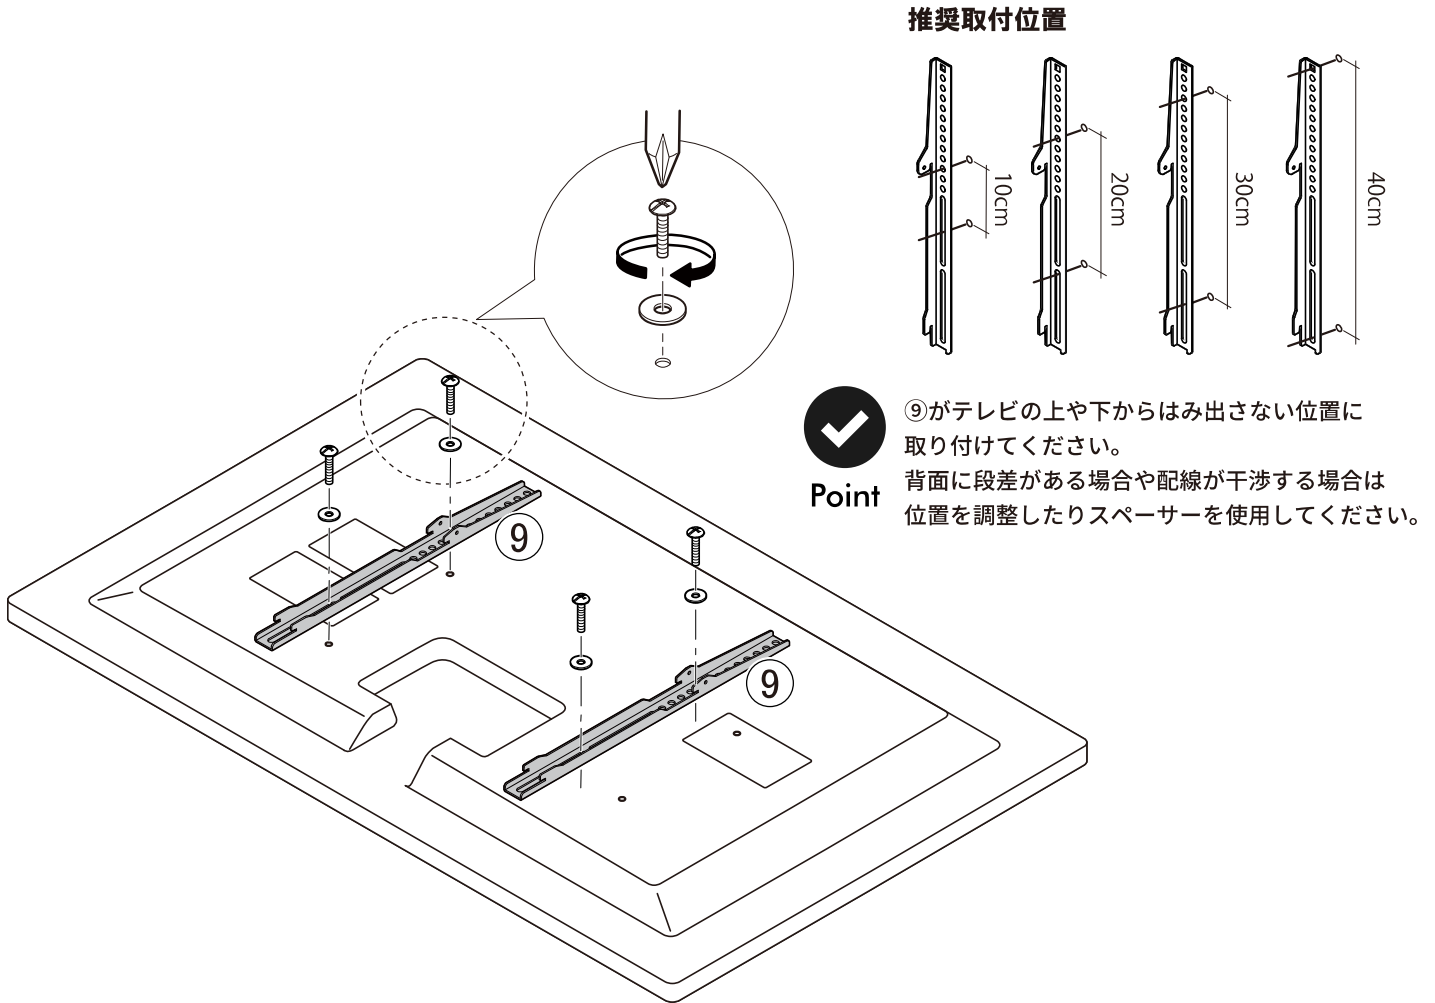


### こんな場合は・・・

ネジ穴が突起の中にあり、  
テレビ取付金具がうまく合わない

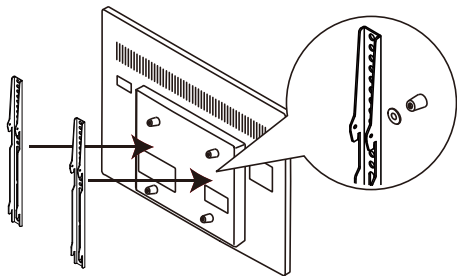

テレビ取付金具の穴に突起部が入り込んでしまう場合は、  
図のようにスタンド付属のワッシャーをご使用ください。

テレビ取付金具がテレビからはみ出してしまう  
(ショートブラケット対応可能)

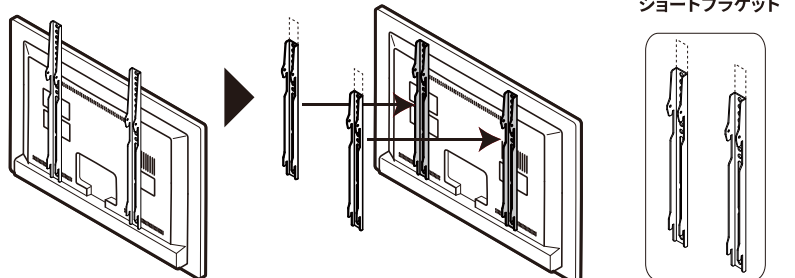

部品をショートブラケットに交換することで、はみ出しがなくなります。  
テレビによっては交換してもはみ出す場合がありますのでご了承ください。

### 【お問い合わせ先】

公式ブランドサイト  
<https://equals.tokyo/contact/>



上記URLのお問い合わせフォームより、ご購入日・購入店名・ご注文番号・お届け先住所等と下記項目を明記しご依頼ください。(無料)

件名: V3 SW用ショートブラケット希望


ブラケットの色: (ホワイトorブラック)

テレビのメーカー型番: ○○○○○

※弊社お客様サポートにて、ご提供いただくお客様個人情報は  
本件についてのみ使用し、その他の目的には一切使用いたしません。

## テレビをテレビスタンドに取り付ける

7

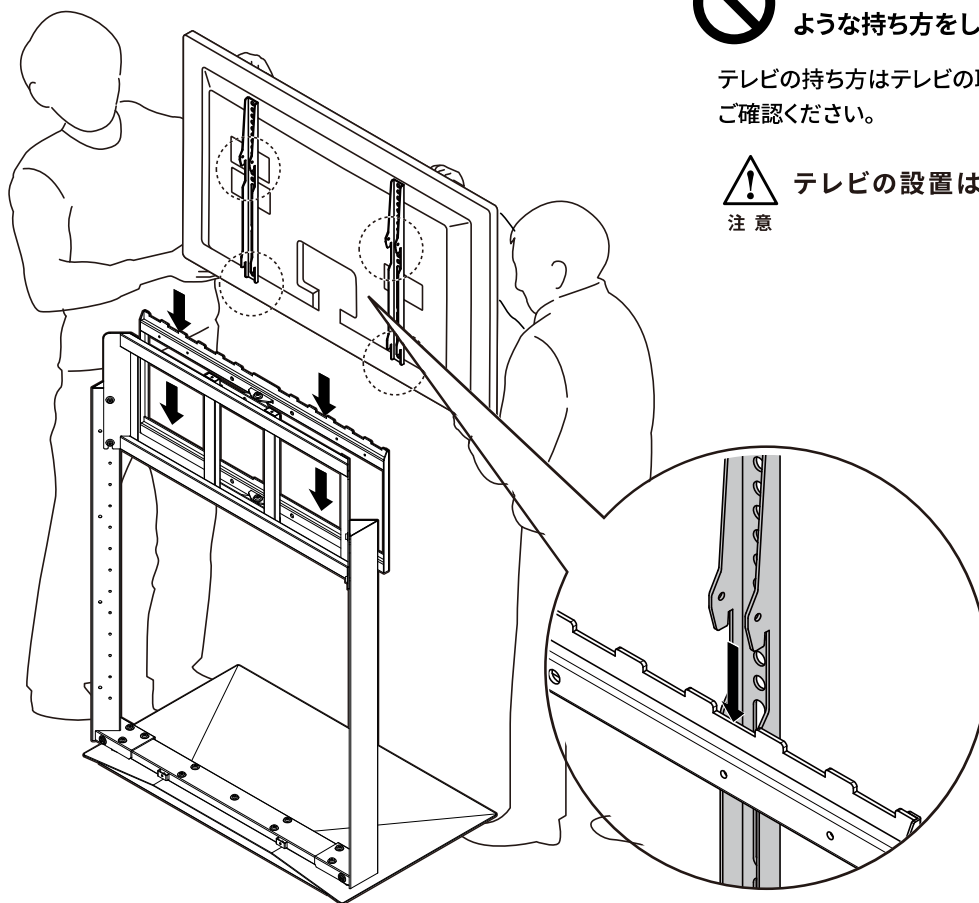

テレビ画面に強い力が加わる  
ような持ち方をしない

テレビの持ち方はテレビの取扱説明書で  
ご確認ください。



テレビの設置は2人以上で  
注意



### テレビの設置高さの確認

高さは部品①のネジ留め位置を変えることで 5cm ずつ調整できます。



注意

高さを変える場合は、  
テレビを取り外してから行ってください。

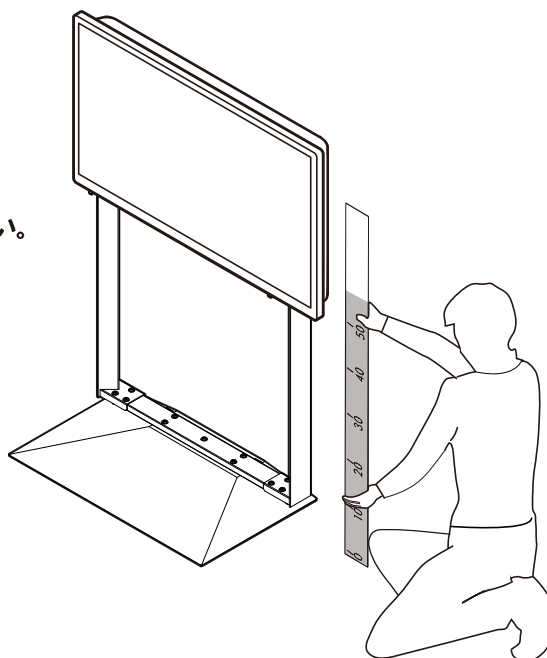
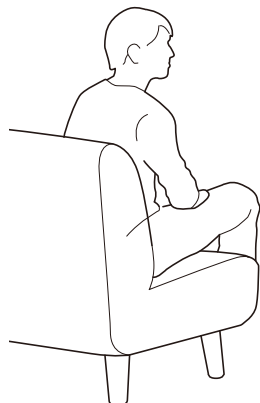




## 8 希望の高さで組み立てる


### STEP-1

支柱下部のネジを緩める

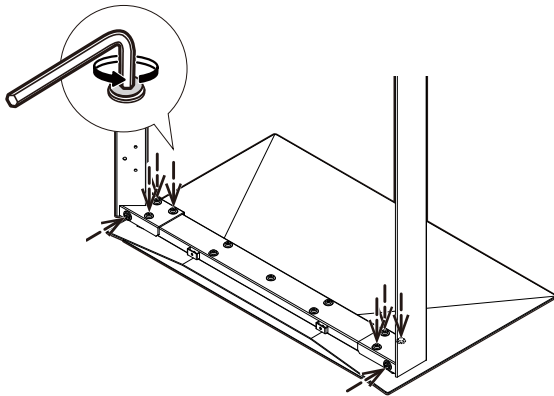


### STEP-2

支柱上部のネジを緩めてフレームを外す

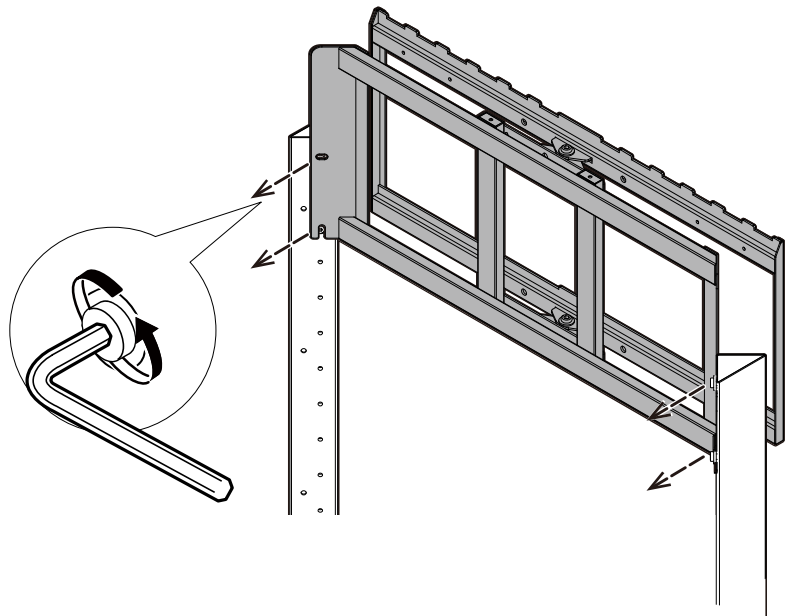


### STEP-3

支柱上部のネジを締めてフレームを取り付ける


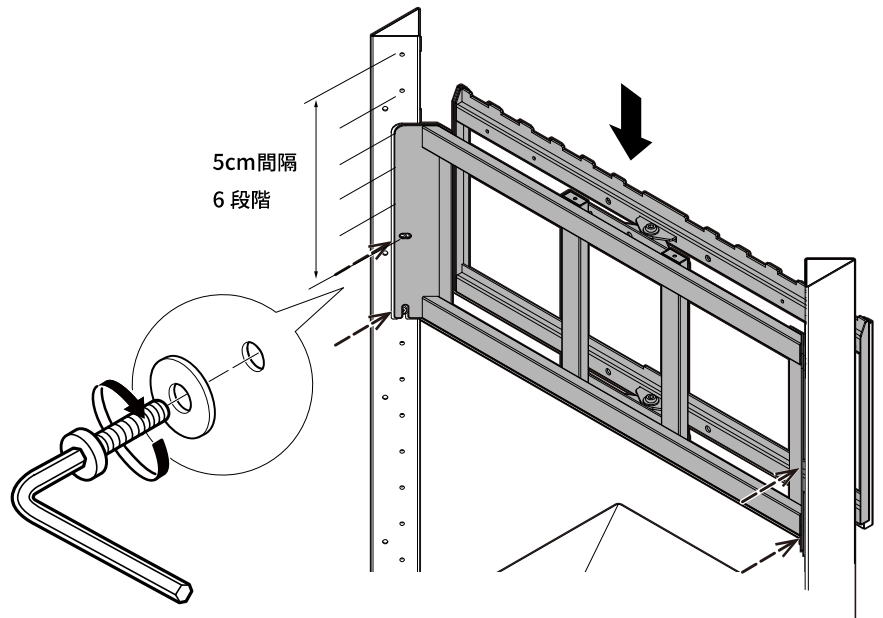


### STEP-4



支柱下部のネジを締める

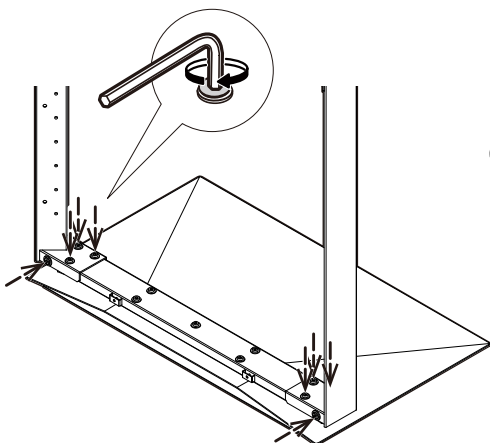

9

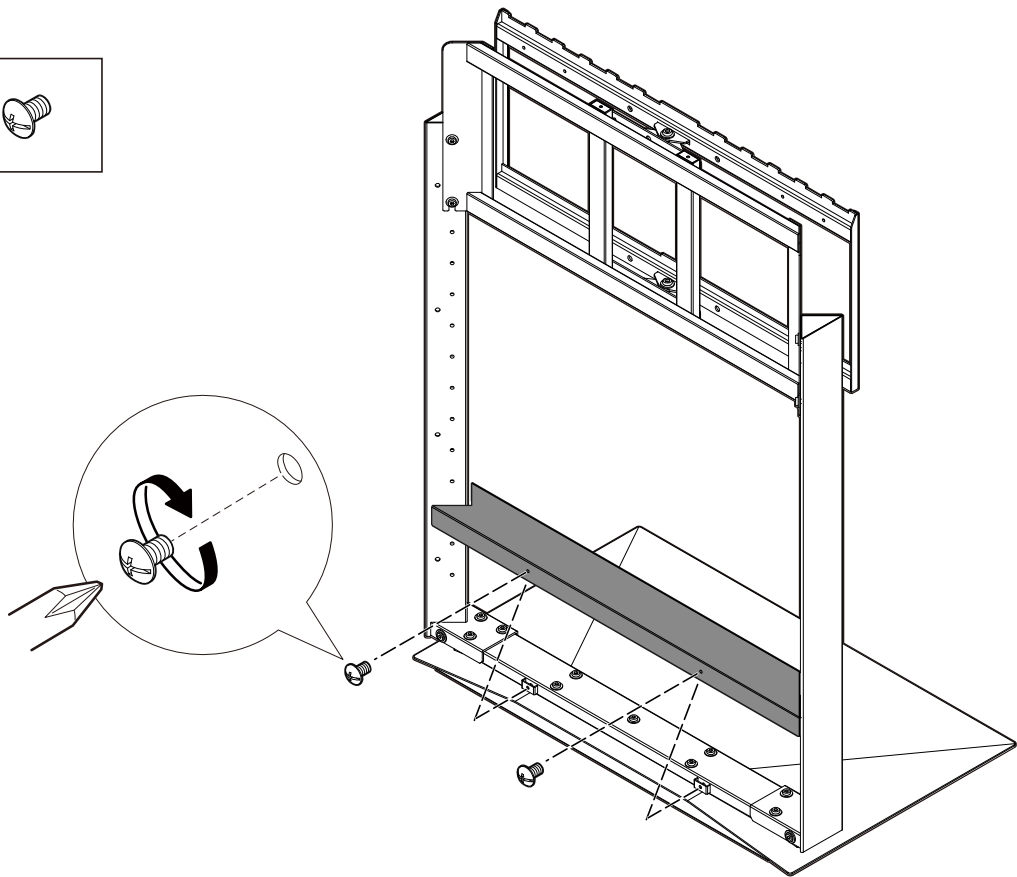





10

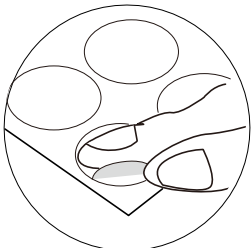

保護シール  
角度調整時、支柱にぶつかる  
箇所には2枚ずつ貼ってください。


Info

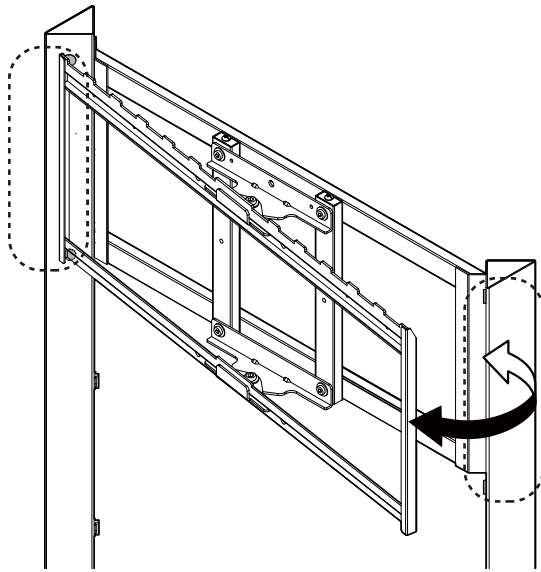

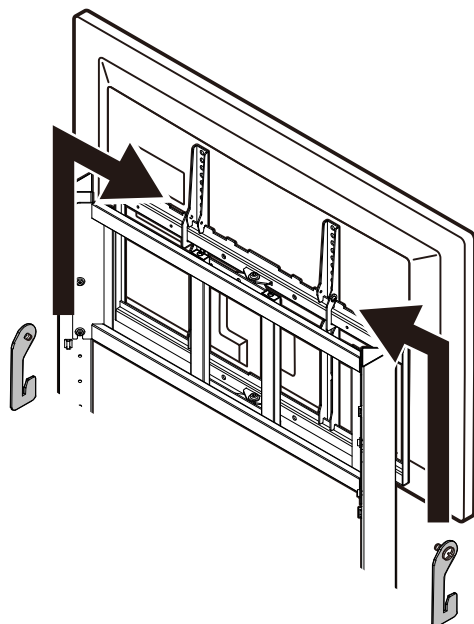




### STEP-1 準備

ネジに抜け止め用ワッシャーを取り付ける

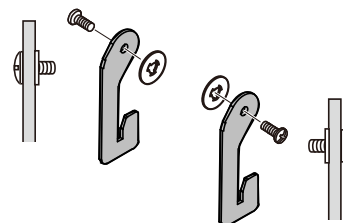


ネジの取り付け向き  
に注意し重ねる

### STEP-2 取り付け

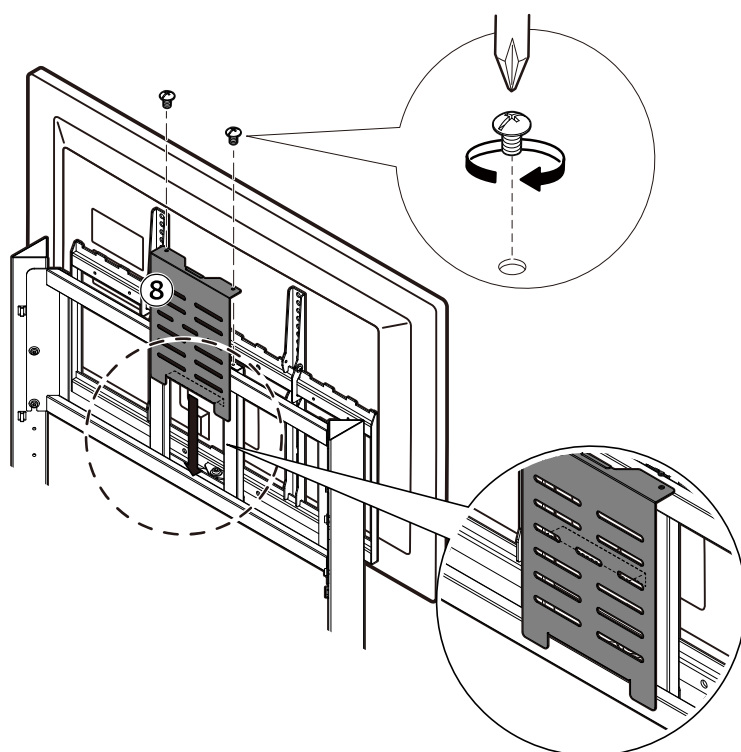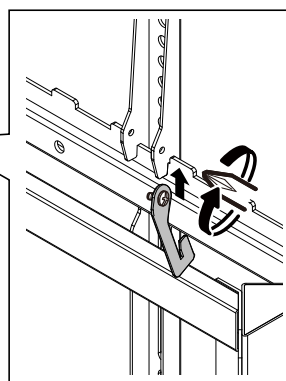


別売：専用 HDD ホルダーの取り付け

転倒防止ネジを利用してください。

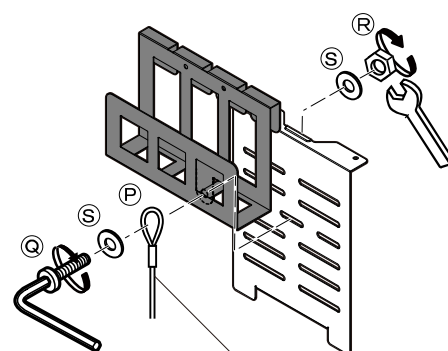

ワイヤーは必要に応じて  
取付けてください

P × 1	
Q × 1	
R × 1	
S × 2	
T × 1	 (小)
J × 1	 (細)

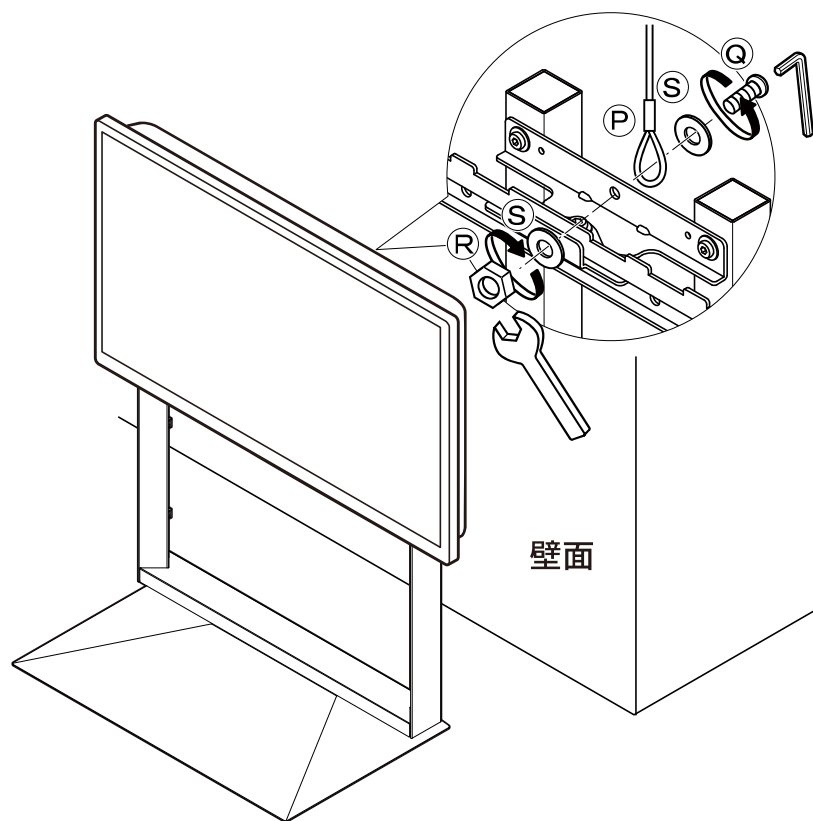

## 配線のまとめ方

### バンドホルダー


X	
---	--

### コードバンド

Y	
---	--

### コードカバー

Z	
---	--

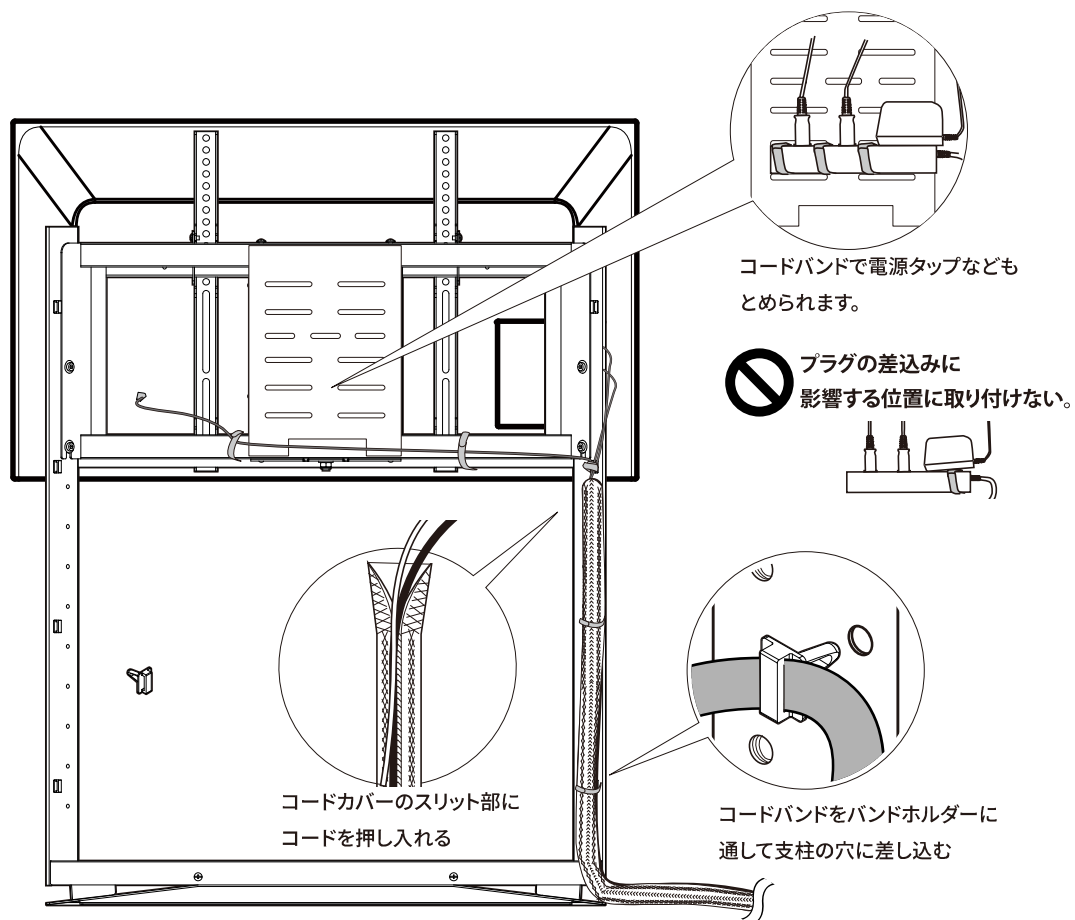

注意

- ・本製品の取り付けは、お子様の手の届かないところで実施してください。
- ・ケーブルはある程度、緩めに束ねてください。何重にも折り畳んで束ねたり、きつく束ねると束ねた部分が熱を持ち、埃や周辺のものに着火する恐れがあります。
- ・本来の用途以外に使用しないでください。


## 14 テレビスタンドを壁に寄せる

テレビ画面に直接触れずに柱の下部をもって壁に押しつ




注意

本製品は必ず安定した場所で  
壁に寄せた状態でご使用ください。  
動かす際には2人以上で行ってください。

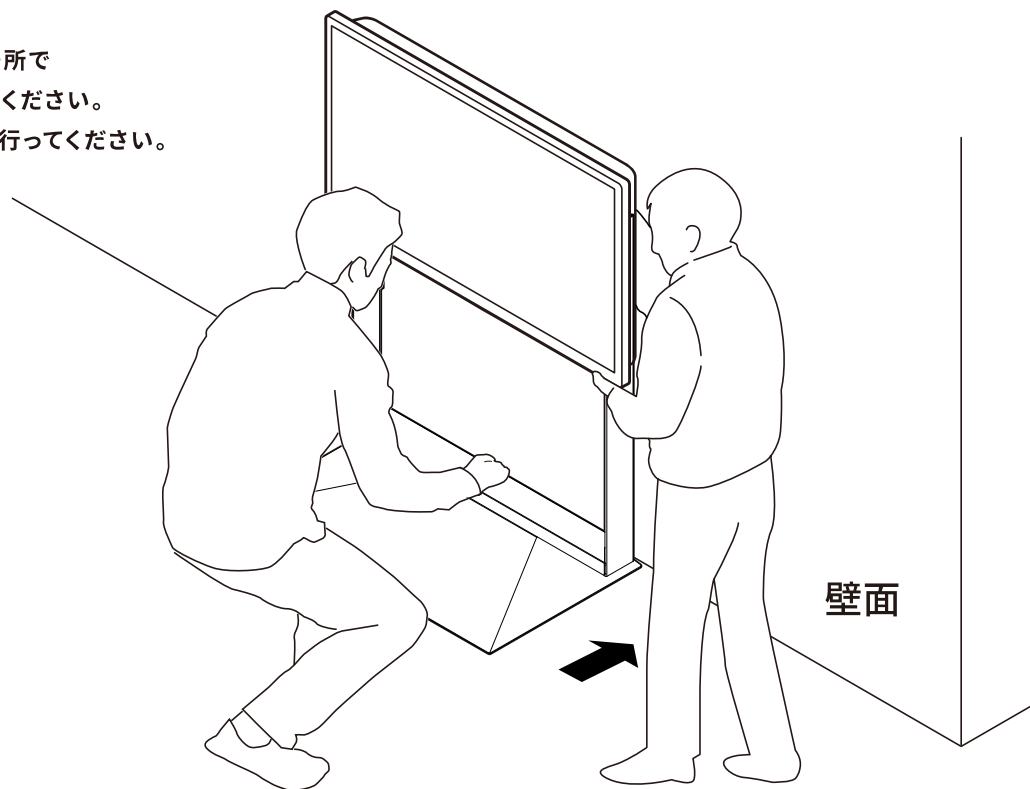

### 転倒防止の処置をする場合

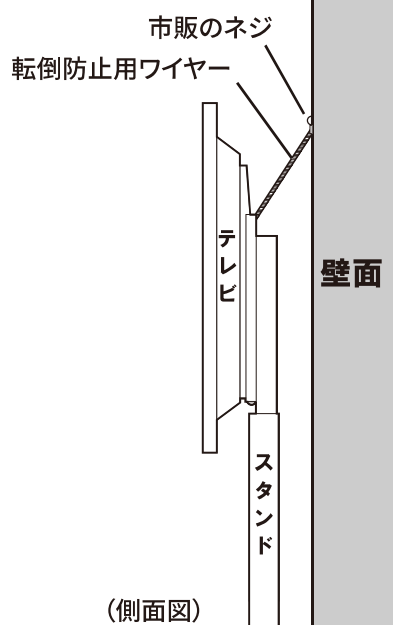

注意

壁に寄せた状態で設置し、ワイヤーを  
取り付けて転倒防止の処置を行う。

転倒防止ワイヤーは十分に強度のある壁面に  
取り付けてください。壁面の強度が低いと転倒  
防止機能をはたしません。


壁への取り付けには市販のネジを使用してくだ  
さい。

その際は、壁の材質により異なりますのでホーム  
センターなどで固定方法をご相談ください。

転倒防止ワイヤーはたるまないように設置して  
ください。ワイヤーがたるんだ状態ではスタン  
ドが転倒した際に過度の衝撃が加わり、ワイ  
ヤーが破損し転倒するおそれがあります。

## テレビの左右角度調整の方法


イラストの部分を持ち、ゆっくりと動かす

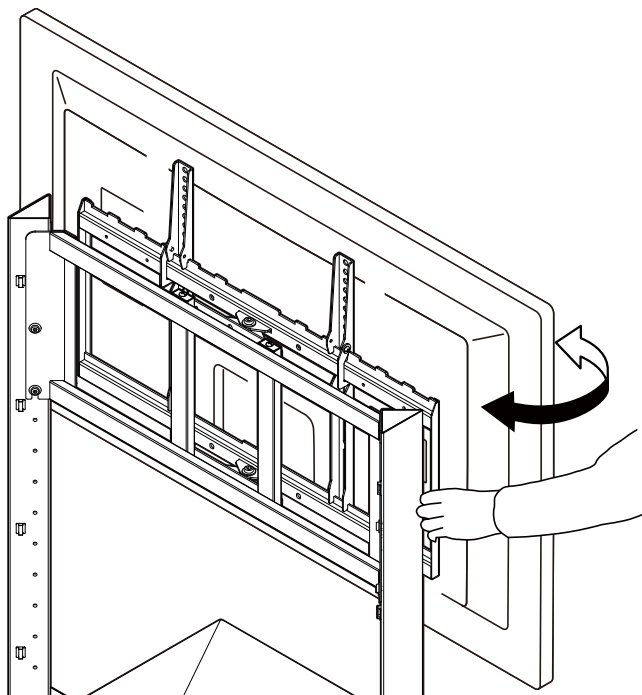

- ・可動部の隙間に手を入れないよう十分ご注意ください。
- ・テレビが壁や家財に当たらないように十分ご注意ください。
- ・特に小さいお子様がいるご家庭はご注意ください。

### 動きのかたさを調整したい場合


ナットを下から押さえて、上のネジを回して調整します。

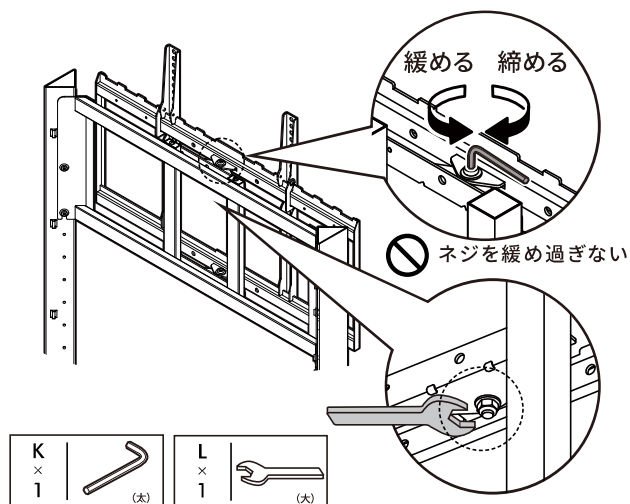


## 隙間の調整方法

床とベースの間に隙間が生じる場合は、下記のように調整してください。


- 1 テレビスタンドを仮置きする
- 2 指定位置のどちらかに家具安定板を差し込む

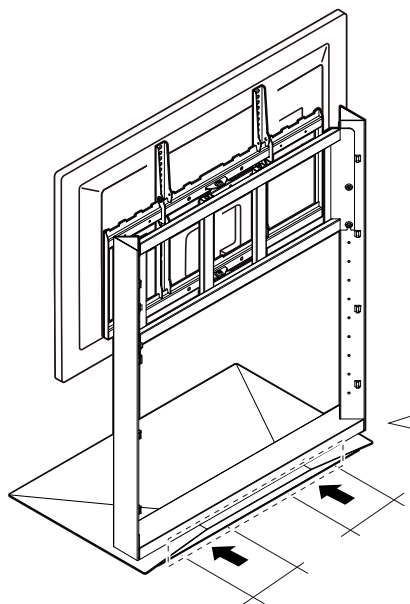

### 家具安定板について

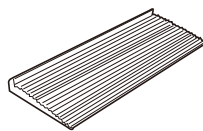


市販の家具安定板などの使用をおすすめします。床材に合ったものをご使用ください。  
ご購入の際は、EQUALSサイトからご購入いただけます。

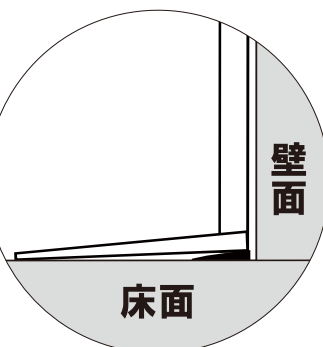


## テレビの傾き調整方法

テレビ取付金具のネジ穴とネジのあそびを利用して調整します。


調整前 ▶ 調整後

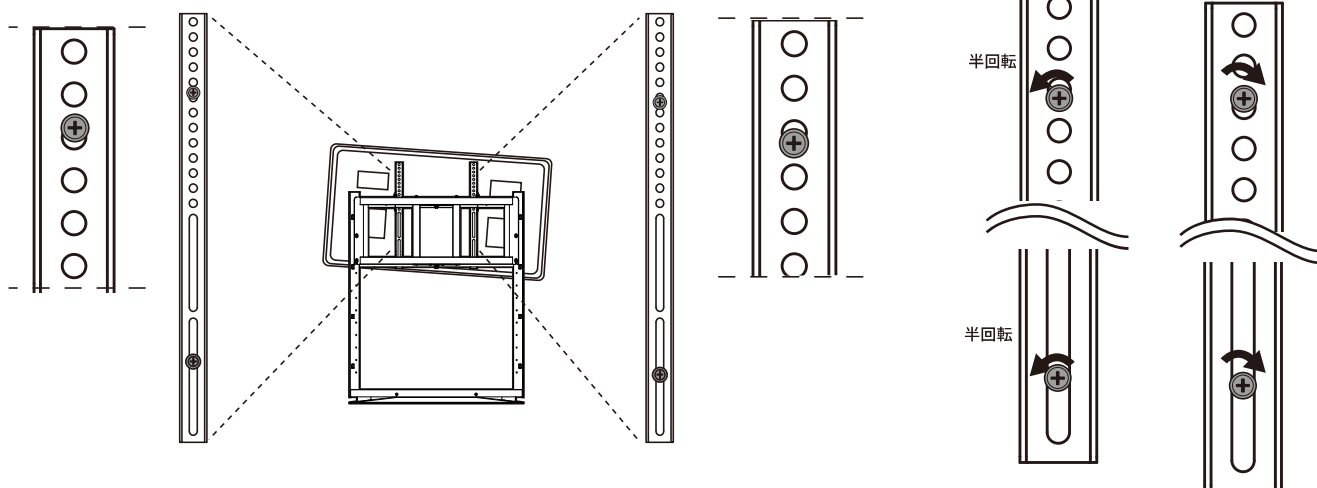

### 1. 上下のネジを緩める (片側の取付金具のみ)

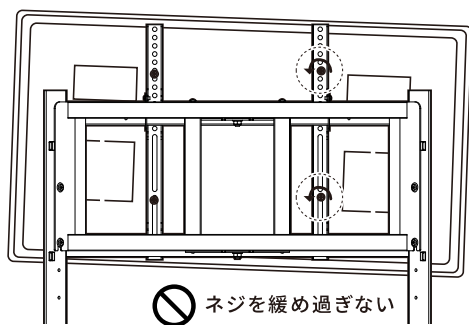

### 2. テレビが水平になるところで 保持した状態で、ネジを締める

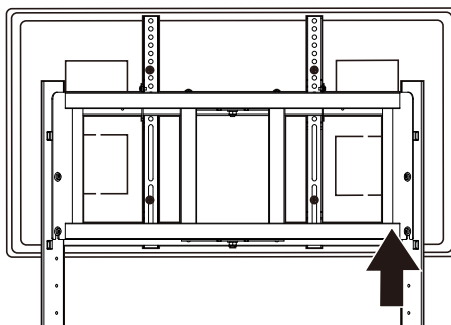

# WALL<sup>®</sup>

## WALL INTERIOR TV STAND

### — FRAMESTAND —

## Assembly Instructions [1st Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

## Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.



caution

· **THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.**

· **KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.**

· **THIS PRODUCT SHOULD NOT BE USED IN HOMES OR OTHER ENVIRONMENTS WITH SMALL CHILDREN WHO MAY ACCIDENTALLY TIP OVER THE STAND AND TV, UNLESS A WALL STRAP HAS BEEN INSTALLED TO HELP SECURE THE STAND AGAINST TIPPING OVER.**

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)  
under the planning and quality control of Nakamura Corporation of Japan.  
Some specifications may differ due to improvements for better quality.

---

Nakamura Co. Ltd.

Official brand site : <https://equals.tokyo/>

Contact us in English : [info-gl@nakamura-jpn.co.jp](mailto:info-gl@nakamura-jpn.co.jp)



## Be sure to check before assembling

**This product may not be used with certain TV models.**

**Be sure to check this product can be used with your TV before assembling, referring to the following.**

**Please note that colors may vary depending on the product due to differences in manufacturing batches and locations.**

### 1. Make sure that your TV meets all three of the following requirements

1-1. The size of the TV must be between 32" and 80"


1-2. The weight of the TV (excluding the stand) must be 88 lbs / 40kg or less

1-3. Written documentation from the TV's manufacturer says it is a wall-mounted TV\*

\*Some TVs do not support wall mounting, even if the back of the TV may appear to support it.


### 2. Check the back side of your TV

2-1. The spacing between the four screw holes meets the conditions A and B below

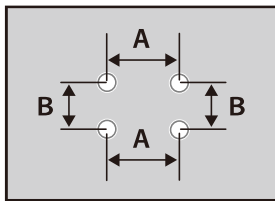


**A : Any of 10, 20, 30, 40, 50 or 60cm**

**B : Within the range of 10 - 40cm**

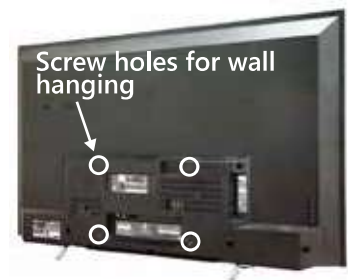


2-2. Satisfy all of the above conditions, and satisfy any one of the following


All 4 screw holes are on the raised part (shaded area) of the TV's back, or

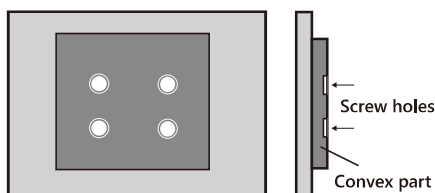

There is no raised part near the surface of the 4 screw holes, or

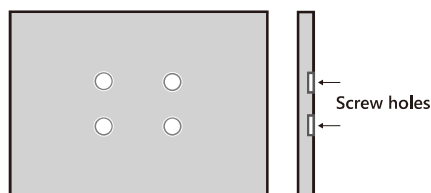


The difference in height between the raised part (shaded area) and the rest of the TV's back is 4cm or less (if the raised area is located below the 4 screw holes)

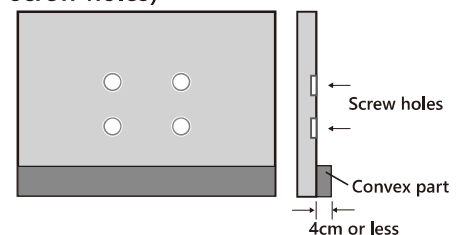


### The following TVs cannot be installed onto this product:


Less than all of the 4 screw holes are located on the raised part (shaded area) of the TV's back

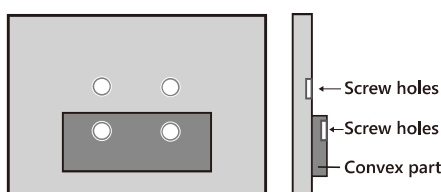



There is a raised part (shaded area) between the 4 screw holes

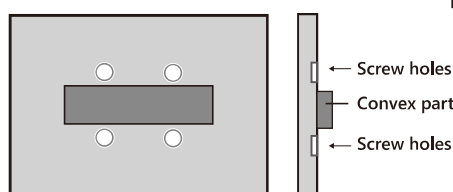

There is a difference of 4cm or more between the height of the raised part (shaded part) and the rest of the TV's back (if the raised part is located below the 4 screw holes)

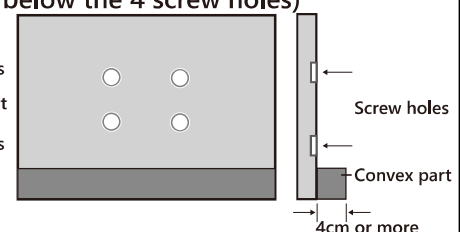


### 3. Precautions regarding load capacity and installation of shelf

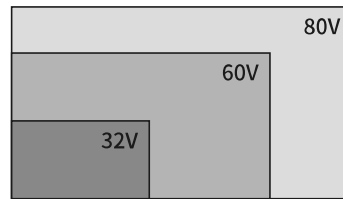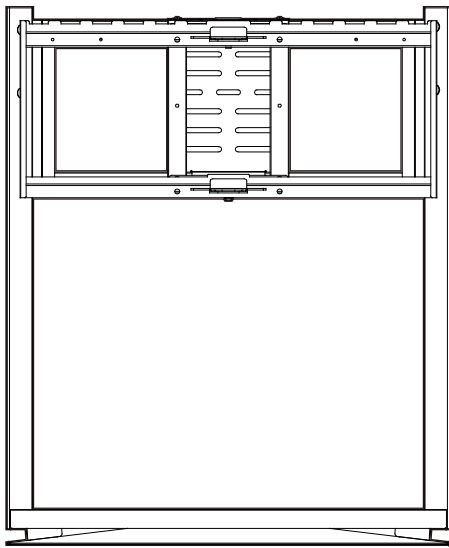

1. The weight of the TV (excluding the stand) must be **88 lbs / 40kg** or less.




2. The total weight that can be placed on all shelves is up to **33 lbs / 15kg**

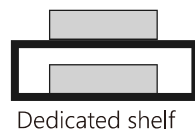


3. **Up to 1 shelf for each type of shelf** can be attached


#### Load capacity of each shelf

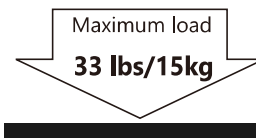


as of April 2025

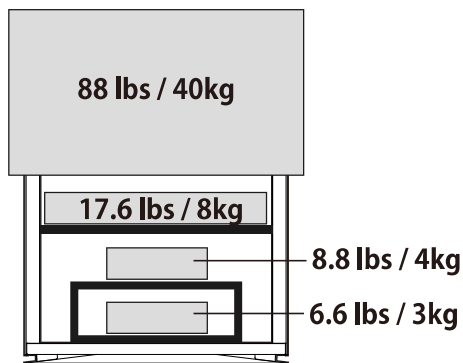


- The weight of the TV is **110 lbs / 50kg** or less with or without shelves

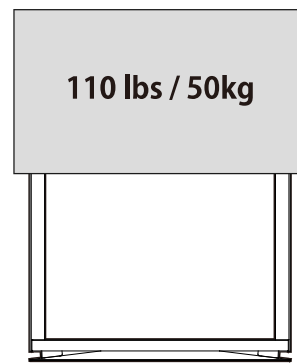

- The total weight on all shelves is no more than **33 lbs / 15kg**

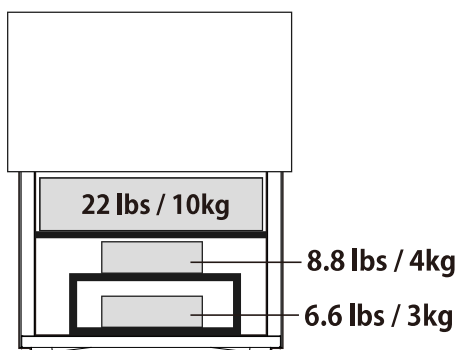

- Up to **1 shelf** cfor each type of shelf can be attached

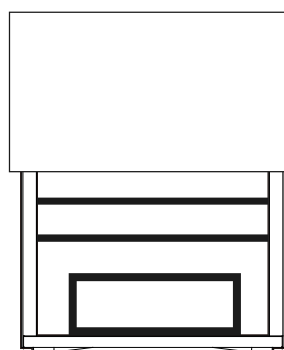


## Safety precautions

Failure to abide by the following advisories may result in personal injury or property damage:




**Securely tighten bolts and screws in place before installing the TV**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

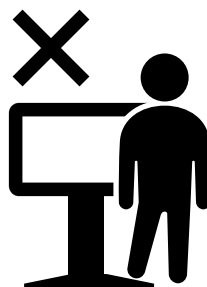


**Do not step on the base**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

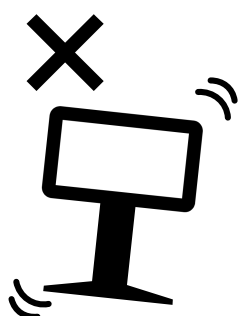


**Do not install the TV stand on a unstable place**

Install on a flat and stable place with sufficient load bearing strength. (Do not install on sloped or uneven surfaces, unstable surfaces such as carpets, or deformed surfaces)

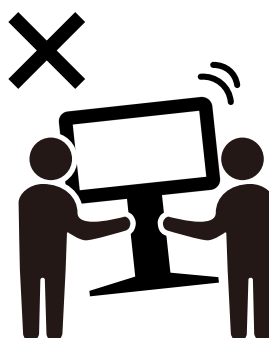


**Do not move the TV stand with the TV installed**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

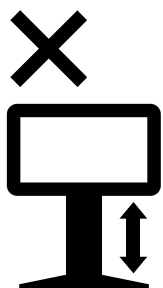


**Do not adjust the height with the TV installed**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

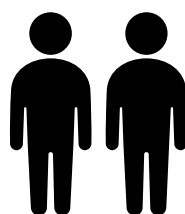

**Be sure that two or more persons assist in lifting, when moving the TV stand and installing or removing the TV**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

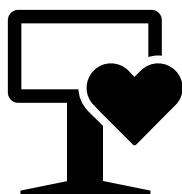

**Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard**

Refer to the instruction manual of the TV for how to hold the TV. And be careful when you move the TV stand with casters.



**Never allow children to climb, hang or move the TV stand and TV.**

The TV stand may fall over or pinch your toes, resulting in damage or injury.

There is a risk of tripping over cords, which could lead to the TV stand or TV falling, posing a danger of tripping for yourself and your family. Please exercise extra caution when using this in places with small children or elderly individuals.

Nakamura Co.Ltd. assumes no responsibility for damage or injury of any kind because of tripping over the stand and TV in case of an earthquake or accident.

## **1 Assembly and installation**

---

### **1-1. Causes of falls and damage**

Be sure to assemble and install on a stable and flat surface. Spread a thick cloth or cardboard over the workspace so as not to damage the floor or walls.

### **1-2. Causes of falls and damage**

Install the stand and TV close to the wall, attach a strap, and take measures to prevent it from tipping over.

### **1-3. Causes of discoloration and damage**

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or, air conditioning.

### **1-4. Cause of fire or malfunction**

If you block the ventilation holes of a flat-screen TV, heat may be trapped inside and cause a fire, so leave a sufficient distance from the wall.

### **1-5. Causes of fire and electric shock**

When installing or removing a flat-screen TV from this product, be sure to turn off the power switch of the flat-screen TV, unplug the power plug from the outlet, and disconnect external connection cords (such as the cord between the antenna and TV). Otherwise, the cord may be damaged, resulting in fire or electric shock.

## **2 During use**

---

### **2-1. Causes of falls, injury and damage**

Do not stand or hang on the product or use it for anything other than a TV stand.

Do not apply a concentrated load to the TV stand. (It may tilt).

When moving the product, always remove the TV and move it slowly by two or more persons.

### **2-2. Cause of injury**

Be careful not to pinch hands or fingers.

### **2-3. Causes of fire and discoloration**

Do not use near a fire or heat source such as a stove or heater.

### **2-4. Cause of odor**

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

## **3 Care and maintenance**

---

### **Causes of cracking, discoloration and deformation**

Do not wipe the surface with a damp cloth.

Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.

- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt, and wipe off any residual moisture with a dry cloth.

- Check the screws regularly and tighten them securely if they are loose. (Once a month)

# WILL® FRAMESTAND

WALL INTERIOR TV STAND

	SATIN WHITE	SATIN BLACK	WALNUT
<b>model number</b>	WLTV45111	WLTV45119	WLTV45238
<b>product ID</b>	D05000302	D05000303	D05000304
<b>size</b>	W76 D42 H87 - 112 cm		
<b>material</b>	steel		
<b>surface finish</b>	powder coating		
<b>weight</b>	41.8 lbs / 19kg		
<b>maximum load</b>	China		
<b>country of origin</b>	80" (88 lbs / 40kg equivalent)		

## INDEX

Assemble by two or more people  
Required tools : screwdriver (+)

**Assemble the TV stand** P.06~

---

**Prepare to install the TV** P.09~

---

**Install the TV to the TV stand** P.12~

---

**How to swivel the TV left or right** P.18~

---




**How to horizontally adjust the TV** P.19~


---

# Assemble the TV stand

Assembly time (approximate) 60~90min.

1

D × 4	 (small short)
E × 4	 (small)
J × 1	 (thin)

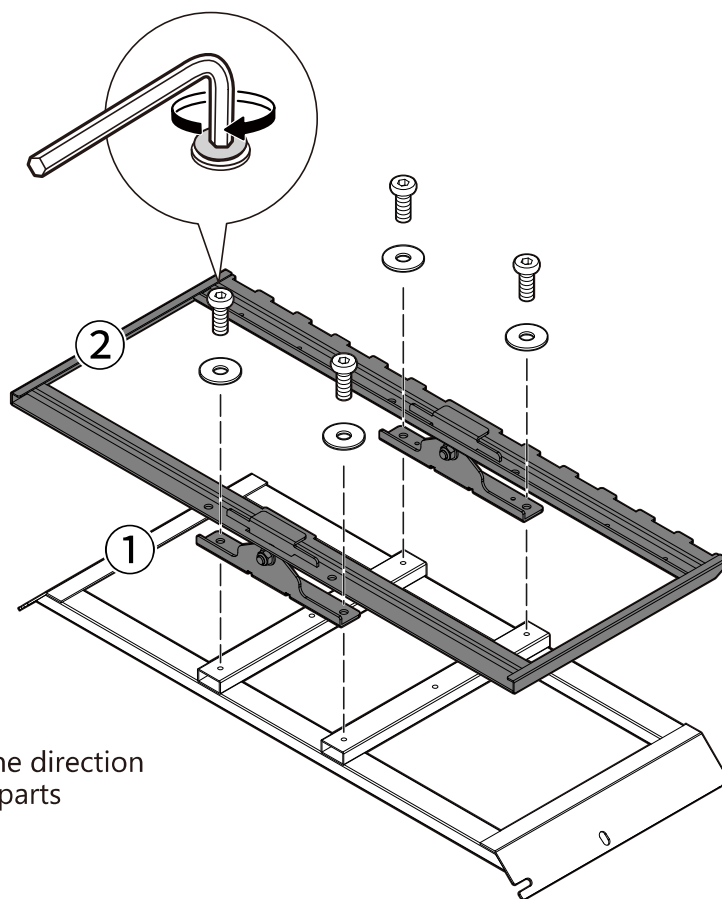


Check the direction of each parts




[Sold separately]


Installation of MULTI-DEVICE HOLDER

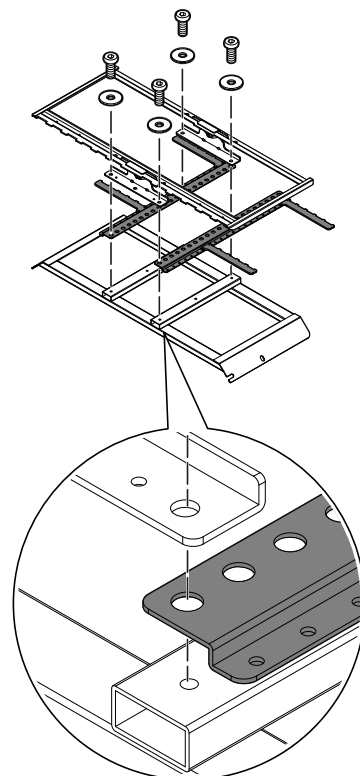Install it between ① and ② in this step.



2

A × 5	 (small long)
E × 5	 (small)
J × 1	 (thin)

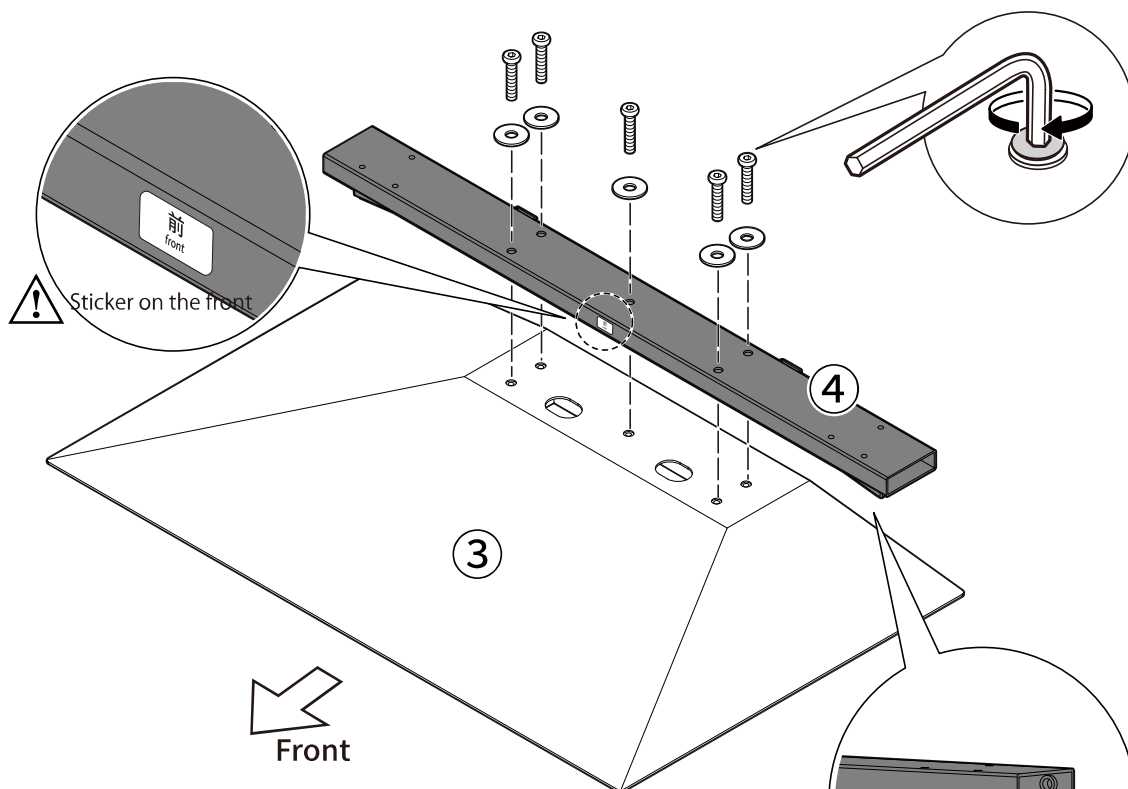


Sticker on the front





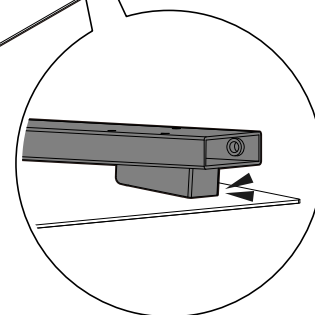


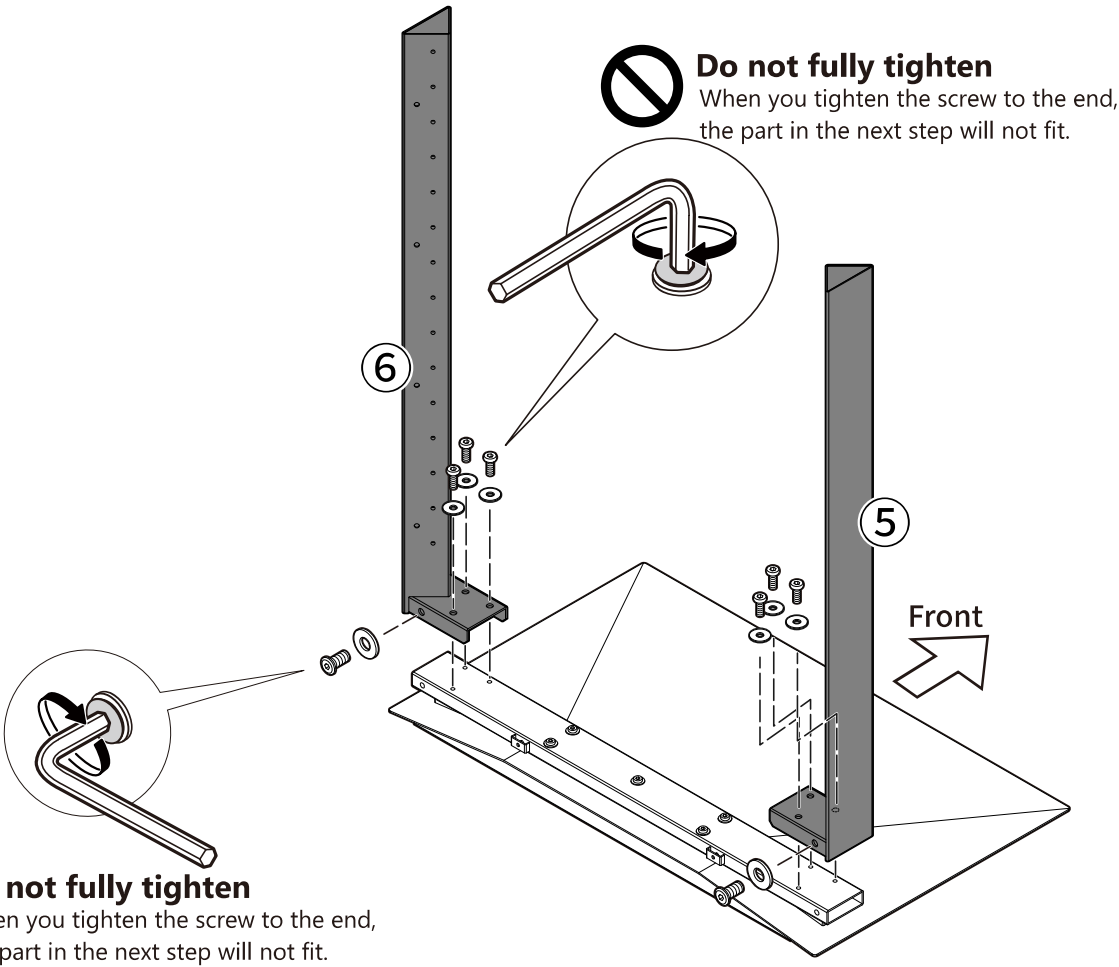
Point

Tighten the screws firmly to the end, although it comes in close contact with ③.






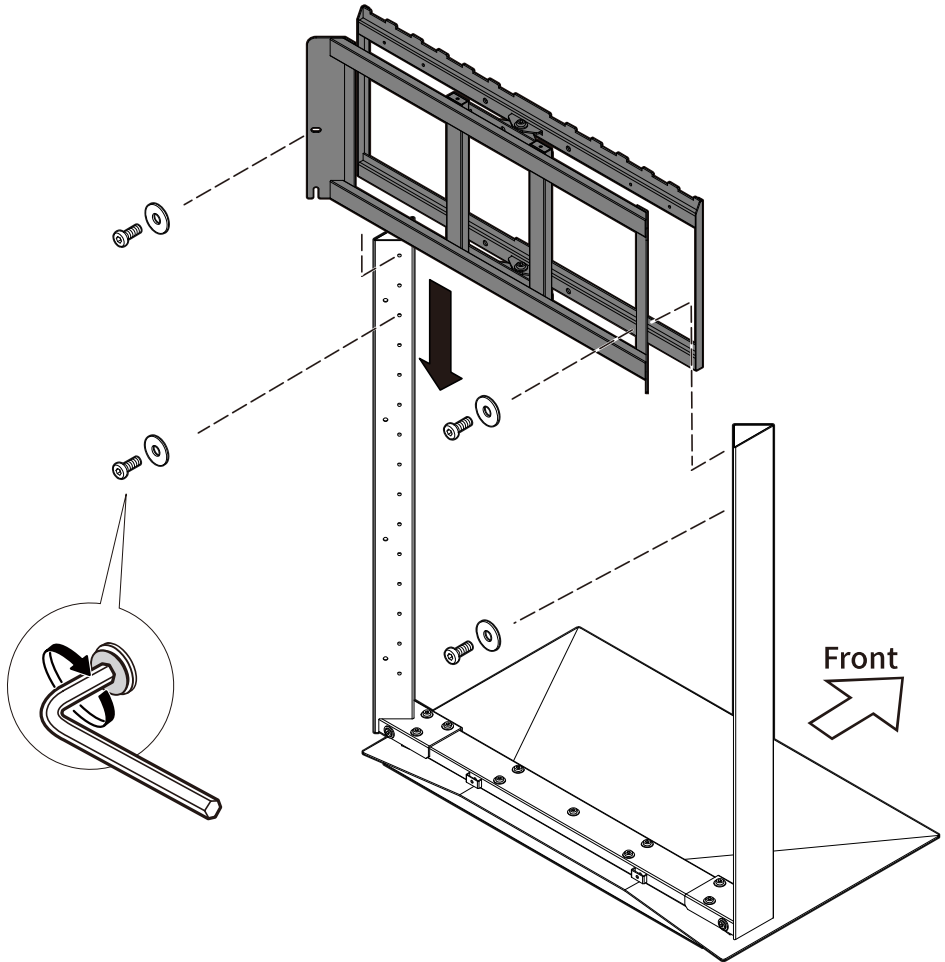
3

B × 2	 (large)
C × 2	 (large)
D × 6	 (small short)
E × 6	 (small)
J × 1	 (thin)





4


D × 4	 (small short)
E × 4	 (small)
J × 1	 (thin)



5

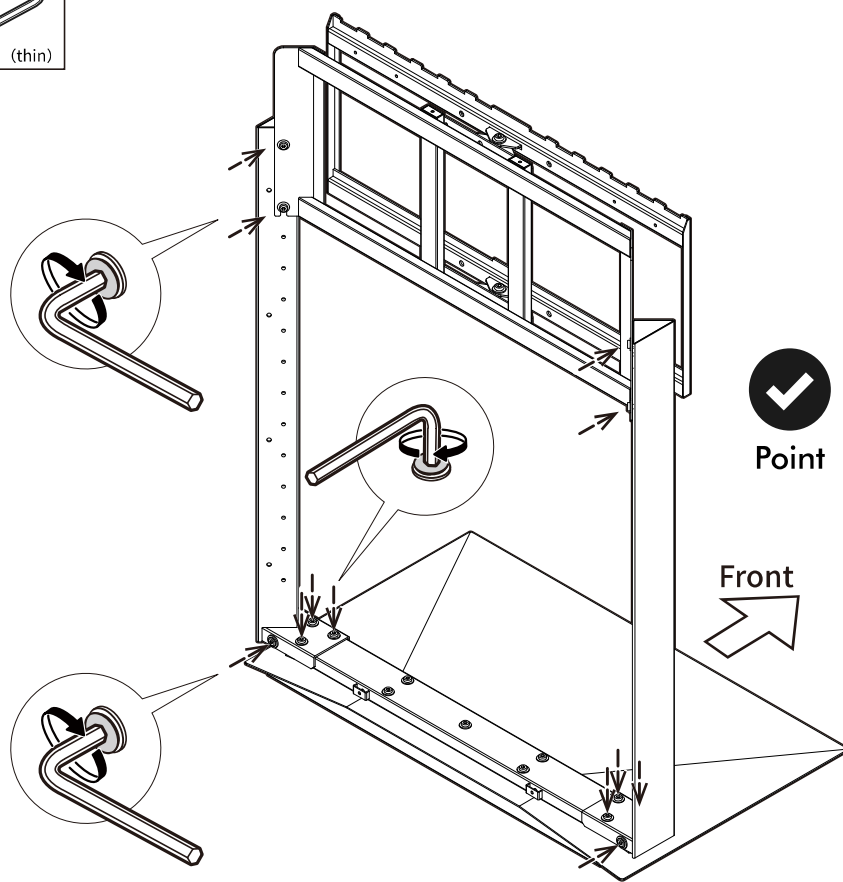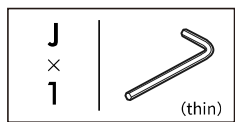

Tighten the twelve screws in order, a little at a time, until the end.

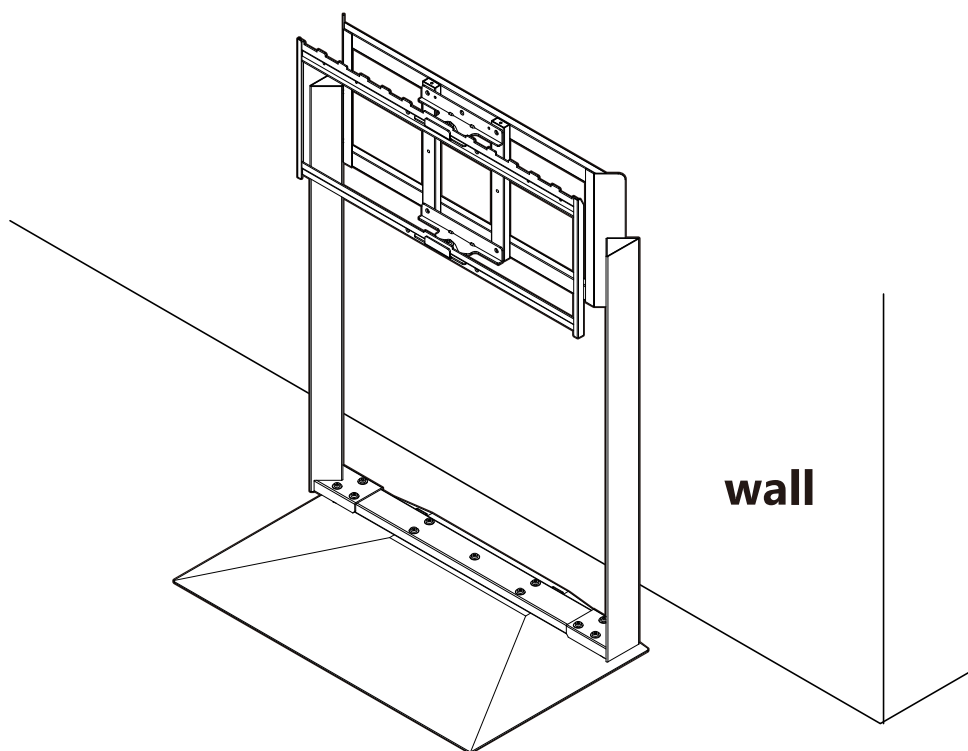




# Prepare to install the TV

## 1: Check the screw holes on the back of the TV

Please check the instruction manual of your TV to confirm the position of the mounting screw holes for wall-mounting brackets.



It is designed so that it can be attached to various TVs. Please install it according to the installation method that suits your TV. Some TVs recommend a dedicated mounting method, so please check the TV wall-mounted design manual.

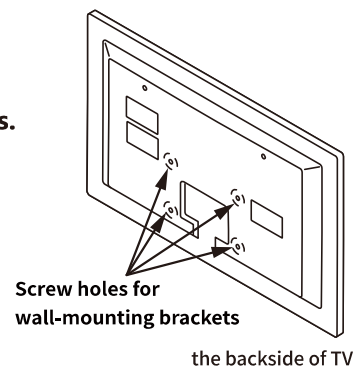


## 2: Check the shape on the back of the TV

The shape of the back of the TV determines whether or not the spacer is used.

spacer (large)





spacer (small)






### Flat back shape

The TV mounting bracket can be attached vertically to the TV.

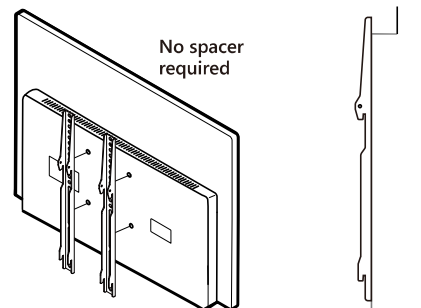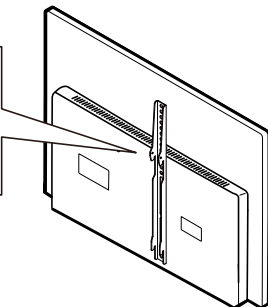




### Top of back is slanted

When you try to attach the mounting bracket, it attaches diagonally.

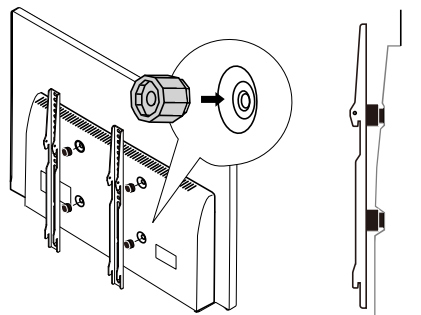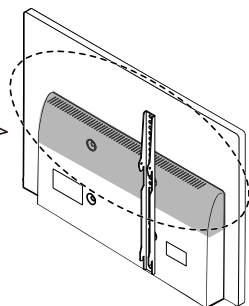




### Bottom of back is protruding

To avoid sliding, do not put two screws into the two long holes at the same time.

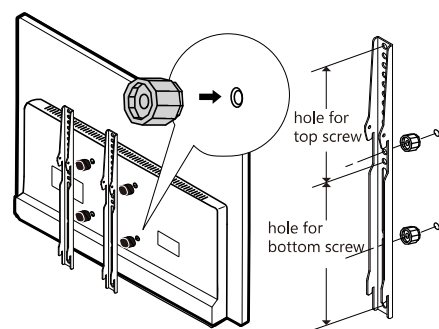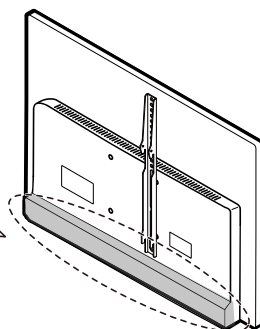





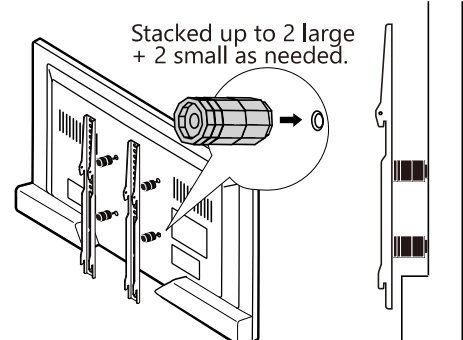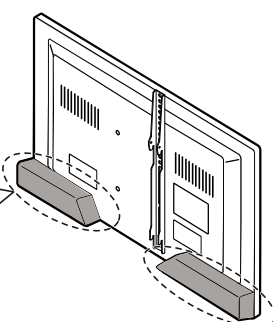

### Bottom of back is protruding partially

If there is a step, use a spacer. It may interfere with the stand body.




### 3: Check the diameter of the screw holes

**Use the best screws and washers among parts "M""N""O", as different TVs have different screw sizes**

<p><b>M</b></p> <div style="text-align: center;">    <small>(small)</small> </div> <div style="text-align: right;"> <math>\times 4</math> </div> <hr/> <div style="text-align: center;">    <small>(15,25,35mm)</small> </div> <div style="text-align: right;"> <math>\times 4</math> each         </div>	<p><b>N</b></p> <div style="text-align: center;">    <small>(medium)</small> </div> <div style="text-align: right;"> <math>\times 4</math> </div> <hr/> <div style="text-align: center;">    <small>(15,25,35,45,55mm)</small> </div> <div style="text-align: right;"> <math>\times 4</math> each         </div>	<p><b>O</b></p> <div style="text-align: center;">    <small>(large)</small> </div> <div style="text-align: right;"> <math>\times 4</math> </div> <hr/> <div style="text-align: center;">    <small>(15,25,35,45mm)</small> </div> <div style="text-align: right;"> <math>\times 4</math> each         </div>
---	--	--

**Screw diameter** Try to put a screw in

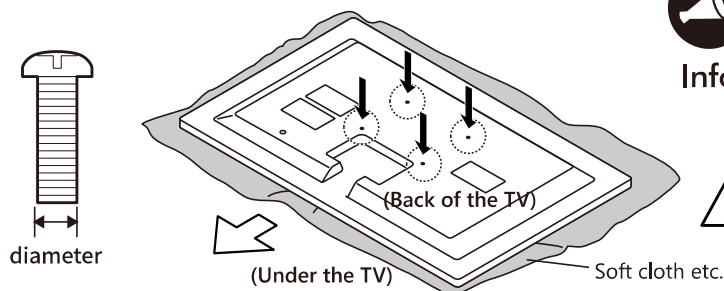

If the diameter or the length of the screws does not match, please purchase.



## Info

e.g. 5mm diameter, 15mm length --> M5 x 15mm  
Please select "truss screws" or "pan screws"




To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.  
Do not install the screw yet.

**Screw length** Measure the depth of the screw hole

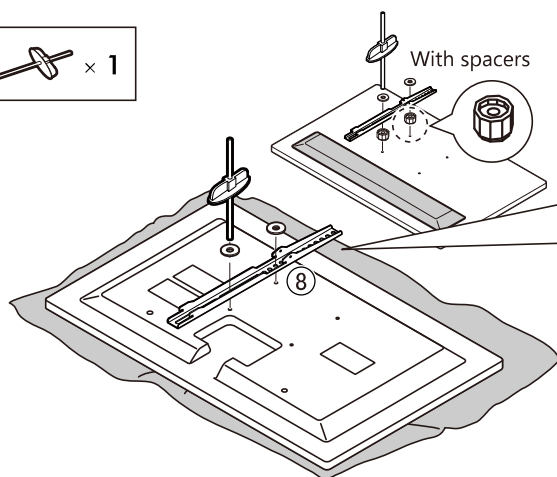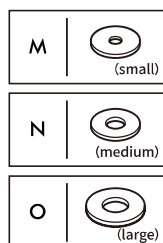


With spacers


Insert the measurement tool instead of a screw to measure the required screw length.

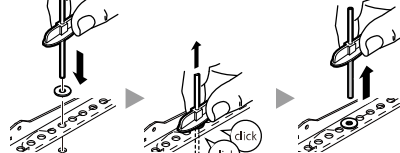


## How to reset the tool

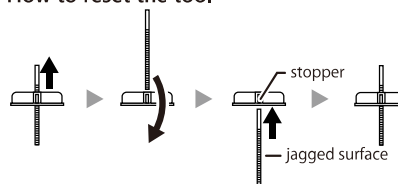


### Choose the screw of the required length

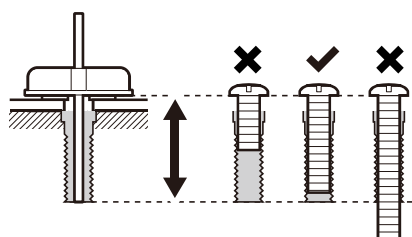

**X** screw is shallow


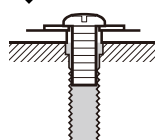


**X** screw is too long

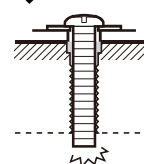


There is no problem if the screw is hooked 5 turns or more.


**If you can't find a screw of the required length, use spacer(small) to adjust the screw length.**

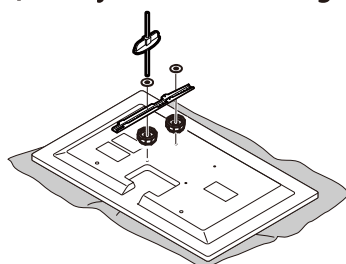



### Before adjustment

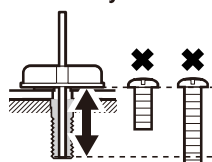


**After adjustment**

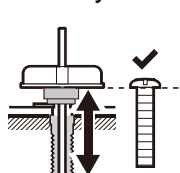


combination with the spacers

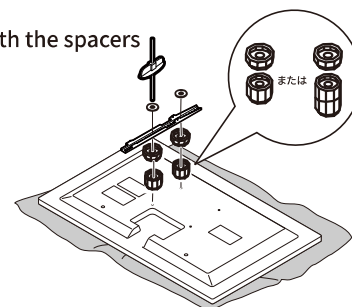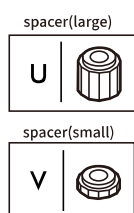


### Before adjustment

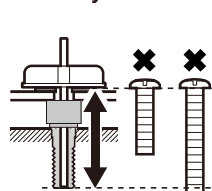


**After adjustment**

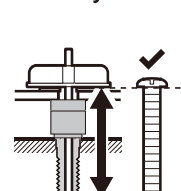

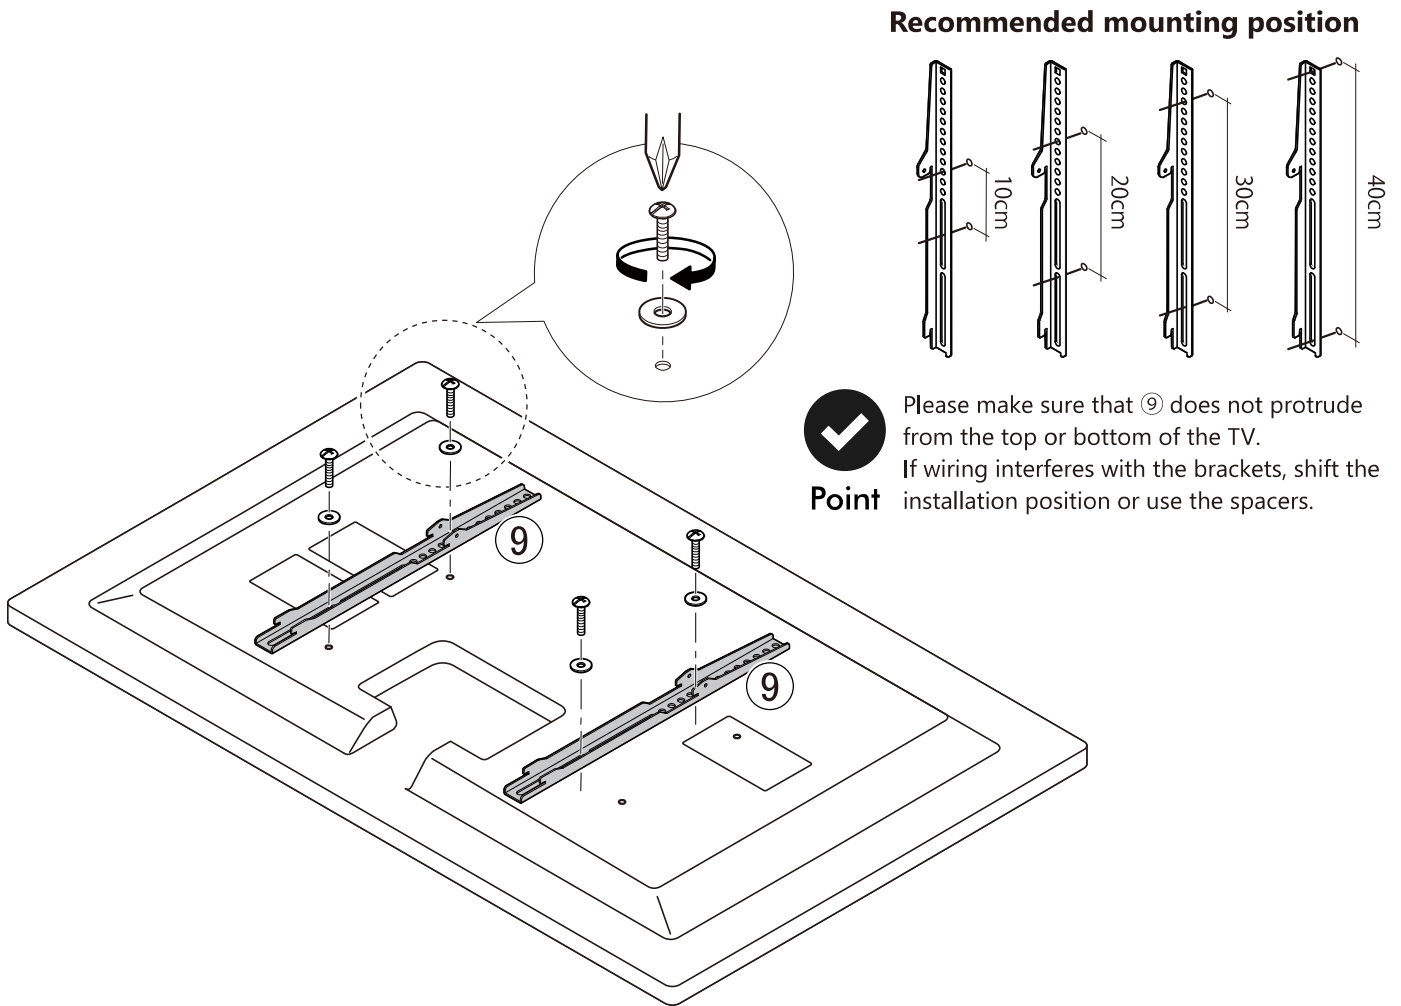

## In cases like this .....

**There is a screw hole in the protrusion and the bracket does not fit well.**

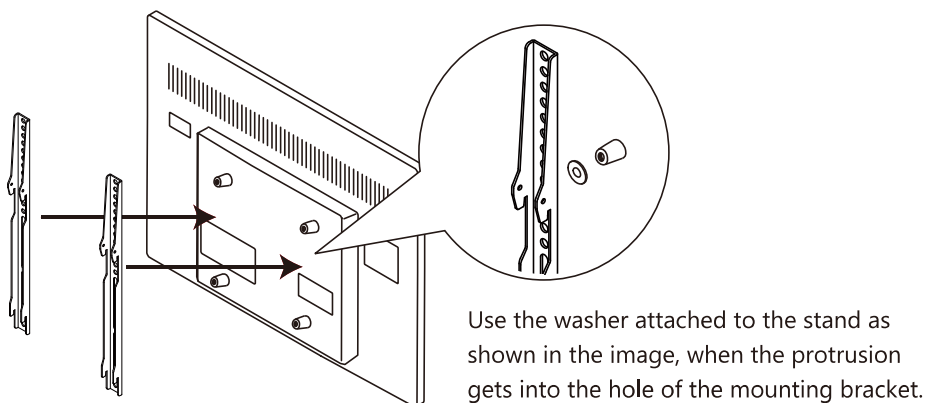


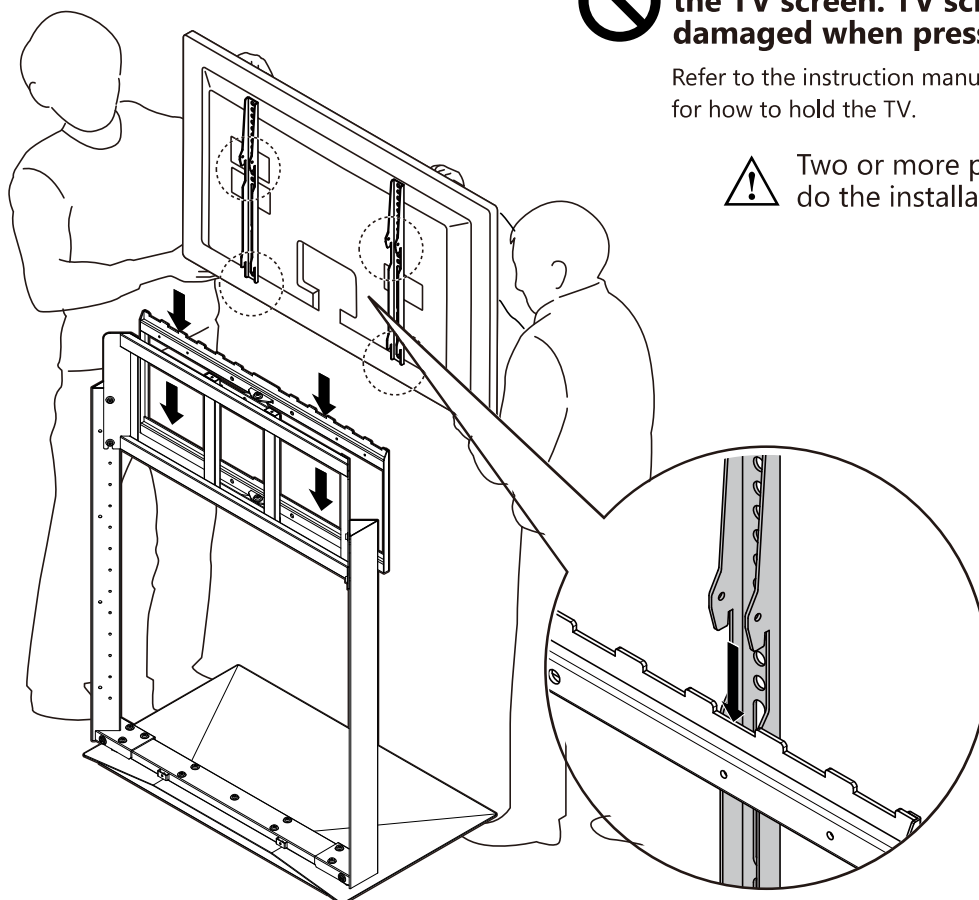
# Install the TV to the TV stand

7

 **Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard.**

Refer to the instruction manual of the TV for how to hold the TV.

 **Two or more persons do the installation**





## Determine the installation height of the TV

The height can be adjusted by 5 cm down to by changing the screw fastening position of ①.





When changing the height, please remove the TV and make the adjustment.

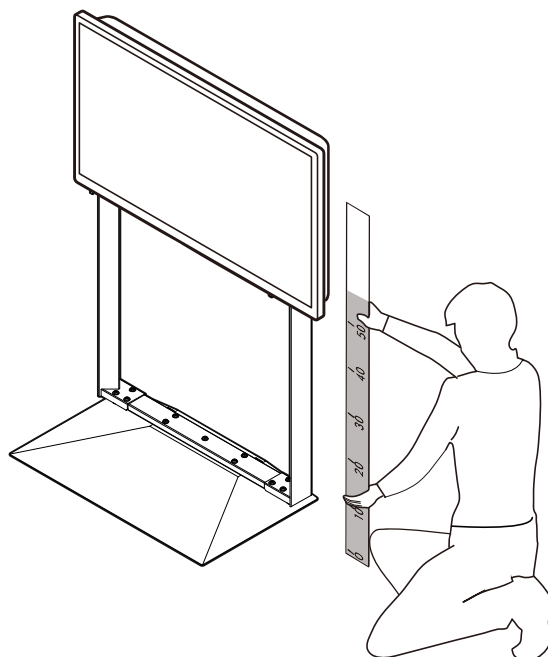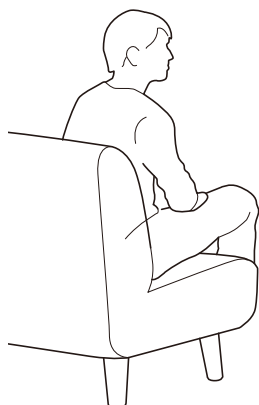

## 8 Assemble the TV stand to the determined height


### STEP-1

Loosen the screws  
at the bottom of the post

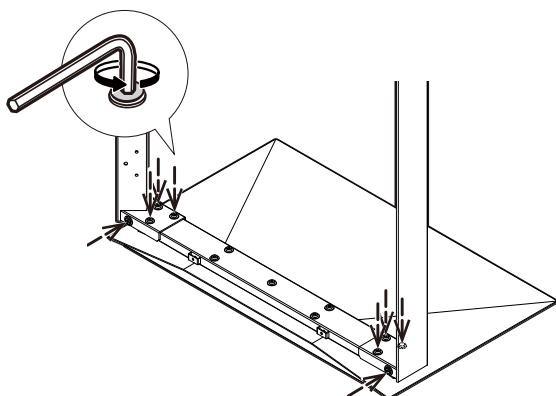


### STEP-2

Loosen the screws and remove the frame

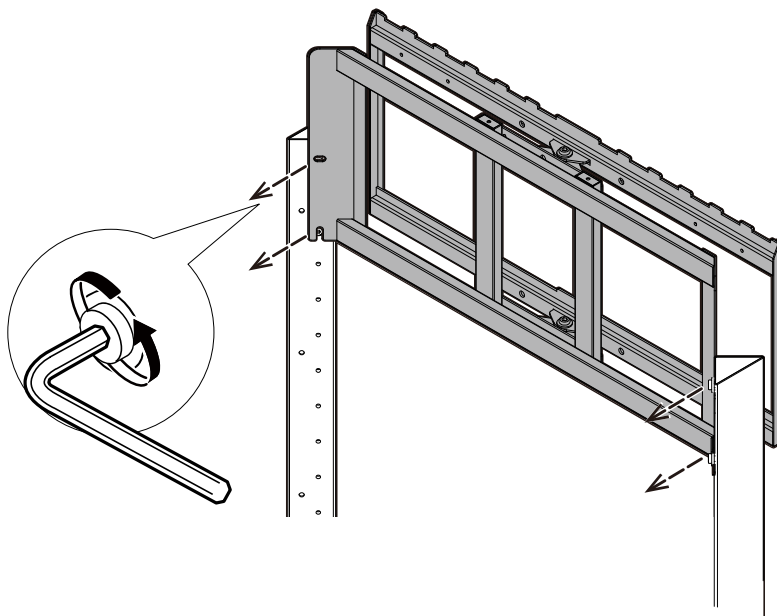


### STEP-3

Tighten the screws and attach the frame

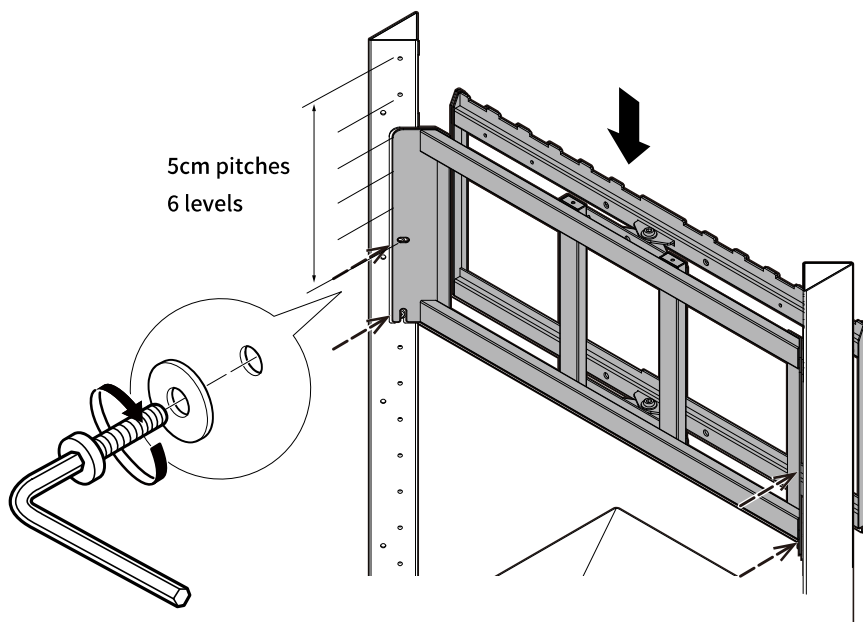


### STEP-4

Tighten the screws  
at the bottom of the post

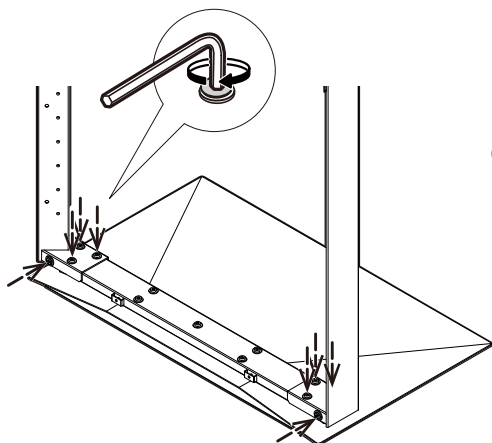



9

H  
×  
2

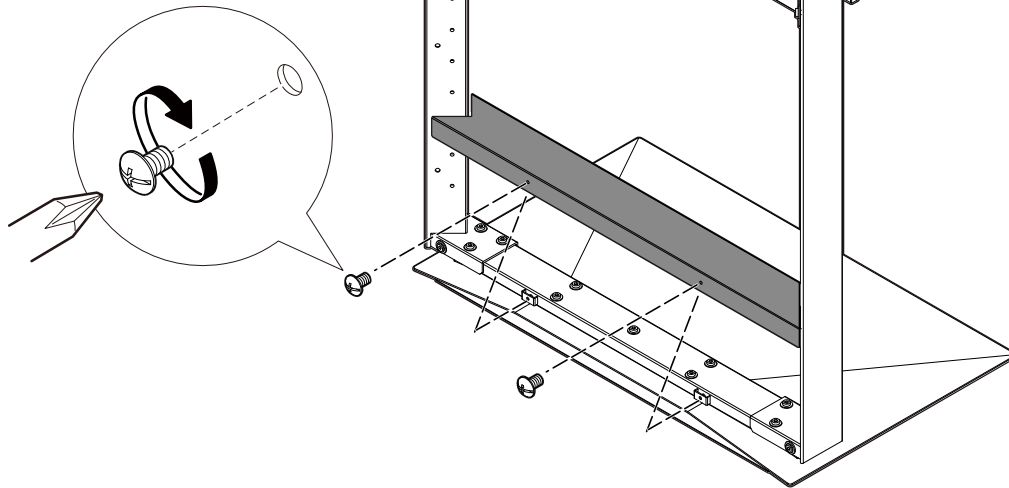


10


W

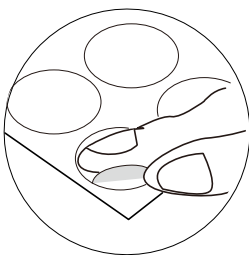

**Info**


Protection stickers  
Put two stickers on each side  
where it will hit the pillar when  
adjusting the angle.

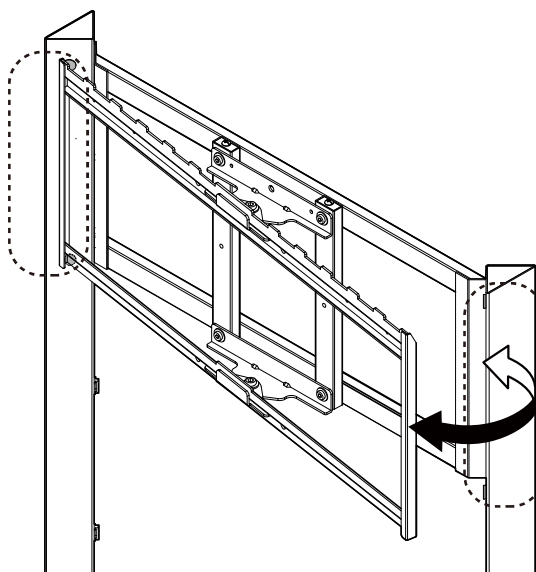


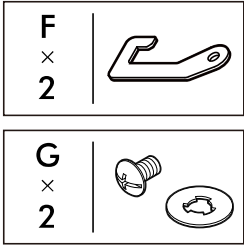


### STEP-1 Preparation

Attach a retaining washer to the screw

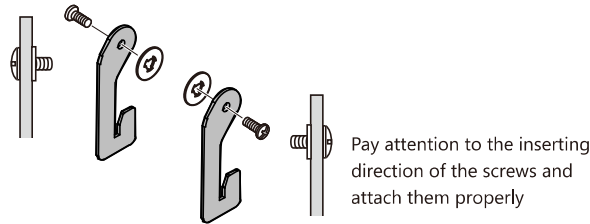


### STEP-2 Installation

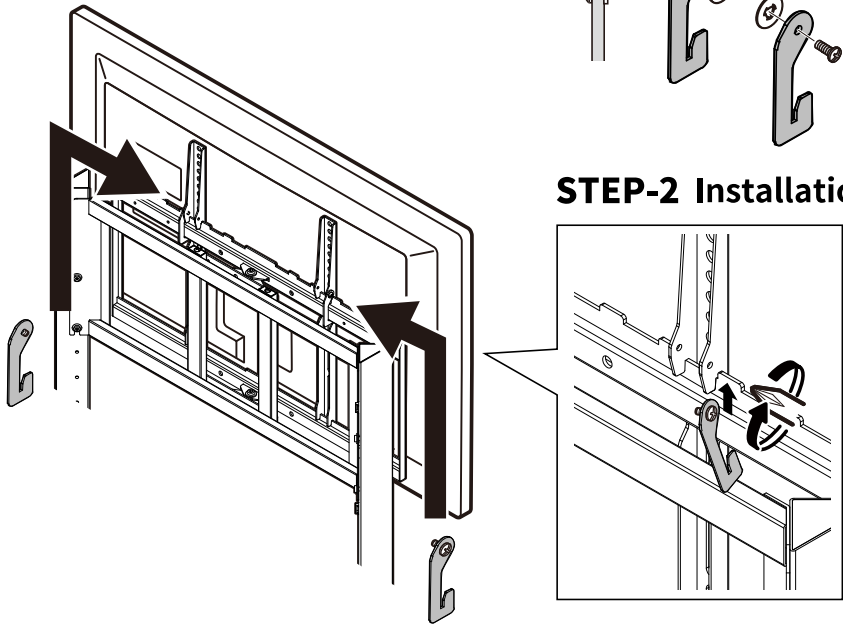







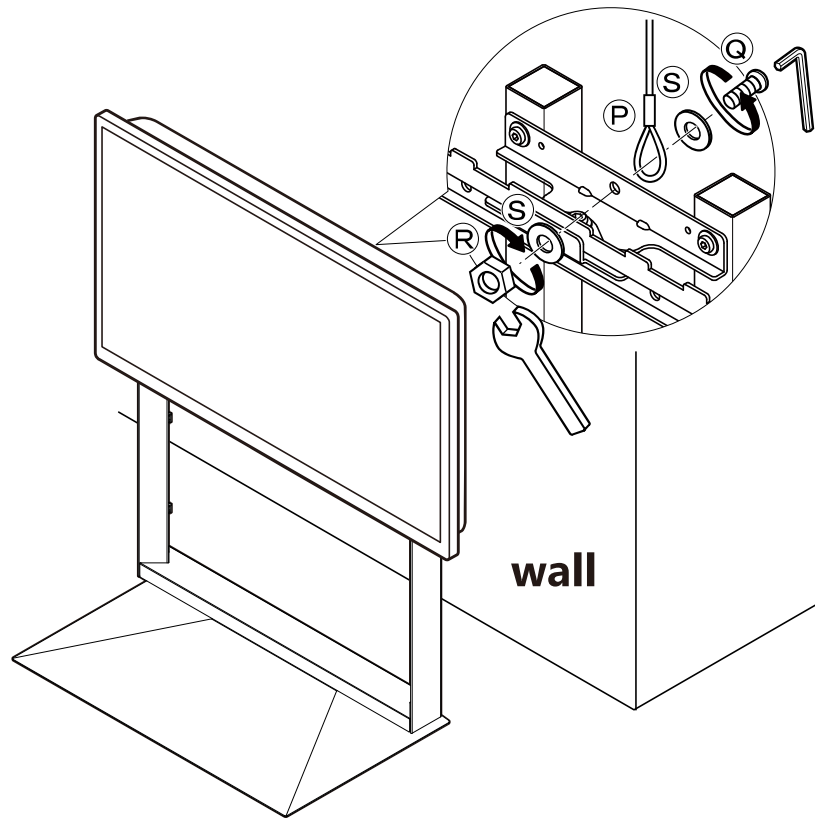
### [Sold separately] Installation of HDD HOLDER

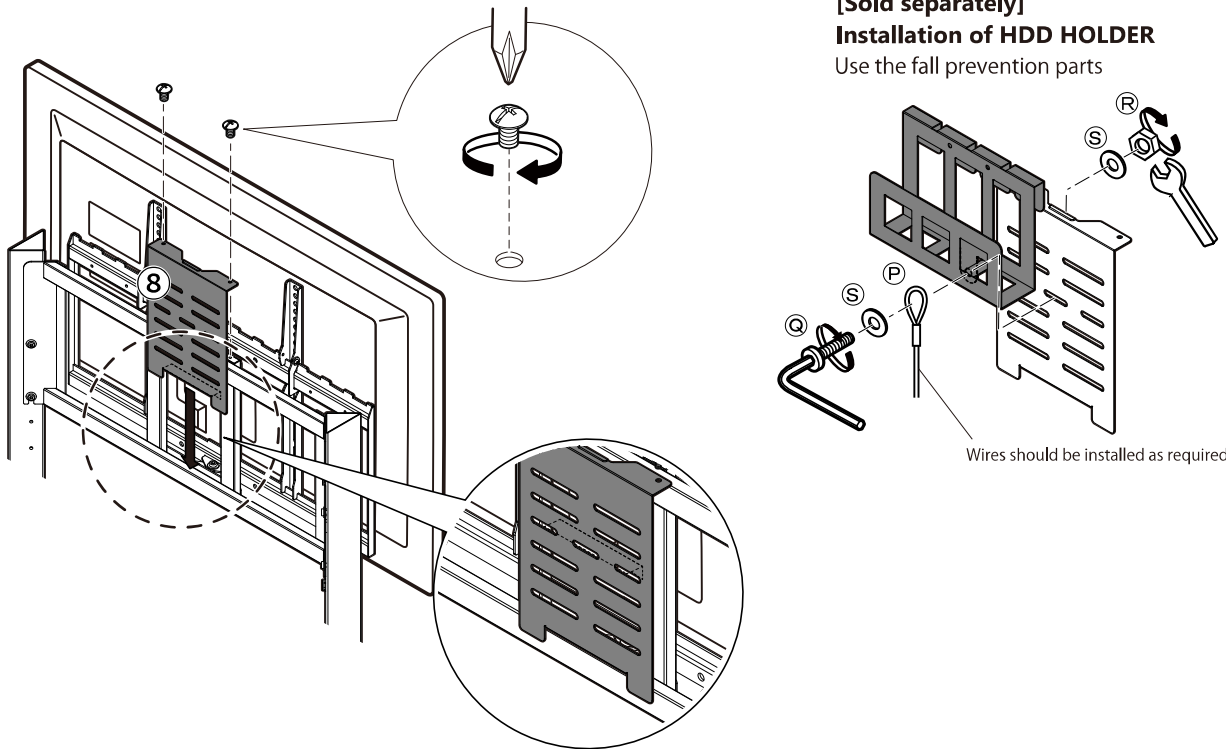Use the fall prevention parts






P × 1	
Q × 1	
R × 1	
S × 2	
T × 1	 (small)
J × 1	 (thin)




## How to organize cables


band holder




cord band



cord cover

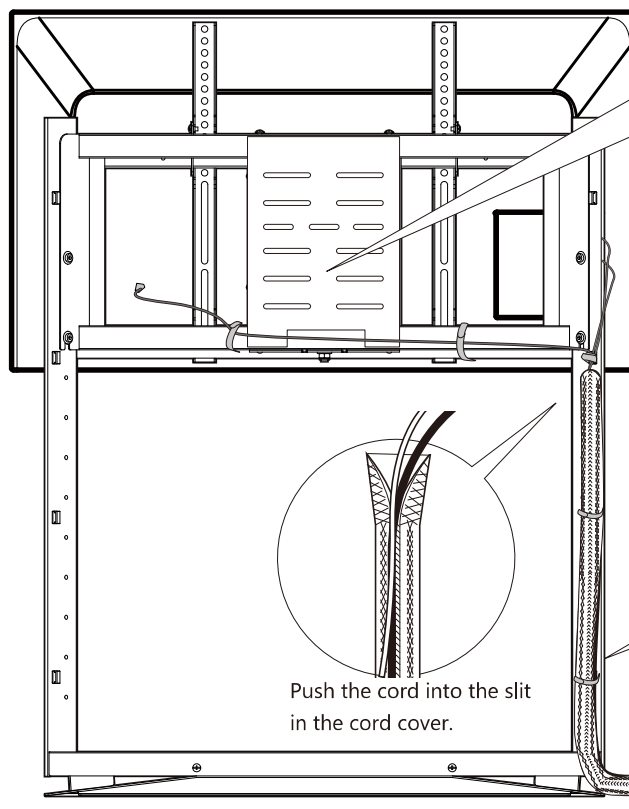



Push the cord into the slit in the cord cover.

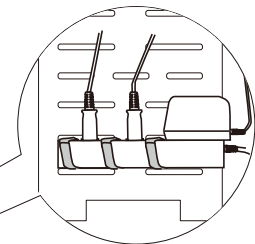

Cord bands can be used to secure power strips, etc.



Do not install in a position that affects plug insertion.

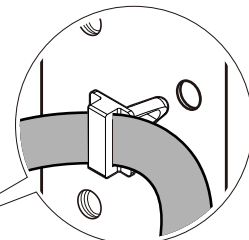

Insert the cord band through the band holder and into the hole in the post.



- Please keep children out of reach when installing these parts.
- Bundle the cables loosely to some extent.
- Folding the cables into multiple layers or bundling them too tightly may cause the bundled parts to heat up and ignite dust or other objects in the vicinity.
- Do not use them for purposes other than their original use.




## 14 Bring the TV stand to the wall

Press the TV stand against the wall with the bottom of the stand without touching the TV screen directly



Be sure to install this product in a stable place and bring it to the wall. When moving it, two or more people should do so.

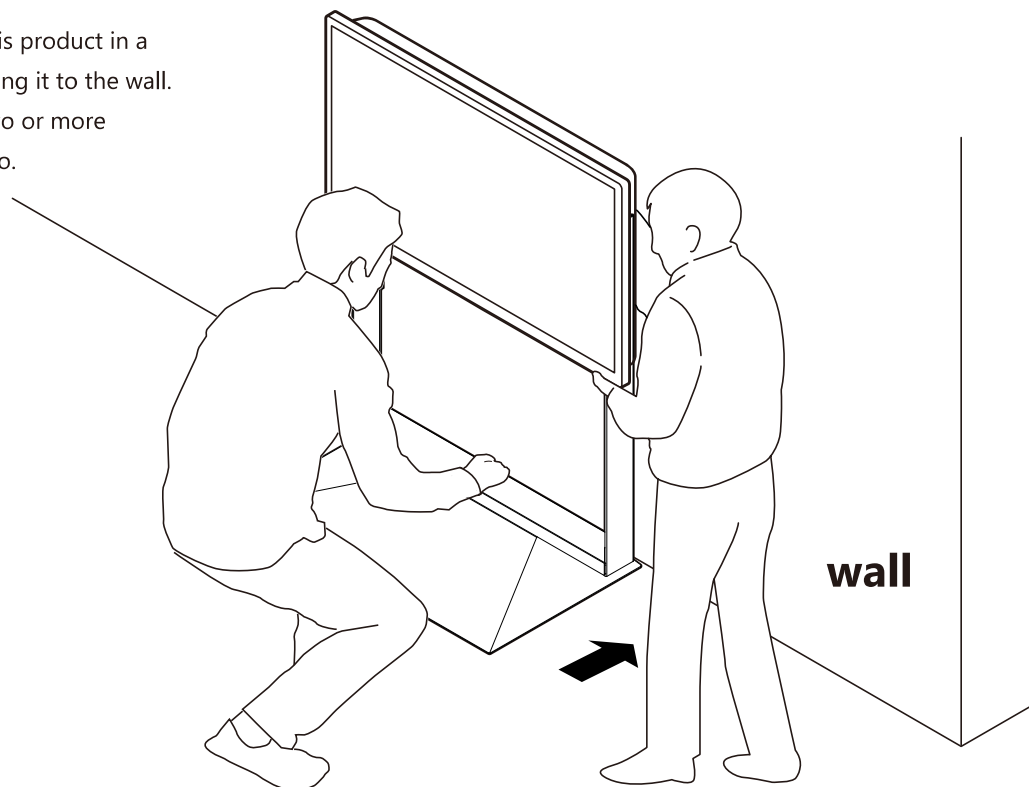

## Measures to prevent falls




### caution

**Install the TV and stand close to the wall and attach a strap to prevent the stand from tipping over**

Attach the fall prevention strap to a sufficiently strong wall surface. If the wall strength is low, the strap will not function as a fall prevention function.


Use commercially available screws for wall mounting. The necessary screws depend on the material of the wall, so please consult a hardware supplier or installation expert on the correct fastening method.

Install the fall prevention strap so that it does not sag. If the strap is slack, this will increase the force of impact when the stand falls, and the strap may be damaged and fall.

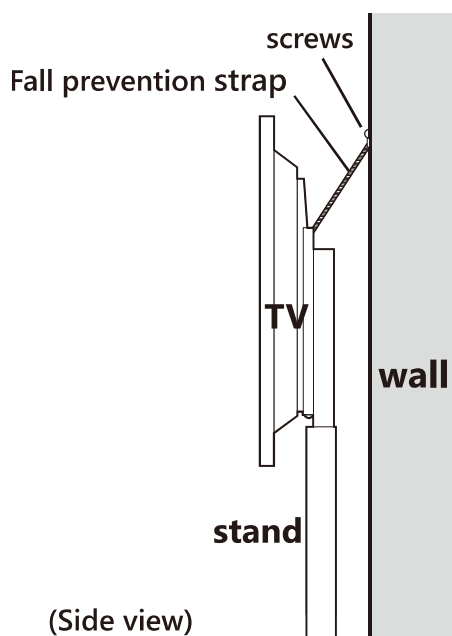

## How to swivel the TV left or right


Hold the frame as shown in the illustration and move it slowly.

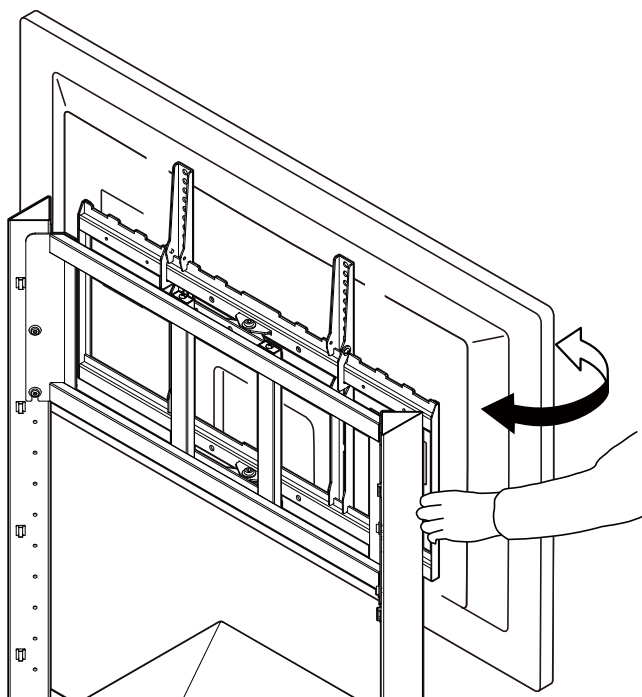

Take care not to put your fingers in the gaps between the moving parts.  
Take particular care in households with small children.  
Take care that the TV does not hit the wall or other objects during left/right swing adjustment.

## Adjustment of movement stiffness


Hold the nut from below and turn the top screw.

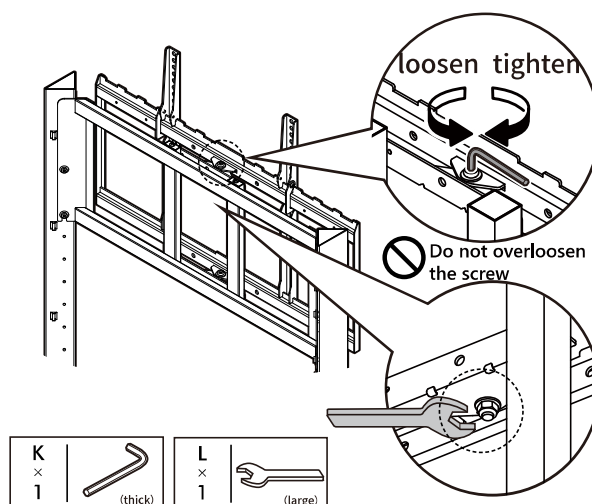


## How to adjust the gap

If there is a gap between the floor and the base, adjust as follows


**Insert the furniture stabilizer in either of the designated positions**

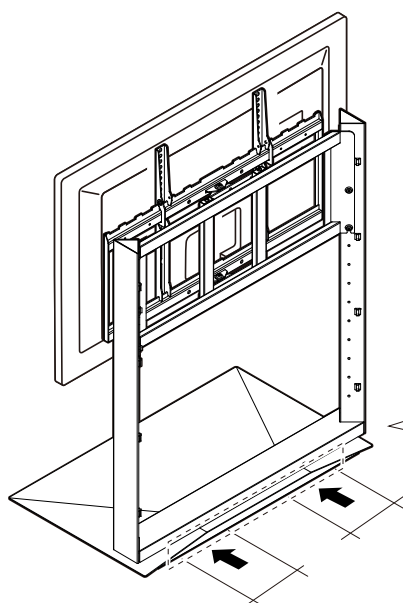

### Furniture stabilizer

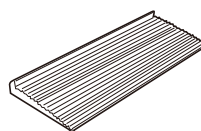


We recommend using a commercially available furniture stabilizer. Please use the one that matches the floor material.

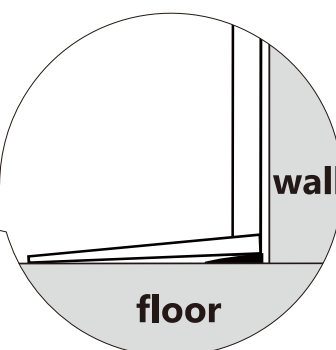


## How to horizontally adjust the TV

Adjustment is made by using the screw holes allowance of the TV mounting bracket.

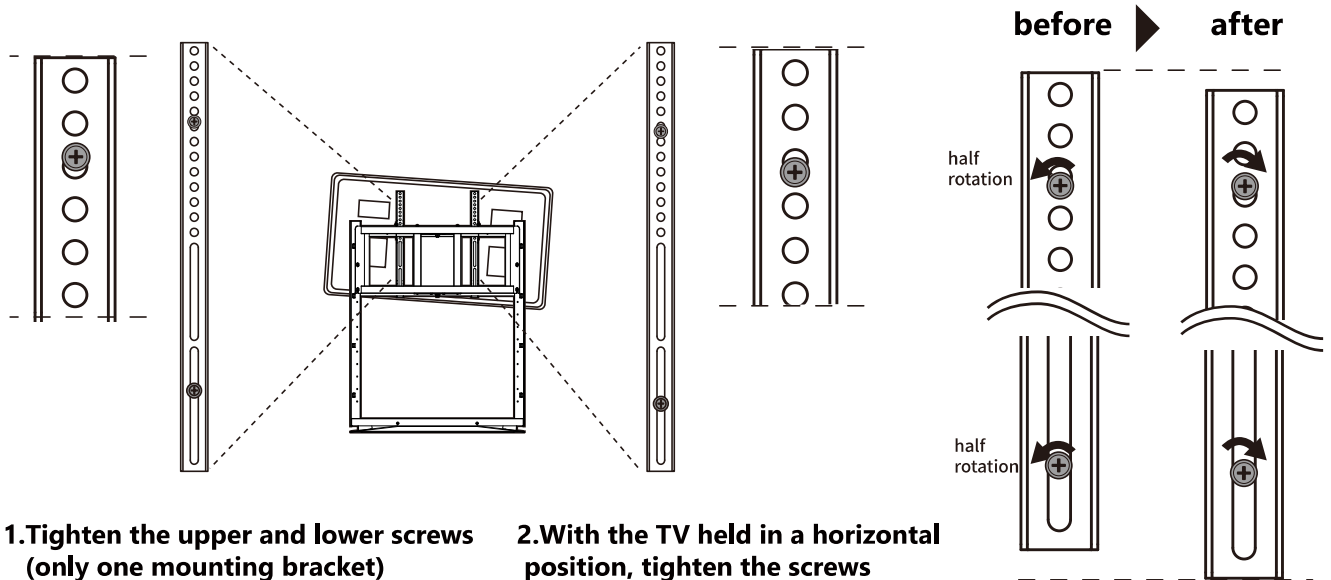

**1. Tighten the upper and lower screws  
(only one mounting bracket)**

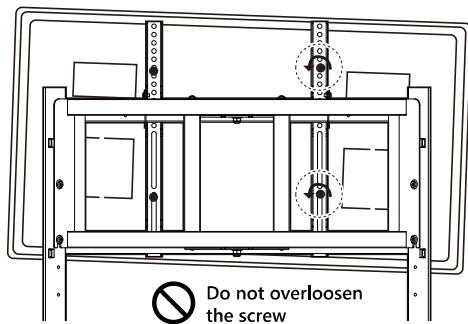

**2. With the TV held in a horizontal  
position, tighten the screws**

