

WALL[®]

WALL INTERIOR TV STAND

—A2 GRAND STOPPER—

製品コード WLAP17119
製造No. D05000309

サイズ W14.5×D4.5×H5cm 材質 ABS 重量 130g/個
原産国 中国

取扱説明書 (第1版)

この度は、お買い上げいただき誠にありがとうございました。
この商品を永く、安全にお使いいただくために、この「取扱説明書」をよく読み正しくご使用ください。
また、これらが必要に応じて見られるよう、大切に保管してください。

免責事項

- ・本製品または本製品の一部の誤使用や誤用起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害について一切責任を負いません。



- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

品質向上のための改良に伴い一部仕様が変わる場合があります。

販売元 株式会社ナカムラ
〒145-0065 東京都大田区東雲谷 4-20-10

公ブランドサイト <https://equals.tokyo/>



製品についてのお問い合わせ info@equals.tokyo

お問い合わせフォーム

取り付け方法

Step 1

ストッパー高さを一番低くする

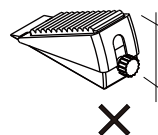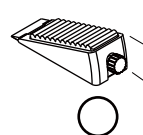


×の場合、
ノブを指で反時計回りに回して低くする

Step 2

スタンド本体と床面の間に差し込む

図の位置に3箇所

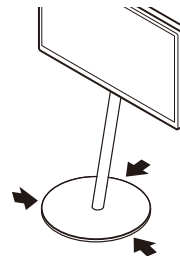


スタンド本体を持ち上げない
取り付け時に工具などを使用しない



キャスターを避けて差し込み、スタンドの縁を
ストッパーの山に食い込ませる

Step 3

ストッパー高さを上げて
スタンド本体を固定する



ノブを指で時計回りに回して高くする
スタンド本体がしっかり固定される高さまで



注意

- ・しっかりと固定されている事を確認してください。
- ・変形や破損などの異常が見られた場合は使用しないでください。
- ・ストッパー底部にゴミやホコリ等が附着すると、スタンドを止める効果が薄れますので、底部をきれいに掃除してください。
- ・床面の材質や形状によってはストッパーの効きに差が生じます。
- ・取り外しの際は反時計回りにノブを回し低くしてから抜いてください。
- ・本製品を改造して使用しないでください。

WALL[®]

WALL INTERIOR TV STAND

— A2 GRAND STOPPER —

model number	WLAP17119		
product ID	D05000309		
size	W14.5 × D4.5 × H5cm	material	ABS
weight / pc	0.29 lbs/130g		
country of origin	China		

Assembly Instructions [1st Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.

⚠ - THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.
 Caution - KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)
 under the planning and quality control of Nakamura Corporation of Japan.
 Some specifications may differ due to improvements for better quality.

Nakamura Co. Ltd.


Official brand site : <https://equals.tokyo/>

Contact us in English : info-gl@nakamura-jpn.co.jp

How to use

Step 1

Set the stopper height to the lowest

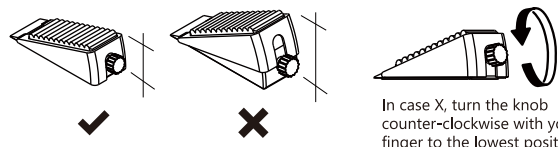


In case X, turn the knob counter-clockwise with your finger to the lowest position.


Step 2

Insert between the stand and the floor

Three positions as shown in the figure

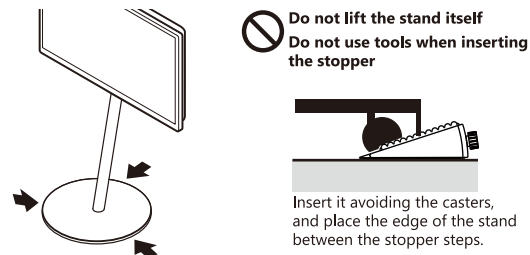


⊘ Do not lift the stand itself
Do not use tools when inserting the stopper



Insert it avoiding the casters, and place the edge of the stand between the stopper steps.

Step 3

Raise the stopper height to secure the stand



Turn the knob clockwise with your finger to the height where the stand is firmly fixed.



- Make sure it is firmly fixed in place.
- Do not use the stand if it is deformed or damaged.
- If dust or dirt adheres to the bottom of the stopper, the stopper will not be effective in stopping the stand. Clean the bottom of the stopper before use.
- The effectiveness of the stopper may vary depending on the material and shape of the floor.
- When removing the stopper, turn the knob counter-clockwise to lower the stopper before pulling it out.
- Do not modify or alter this product.