



WALL INTERIOR TV STAND

— A2 ANGLE ADJUSTMENT BRACKET —

製品コード	サテンブラック WLMB55119
製造No.	X04000011

サイズ

W38.5×D6.5×H33.5cm

材質

スチール

表面加工

粉体塗装

重量

3kg

原産国

中国

耐荷重

45V(15kg相当)

## 組立説明書 (第3版)

この度は、お買い上げいただき誠にありがとうございました。

この商品を末永く、安全にお使いいただくために、この「組立説明書」をよく読み正しくご使用ください。

また、これらを必要に応じて見られるよう、大切に保管してください。

### 免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



注意

- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。
- ・小さなお子様がいらっしゃるご家庭では、誤ってスタンドやテレビを転倒させてしまう可能性があるため、必ず転倒防止金具で固定してご使用ください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

この商品は日本の株式会社ナカムラの企画・品質管理によって中国（原産国）で製造しました。  
品質向上の為に改良に伴い一部仕様異なる場合があります。

販売元 株式会社ナカムラ  
〒145-0065 東京都大田区東雪谷 4-20-10

公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ [info@equals.tokyo](mailto:info@equals.tokyo)

お問い合わせフォーム



組み立て前のご確認事項 >P1

**Step1**  
テレビの取り付け >P5  
準備をする

**Step2**  
テレビの設置 >P8  
高さを決めて  
組み立てる

**Step3**  
テレビを  
テレビスタンドに >P10  
取り付ける

テレビの調整方法 >P11  
安全上のご注意 >P13



## 組み立て前に必ずご確認ください。


本製品は、テレビの機種によって取り付けできないものがあります。  
下記を参考に、組み立て前に取り付けが可能か必ずご確認ください。  
有機ELタイプのテレビには取り付けできません。

### 1 お手持ちのテレビが下記3項目すべてに該当することをご確認ください。


1. テレビのサイズが24V～45Vであること
  2. テレビの重量(スタンドを含まず)が15kg以下であること
  3. テレビメーカーが壁掛け対応としているテレビであること
- ※背面形状などの諸条件があっていたとしても、壁掛け非対応としているテレビがあります。

### 2 お手持ちのテレビの背面形状をご確認ください。


1. 4カ所のネジ穴の間隔が、下記A、Bの条件を満たしている。

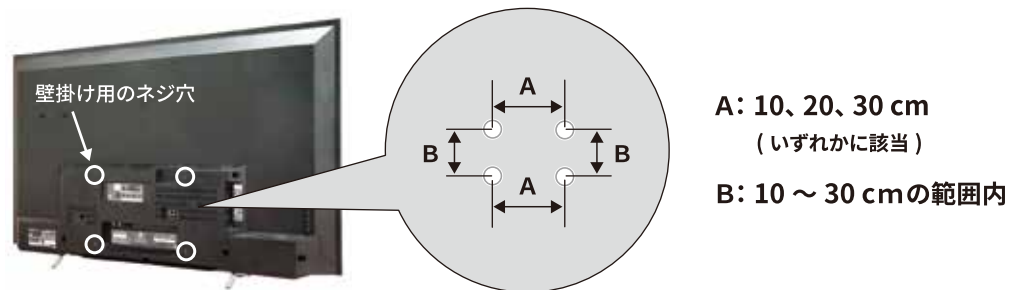



2. 上記の条件を満たし、下記のいずれかに該当すること。

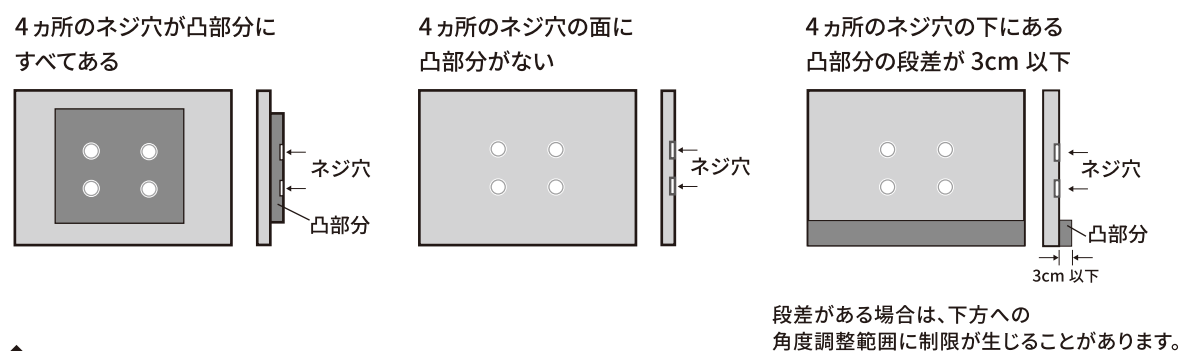

下記のようなテレビは取り付けできません。

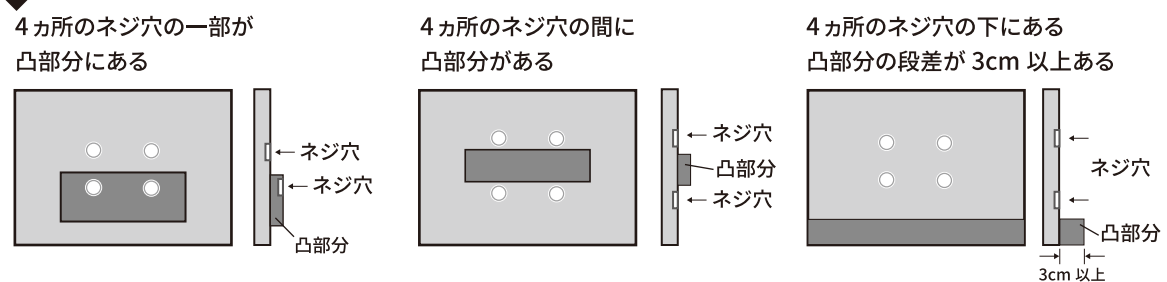


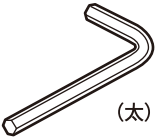
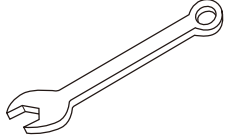
### 3 耐荷重と棚板の取り付けについてのご注意

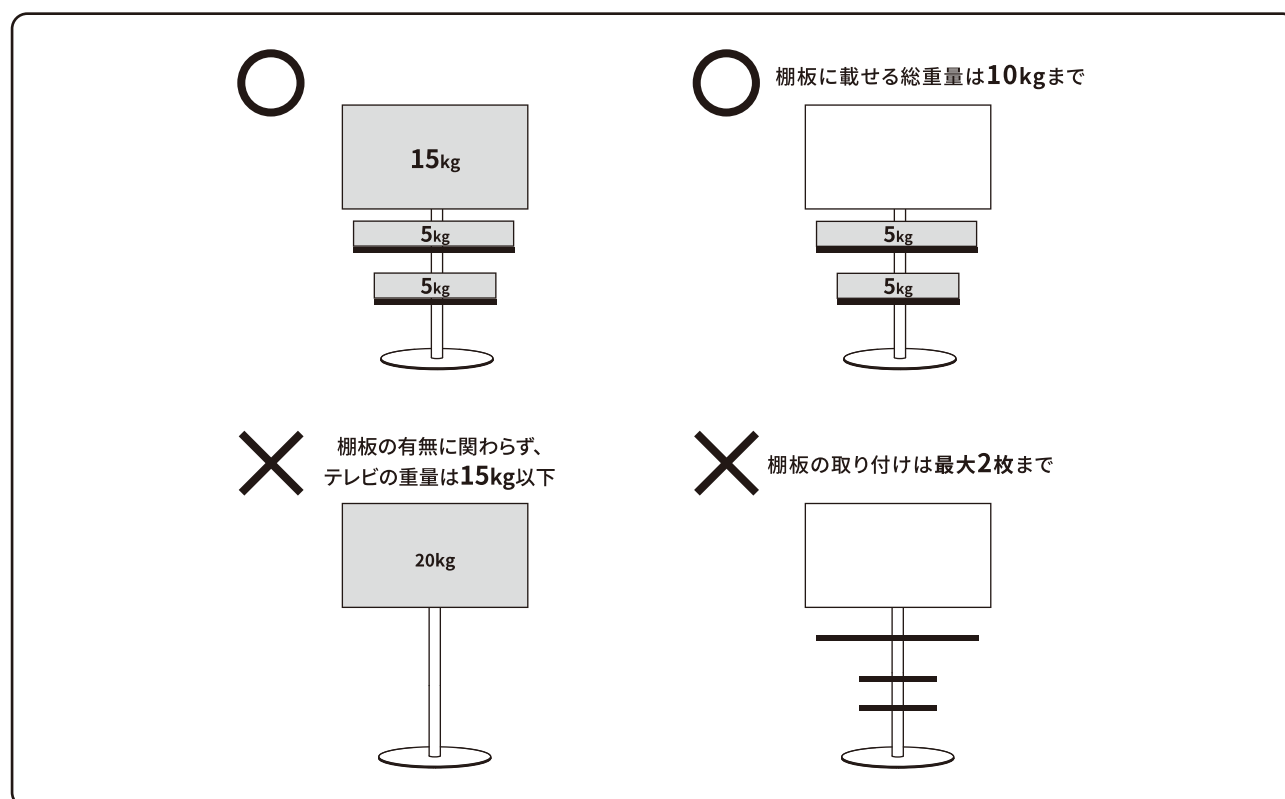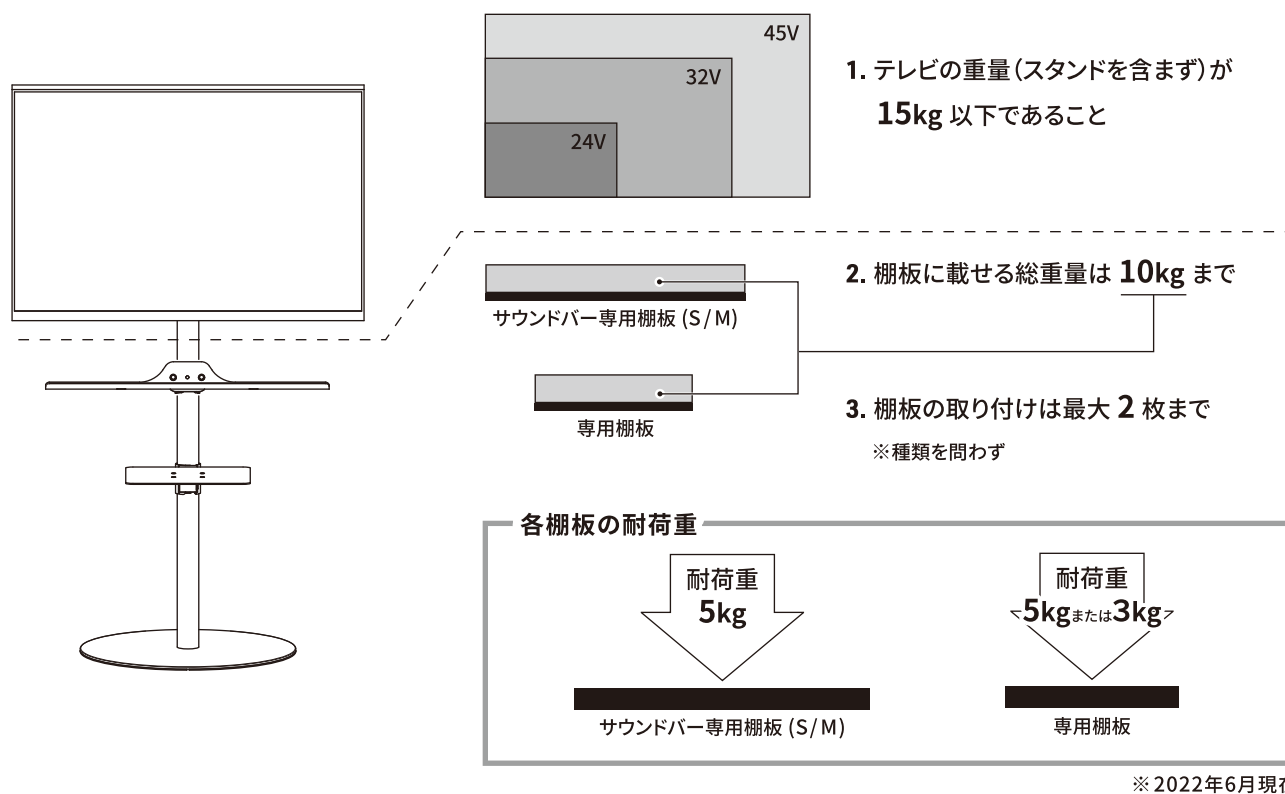





【付属部品】

一部の部品は、【下記数量＋予備数量】を入れているため、組み立て後に残る場合があります。  
テレビ交換時に必要になる場合がありますので【未使用部品】も全て大切に保管してください。

本体組立用部品

<b>D</b>  × 2	<b>E</b>  (太) × 1	スパナ 
---	---	--

テレビ取り付け用部品

<b>M</b>  (小) × 4 <hr/>  × 各 4 (45、55mm)	<b>N</b>  (中) × 4 <hr/>  × 各 4 (45、55mm)
---	---





！ M、Nは取り付けるテレビに  
合ったものをお使いください。

紙メジャー




ネジ穴計測ツール

スペーサー(大)

スペーサー(小)

 × 1	 × 1	 × 8	 × 4
---	---	---	---

# 【本体部品】

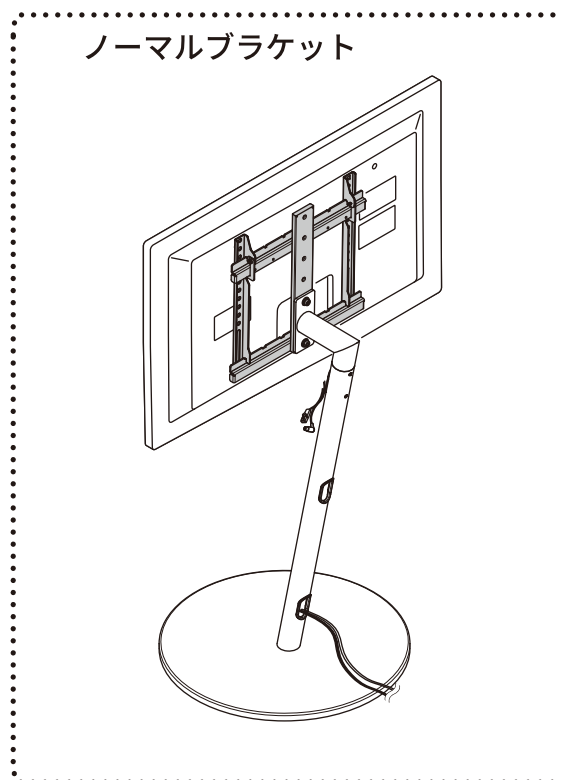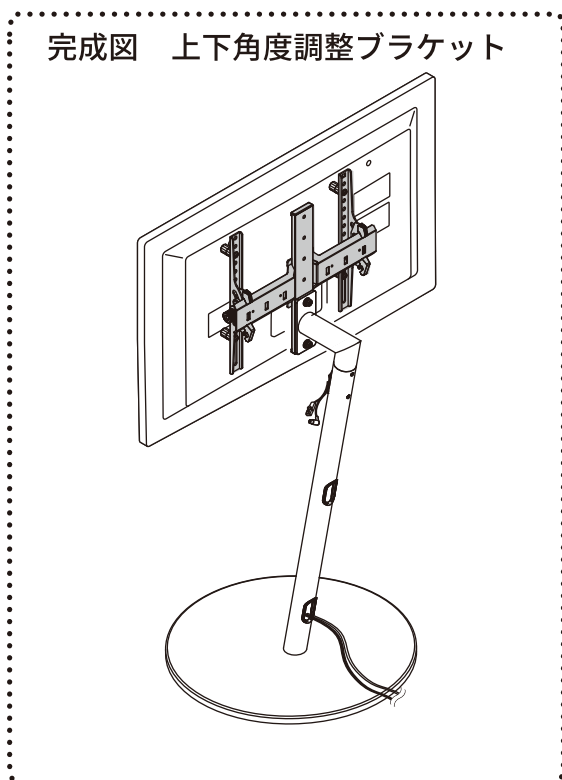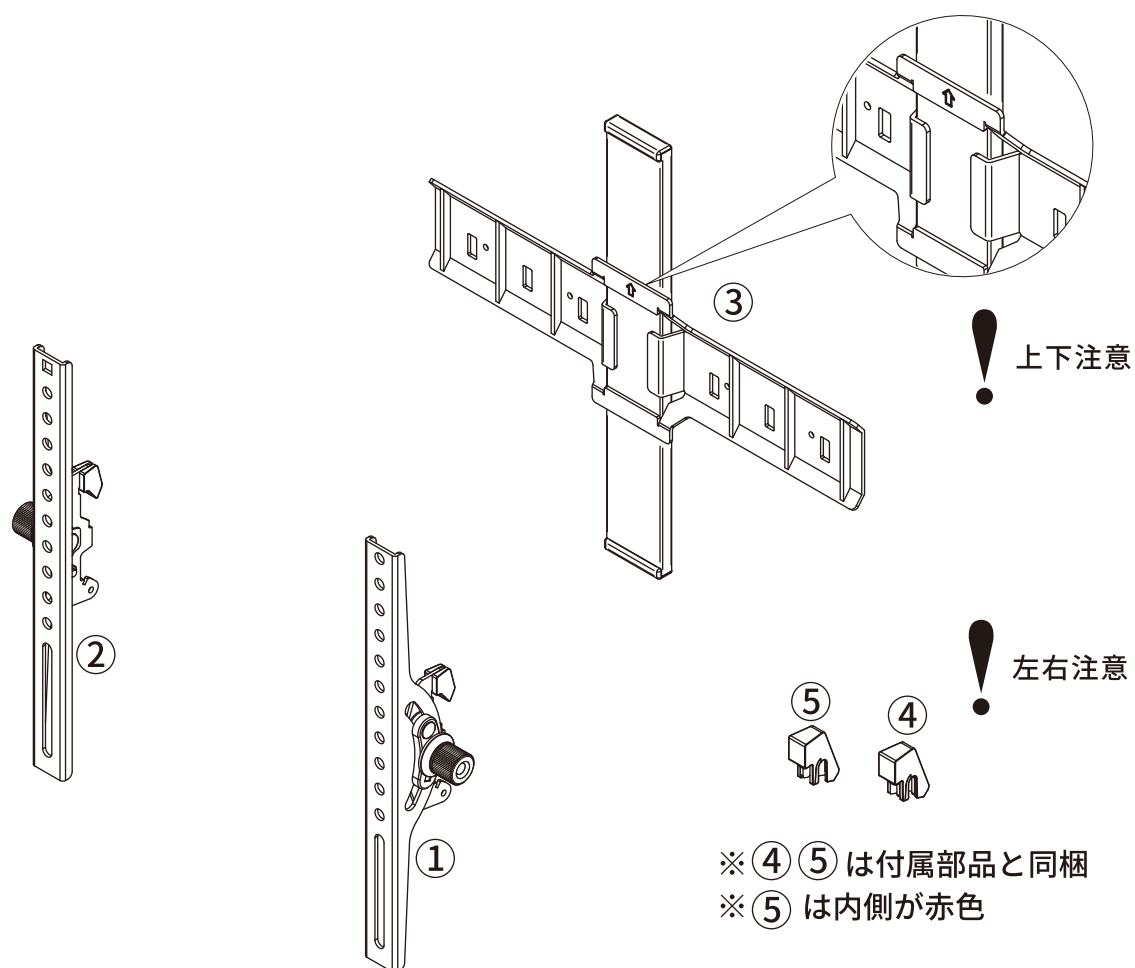

組み立て前のご確認事項

ステップ 1

ステップ 2

ステップ 3

テレビの調整方法・安全上のご注意

# Step1

## テレビの取り付け準備をする


1

### ネジを選ぶ


取り付け可能テレビの詳細はコチラから>





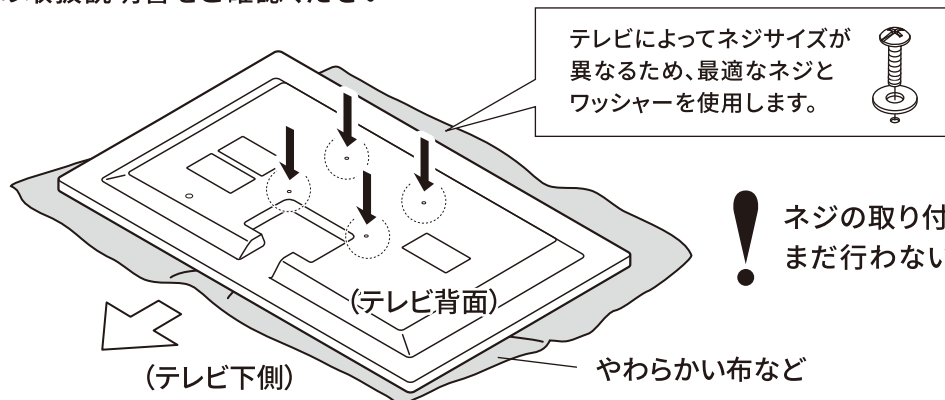

！ パネル割れ防止のため、画面を下に寝かせてはいけないテレビがありますので  
テレビの取扱説明書をご確認ください

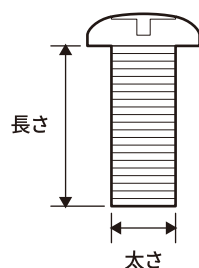


！ ネジの取り付けは  
まだ行わないでください






M	N
 × 4 (小)	 × 4 (中)
 × 各 4 (45、55mm)	 × 各 4 (45、55mm)


2
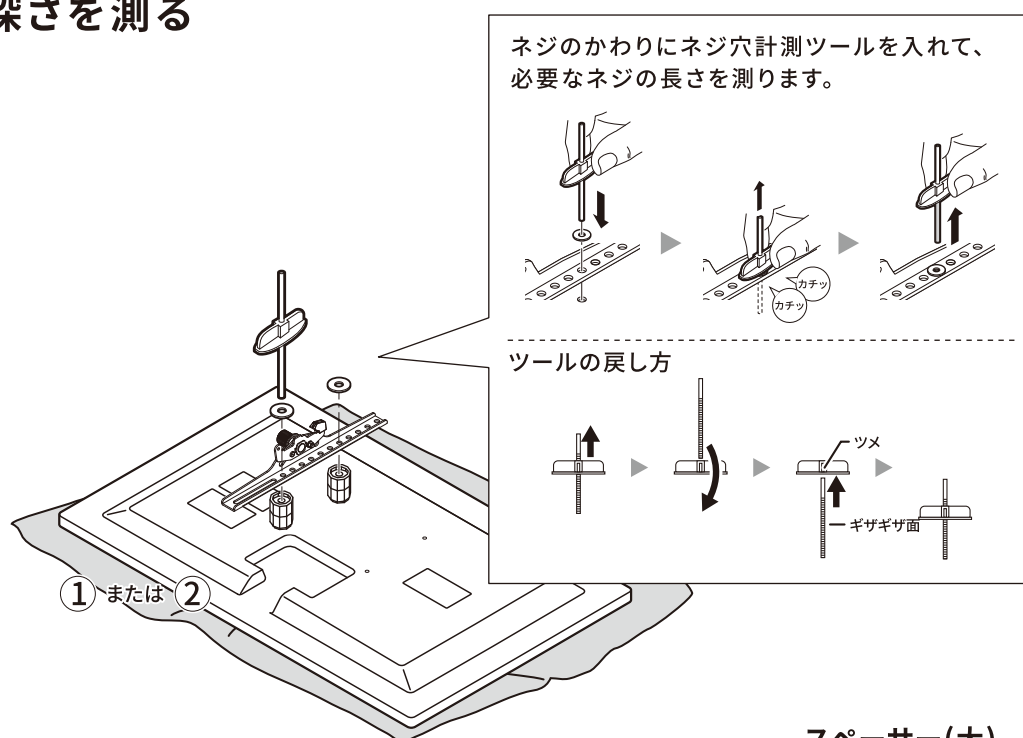
### ネジ穴の深さを測る



M	N	
 (小)	 (中)	 × 8

### 3 必要な長さのネジを選ぶ

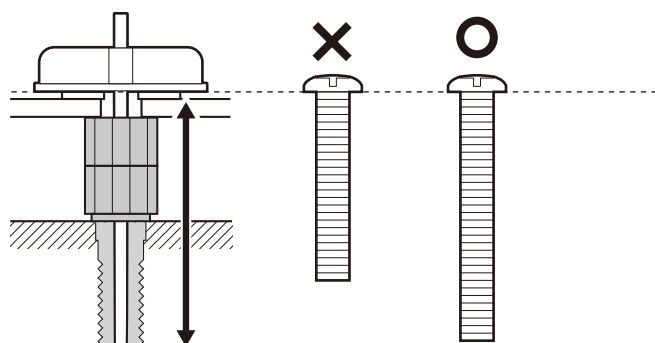

- ！ネジの掛かりは  
5回転以上であれば  
● 問題ありません



セット内のネジの  
太さや長さが合わない場合は  
ホームセンター等で  
別途お買い求めください


M  $\frac{\text{太さ}}{\text{長さ}}$  (mm)

例) 太さ5mmで長さ15mmの場合  
▶ M5×15mm

※ネジは、[トラスねじ]または  
[ナベねじ]を使用してください。


### 必要な長さのネジが見つからない場合 スペーサー(小)でネジの長さを調整します。

スペーサー(小)





スペーサー(小)で約5mm  
ネジを短く使用できます。


調節前

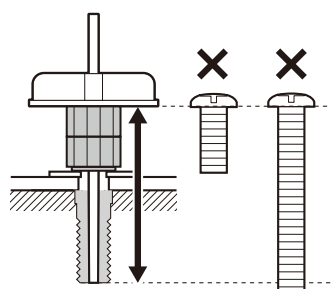


調節後

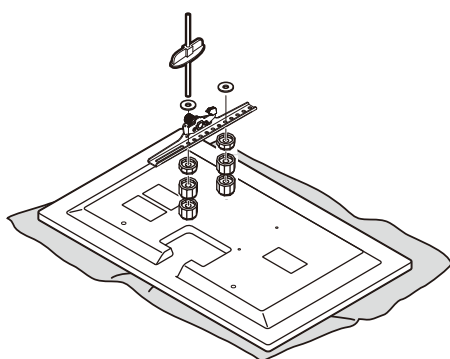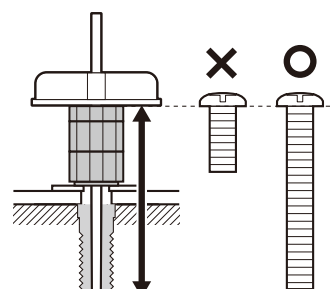

4

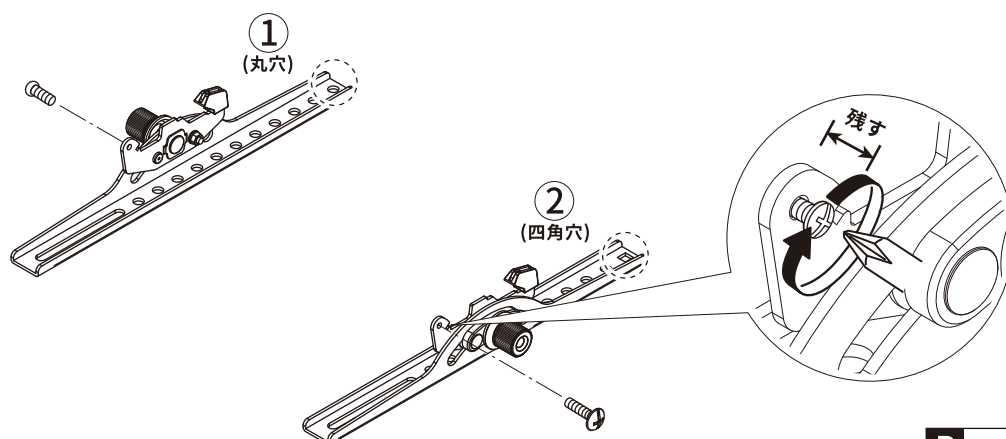


！ 角度調整ノブが図の位置で締まっていることを確認する。緩んだ状態ですとテレビをスタンドに取り付ける際に動き危険です。

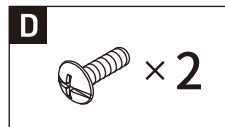


5

選んだネジで取り付ける  
(スペーサー(小)は必要な場合のみ)

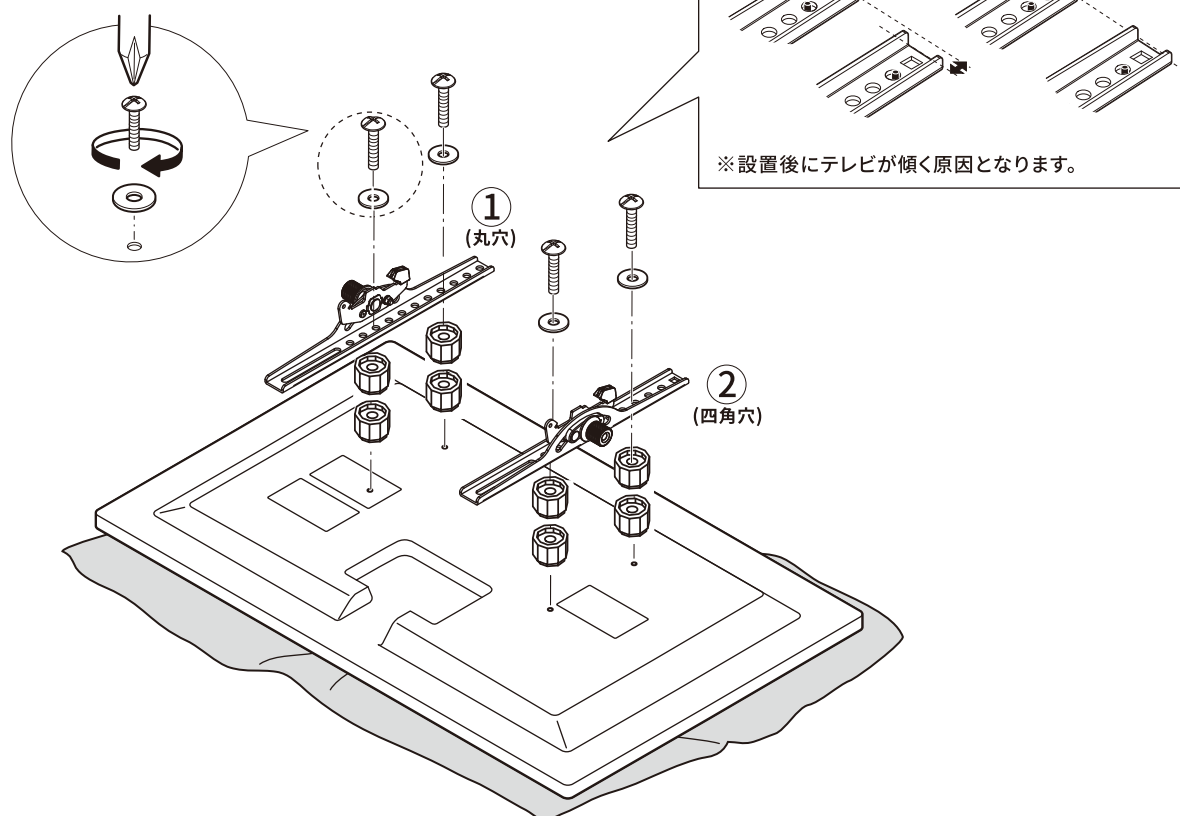

！ パネル割れ防止のため、画面を下に寝かせてはいけないテレビがありますので  
テレビの取扱説明書をご確認ください

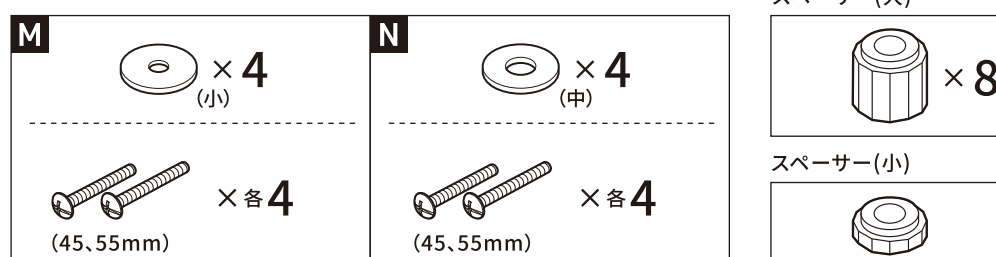





# Step2

## テレビの設置高さを決めて組み立てる

付属の紙メジャーをテレビに当て、印を付け、紙メジャーをテレビに見立てます。

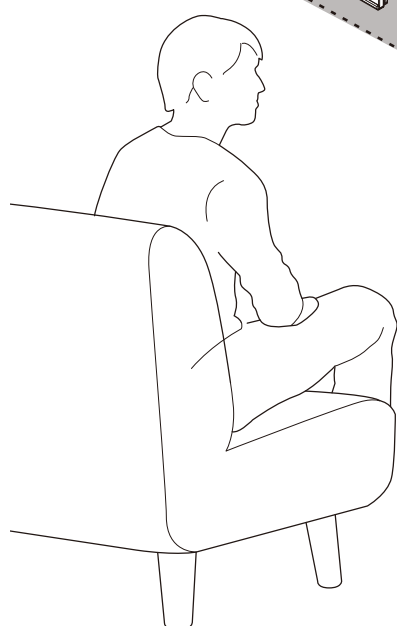

紙メジャーをスタンド本体に当てながら上下させ、テレビ設置後の画面位置をイメージして高さを決めます。

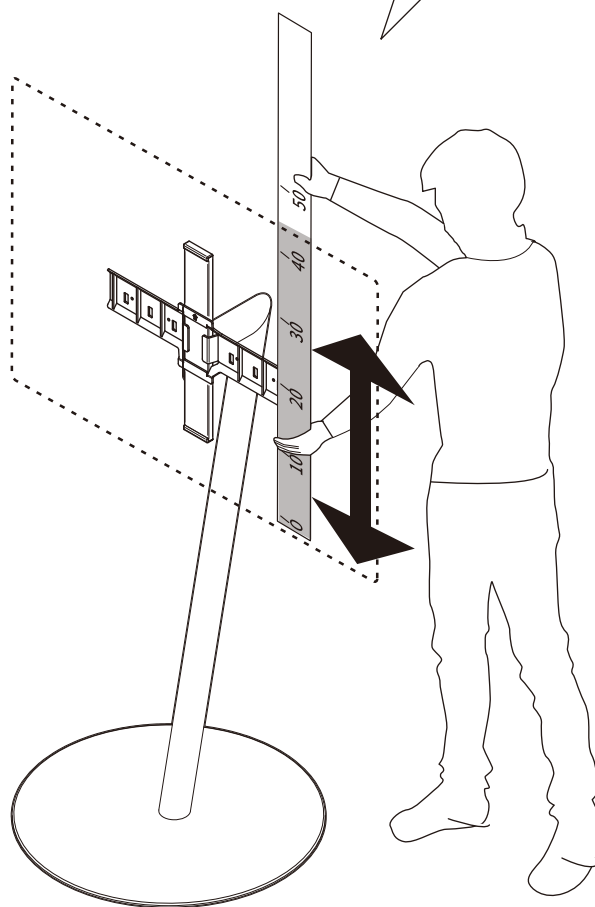

組み立て前のご確認事項

ステップ 1

ステップ 2


ステップ 3

テレビの調整方法・安全上のご注意

# 1

## 紙メジャーでテレビの設置位置を決める

テレビの大きさと①②部品を取り付けた位置に  
ペンで印を書いて下さい。

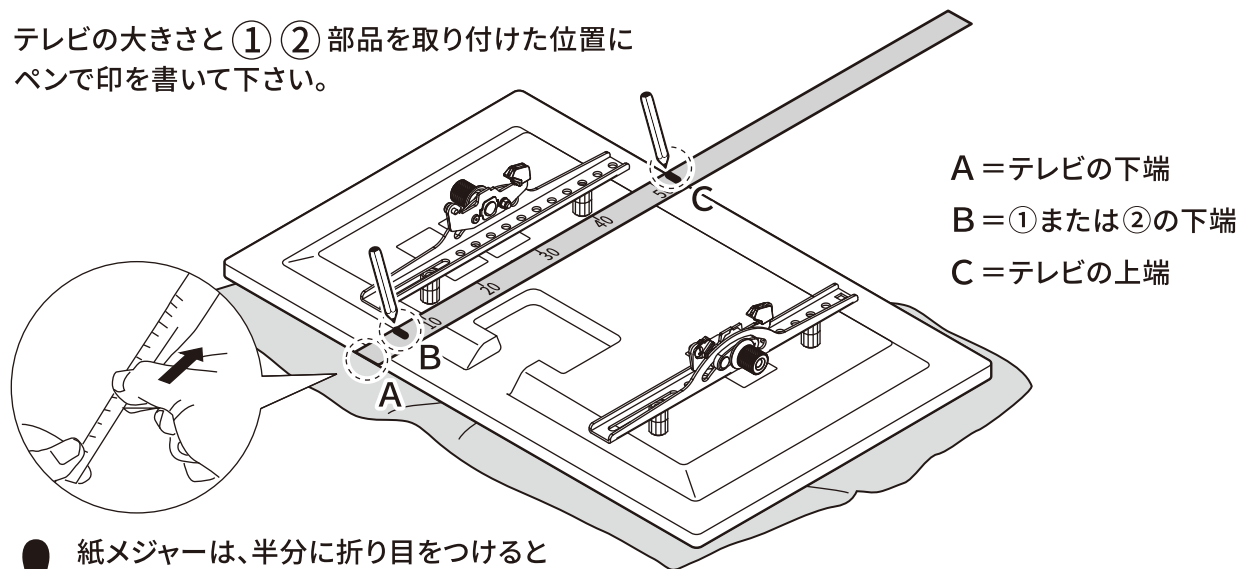


A = テレビの下端  
B = ①または②の下端  
C = テレビの上端

- ❗ 紙メジャーは、半分に折り目をつけると  
使いやすくなります
- Bの印がスタンド本体に合わせる基準となります

# 2

## テレビ設置後の高さをイメージしながら組み立てる

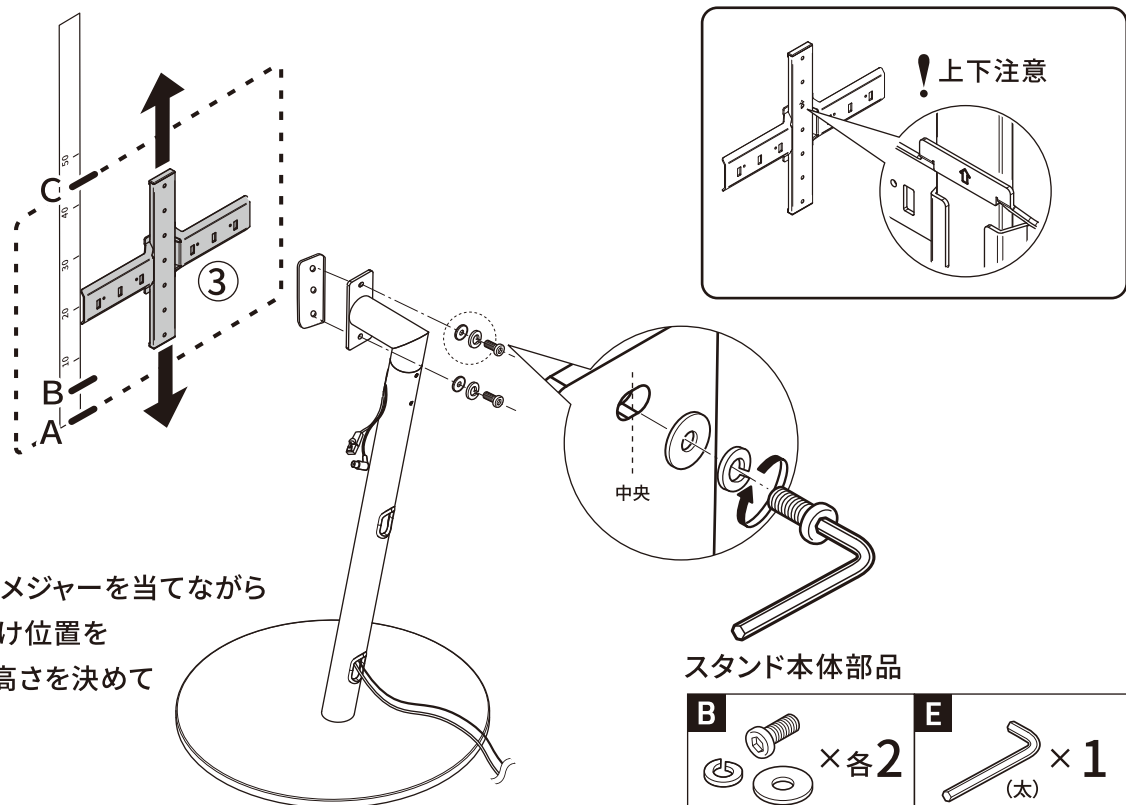

- ❗ ③の下端にメジャーを当てながら  
③の取り付け位置を  
上下させて、高さを決めて  
組み立てる

- ❗ 高さを5cmずつ  
最大20cmまで  
上げることができます

スタンド本体部品


<b>B</b> ×各2	<b>E</b> ×1 (太)
滑り止めシート ×1	

# Step3


## テレビをテレビスタンドに取り付ける

1



- ！ テレビ画面に強い力が加わるような持ち方をしない
- テレビの持ち方は、テレビの取扱説明書でご確認ください
- 大きいテレビの設置は2人以上でおこなってください

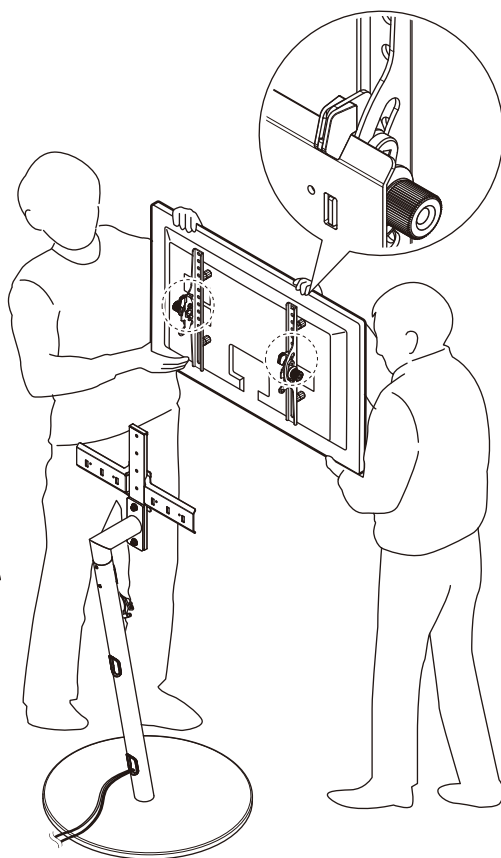

- ！ 小さいテレビをひとりで取り付ける場合はスタンドの背面側から

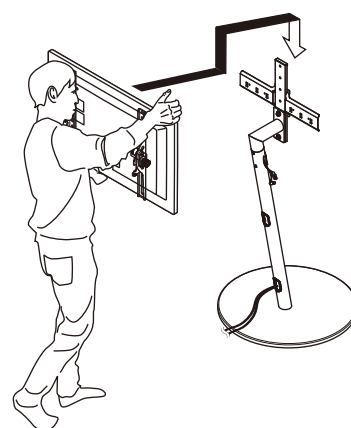

2

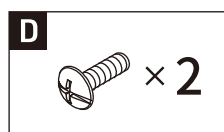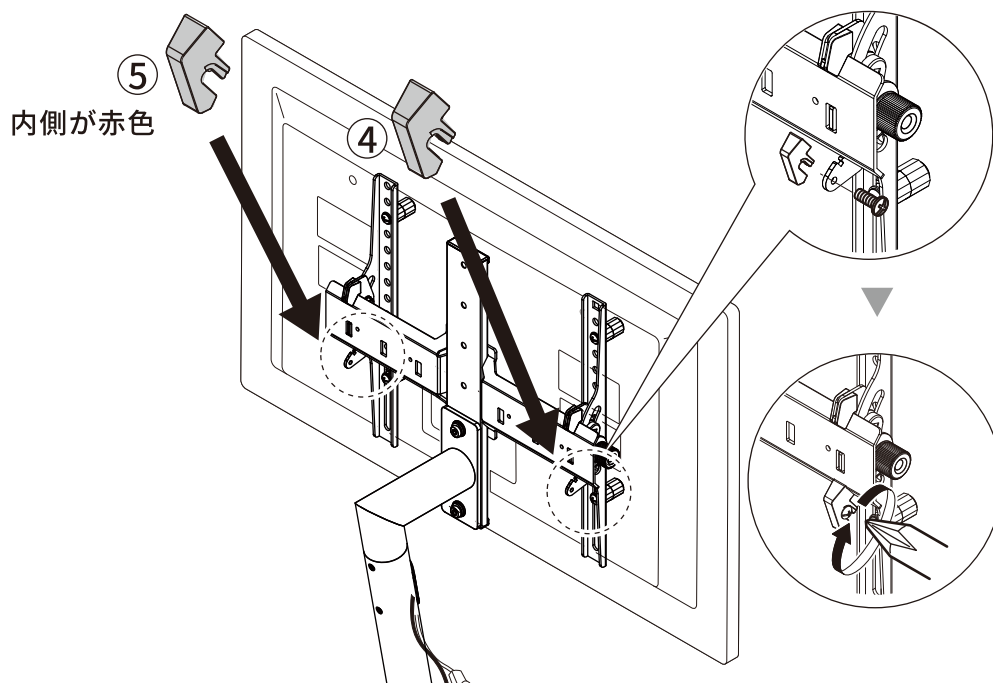

組み立て前のご確認事項


ステップ 1

ステップ 2


ステップ 3

テレビの調整方法・安全上のご注意


### 3 コードを通す

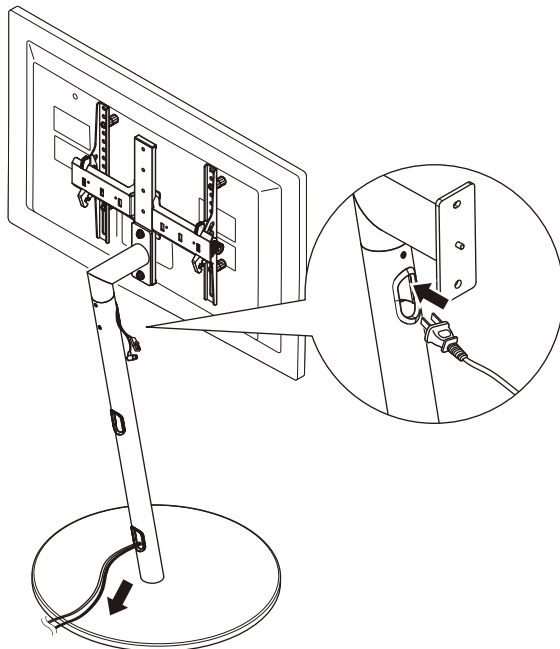

### テレビの傾き調整方法

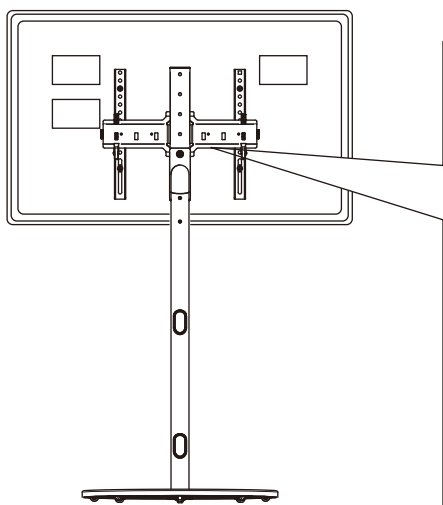


1. 上のネジを緩める。  
(下のネジはそのまま)
2. テレビが水平になる  
ところまで傾ける。
3. ネジを締める。

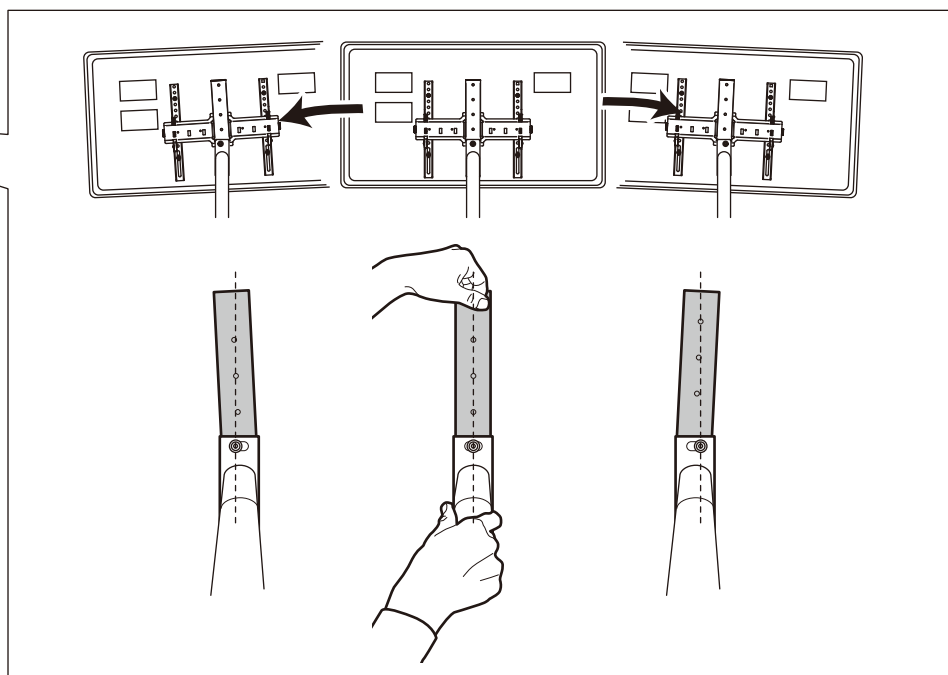


テレビの重さを支えながら調整してください

## テレビの角度の調整方法


左右の角度固定ノブを緩めて、最大で上方20°、下方20°まで角度調整ができます。

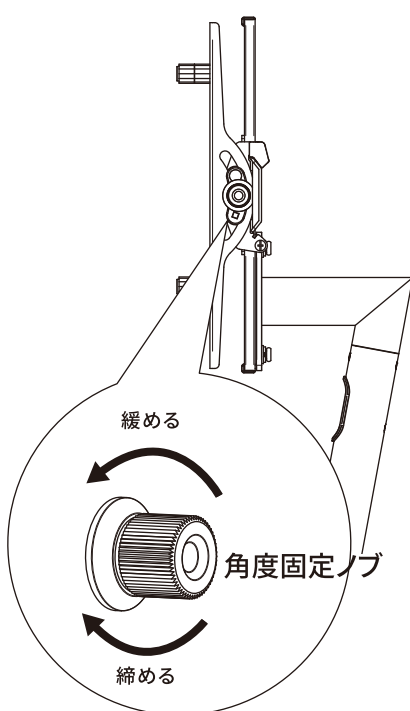

！ 調整後は角度固定ノブをしっかりと締め付ける。

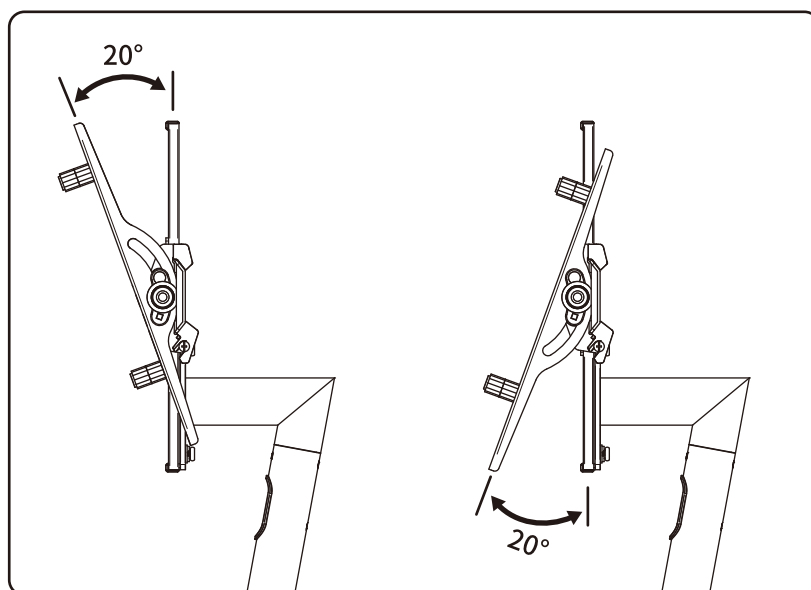

1. 左右2カ所の角度固定ノブを緩める
2. 角度を調整して、左右2カ所の角度固定ノブを締める。

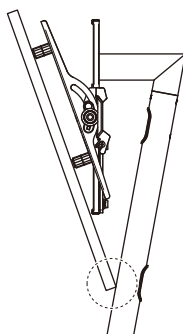


スタンドの高さ設定やブラケットの取付位置によっては、下方への角度調整時にテレビがスタンド支柱に干渉することがあります。

### こんな場合は・・・


角度調整時に動きが硬い場合や角度固定ノブを緩めた途端にテレビが下を向く場合は、下記の手順で調整が可能です。

！ テレビを下に向けた状態で調整を開始する。

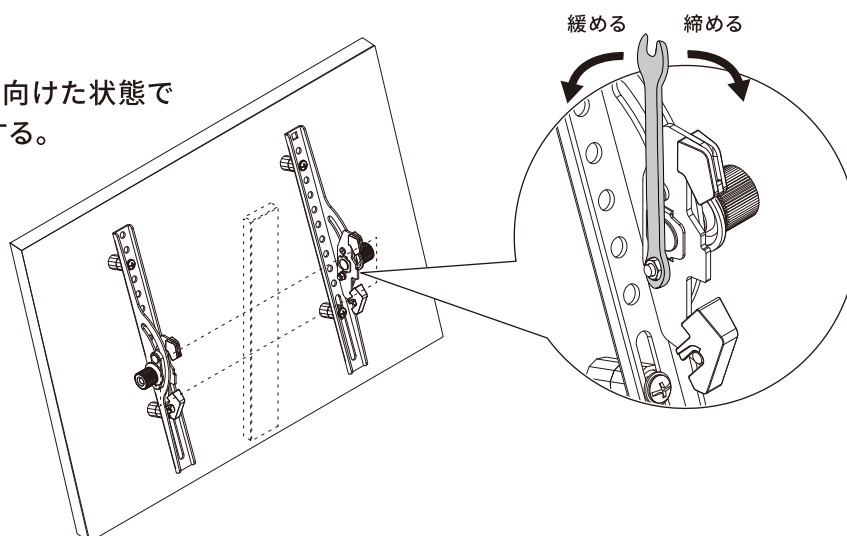

## 別売り：専用HDDホルダーの取り付け

- ・フレームの左右に取り付けが可能です

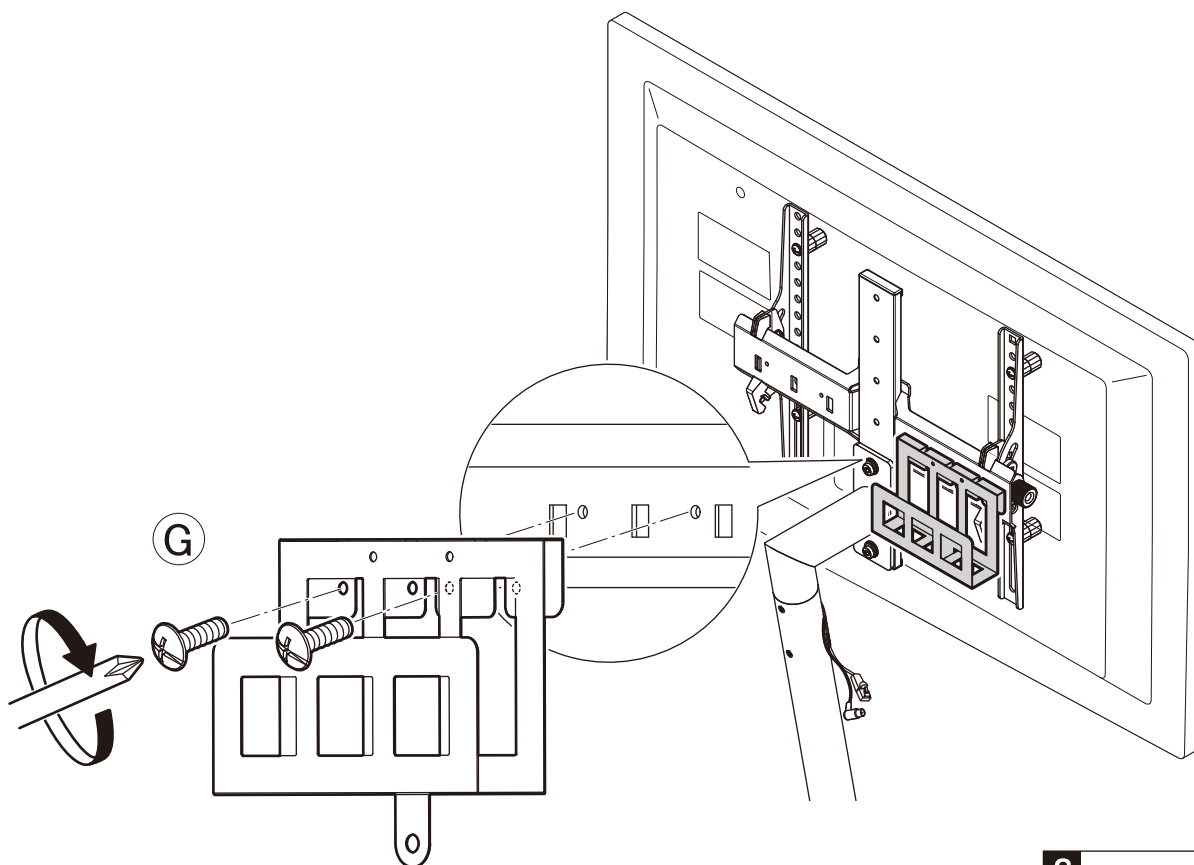

# ！安全上のご注意

人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。  
人への危害、財産の損害を防止するため、必ずお守りください。




**ボルトやネジ類は  
所定の場所に  
確実に締めつける。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。




**ベースの上に乗らない。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

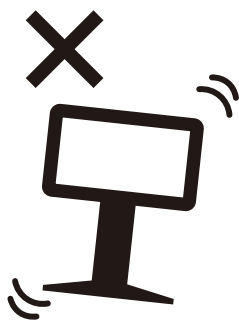


**不安定な場所に  
設置しない。**

十分な耐荷重強度のある、  
平坦で安定した場所に設置する。  
(傾斜面や平坦でない面、カーペット・  
畳などの安定しない面、変形する面  
などに設置しない)

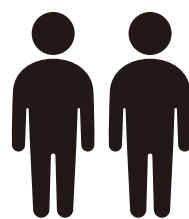

**テレビスタンドの移動や  
大きいテレビの設置・取り外しは、  
必ず2人以上で行う。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

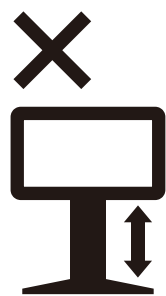

**テレビを設置したまま  
高さ調整をしない。**

テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。



**テレビ画面に  
強い力が加わるような  
持ち方をしない。**

テレビの持ち方は、  
テレビの取扱説明書でご確認ください。  
キャスターでの移動時もお守りください。

地震・事故による万一の際の転倒・落下によるケガや製品の破損などは弊社では保証できかねます。  
特に小さいお子さまがいらっしゃるご家庭などでは下記の注意事項をご確認ください。



**お子さまが  
テレビスタンドで遊んだり  
動かしたりしないように  
注意する。**

テレビスタンドが倒れたり、  
足の指を巻き込んだりして、  
破損やけがの原因となります。



**移動させないときは  
安全対策をする。**

転倒防止ワイヤーや  
ストッパーの使用をご検討ください。

# ！その他の注意事項

注意を無視した取り扱いをすると、物質損害を被ったり、障害を負う可能性があります。

## 1 組立・設置のご注意

### 1. 転倒、破損の原因に

組み立て、設置の際は、必ず安定した平らな場所でおこなう。床や壁などをキズつけないように、厚手の布や梱包のダンボールなどを敷く。

### 2. 変色や破損の原因に

屋内で使用する。直射日光や熱、冷暖房の風が直接あたらない場所に置く。

### 3. 火災や感電の原因に

薄型テレビを本製品に取り付けたり取り外す場合は、必ず薄型テレビの電源スイッチを切り、電源プラグをコンセントから抜き、アンテナ線接続機器間のコードなど外部の接続コードを外してから行ってください。コードが傷つき、火災、感電の原因となる恐れがあります。

## 2 使用上のご注意

### 1. 転倒、けが、破損

商品に乗ったり、ぶらさがったり、テレビスタンド以外の使用をしない。テレビスタンドに集中的に荷重をかけない。(傾斜の可能性)

手や指などを挟まないように注意する。

角度調整する際は、テレビの両端を持ちゆっくりと動かす。

### 2. 火災や変色

ストーブなど火のそばで使わない。

### 3. におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

## 3 お手入れのご注意

### ひび割れや変色、変形の原因に

表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)

※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1カ月に1度が目安です。)



# WALL®

## WALL INTERIOR TV STAND

— A2 ANGLE ADJUSTMENT BRACKET —

Before assembling >P1

**Step1** >P5  
Prepare to  
install the TV

model number	Satin Black WLMB55119
product ID	X04000011

**size** W38.5×D6.5×H33.5cm **material** steel **surface finish** powder coating  
**weight** 6.6lbs/3kg **country of origin** China **maximum load** 45" (33 lbs / 15kg equivalent)

**Step2** >P8  
Determine the  
installation height of  
the TV and assemble

### Assembly Instructions [3rd Edition]

Thank you for purchasing this product.


In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

## Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.

**Step3** >P10  
Install the TV  
to the TV stand

 **· THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.**  
**caution · KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.**  
**· THIS PRODUCT SHOULD NOT BE USED IN HOMES OR OTHER ENVIRONMENTS WITH SMALL CHILDREN WHO MAY ACCIDENTALLY TIP OVER THE STAND AND TV, UNLESS A WALL STRAP HAS BEEN INSTALLED TO HELP SECURE THE STAND AGAINST TIPPING OVER.**

TV tilt adjustment  
method >P11  
Safety precaution >P13

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)  
under the planning and quality control of Nakamura Corporation of Japan.  
Some specifications may differ due to improvements for better quality.

Nakamura Co. Ltd.

Official brand site : <https://equals.tokyo/>

Contact us in English : [info-gl@nakamura-jpn.co.jp](mailto:info-gl@nakamura-jpn.co.jp)



## Be sure to check before assembling

This product may not be used with certain TV models.

Be sure to check this product can be used with your TV before assembling, referring to the following.

**1**

**Make sure that your TV meets all three of the following requirements**

1-1. The size of the TV must be between 24" and 45"

1-2. The weight of the TV (excluding the stand) must be 33 lbs / 15kg or less



1-3. Written documentation from the TV's manufacturer says it is a wall-mounted TV\*

\*Some TVs do not support wall mounting, even if the back of the TV may appear to support it.

**2**

**Check the back side of your TV**

2-1. The spacing between the four screw holes meets the conditions A and B below

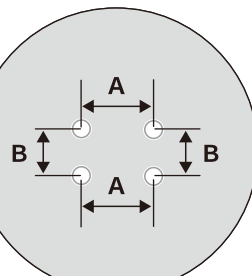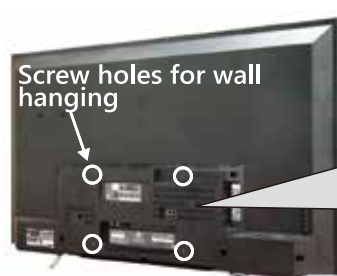

**A : Any of 10, 20, 30cm**






**B : Within the range of 10 - 30cm**

2-2. Satisfy all of the above conditions, and satisfy any one of the following

All 4 screw holes are on the raised part (shaded area) of the TV's back, or

There is no raised part near the surface of the 4 screw holes, or

The difference in height between the raised part (shaded area) and the rest of the TV's back is 3cm or less (if the raised area is located below the 4 screw holes)


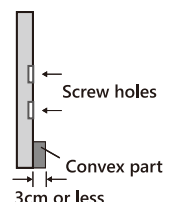
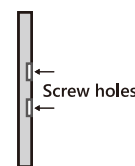
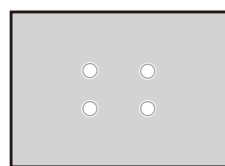
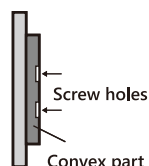
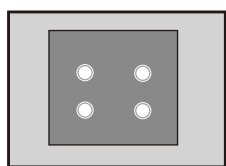


**The following TVs cannot be installed onto this product:**


Less than all of the 4 screw holes are located on the raised part (shaded area) of the TV's back

There is a raised part (shaded area) between the 4 screw holes


There is a difference of 3cm or more between the height of the raised part (shaded part) and the rest of the TV's back (if the raised part is located below the 4 screw holes)

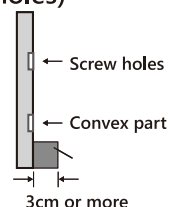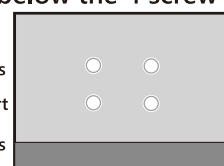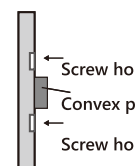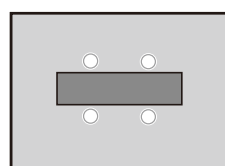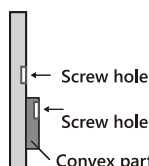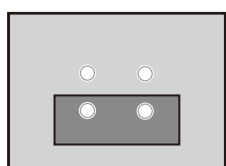

### 3 Precautions regarding load capacity and installation of shelf

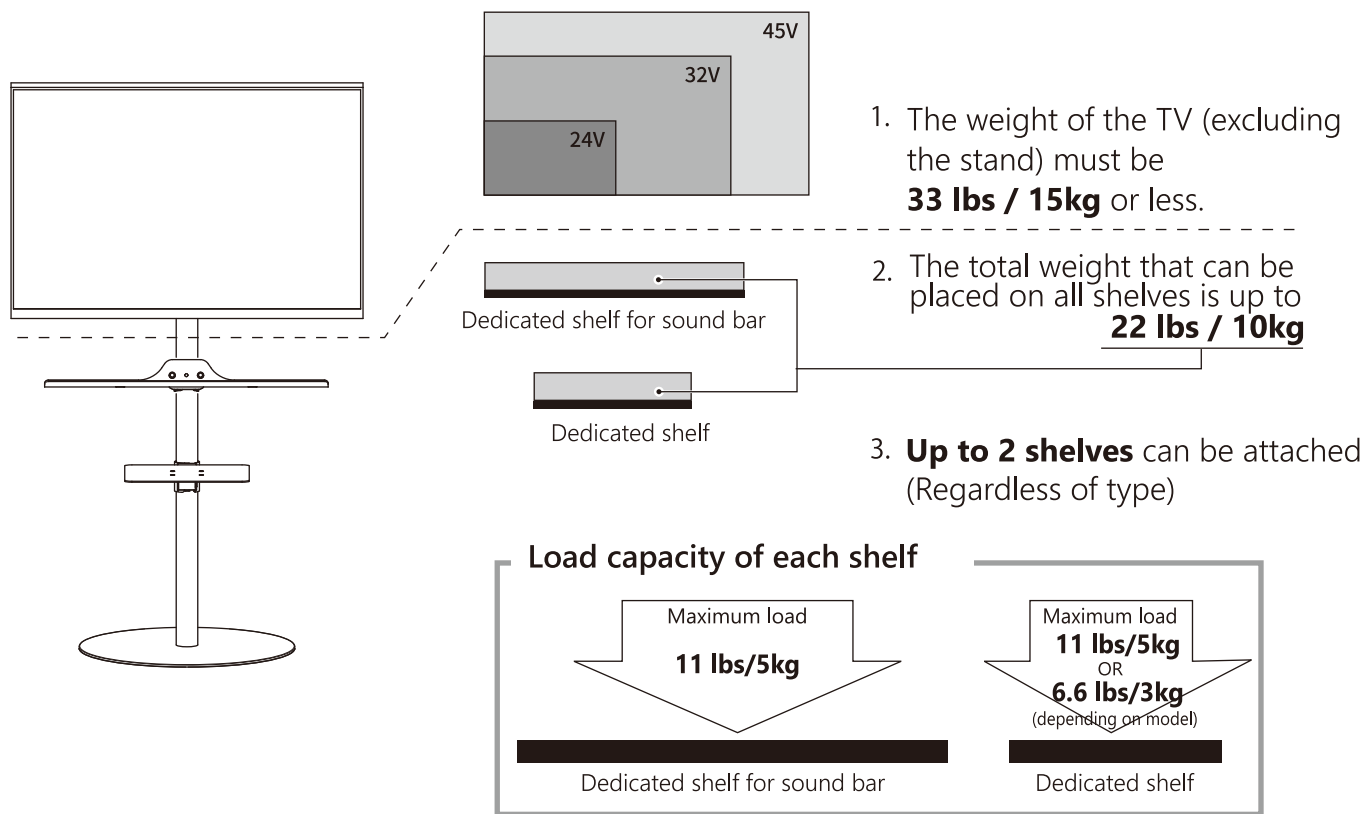

as of August 2022

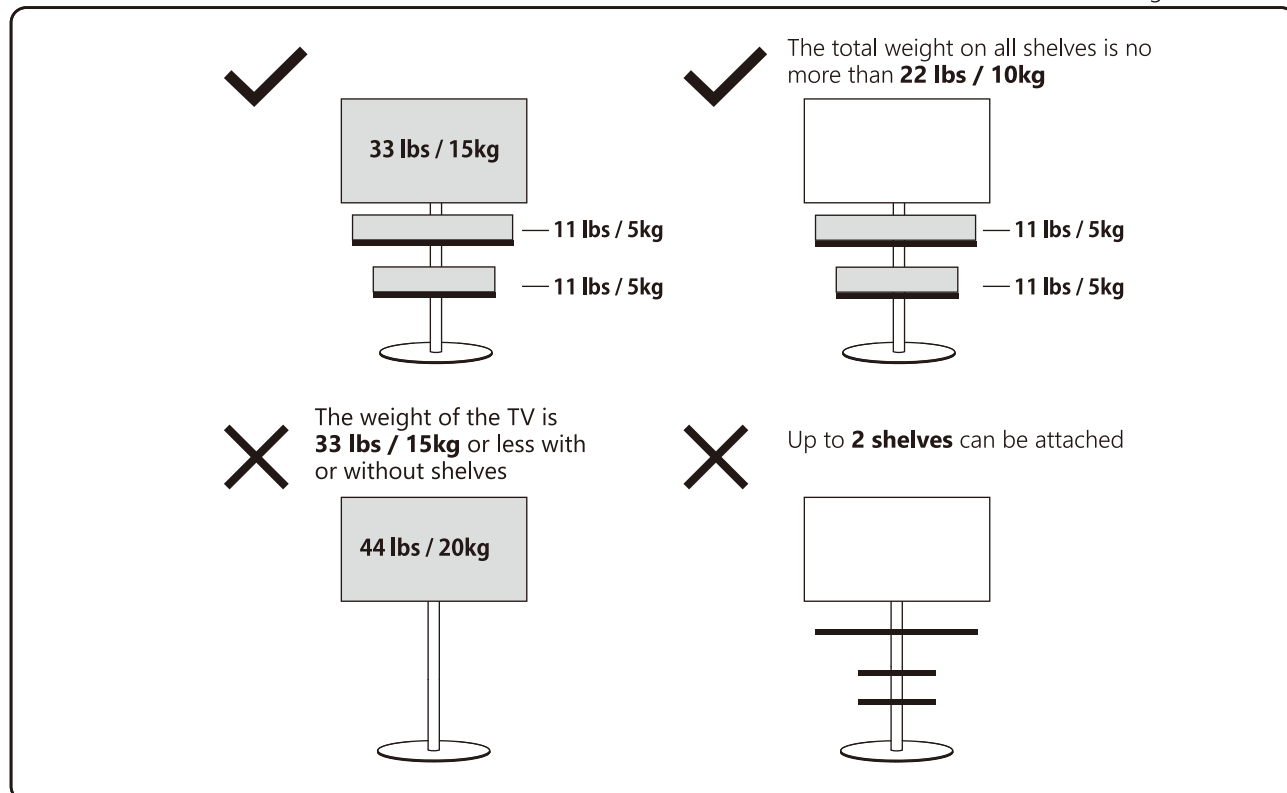
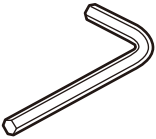
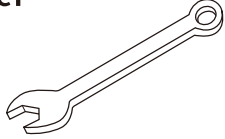


【Accessory parts】





! Some parts are included in case of loss.  
The extra parts are spares.- The number in the tables is the required number.

- Use M and N that match the TV you are installing.
- Please keep any extra parts as you may need them when you replace the TV.

Body assembly parts

<b>D</b>  × 2	<b>E</b>  × 1	<b>spanner</b> 
---	---	---

TV installation parts

<b>M</b>  × 4 (small) <hr/>  × 各 4 (45、55mm)	<b>N</b>  × 4 (medium) <hr/>  × 各 4 (45、55mm)
--	---





! Use M and N that match the TV you are installing.

paper measure




screw hole measurement tool

spacer (large)

spacer (small)

 × 1	 × 1	 × 8	 × 4
---	---	---	---

【Main body parts】

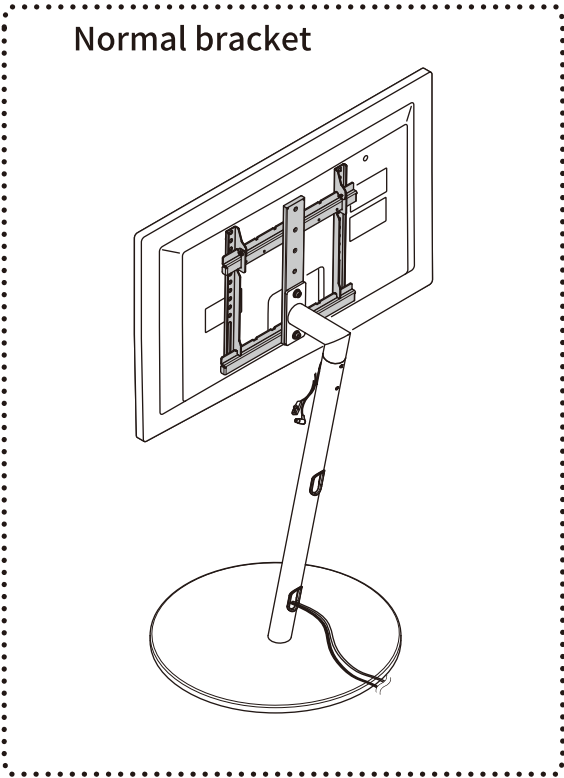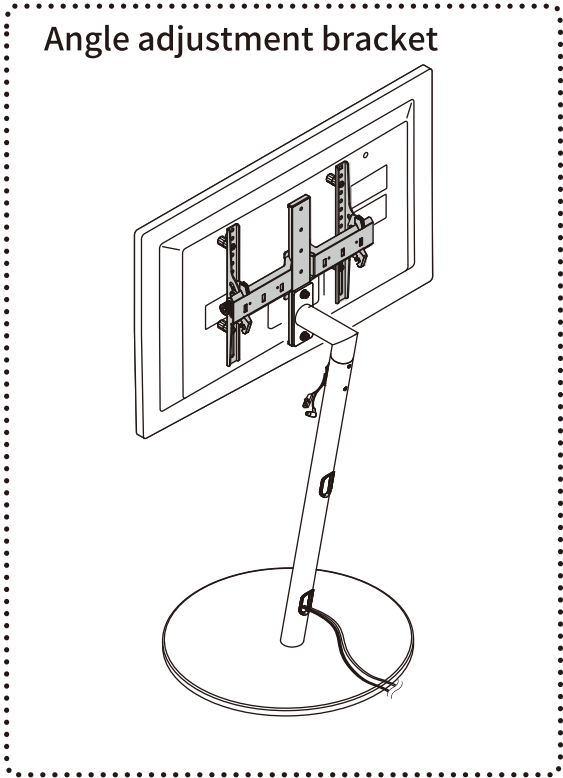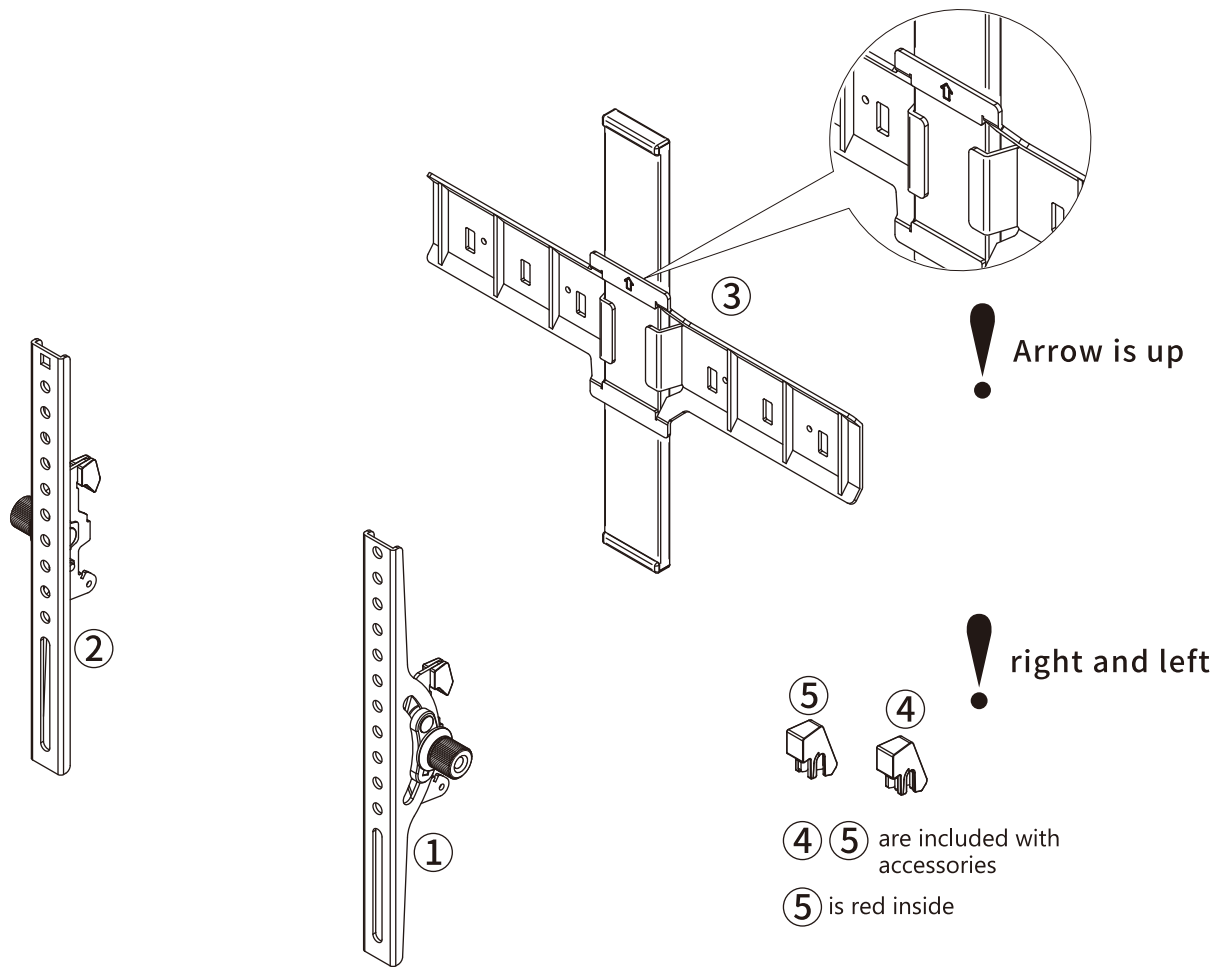

Before assembling

Step1

Step2



Step3





TV tilt adjustment method  
Safety precautions

# Step 1 Prepare to install the TV

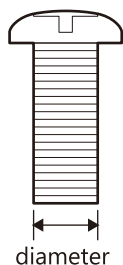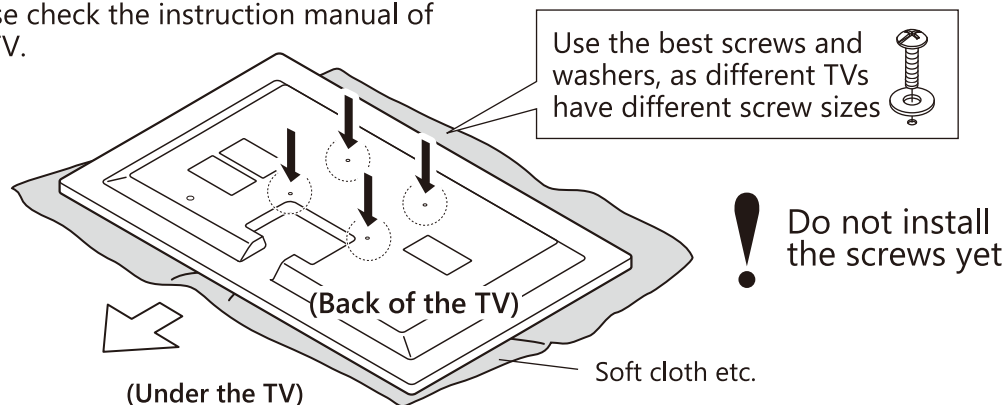
## 1 Check the diameter of the screw holes


! To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.



M	N
 × 4 (small)	 × 4 (medium)
 × 4 each (45, 55mm)	 × 4 each (45, 55mm)

## 2 Measure the depth of the screw hole

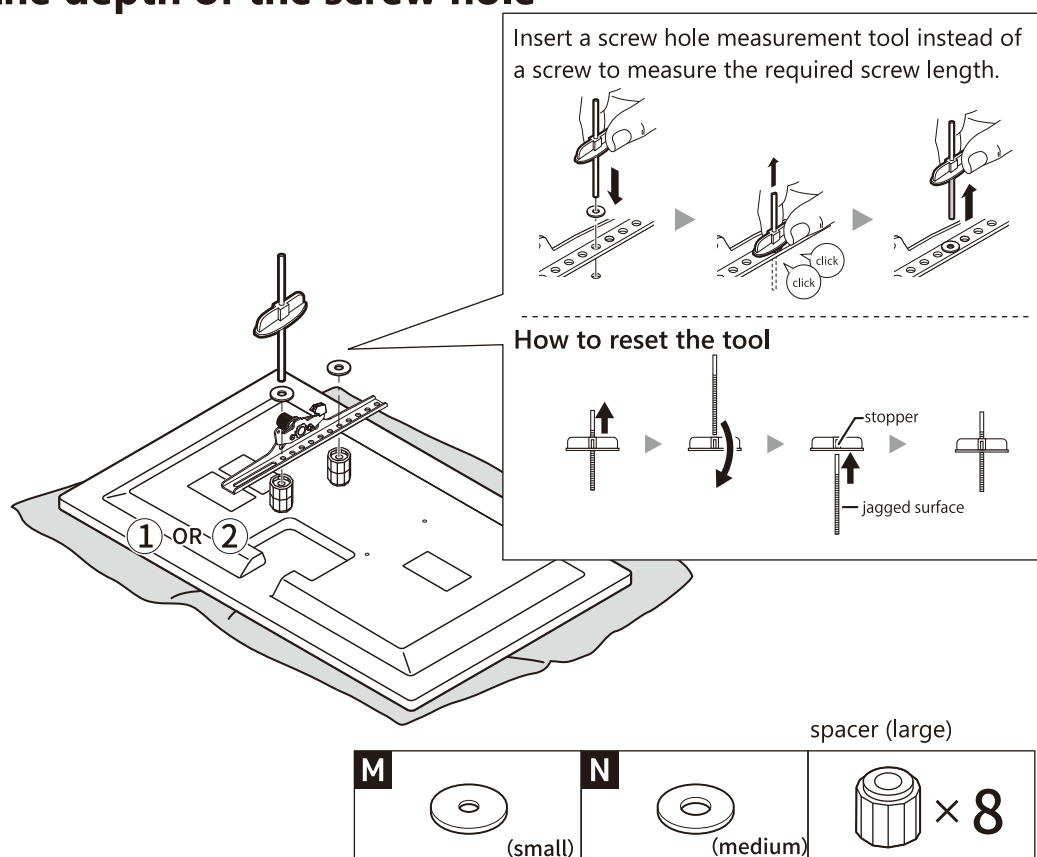

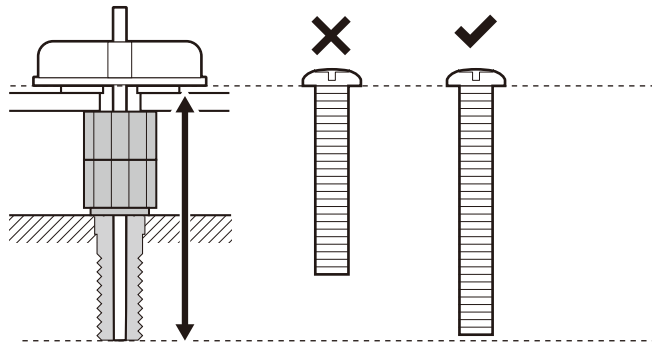**3****Choose the screw of the required length**

If the thickness of the screws in the screw set does not match or the length of the screws is not enough, please purchase.

M (diameter) x (length) mm

e.g. 5mm diameter, 15mm length


--> M5 x 15mm

Please select "truss screws" or "pan screws" .




There is no problem if the screw is hooked 5 turns or more.

**If you can't find a screw of the required length,  
use spacer(small) to adjust the screw length.**

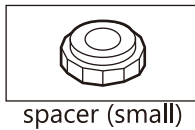


spacer (small)


The thickness is  
approximately 5mm.

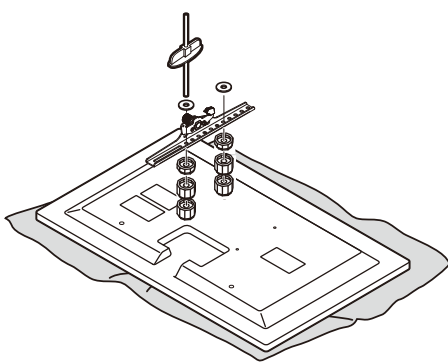


Before adjustment

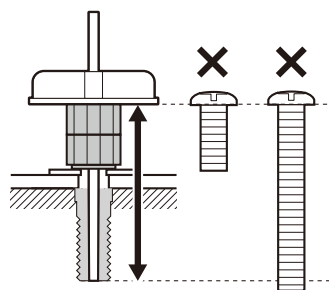


After adjustment

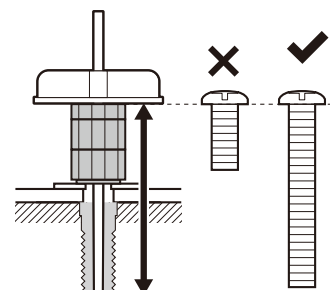

4

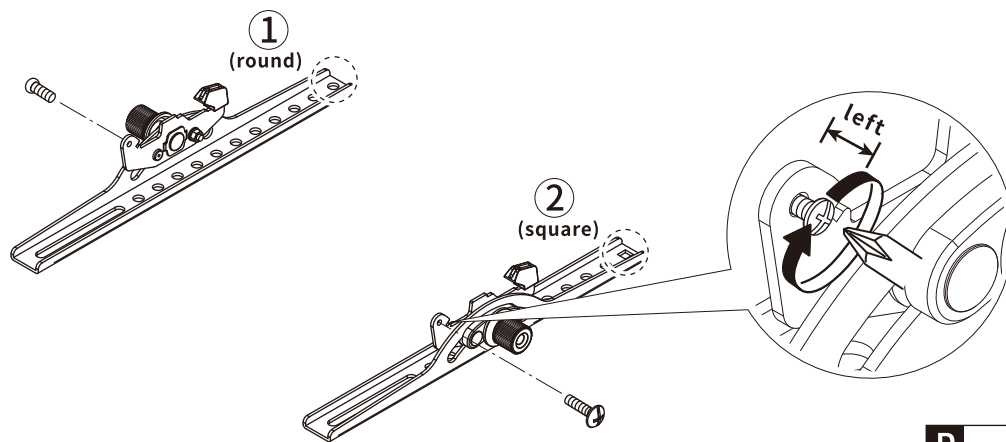


! Check that the knob is tightened in the position shown in the illustration. If it is loose, the TV may move when mounted on the stand.

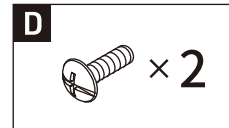



5

## Assemble with suitable screws.

Spacers only if needed.

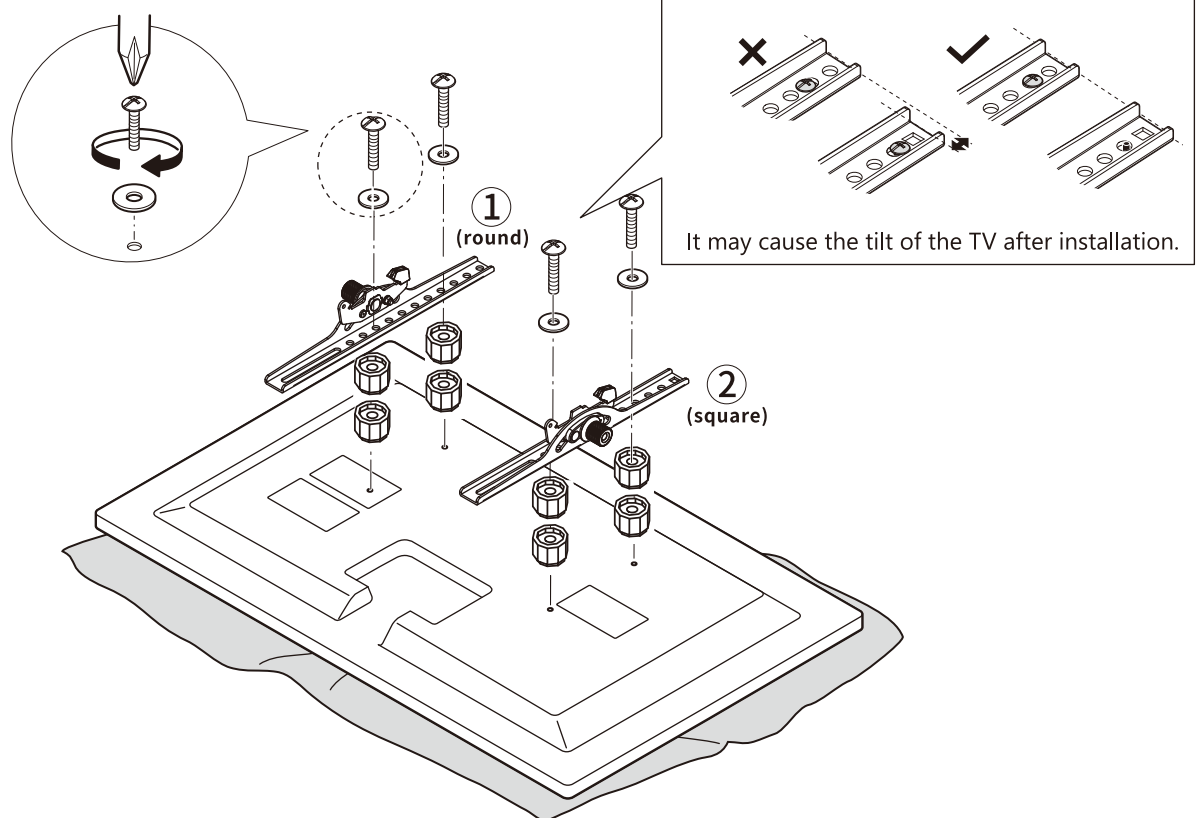


! To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.

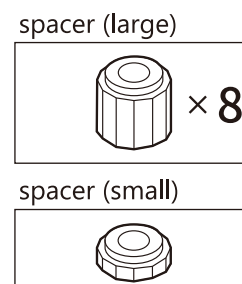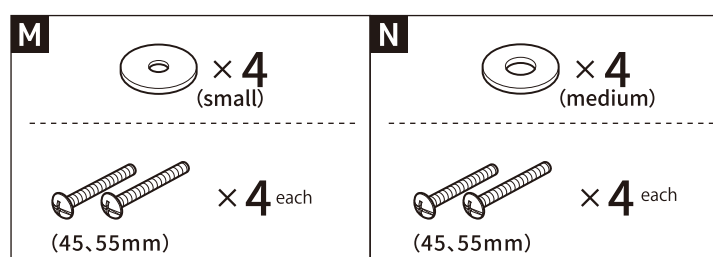



# Step2

## Determine the installation height of the TV and assemble

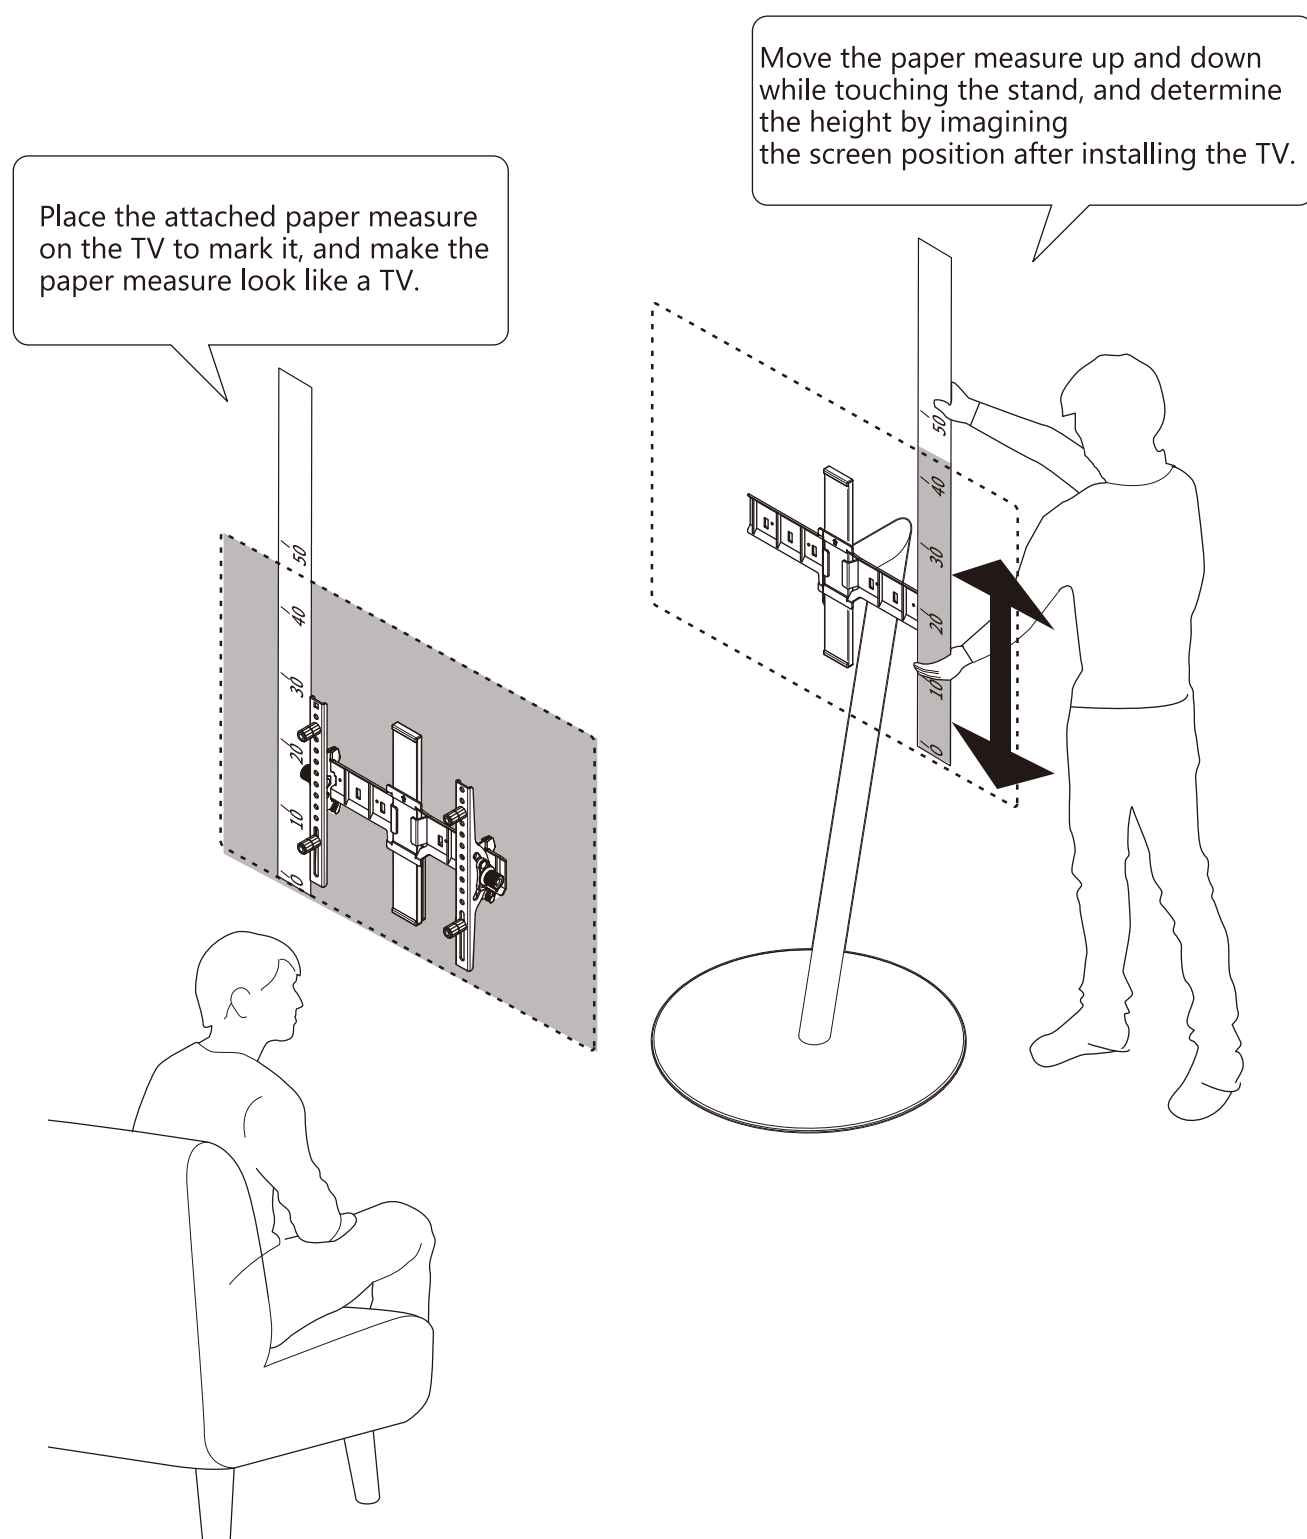

Before assembling

Step1

Step2


Step3

TV tilt adjustment method  
Safety precautions

1

## Make marks on a paper measure

Use a pen to write the marks A and C for the size of the TV and the mark B to match the stand body

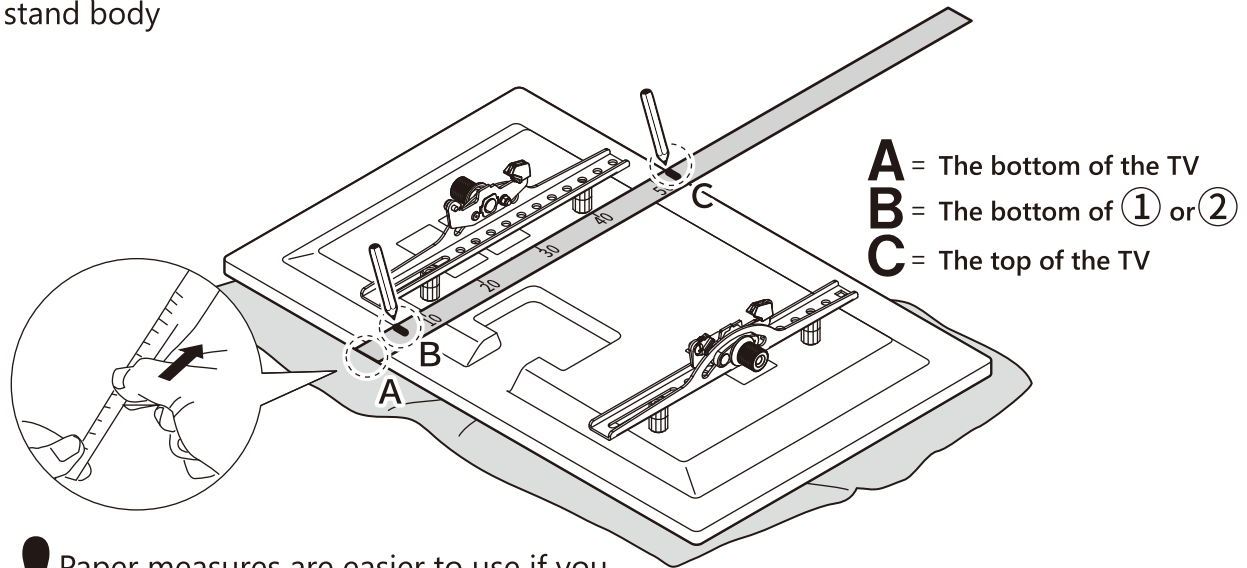


Paper measures are easier to use if you crease them in half.

The mark B is the level for matching with the stand body.

2

## Determine the height

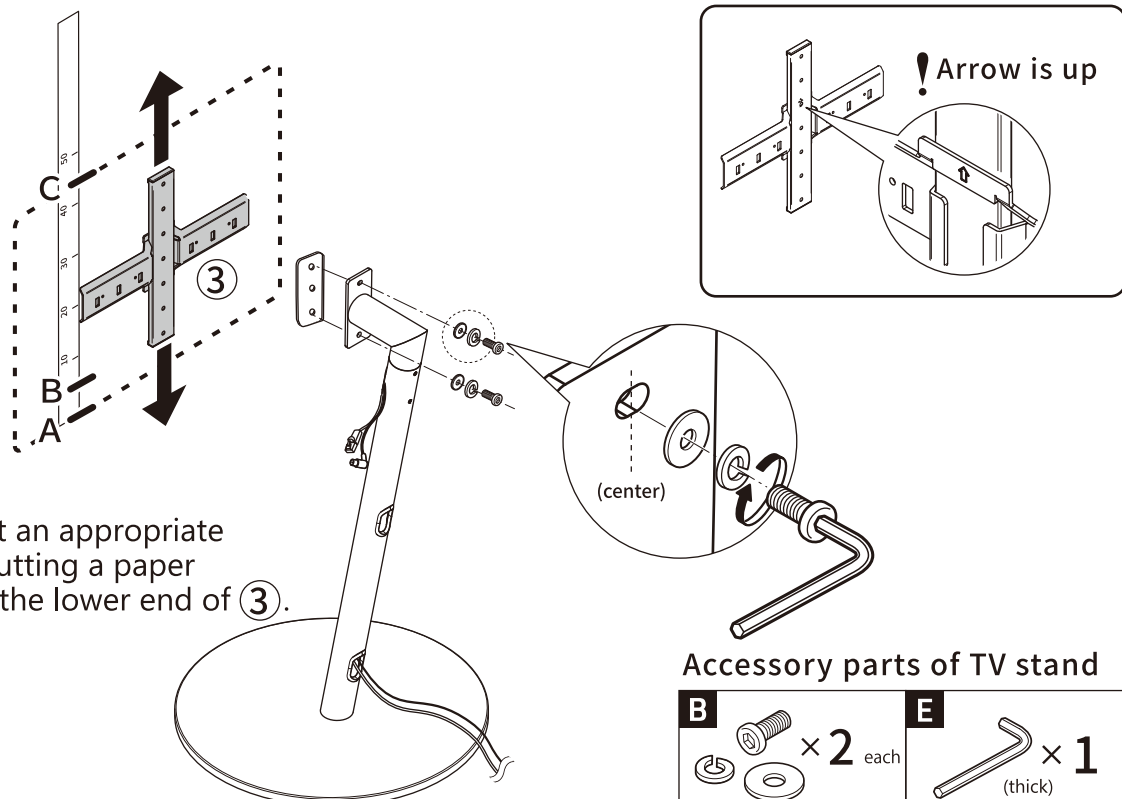

Attach ③ at an appropriate height by putting a paper measure at the lower end of ③.



From this height, you can increase the height by 5cm, up to a maximum of 20cm

### Accessory parts of TV stand

<b>B</b>  × 2 each	<b>E</b>  × 1 (thick)
Non-slip sheet  × 1	


# Step3

## Install the TV to the TV stand


1

- ! Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard.



Refer to the instruction manual of the TV for how to hold the TV. Two or more persons do the installation.

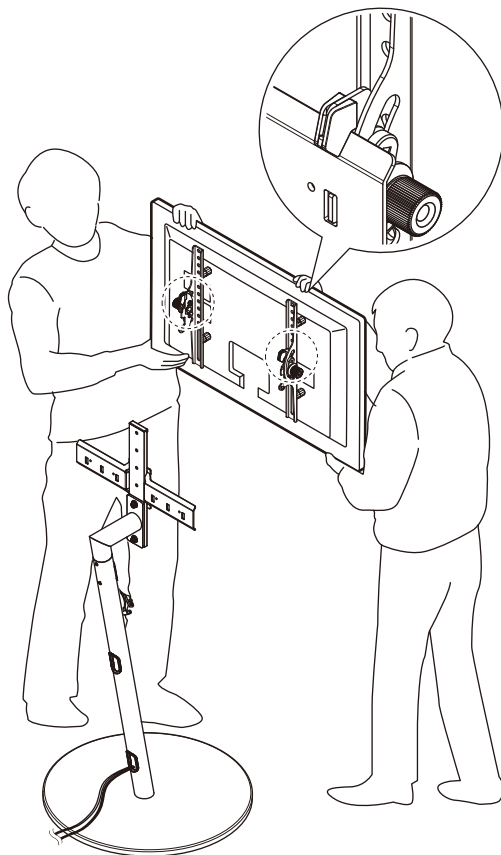

- ! In case of carrying a small TV by yourself, install it from the back of the TV stand.

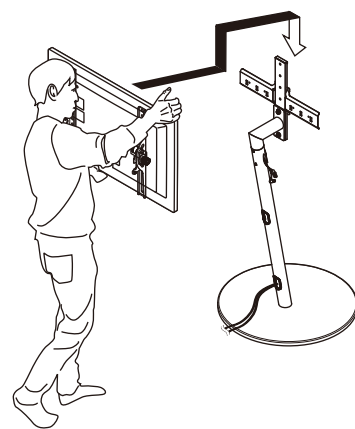

2

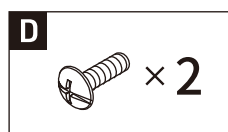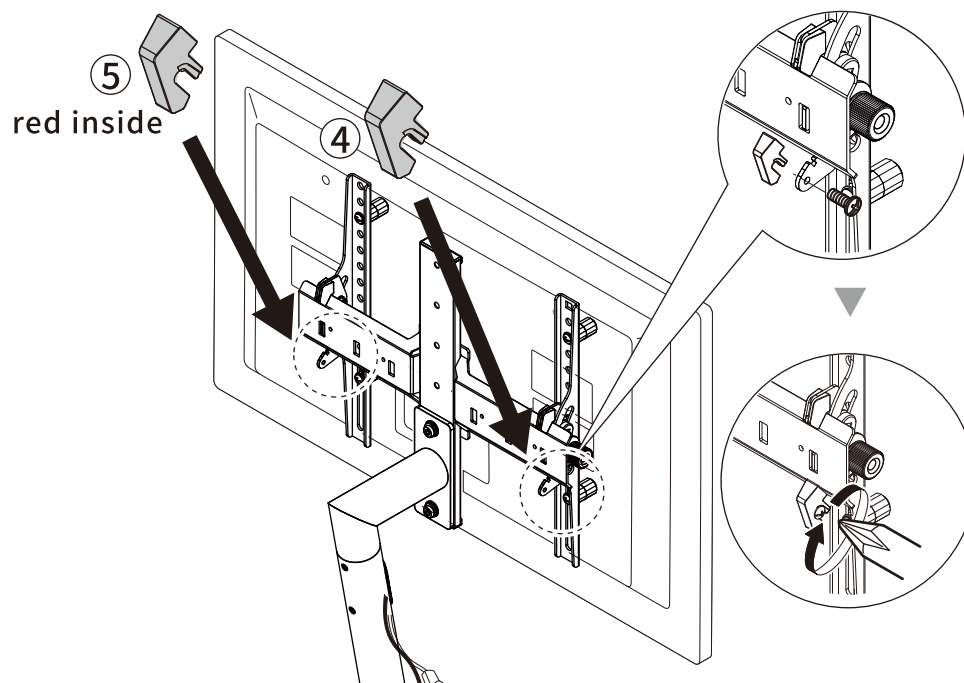

Before assembling


Step1

Step2


Step3

TV tilt adjustment method  
Safety precautions


### 3 Put through the cables

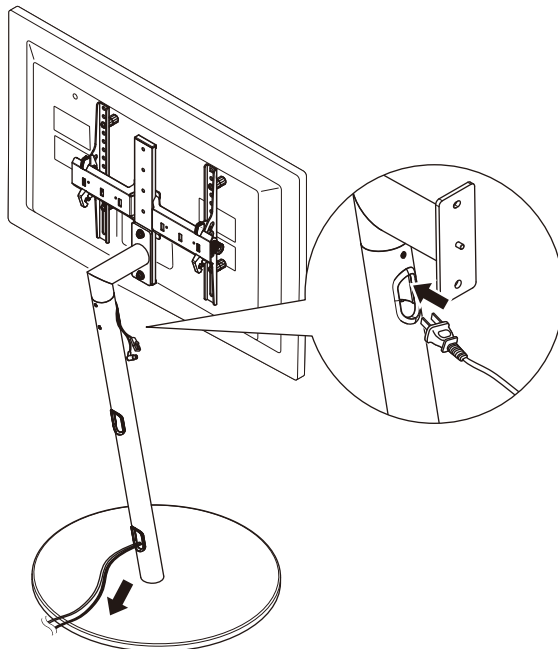

#### How to adjust the tilt of the TV

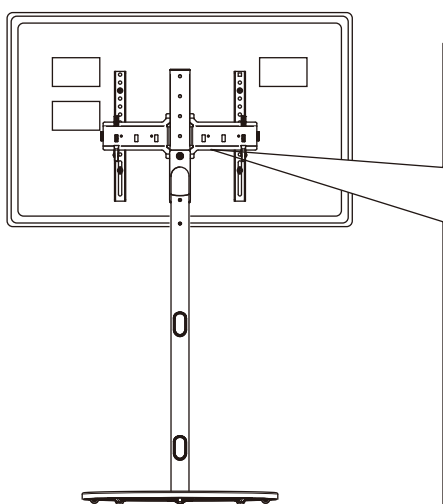


1. Loosen the upper screw only , not to loose the lower one.
2. Tilt until the TV is level
3. Tighten the screw

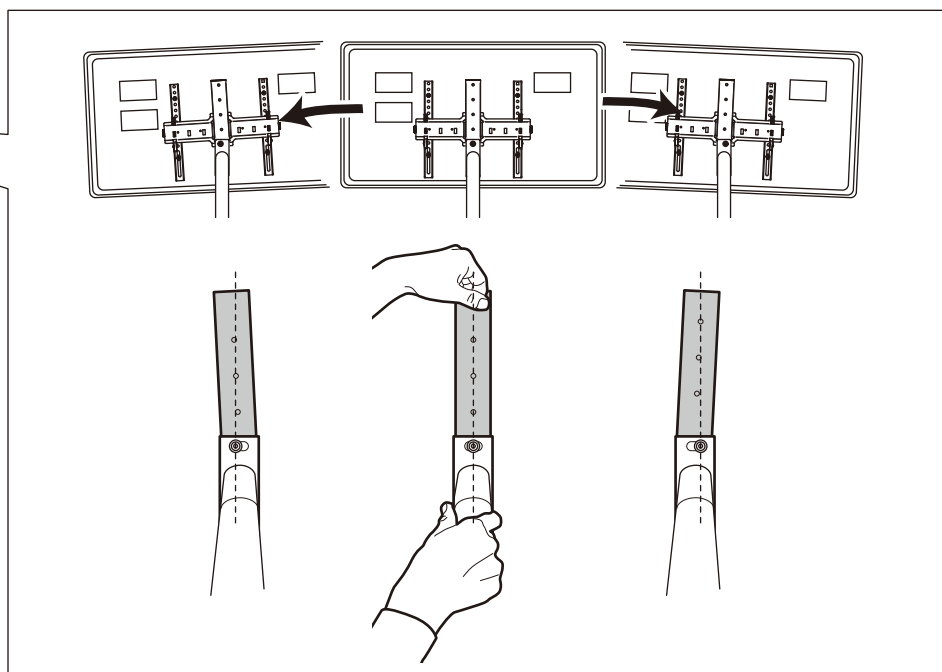

Adjust the tilt while supporting a TV

How to adjust the angle of the TV \_\_\_\_\_


The angle can be adjusted up to 20° upward and 20° downward by loosening the right and left angle fixing knobs.

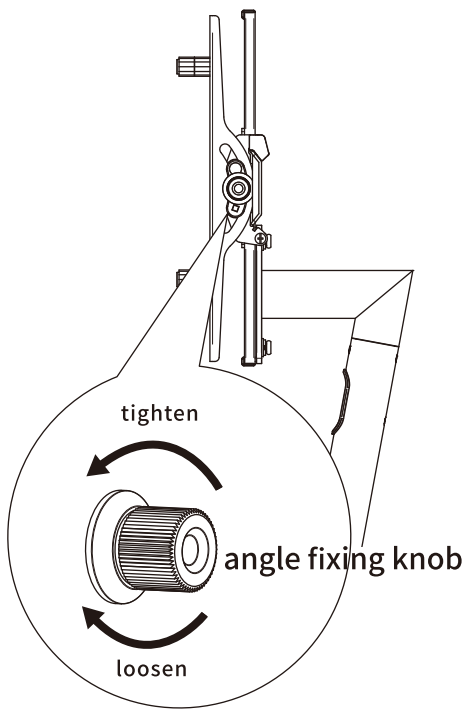

angle fixing knob

tighten

loosen

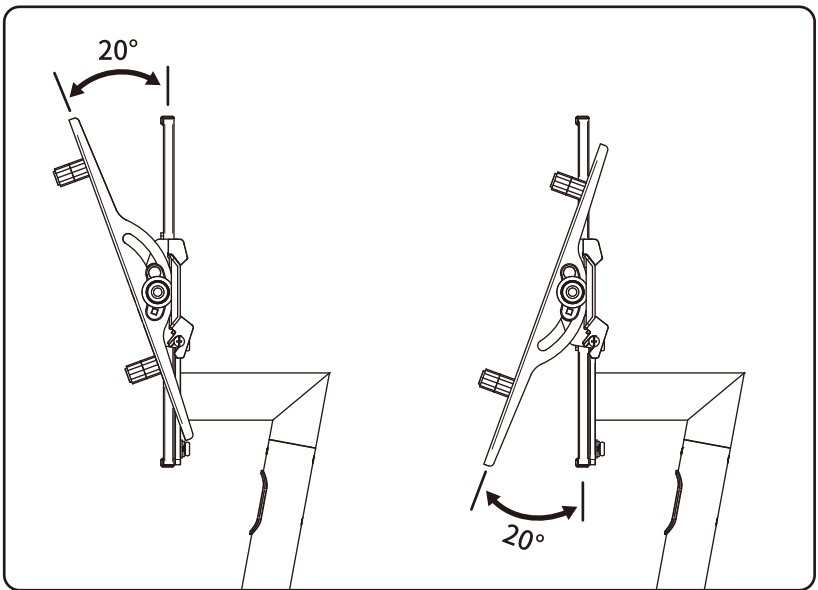


20°

20°

1. Loosen the right and left angle fixing knobs.

2. Adjust the angle and tighten the knobs.

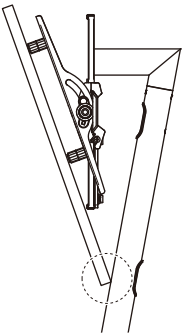


Depending on the height setting of the stand and the mounting position of the bracket, the TV may interfere with the stand pipe when adjusting the angle downward.

In cases like this .....

If the movement is stiff when adjusting the angle or the TV faces down as soon as the angle fixing knob is loosened, the following adjustment can be done.

Start the adjustment with the TV facing down.

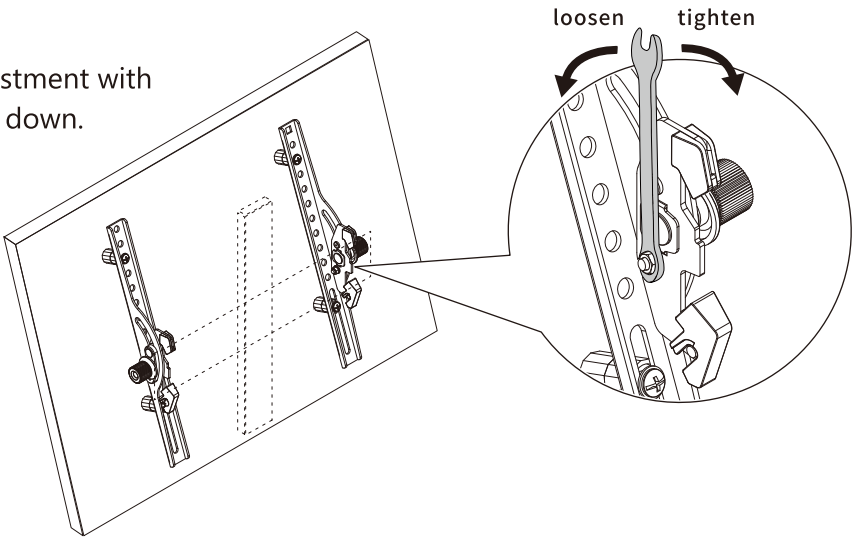

loosen

tighten

Before assembling

Step1


Step2

Step3


TV tilt adjustment method  
Safety precautions

12


**[Sold separately] Installation of HDD HOLDER**

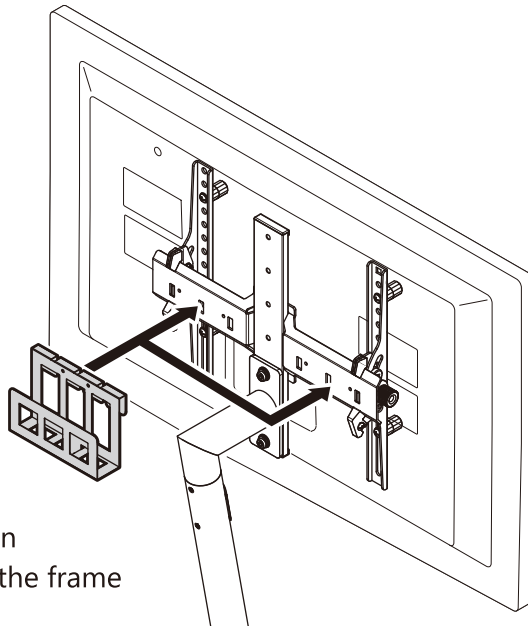

It can be mounted on  
the right and left of the frame

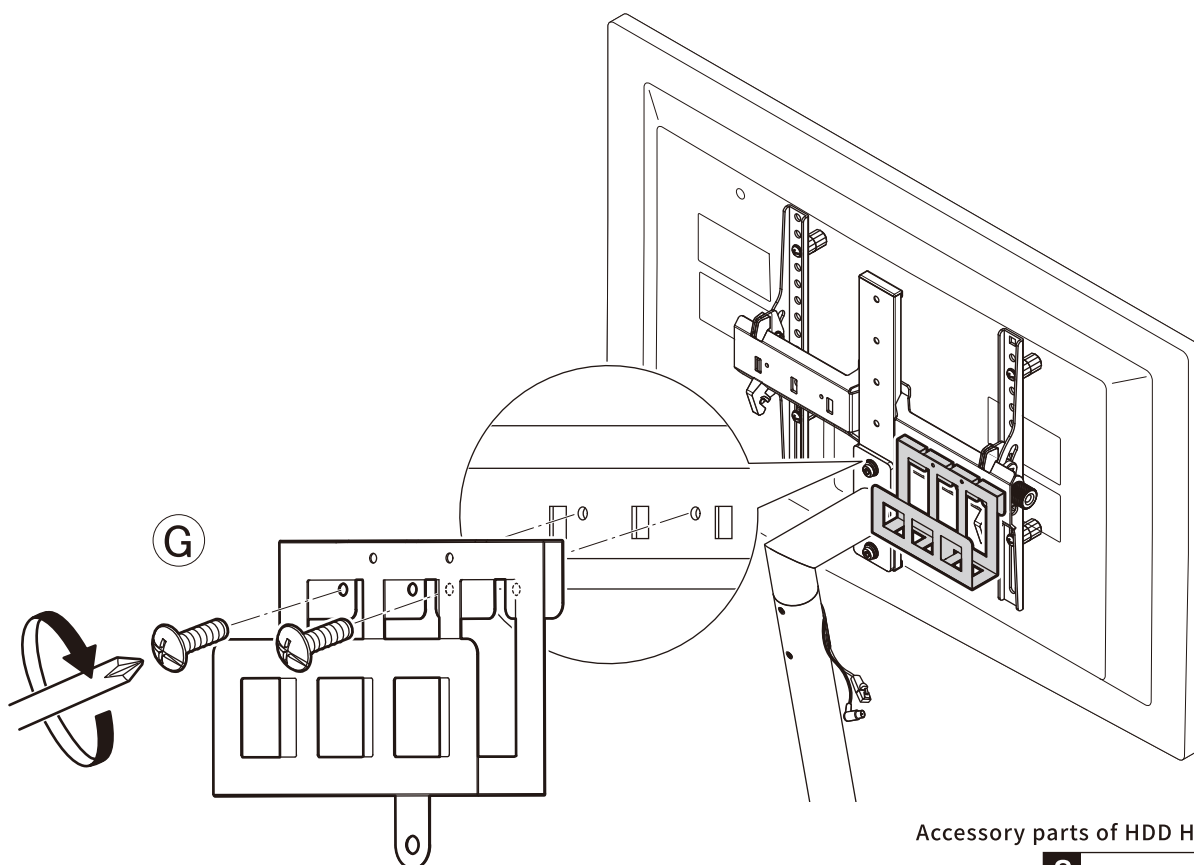

Accessory parts of HDD HOLDER

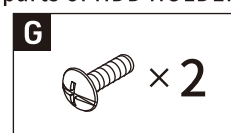


# ! Safety precautions

Failure to abide by the following advisories may result in personal injury or property damage:




**Securely tighten bolts and screws in place before installing the TV**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

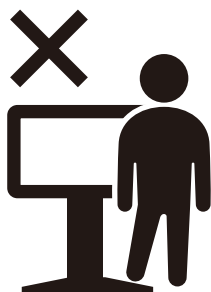


**Do not step on the base**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

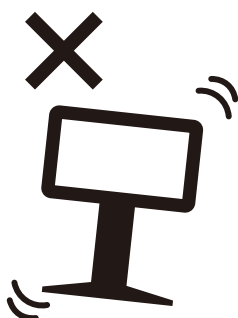


**Do not install the TV stand on a unstable place**

Install on a flat and stable place with sufficient load bearing strength. (Do not install on sloped or uneven surfaces, unstable surfaces such as carpets, or deformed surfaces)

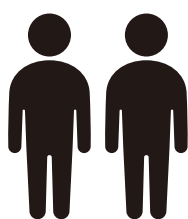

**Do not move the TV stand with the TV installed**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

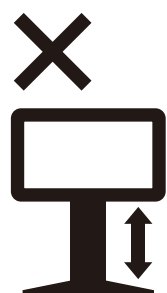

**Do not adjust the height with the TV installed**

The TV stand may fall over or the TV may fall off, resulting in damage or injury.



**Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard**

Refer to the instruction manual of the TV for how to hold the TV.



**Never allow children to climb, hang or move the TV stand and TV.**

The TV stand may fall over or pinch your toes, resulting in damage or injury.



**Take safety precautions when not moving the TV stand.**

Consider using the fall prevention strap or some stoppers.

Before assembling

Step1

Step2

Step3

TV tilt adjustment method  
Safety precautions

Nakamura Co.Ltd. assumes no responsibility for damage or injury

of any kind because of tipping over the stand and TV in case of earthquake or accident.



## Caution

If the following precautions are not observed, injury or property damage may occur.

### 1 Assembly and installation

#### 1. Causes of falls and damage

Be sure to assemble and install on a stable and flat surface. Spread a thick cloth or cardboard over the workspace so as not to damage the floor or walls.

#### 2. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or, air conditioning.

#### 3. Causes of fire and electric shock

When installing or removing a flat-screen TV from this product, be sure to turn off the power switch of the flat-screen TV, unplug the power plug from the outlet, and disconnect external connection cords (such as the cord between the antenna and TV). Otherwise, the cord may be damaged, resulting in fire or electric shock.

### 2 During use

#### 1. Causes of falls, injury and damage

Do not stand or hang on the product or use it for anything other than a TV stand.  
Do not apply a concentrated load to the TV stand. (It may tilt).  
Be careful not to pinch hands or fingers.

#### 2. Causes of fire and discoloration

Do not use near a fire or heat source such as a stove or heater.

#### 3. Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

### 3 Care and maintenance

#### Causes of cracking, discoloration and deformation

Do not wipe the surface with a damp cloth.  
Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.

- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt, and wipe off any residual moisture with a dry cloth.

- Check the screws regularly and tighten them securely if they are loose. (Once a month)