

# WALL®

## WALL INTERIOR TV STAND

上下左右角度調整ブラケット

製品コード	サテンブラック WLMB55119
製造No.	D05000180

サイズ W24.5×D9×H26.5cm 材質 スチール,PVC  
表面加工 粉体塗装 重量 2.5kg 原産国 中国 耐荷重 40Kg

### 組立説明書 (第1版)

この度は、お買い上げいただき誠にありがとうございました。

この商品を末永く、安全にお使いいただくために、この「組立説明書」をよく読み正しくご使用ください。

また、これらを必要に応じて見られるよう、大切に保管してください。

#### 免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



注意

- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。
- ・小さなお子様がいらっしゃるご家庭では、誤ってスタンドやテレビを転倒させてしまう可能性があるため、必ず転倒防止金具で固定してご使用ください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

組み立て前のご確認事項 >P1

**Step1**  
テレビの取り付け >P4  
準備をする

**Step2**  
テレビの設置 >P8  
高さを決めて  
組み立てる

**Step3**  
テレビを  
テレビスタンドに >P12  
取り付ける

テレビの調整方法 >P13  
安全上のご注意 >P16

公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ

[info@equals.tokyo](mailto:info@equals.tokyo)

お問い合わせフォーム



## ⚠ 組立の前に必ずご確認ください。

本製品は、テレビの機種によってお取り付けできないものがあります。  
下記を参考に、組み立てる前に取り付けが可能か必ずご確認ください。  
製造ロットや製造場所の違いなどにより商品によって色合いが異なる場合がありますのでご了承ください。

### 1. お手持ちのテレビが下記3項目すべてに該当することをご確認ください。

1-1. テレビのサイズが WALL V2 は 32 ～ 60V、WALL V3 は 32 ～ 80V であること


1-2. テレビの重量（スタンドを含まず）が 40kg 以下であること

1-3. テレビメーカーが壁掛け対応としているテレビであること

※背面形状などの諸条件があっていたとしても、壁掛け非対応としているテレビがあります。

### 2. お手持ちのテレビの背面形状をご確認ください。


2-1. 4 カ所のネジ穴の間隔が、下記 A.B の条件を満たしている。

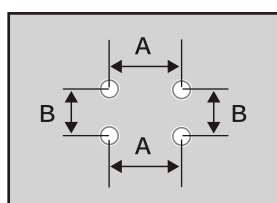


A: 10, 20, 30, 40 cm (WALL V2)  
10, 20, 30, 40, 50, 60 cm (WALL V3)  
(いずれかに該当)  
B: 10 ～ 40 cmの範囲内

2-2. 上記の条件を満たし、下記のいずれかに該当すること。


4カ所のネジ穴が凸部分に  
すべてある

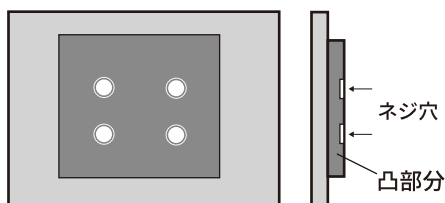

4カ所のネジ穴の面に  
凸部分がない

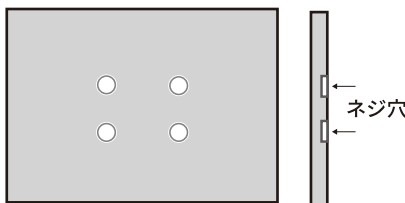


4カ所のネジ穴の下にある  
凸部分の段差が 4cm 以下

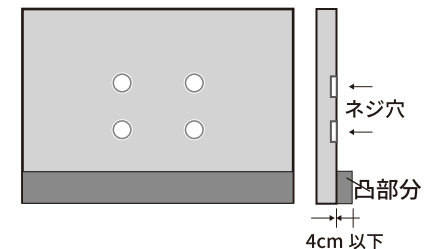


✕ 下記のようなテレビは取り付けできません。


4カ所のネジ穴の一部が  
凸部分にある

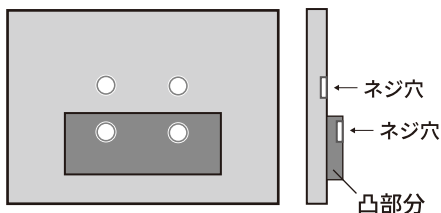



4カ所のネジ穴の間に  
凸部分がある

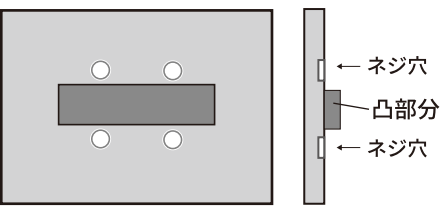


4カ所のネジ穴の下にある  
凸部分の段差が 4cm 以上ある

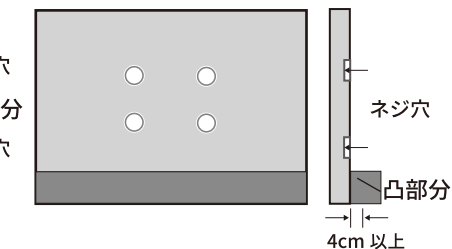


### 3. 耐荷重と棚板の取り付けについてのご注意

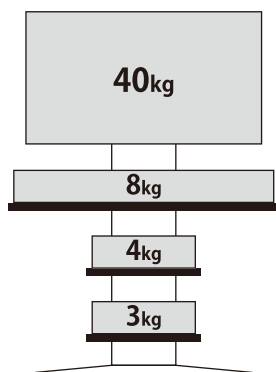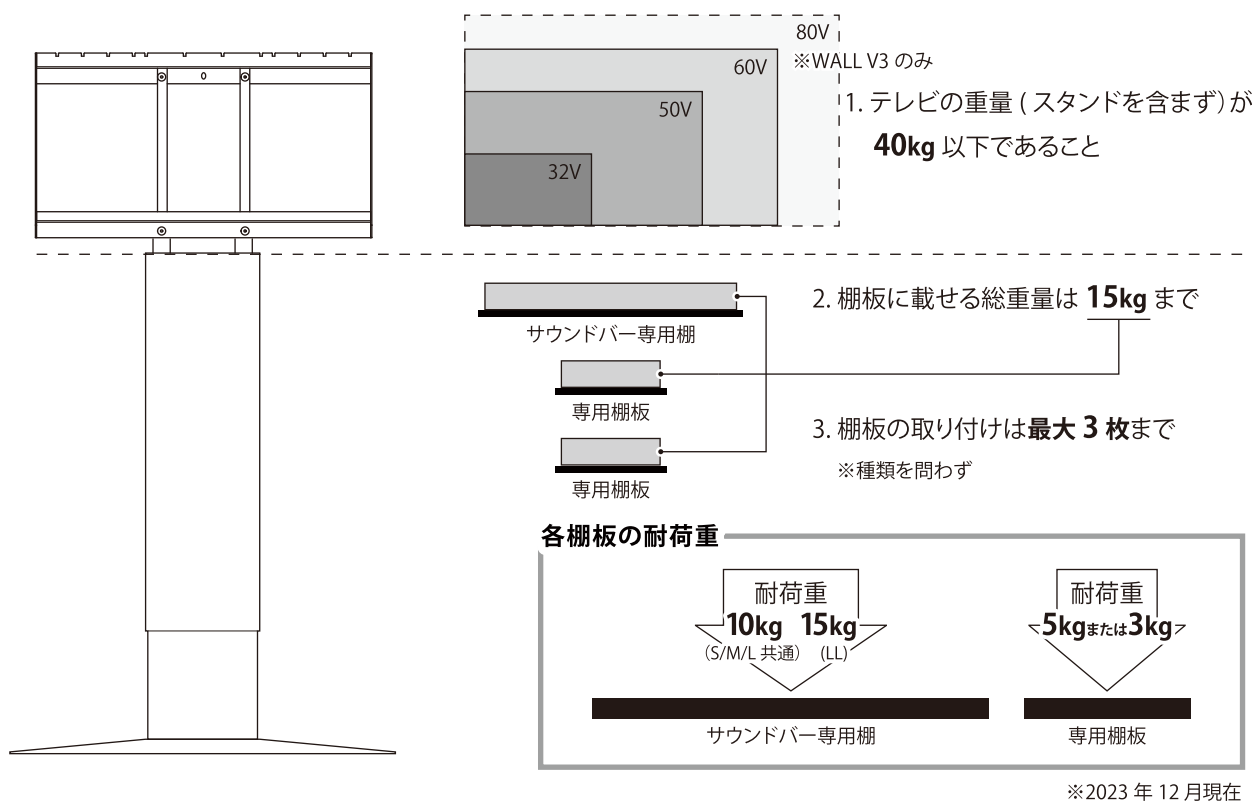


棚板の有無に関わらず、  
テレビの重量は**40kg**以下

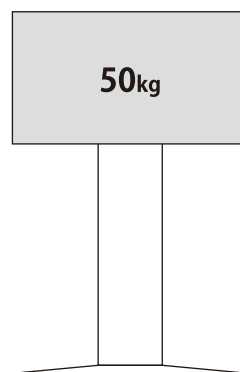


棚板に載せる総重量は**15kg**まで

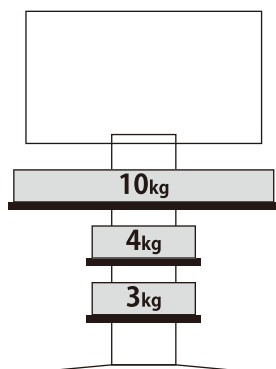

棚板の取り付けは**最大 3 枚**まで

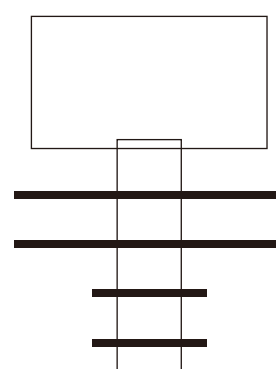

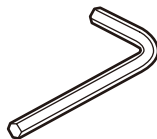


【本体部品】

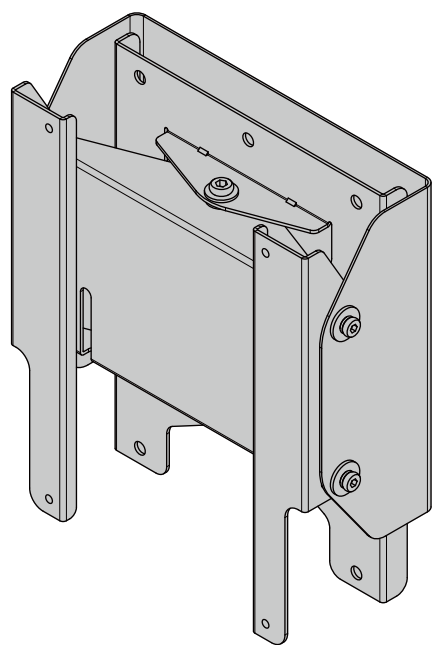

【付属部品】

一部の部品は、【下記数量＋予備数量】を入れているため、組み立て後に残る場合があります。  
テレビ交換時に必要になる場合がありますので【未使用部品】も全て大切に保管してください。

X	 × 4	Y	 × 4	Z	 × 1
---	---	---	---	---	---

# Step1



## テレビの取り付け準備をする

取り付け例は WALL V3 High Type です。  
モデルによって部品形状や高さが異なりますので、スタンド本体の組立説明書をご確認ください。

1

### 必要な長さのネジを選ぶ

ネジを入れてみてネジ穴の直径を確認する



テレビによってネジサイズが異なるため、最適なネジとワッシャーを使用します。


取り付け可能テレビの詳細はコチラから>



パネル割れ防止のため、画面を下に寝かせてはいけないテレビがありますので、テレビの取扱説明書をご確認ください。



ネジの取り付けは、まだ行わないでください。

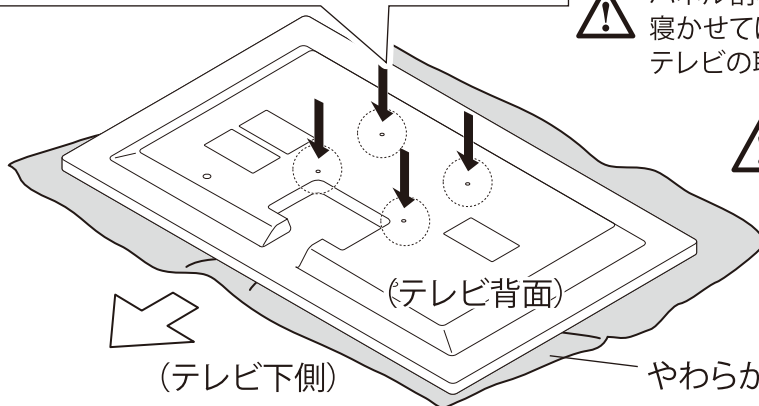

M		× 4	N		× 4	O		× 4
	(小)			(中)			(大)	
		(15,25,35mm) × 4 ずつ			(15,25,35,45,55mm) × 4 ずつ			(15,25,35,45mm) × 4 ずつ




組み立て前のご確認事項

ステップ 1

ステップ 2


2

### ネジ穴の深さを測る




Info



スペーサーを使用する場合は、イラストのように測ります。

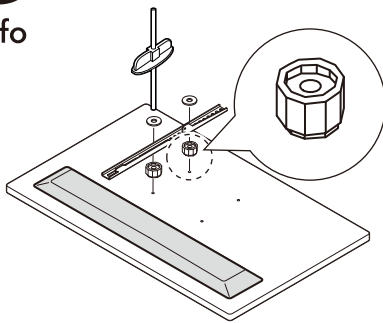

ネジのかわりにネジ穴計測ツールを入れて、必要なネジの長さを測ります。

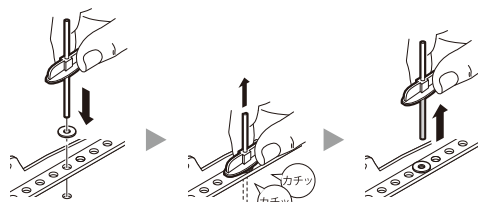


ツールの戻し方

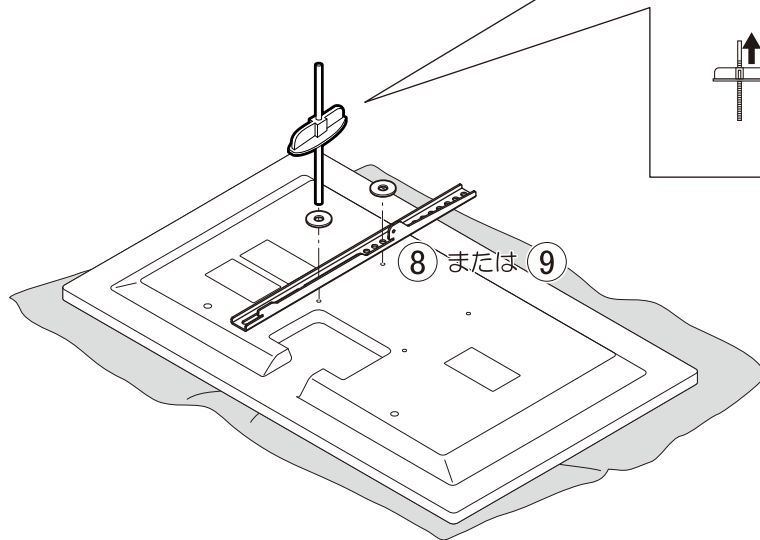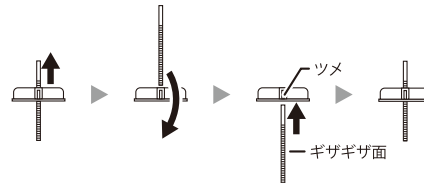


ステップ 3

テレビの調整方法・安全上のご注意

### 3 必要な長さのネジを選ぶ

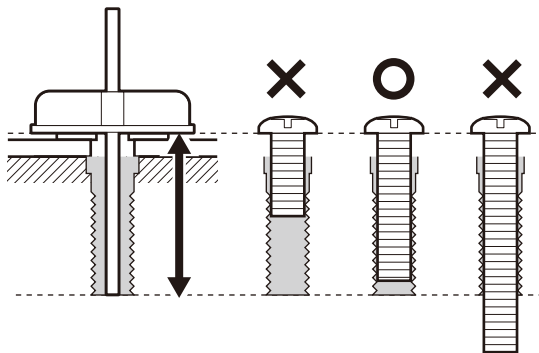

ネジの掛かりが浅い    ネジが長すぎる

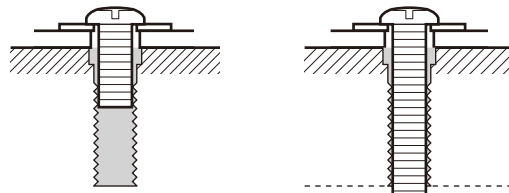

ネジの掛かりは、  
5回転以上であれば問題ありません。

Point



Info

ネジセット内のネジの太さが合わない場合と  
ネジの長さが足りない場合は、

ホームセンター等で別途お買い求めください。

M      ×      (mm)  
太さ    長さ


例) 太さ5mmで長さ15mmの場合 ➡ M5×15mm

※ネジは、[トラスねじ]または[ナベねじ]を  
使用してください。




ネジやワッシャーはスタンドに付属しているものを  
使用してください。

必要な長さのネジが見つからない場合、  
スペーサー (小) でネジの長さを調整します。




スペーサー (小)

スペーサー (小) で約5mm  
ネジを短く使用できます。

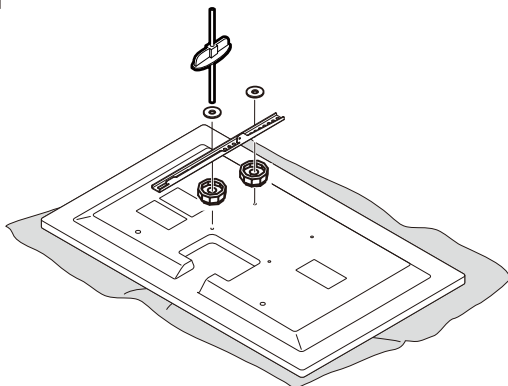


調節後


調節前

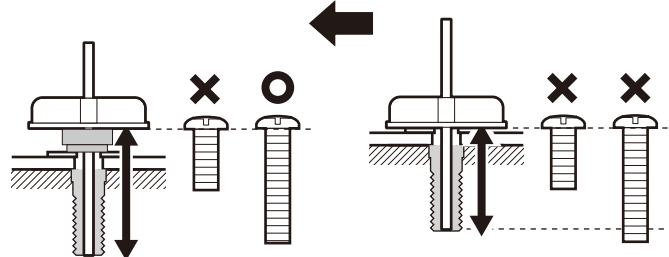


スペーサー (大) と重ねて使用する場合



スペーサー (小)




スペーサー (大)

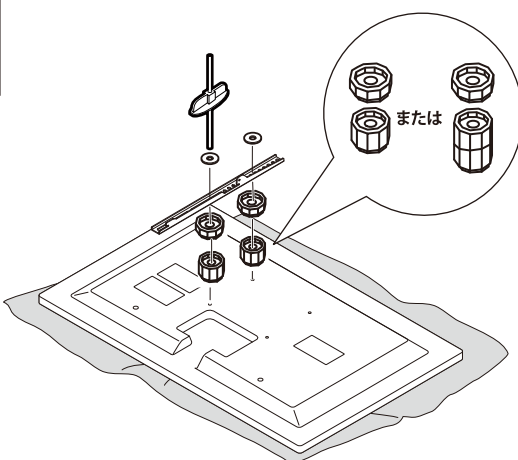

調節後



調節前

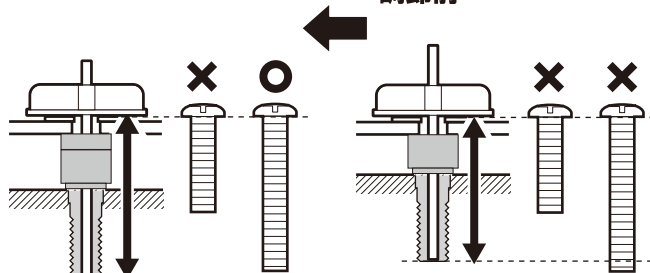

## テレビ取付金具を取り付ける前に・・・


### ネジとスペーサー

- ・必要な部品を準備します。
- ・スペーサーは必要な場合のみ

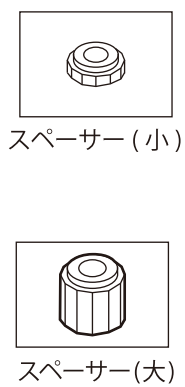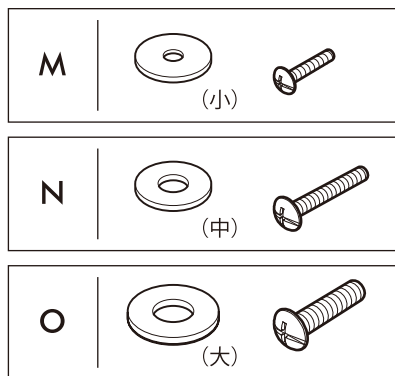

### テレビ取付金具


- ・⑧と⑨は同じ形ではありません。
- 取付位置（左右）に注意してください。

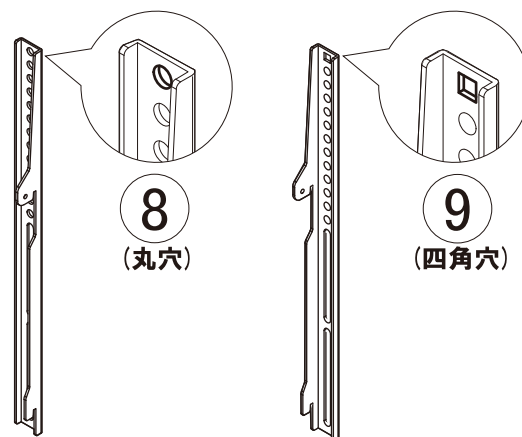


### テレビ取付金具の取り付け位置例

- ・テレビ取付金具はできるだけテレビの中心に近い位置に取り付けてください。
- ・上のネジ穴は金具の丸穴を下のネジ穴は金具の長穴を使用します。


#### ネジ穴が中央寄りにあるテレビ

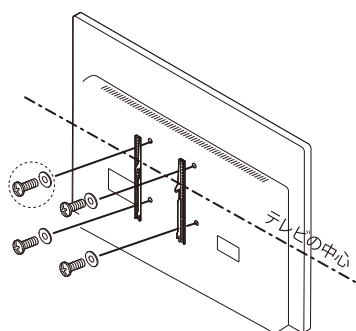


使用する取付穴の目安

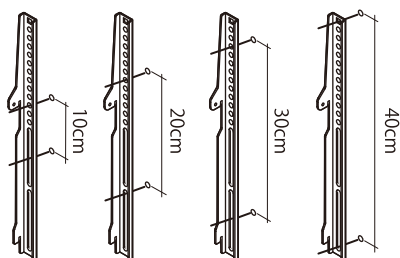


#### ネジ穴が下寄りにあるテレビ

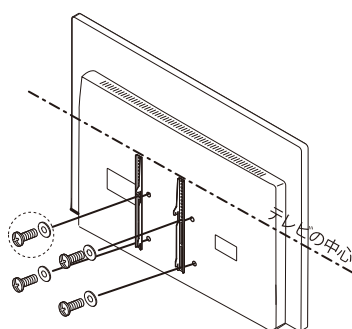

使用する取付穴の目安

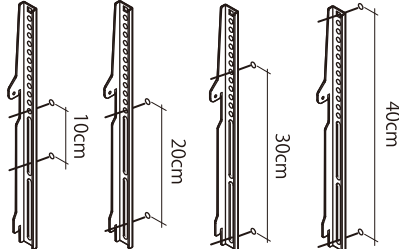


✕ テレビ取付金具を下寄りに取り付けるとスタンドの支柱が露出する原因となります。

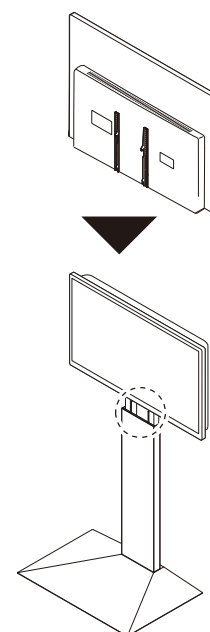

# 4

## ネジ穴の間隔を測り、テレビ取付金具を取り付ける

**!** パネル割れ防止のため、画面を下に寝かせてはいけません。  
テレビがありますので、テレビの取扱説明書をご確認ください。

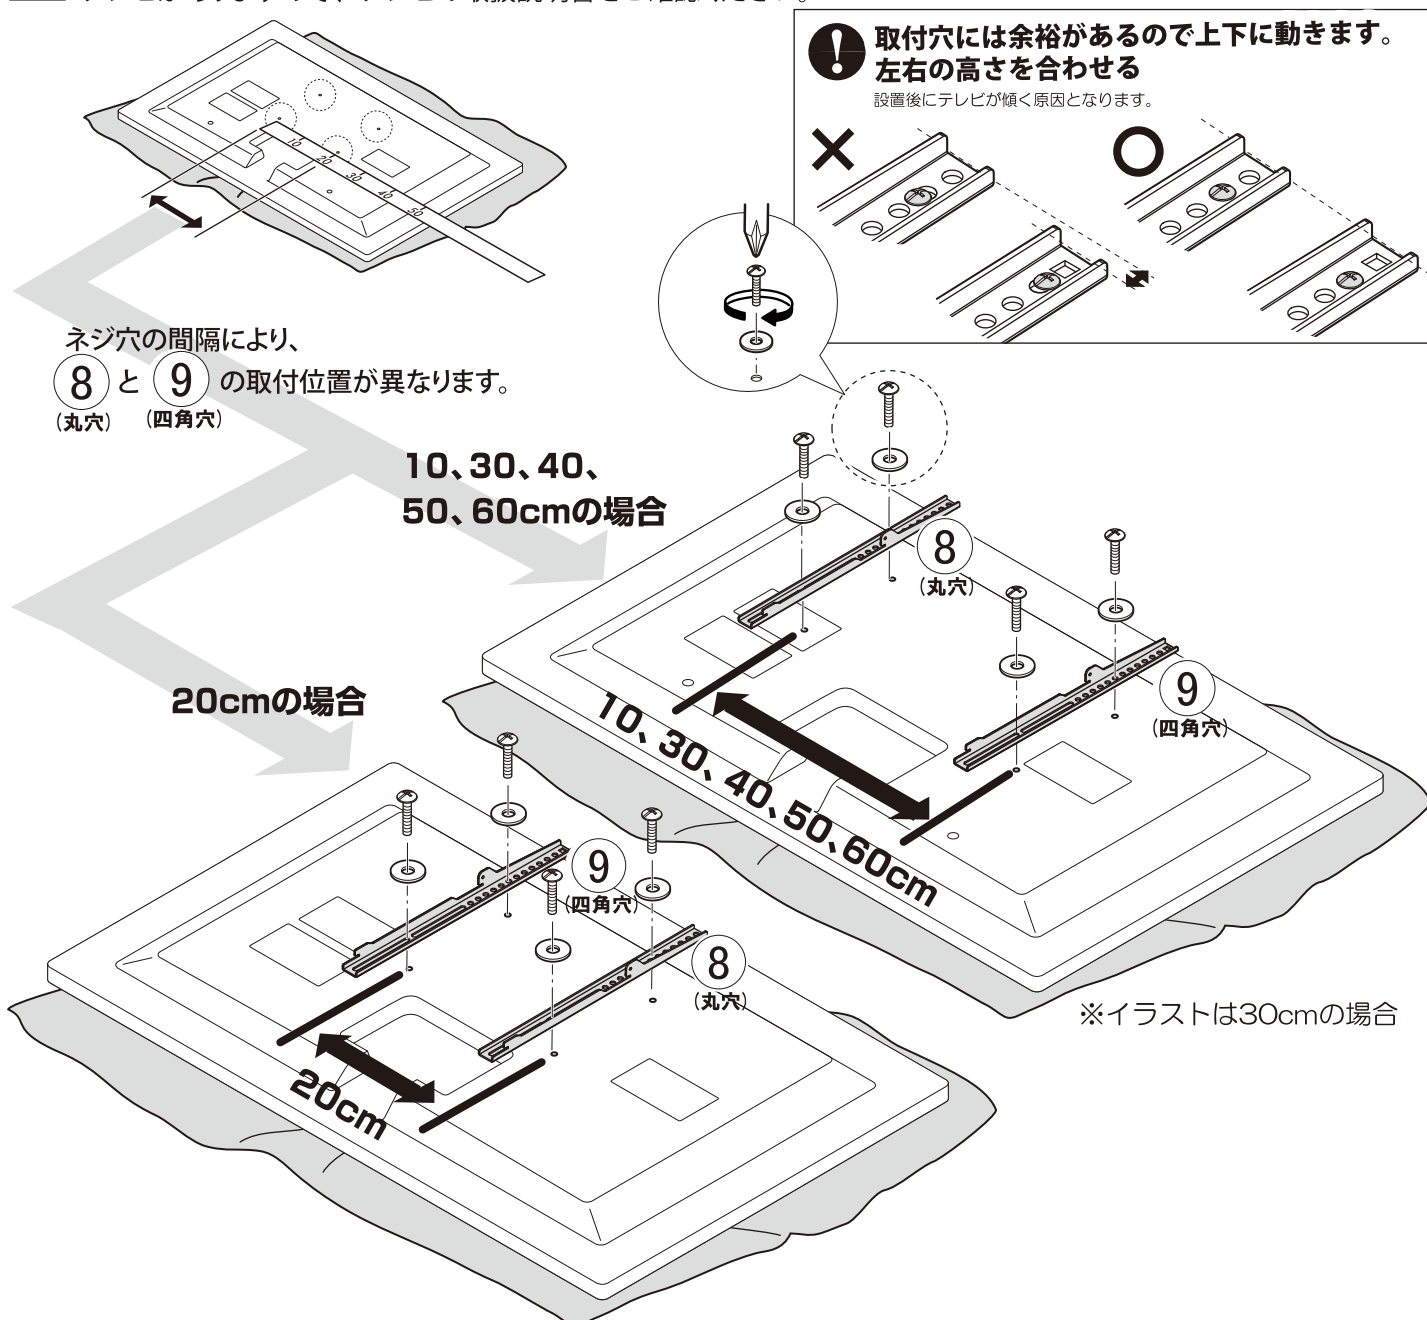



# Step2

## テレビの設置高さを決めて 組み立てる

### 1 設置高さの確認

#### テレビの仮設置

①支柱がテレビの上や下から見えていないか確認


②設置高さの確認

【高さは③のネジ留め位置を変えることで 5cm ずつ調整できます。】

③テレビの左右の高さの確認

【ブラケットを留めるネジ穴には余裕があるので、  
多少上下にブラケット位置をずらすことができます。  
左右の高さ調整時に調整してください。】

※高さを変える場合はテレビを外して調整を行ってください

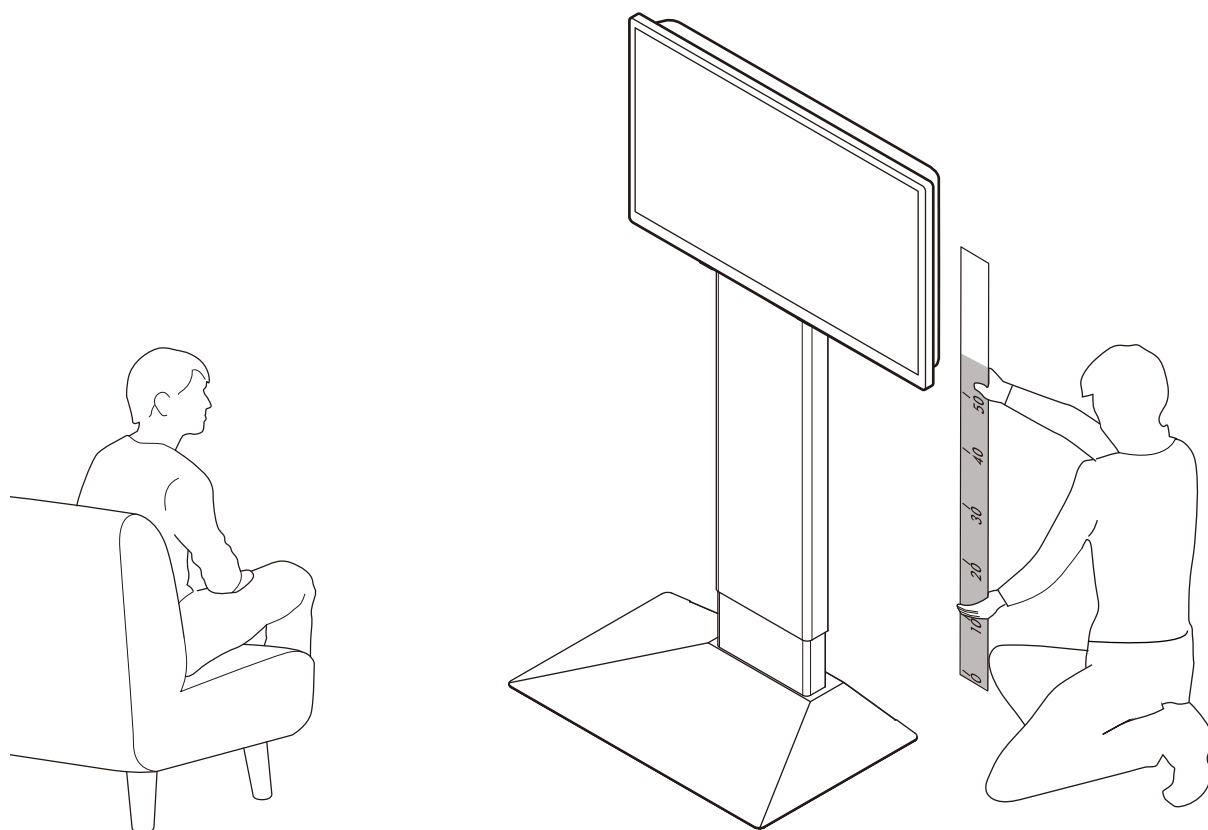


## 2 希望の高さで組み立てる


高さ調整表で、希望の高さの列を確認してください。  
支柱の背面で使用する取付ネジ穴がわかります。

高さ調整表

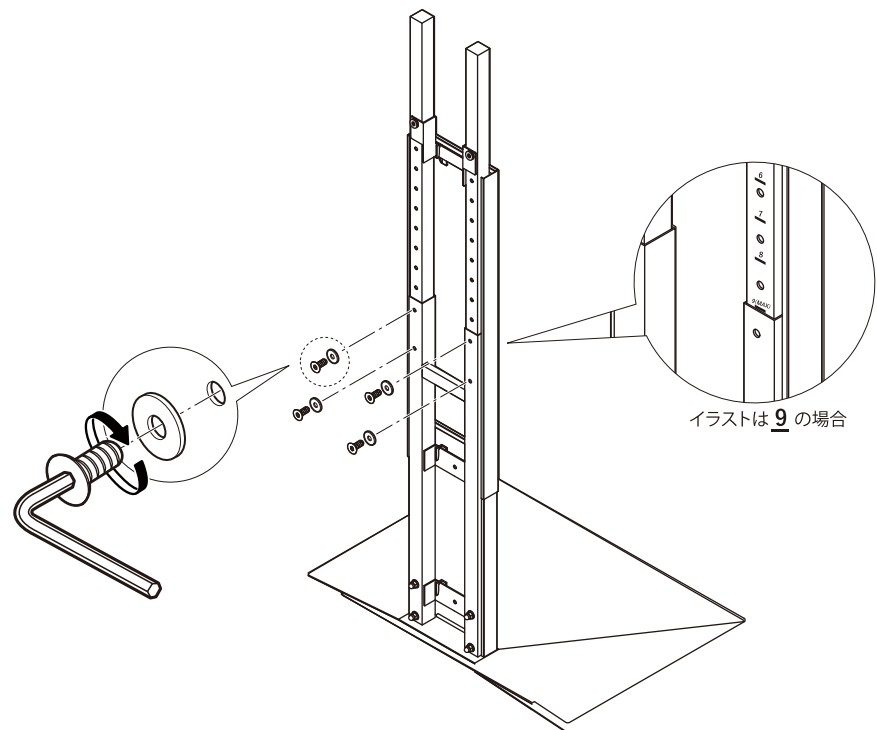


+0cm	+5cm	+10cm	+15cm	+20cm	+25cm	+30cm	+35cm	+40cm
—	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u> (MAX)

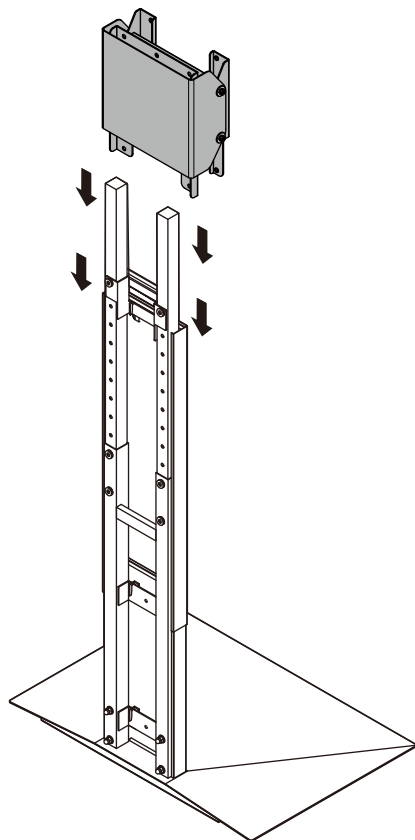


## 3 支柱に上から上下左右角度調整ブラケットを差し込む




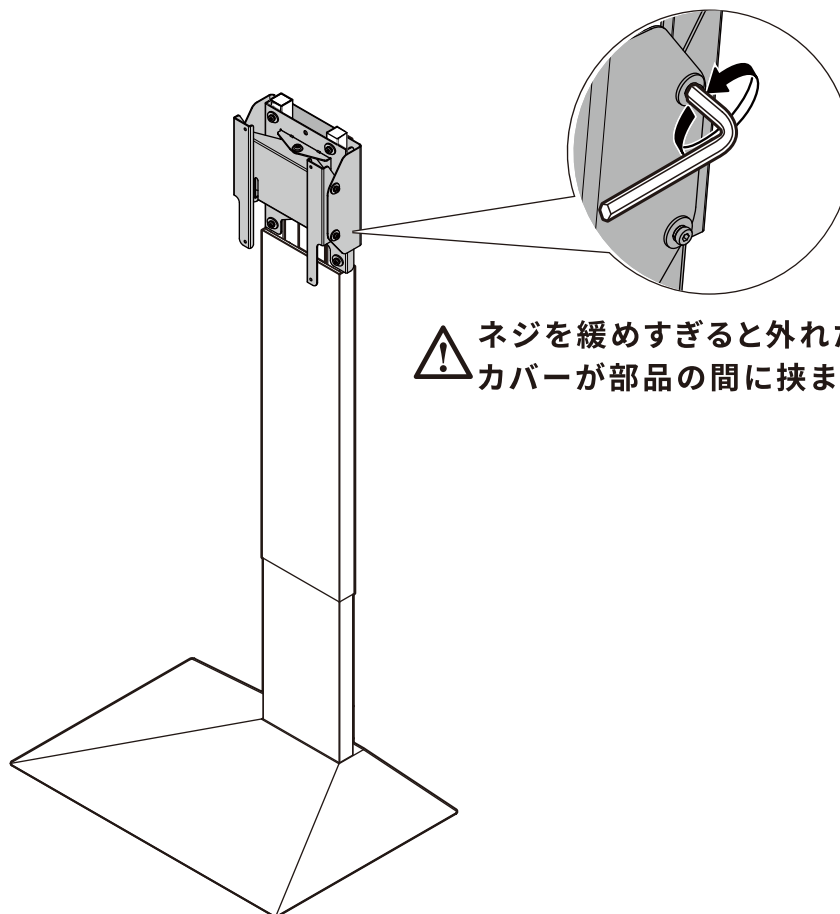
## 4 上下左右角度調整ブラケットを支柱に固定する

X × 4	
Y × 4	
Z × 1	

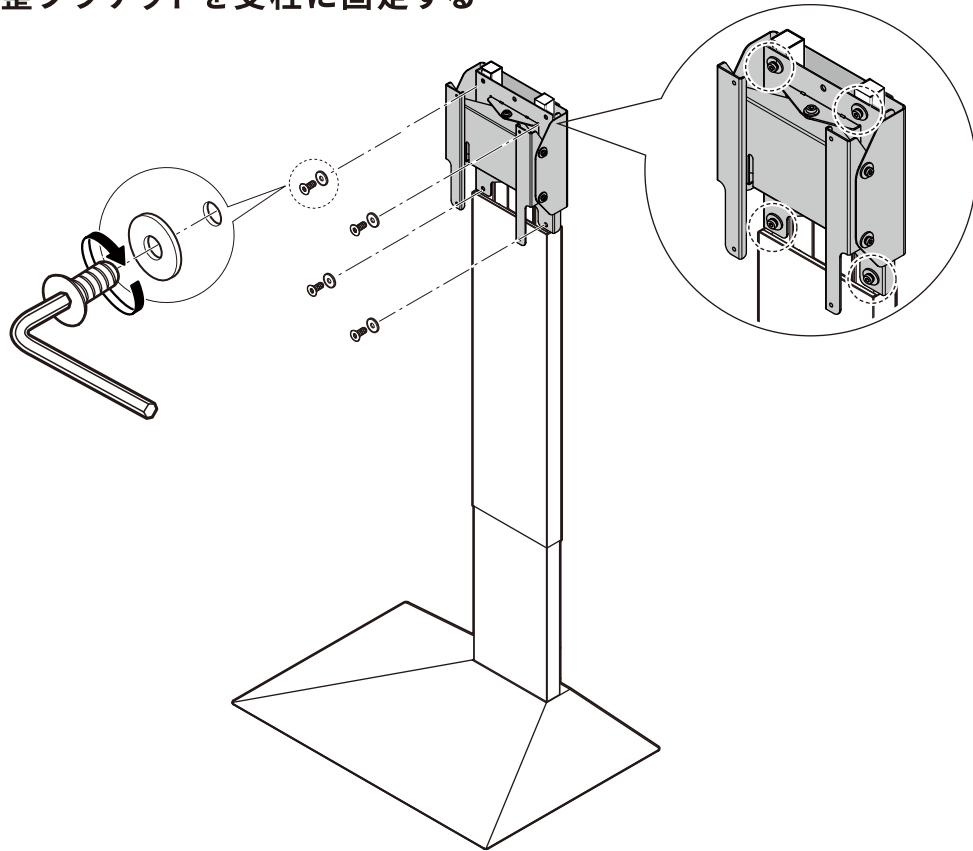

## 5 上下左右角度調整ブラケットの左右4か所のネジを緩める


Z × 1	
-------------	---





 ネジを緩めすぎると外れたり  
カバーが部品の上に挟まる恐れがあります。

## 6 フレームを取り付ける

左右4か所のネジを緩めないとうまく付かない場合があるので、ネジを緩めてから作業を行ってください。

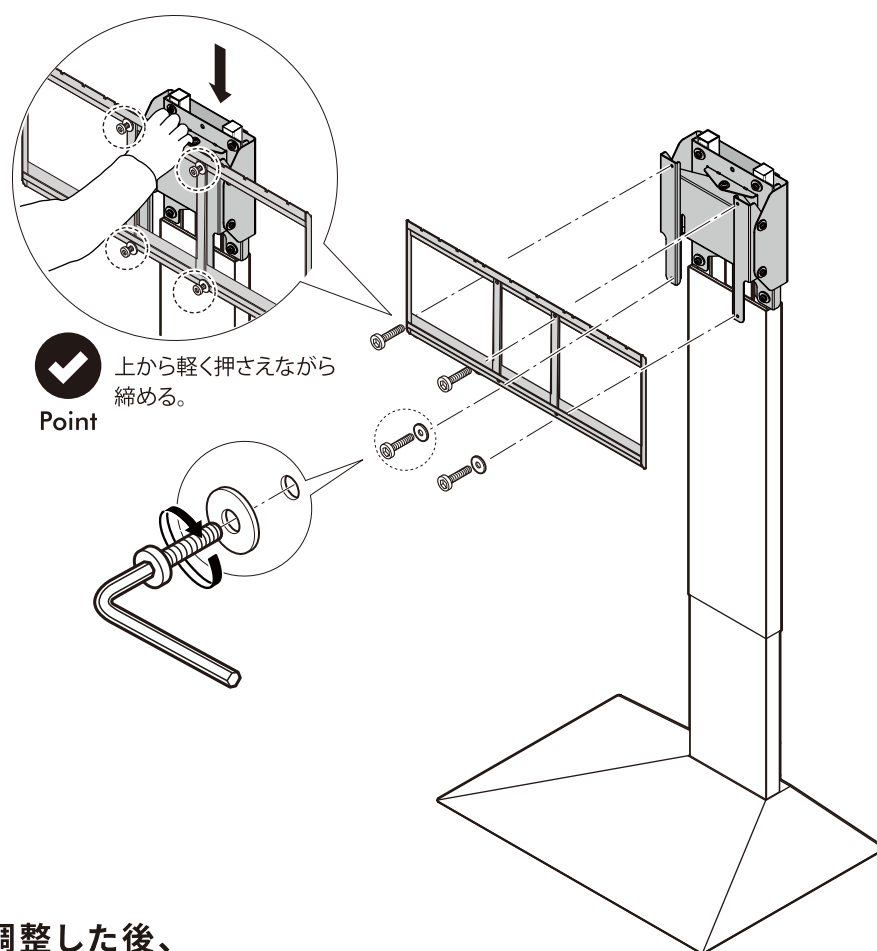


## 7 角度を調整した後、上下左右角度調整ブラケットの左右4か所のネジをしっかりと締める

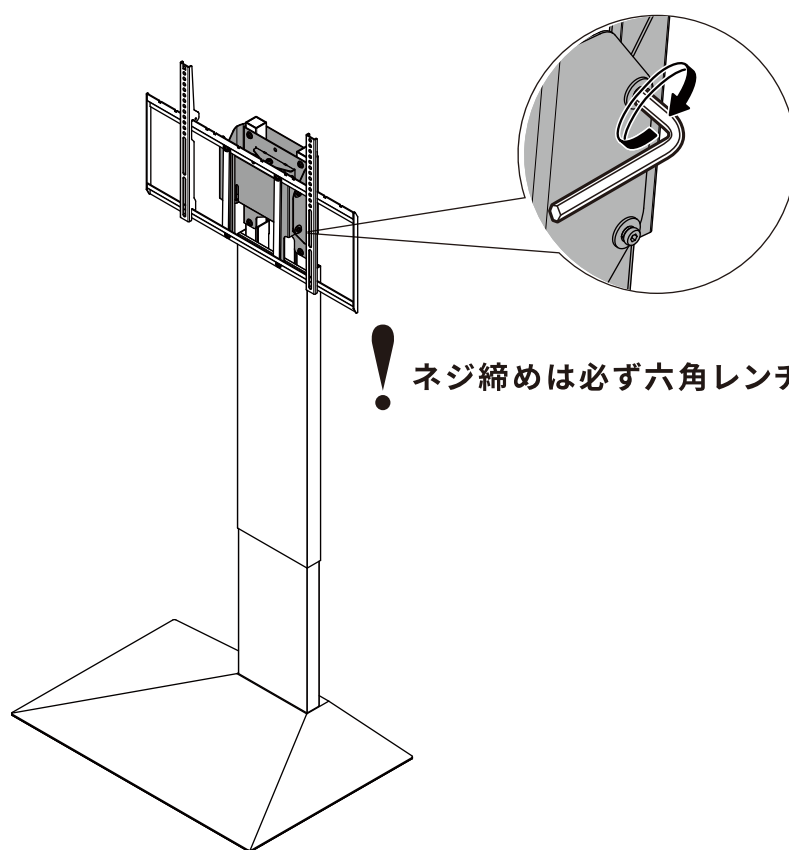

# Step3 | テレビをテレビスタンドに取り付ける

## 1 テレビをフレームに取り付ける

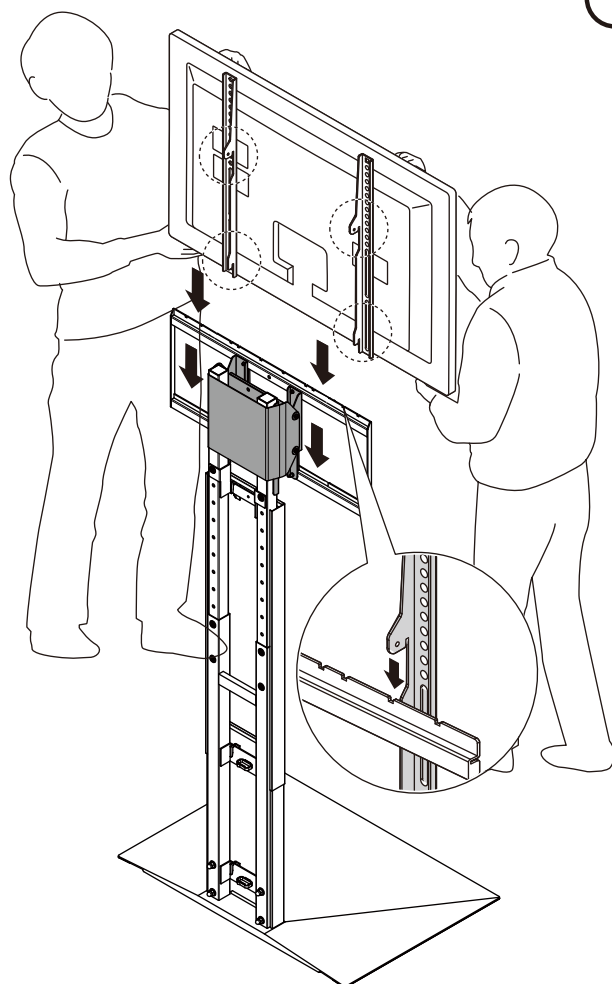

⊘ テレビ画面に強い力が加わるような持ち方をしない

テレビの持ち方は、テレビの取扱説明書でご確認ください。

⚠ テレビの設置は2人以上でおこなう


組み立て前のご確認事項

ステップ 1

ステップ 2

ステップ 3


## 2 ストッパーを留める

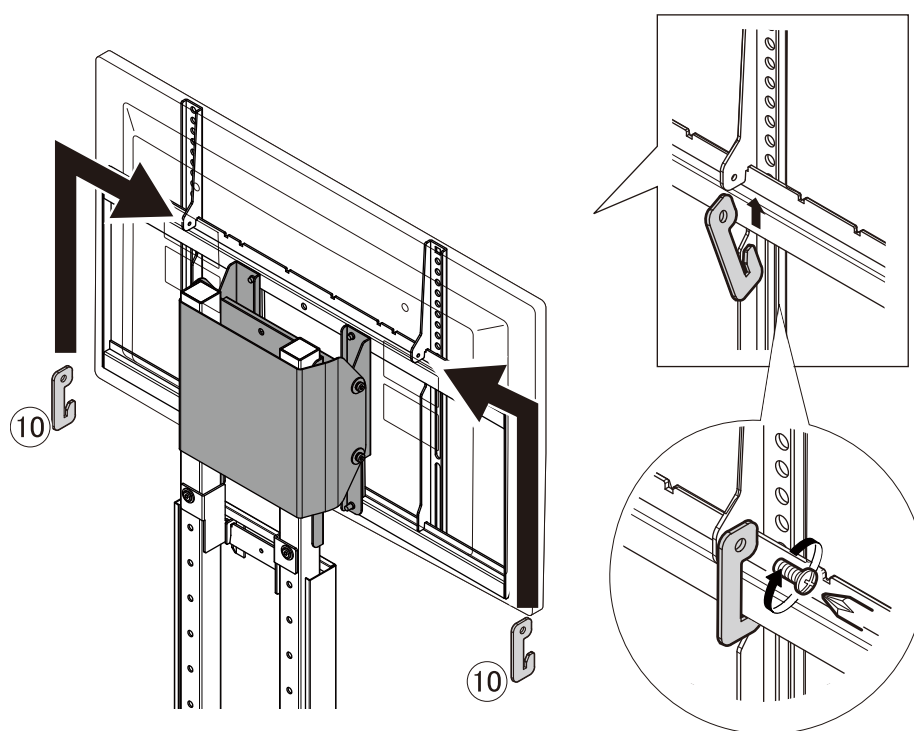

テレビの調整方法・安全上のご注意


## テレビの傾き調整方法

取付金具のネジ締め位置を調整することによってテレビの傾きを調整できます。  
ネジとネジ穴のあそびを利用して調整します。

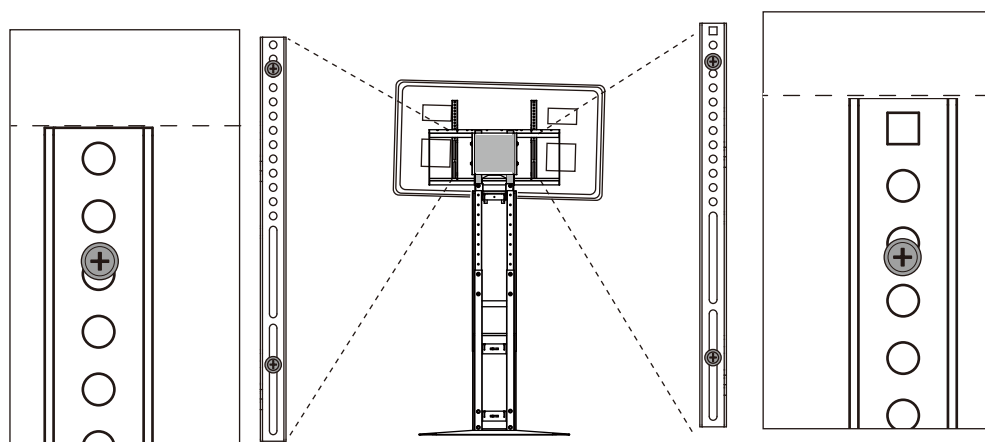


傾いている状態のイメージ図

### 1. 上下のネジを緩める。(片側の取付金具のみ)

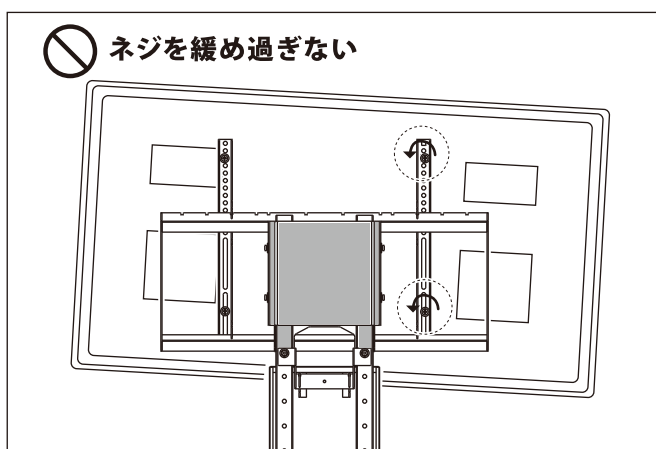


### 2. テレビが水平になるところまで傾ける。




### 3. テレビが動かないように保持した状態で、ネジを締める。

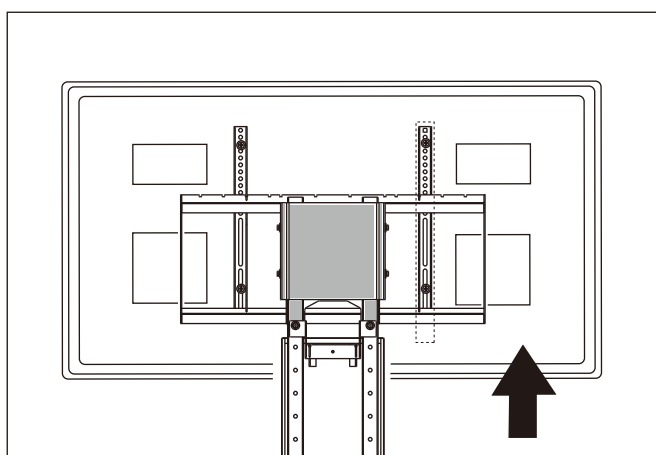

#### 調整前

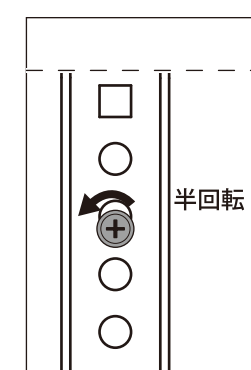

#### 調整後

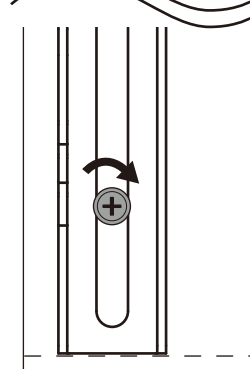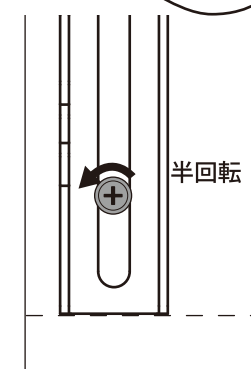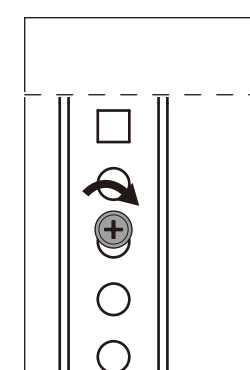

Info



低いほうを上げる方法を説明していますが、  
同じ方法で高いほうを下げることも可能です。

## テレビの上下角度の調整方法

テレビを取り外した後、左右のネジを緩めて角度を決めて固定する。

最大で上方6°、下方6°まで角度調整ができます。

！上下角度調整をする時は必ずテレビを取り外してから行ってください。

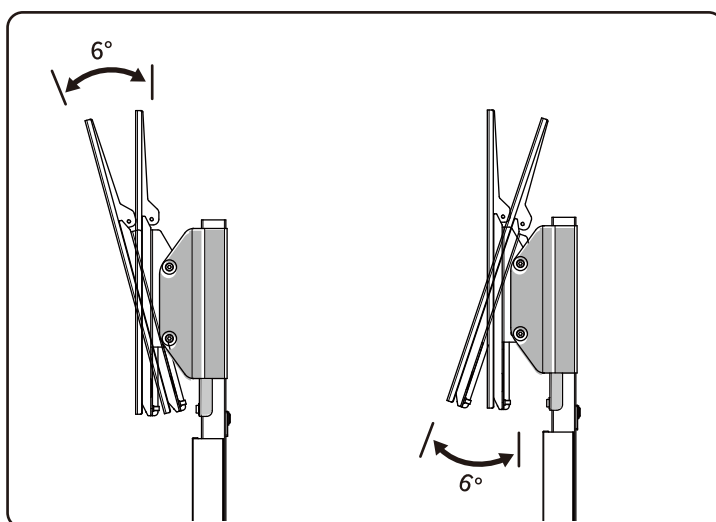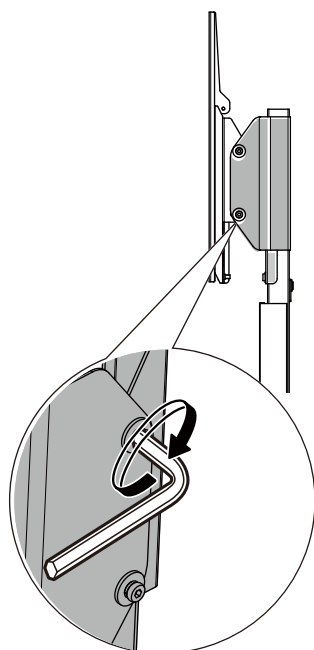


！調整後はネジをしっかり締め付ける

スタンドの高さ設定やブラケットの取付位置によっては、下方への角度調整時にテレビがスタンド支柱に干渉することがあります。

## テレビの左右角度の調整方法

WALLのフレームを持ち、ゆっくりと動かしてください。

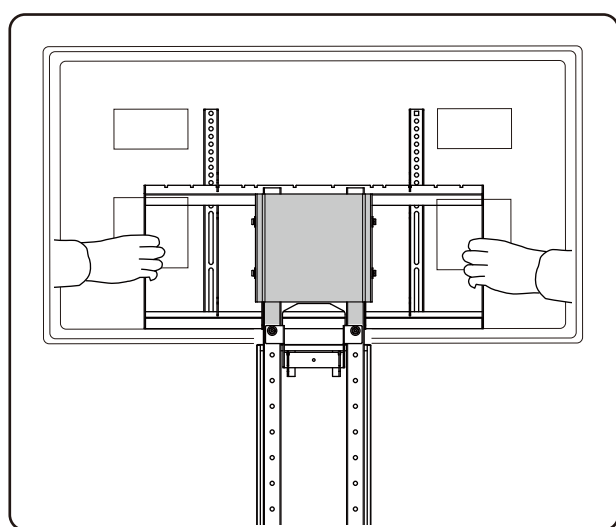


！左右調整の固定はできません。

！左右を可動させる時は可動部の隙間に手を入れないよう十分ご注意ください。  
特に小さいお子様がいるご家庭はご注意ください。

！左右調整は自由に動くため、  
左右調整中に壁などに当たらないように十分注意してください。

## 別売り：専用HDDホルダーの取り付け

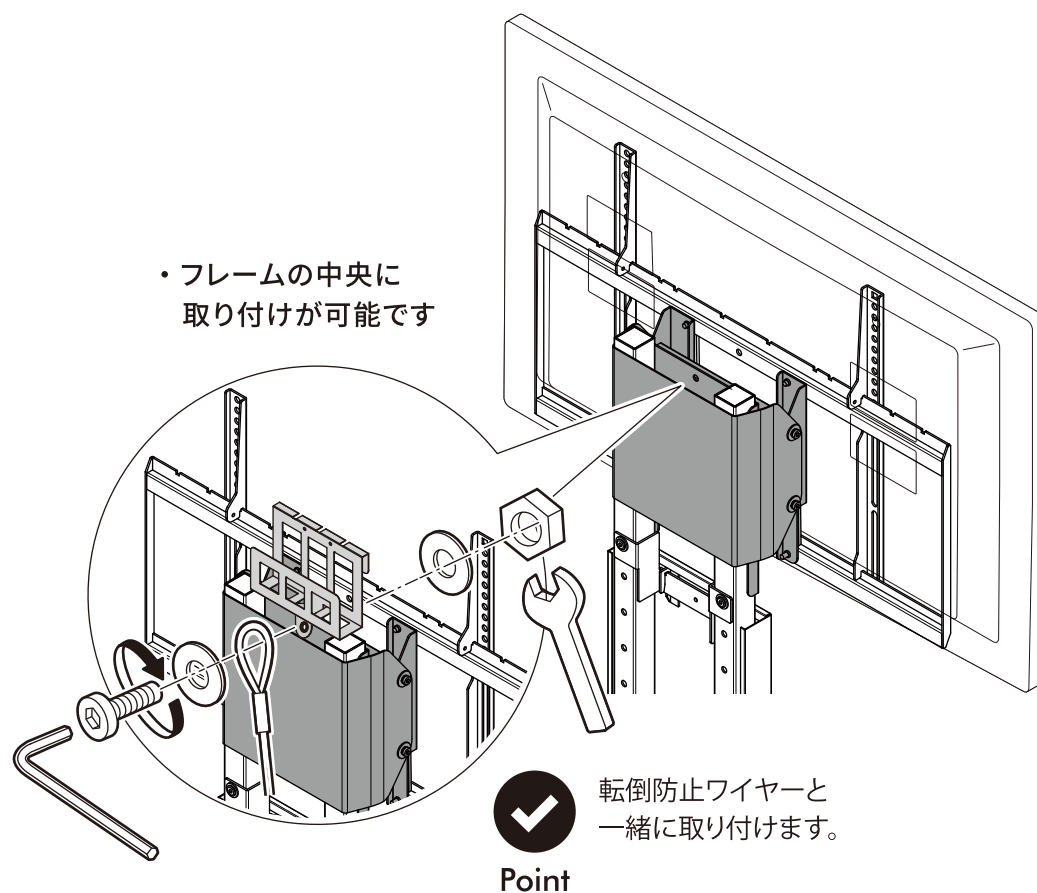




# ！ 安全上のご注意


人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。  
人への危害、財産の損害を防止するため、必ずお守りください。




**ボルトやネジ類は  
所定の場所に  
確実に締めつける。**  
テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

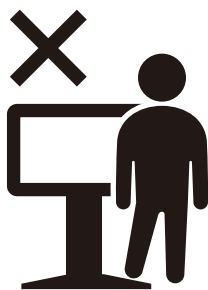


**ベースの上に乗らない。**  
テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

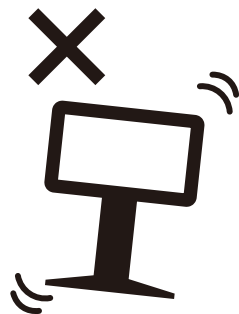

**不安定な場所に  
設置しない。**  
十分な耐荷重強度のある、  
平坦で安定した場所に設置する。  
(傾斜面や平坦でない面、カーペット・  
畳などの安定しない面、変形する面  
などに設置しない)

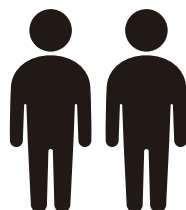

**テレビスタンドの移動や  
大きいテレビの設置・取り外しは、  
必ず2人以上で行う。**  
テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。

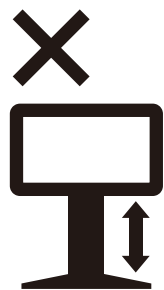

**テレビを設置したまま  
高さ調整をしない。**  
テレビスタンドが倒れたり、  
テレビが脱落して、  
破損やけがの原因となります。



**テレビ画面に  
強い力が加わるような  
持ち方をしない。**  
テレビの持ち方は、  
テレビの取扱説明書でご確認ください。  
キャスターでの移動時にもご注意ください。

コード類に引っかかることで、テレビスタンド・テレビ、ご自身やご家族の転倒に繋がる恐れがあります。  
特に小さなお子様、ご高齢者のいる場所でのご使用には十分ご注意ください。  
地震・事故による万一の際の転倒・落下によるケガや製品の破損などは弊社では保証できかねます。



**お子さまが  
テレビスタンドで遊んだり  
動かしたりしないように  
注意する。**  
テレビスタンドが倒れたり、  
足の指を巻き込んだりして、  
破損やけがの原因となります。



**移動させないときは  
安全対策をする。**  
転倒防止ワイヤーや  
ストッパーの使用をご検討ください。



## その他の注意事項

注意を無視した取り扱いをすると、物質損害を被ったり、障害を負う可能性があります。

### 1

#### 組立・設置のご注意

##### 1. 転倒、破損の原因に

組み立て、設置の際は、必ず安定した平らな場所でおこなう。床や壁などをキズつけないように、厚手の布や梱包のダンボールなどを敷く。

##### 2. 変色や破損の原因に

屋内で使用する。直射日光や熱、冷暖房の風が直接あたらない場所に置く。

フローリングや床面の素材によっては、ご使用になりますと床面にキャスターの跡が付いたり、色移りしたりする可能性があります。

フロアメーカーの取扱上のご注意をご確認の上、”変色”などを防ぐため、保護材を入れてご使用することをおすすめします。

##### 3. 火災や感電の原因に

テレビを本製品に取り付けたり取り外す場合は、必ず薄型テレビの電源スイッチを切り、電源プラグをコンセントから抜き、

アンテナ線接続機器間のコードなど外部の接続コードを外してから行ってください。コードが傷つき、火災、感電の原因となる恐れがあります。

### 2

#### 使用上のご注意

##### 1. 転倒、けが、破損

商品に乗ったり、ぶらさがったり、テレビスタンド以外の使用をしない。テレビスタンドに集中的に荷重をかけない。(傾斜の可能性)

手や指などを挟まないように注意する。

コード類に引っかかることで、テレビスタンド・テレビ、ご自身やご家族の転倒に繋がる恐れがあります。

特に小さなお子様、ご高齢者のいる場所でのご使用には十分ご注意ください。

特に小さなお子様は可動部に手を挟む恐れがありますので、近づけないように十分ご注意ください。

##### 2. 火災や変色

ストーブなど火のそばで使わない。

##### 3. におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

### 3

#### お手入れのご注意

##### ひび割れや変色、変形の原因に

表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)

※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1カ月に1度が目安です。)

# WALL<sup>®</sup>

## WALL INTERIOR TV STAND

— ANGLE ADJUSTMENT BRACKET —

Before assembling >P1

model number	Satin Black WLMB55119
product ID	D05000180

**Step1** >P4  
Prepare to  
install the TV

size	W24.5×D9×H26.5cm	material	steel, PVC	surface finish	powder coating
weight	5.5lbs/2.5kg	country of origin	China	maximum load	88 lbs / 40kg

### Assembly Instructions [1st Edition]

**Step2** >P8  
Determine the  
installation height of  
the TV and assemble


Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly. Also, keep this in a safe place so that you can refer to it as needed.

## Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.

**Step3** >P12  
Install the TV  
to the TV stand

 **THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.**  
**caution** · **KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.**  
· **THIS PRODUCT SHOULD NOT BE USED IN HOMES OR OTHER ENVIRONMENTS WITH SMALL CHILDREN WHO MAY ACCIDENTALLY TIP OVER THE STAND AND TV, UNLESS A WALL STRAP HAS BEEN INSTALLED TO HELP SECURE THE STAND AGAINST TIPPING OVER.**

TV tilt adjustment  
method >P13  
Safety precaution >P16

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)  
under the planning and quality control of Nakamura Corporation of Japan.  
Some specifications may differ due to improvements for better quality.

Nakamura Co. Ltd.

Official brand site : <https://equals.tokyo/>

Contact us in English : [info-gl@nakamura-jpn.co.jp](mailto:info-gl@nakamura-jpn.co.jp)

## Be sure to check before assembling

**This product may not be used with certain TV models.**

**Be sure to check this product can be used with your TV before assembling, referring to the following.**

**Please note that the color may vary depending on the product due to differences in production lots and manufacturing locations.**

### 1. Make sure that your TV meets all three of the following requirements

1-1. The size of the TV must be between 32" and 60" for WALL V2,  
between 32" and 80" for WALL V3.


1-2. The weight of the TV (excluding the stand) must be 88 lbs / 40kg or less

1-3. Written documentation from the TV's manufacturer says it is a wall-mounted TV\*

\*Some TVs do not support wall mounting, even if the back of the TV may appear to support it.

### 2. Check the back side of your TV

2-1. The spacing between the four screw holes meets the conditions A and B below

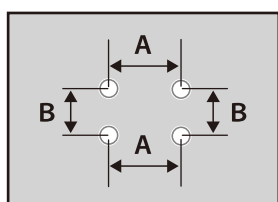


**A : Any of 10, 20, 30 or 40cm (WALL V2)**  
**Any of 10, 20, 30, 40, 50 or 60cm (WALL V3)**


**B : Within the range of 10 - 40cm**

2-2. Satisfy all of the above conditions, and satisfy any one of the following


All 4 screw holes are on the raised part (shaded area) of the TV's back, or

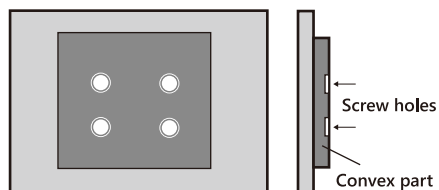

There is no raised part near the surface of the 4 screw holes, or

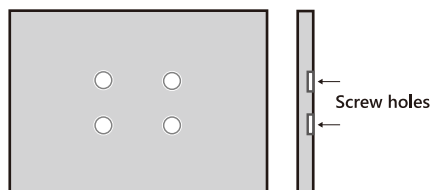


The difference in height between the raised part (shaded area) and the rest of the TV's back is 4cm or less (if the raised area is located below the 4 screw holes)

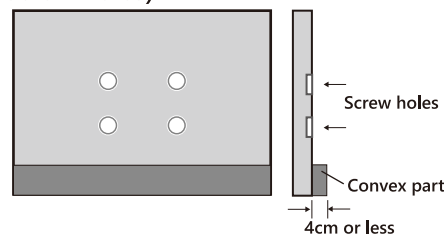


### The following TVs cannot be installed onto this product:


Less than all of the 4 screw holes are located on the raised part (shaded area) of the TV's back

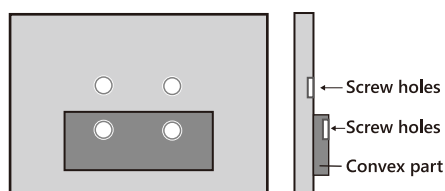


There is a raised part (shaded area) between the 4 screw holes

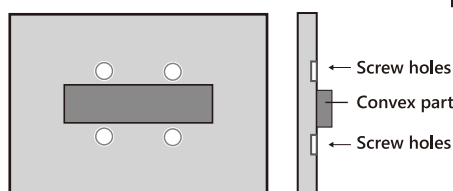


There is a difference of 4cm or more between the height of the raised part (shaded part) and the rest of the TV's back (if the raised part is located below the 4 screw holes)

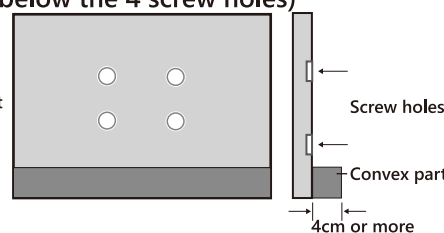


### 3. Precautions regarding load capacity and installation of shelf

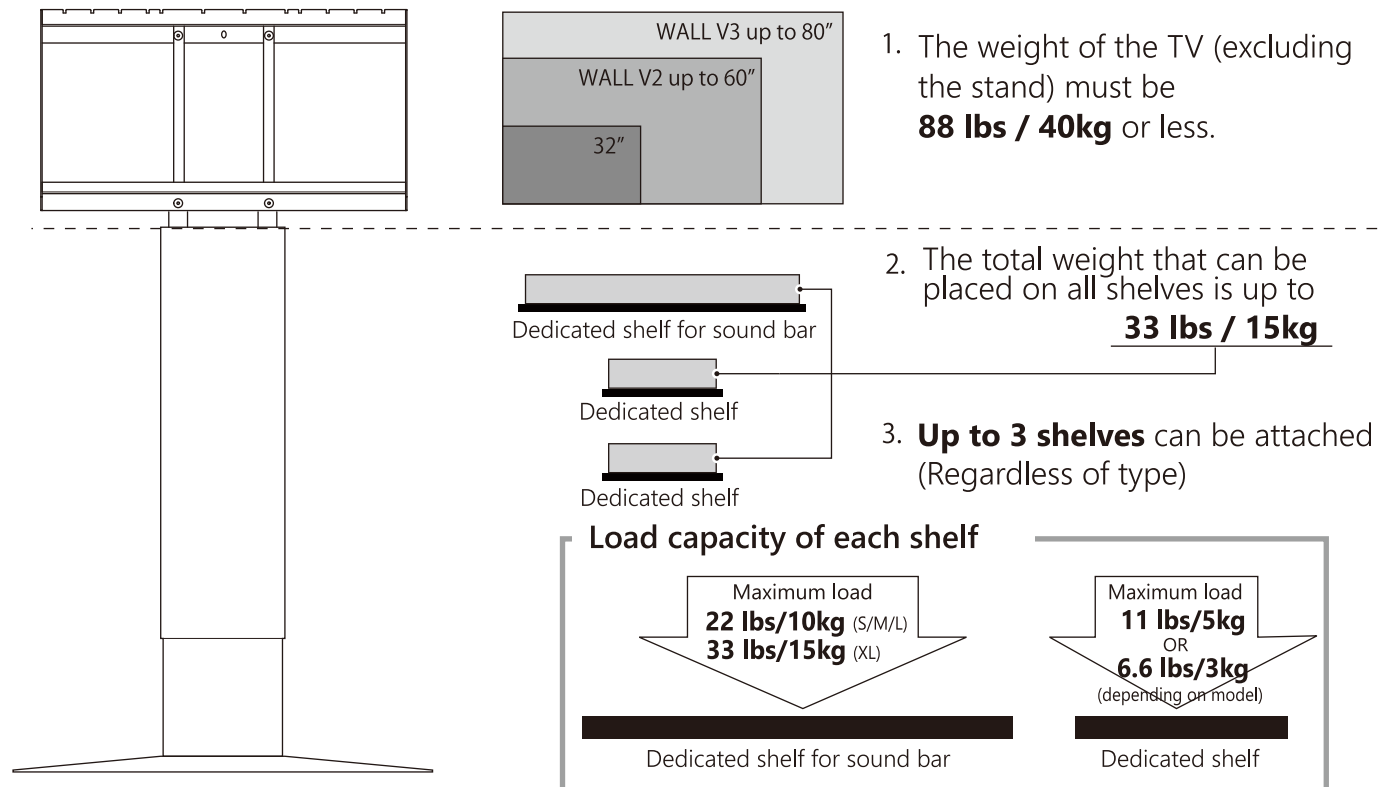


as of December 2023

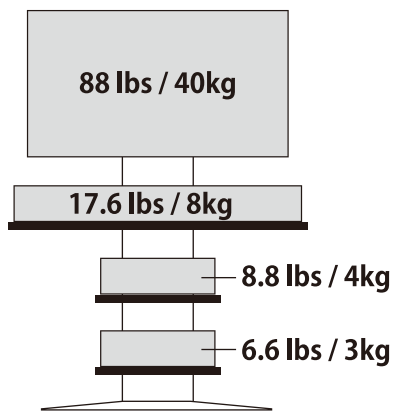


The weight of the TV is **110 lbs / 50kg** or less with or without shelves

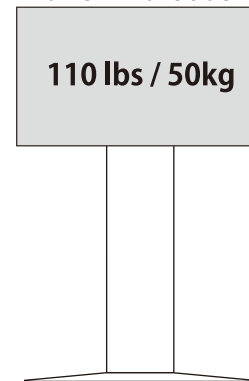


The total weight on all shelves is no more than **33 lbs / 15kg**

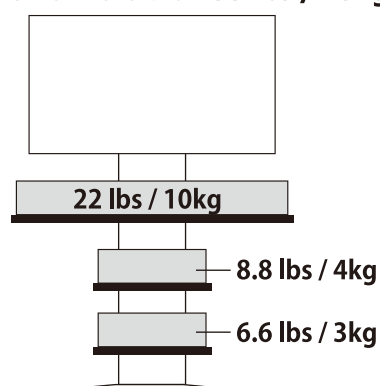

Up to **3 shelves** can be attached

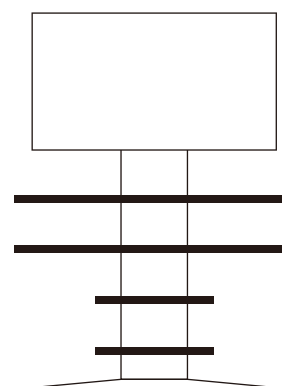

【Main body parts】

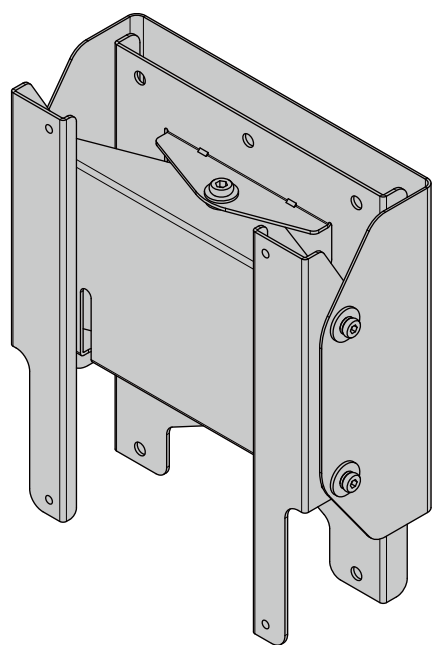




【Accessory parts】

- !

Some parts are included in case of loss.

The extra parts are spares.- The number in the tables is the required number.

  - Use M and N that match the TV you are installing.
  - Please keep any extra parts as you may need them when you replace the TV.

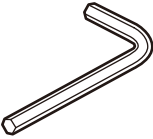X	 × 4	Y	 × 4	Z	 × 1
---	---	---	---	---	---


# Step 1







## Prepare to install the TV

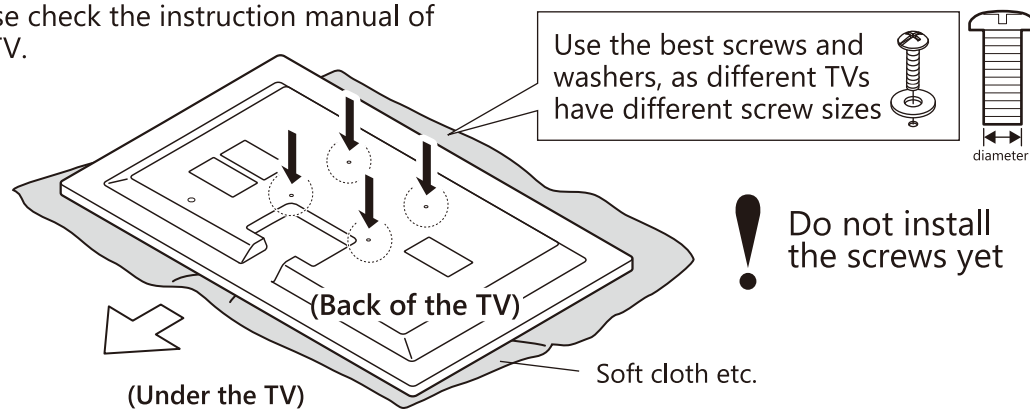Installation example is WALL V3 High Type.  
The shapes and heights of the parts vary depending on the model.  
Please check the assembly instructions of the stand itself.


### 1 Check the diameter of the screw holes

! To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.



M	 × 4 (small)	N	 × 4 (medium)	O	 × 4 (large)
	 × 4 each (15,25,35mm)		 × 4 each (15,25,35,45,55mm)		 × 4 each (15,25,35,45mm)

### 2 Measure the depth of the screw hole

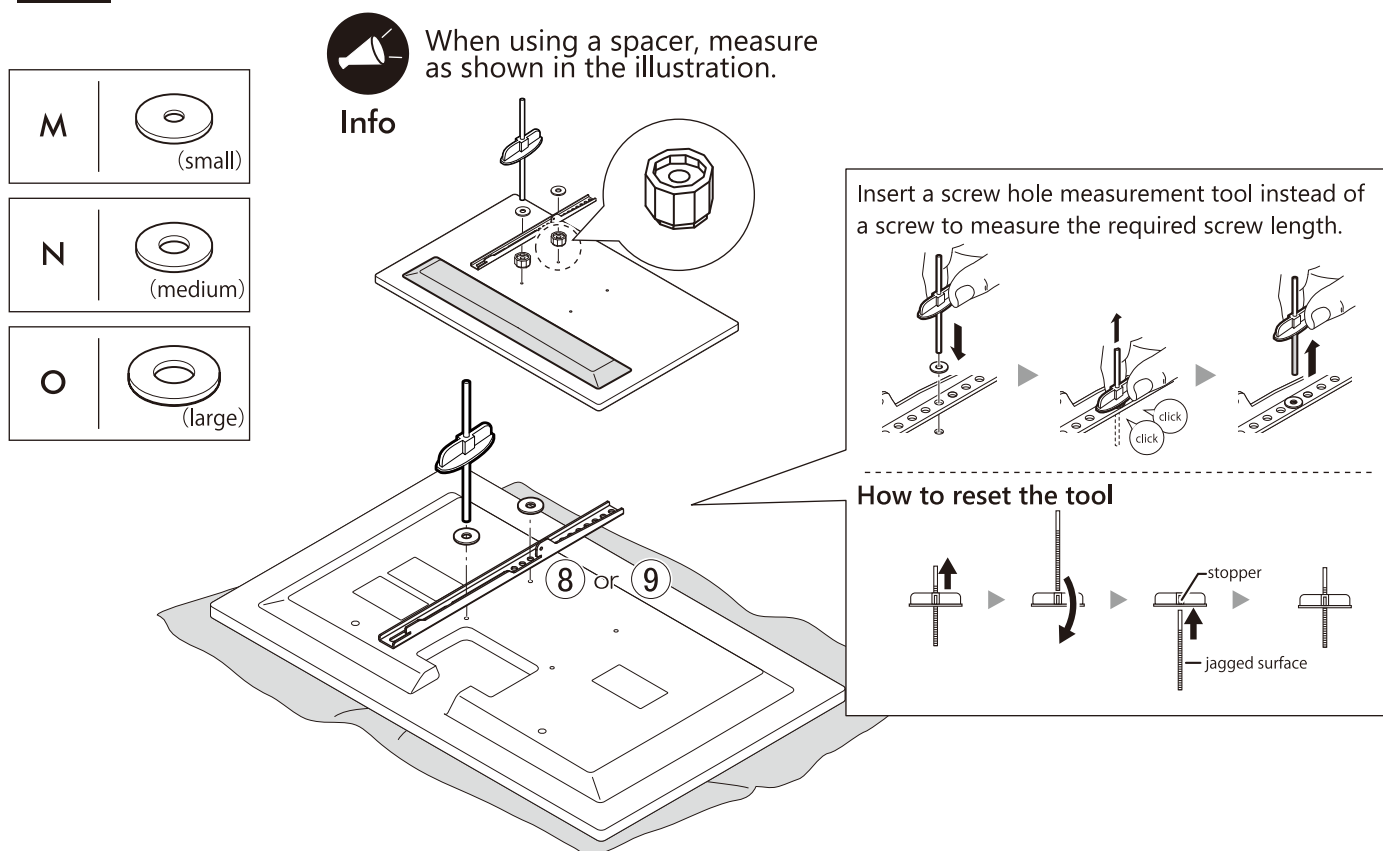

Before assembling

Step1


Step2

Step3

TV tilt adjustment method  
Safety precautions

### 3



## Choose the screw of the required length

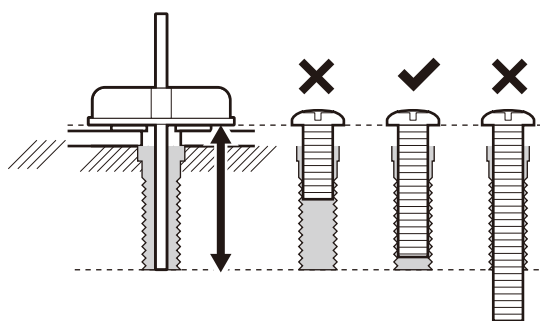

screw is shallow



screw is too long

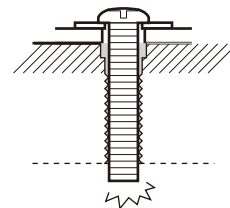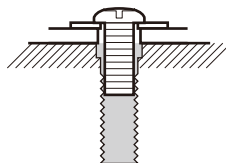

Point

There is no problem if the screw is hooked 5 turns or more.




If the thickness of the screws in the screw set does not match or the length of the screws is not enough, please purchase.

Info


M (diameter) x (length) mm  
e.g. 5mm diameter, 15mm length  
--> M5 x 15mm  
Please select "truss screws" or "pan screws".

**If you can't find a screw of the required length,  
use spacer(small) to adjust the screw length.**

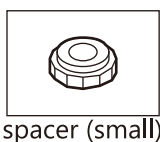

spacer (small)



The thickness is  
approximately 5mm.

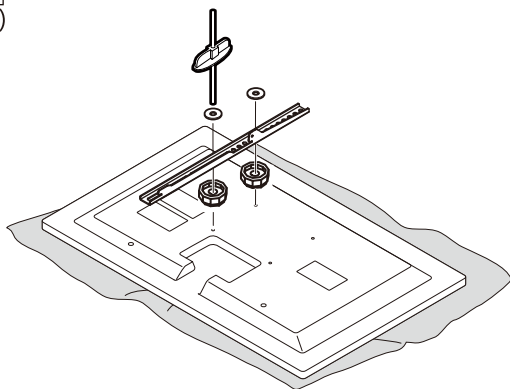


After adjustment




Before adjustment

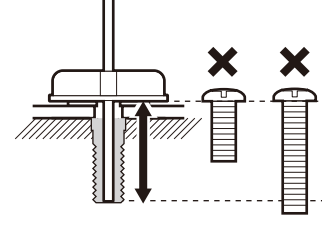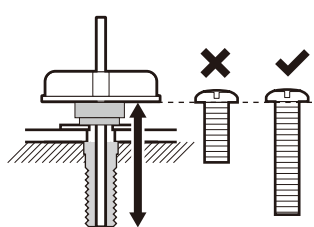


**When used in combination with a spacer (large)**



spacer (small)





spacer (large)

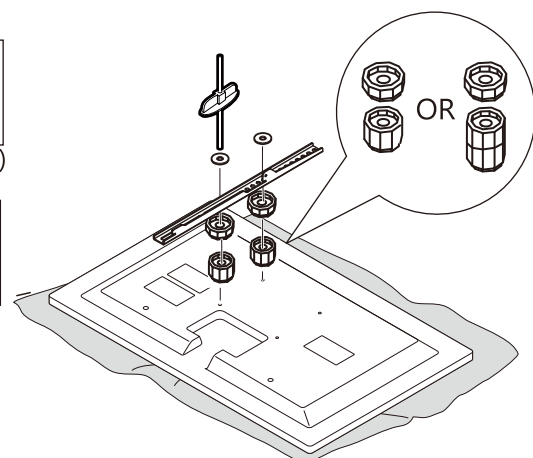

After adjustment



Before adjustment

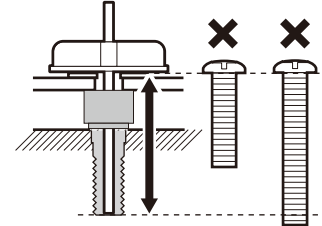
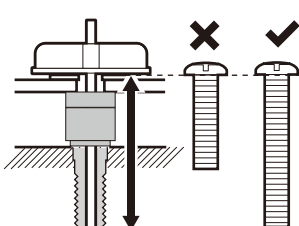




## Before attaching the TV mounting brackets.....


### screws and spacers

- Prepare the screws and spacers of your choice.
- Spacers only if needed.

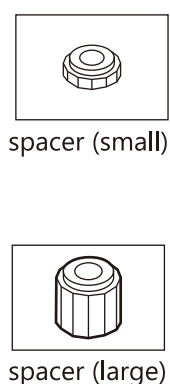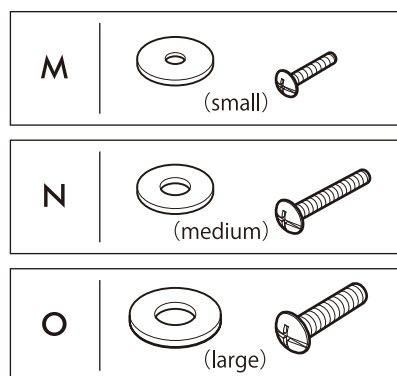

### TV mounting brackets


- ⑧ and ⑨ are not the same shape.
- Check the install position (right and Left).

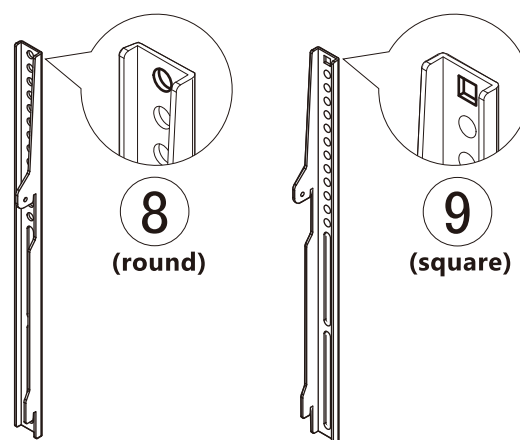


## Example of the install position of TV mounting brackets

- Attach the TV mounting brackets as close as possible to the center of the TV.
- Use the round hole of the TV mounting bracket for the upper screw hole, and use the long hole of the TV mounting bracket for the lower screw hole.


### TV with screw holes near the center

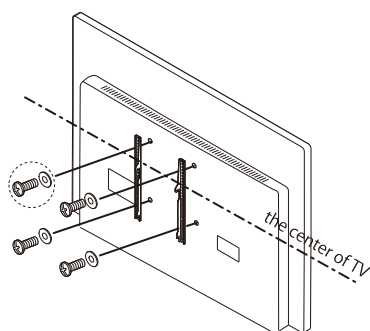


#### Guide for each screw pitch

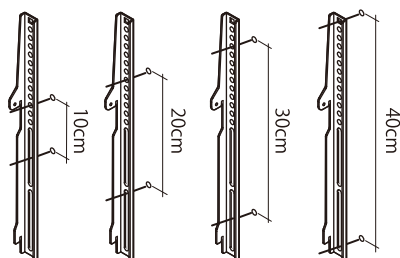


### TV with screw holes at the bottom

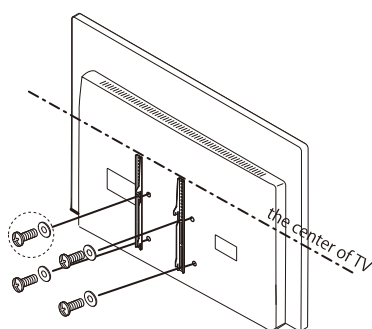

#### Guide for each screw pitch

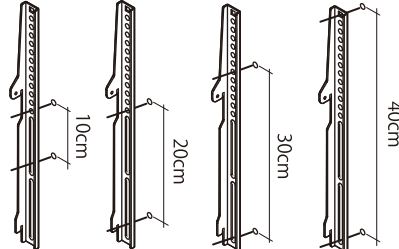


**X** Do not attach the TV mounting brackets close to the bottom of the TV.  
It may cause the exposure of the pillars of the TV stand.

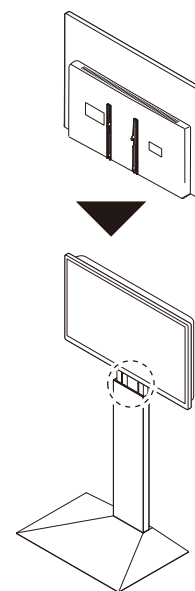

## 4 Measure the spacing between screw holes

⚠ To prevent the panel from cracking, some TVs should not be laid down, so please check the instruction manual of the TV.

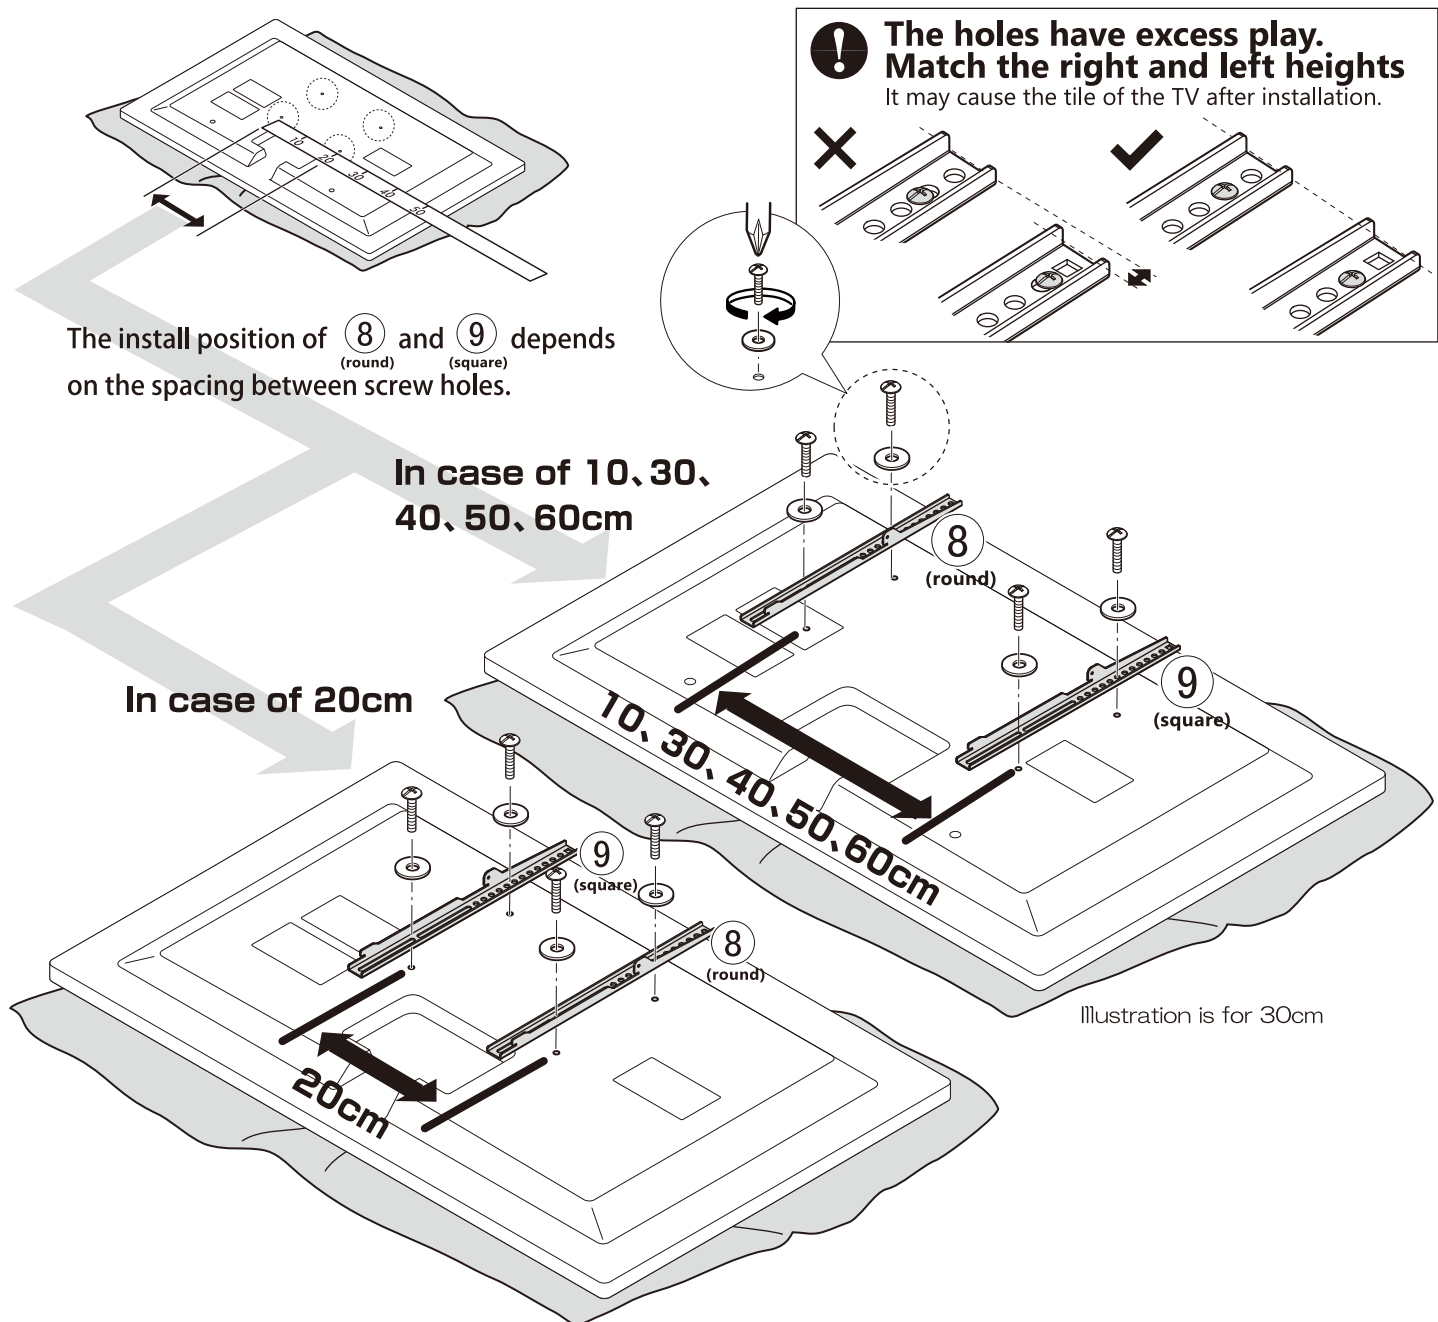


# Step2 | Determine the installation height of the TV and assemble

## 1 Determine the installation height of the TV

### Temporary installation of TV

- (1) Check to see if the pipes are exposed above or below the TV.
- (2) Check the installation height of the TV.  
The height can be adjusted in 5cm steps by changing the screw fastening position.
- (3) Check the height of the left and right sides of the TV  
There is enough room in the screw holes to hold the bracket in place,  
You can shift the bracket position up and down somewhat.  
Adjust this when adjusting the left/right height.

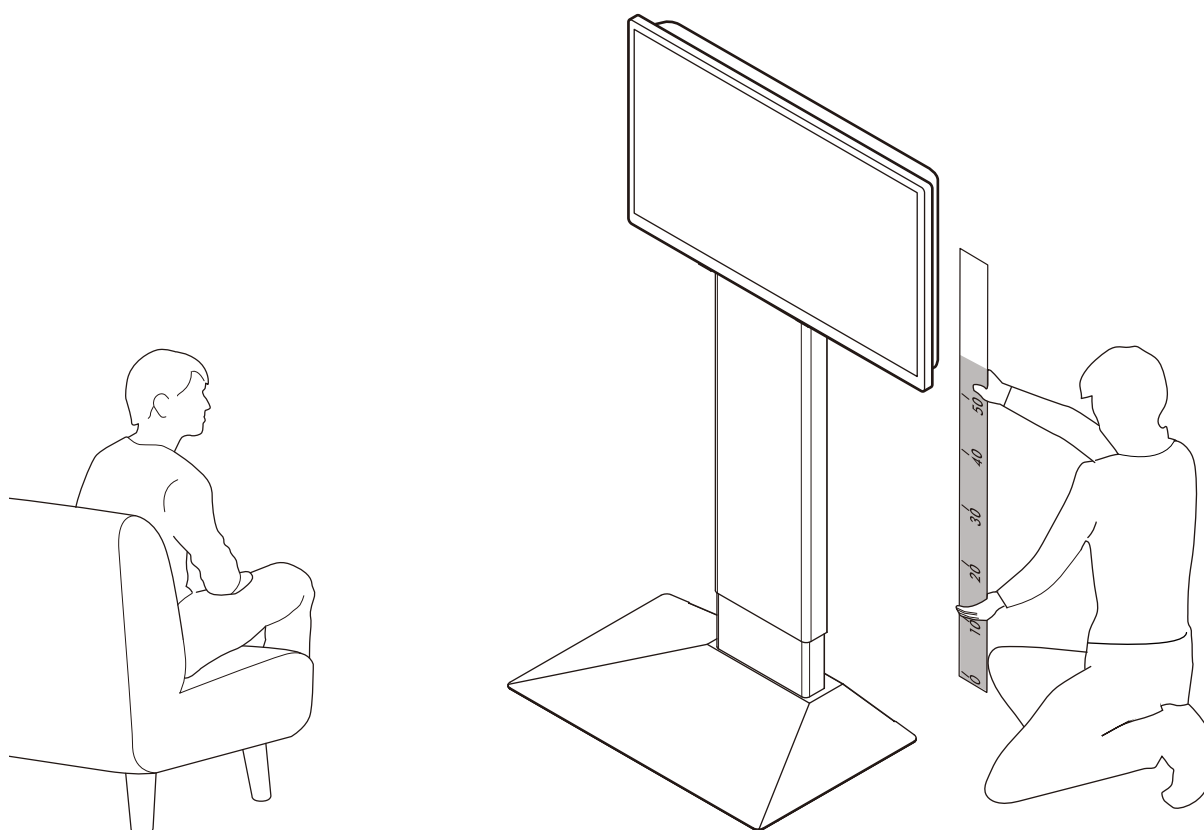

Before assembling

Step1

Step2

Step3


TV tilt adjustment method  
Safety precautions

## 2 Assemble the TV stand to the determined height


Check the height adjustment list for the desired height column. You can see the number on the mounting screw holes.

Height adjustment list

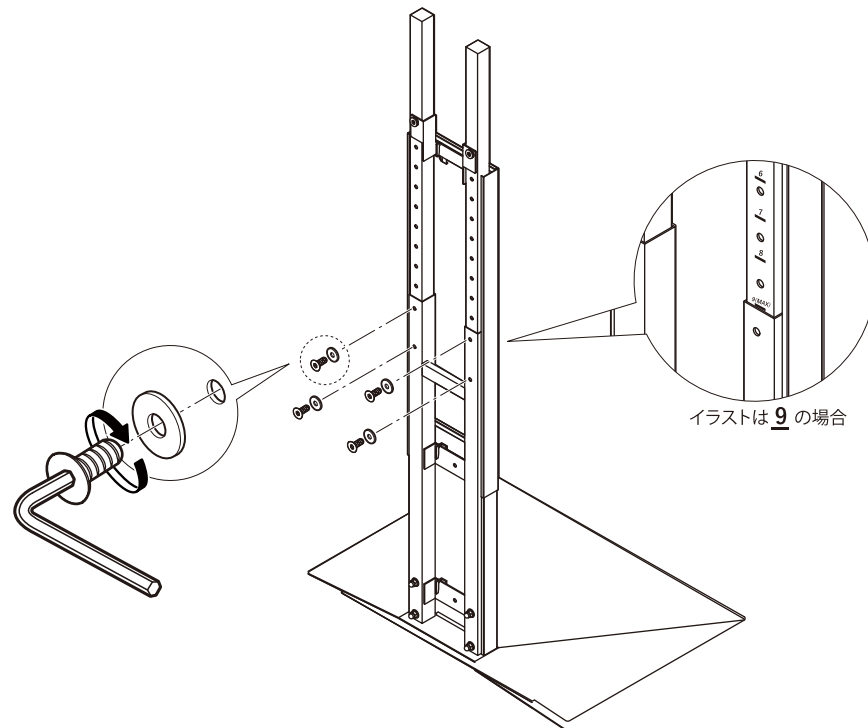


+0cm	+5cm	+10cm	+15cm	+20cm	+25cm	+30cm	+35cm	+40cm
—	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u> (MAX)

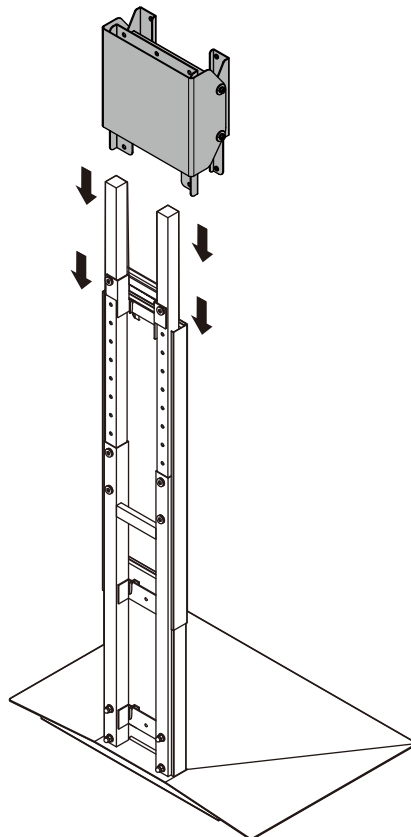


## 3 Insert the angle adjustment bracket from above



## 4 Fix the adjustment bracket to the pillar pipes

X × 4	
Y × 4	
Z × 1	

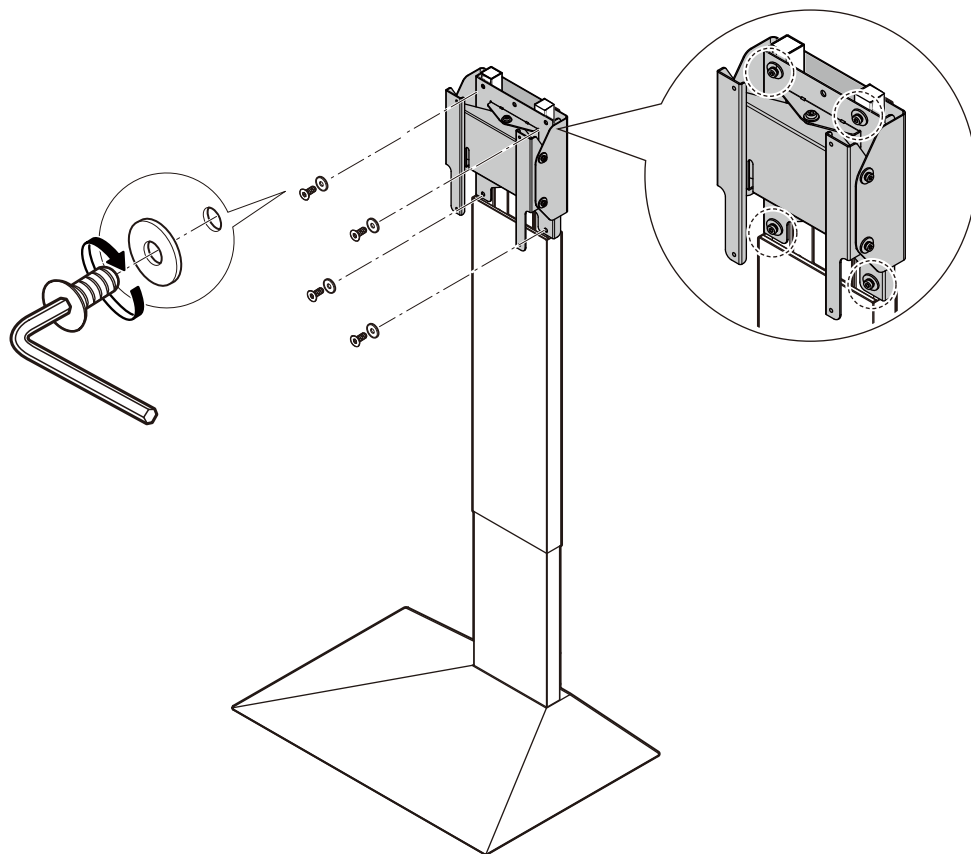


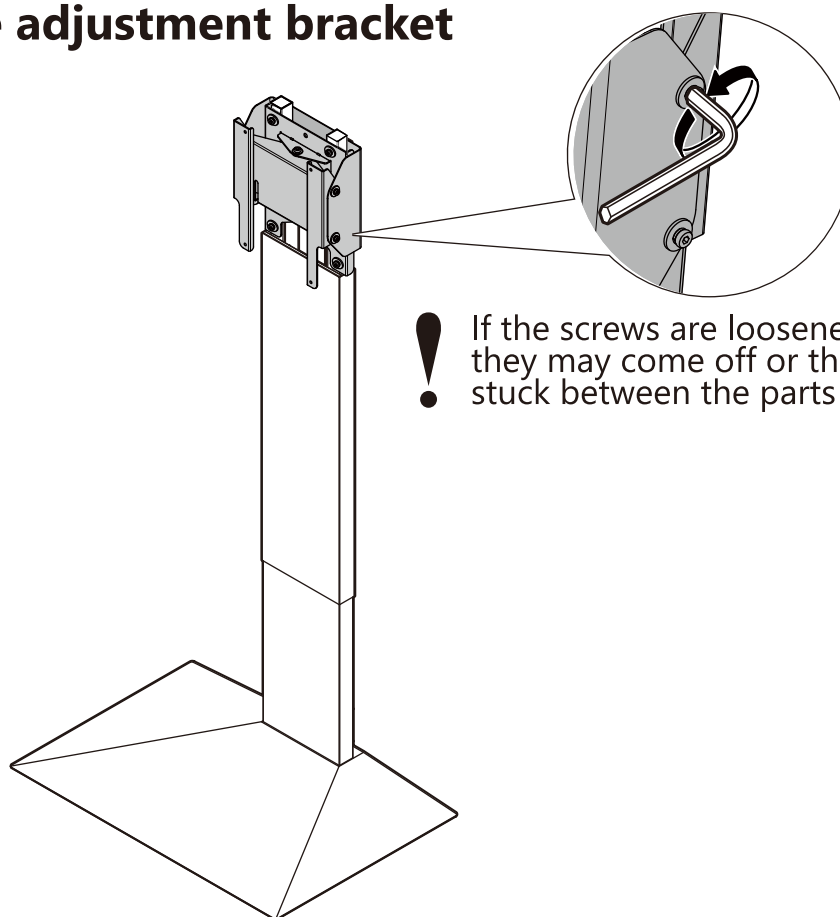
Before assembling

Step1

Step2

## 5 Loosen the four screws on the left and right side of the angle adjustment bracket

Z × 1	
-------------	---




! If the screws are loosened too much, they may come off or the cover may get stuck between the parts

Step3



TV tilt adjustment method  
Safety precautions

## 6 Attach the frame

There is a case where it may not attach properly unless the four screws on the left and right sides are loosened.

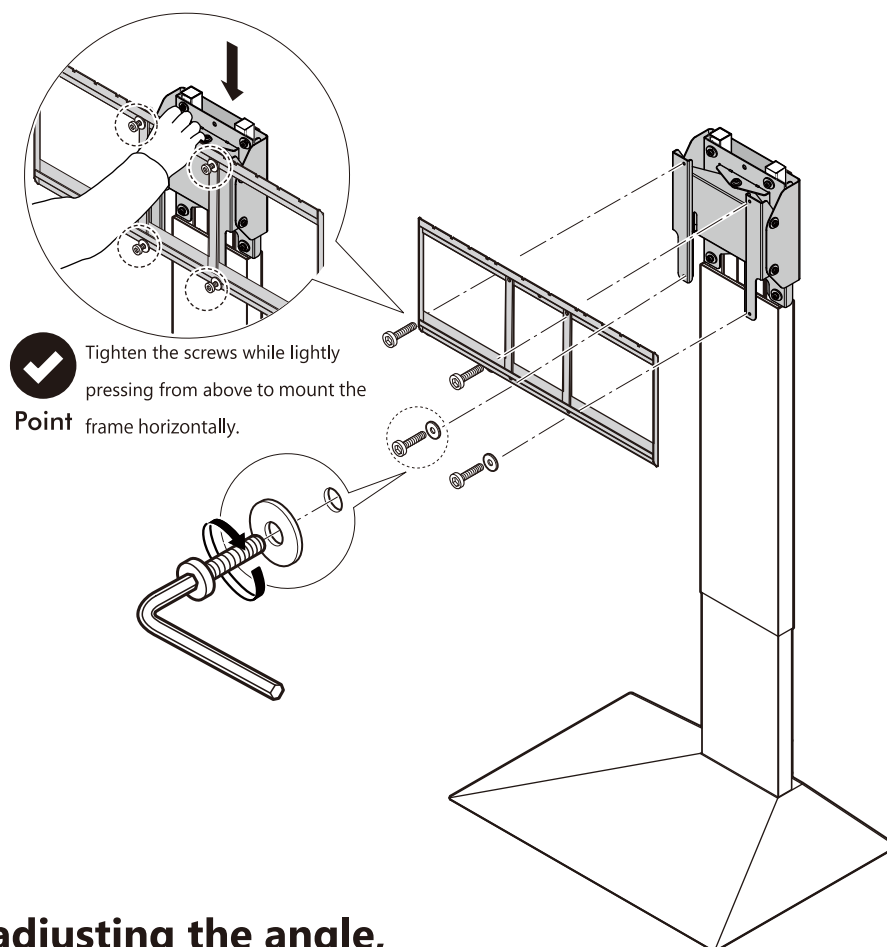


## 7 After adjusting the angle, securely tighten the four screws on the left and right sides.

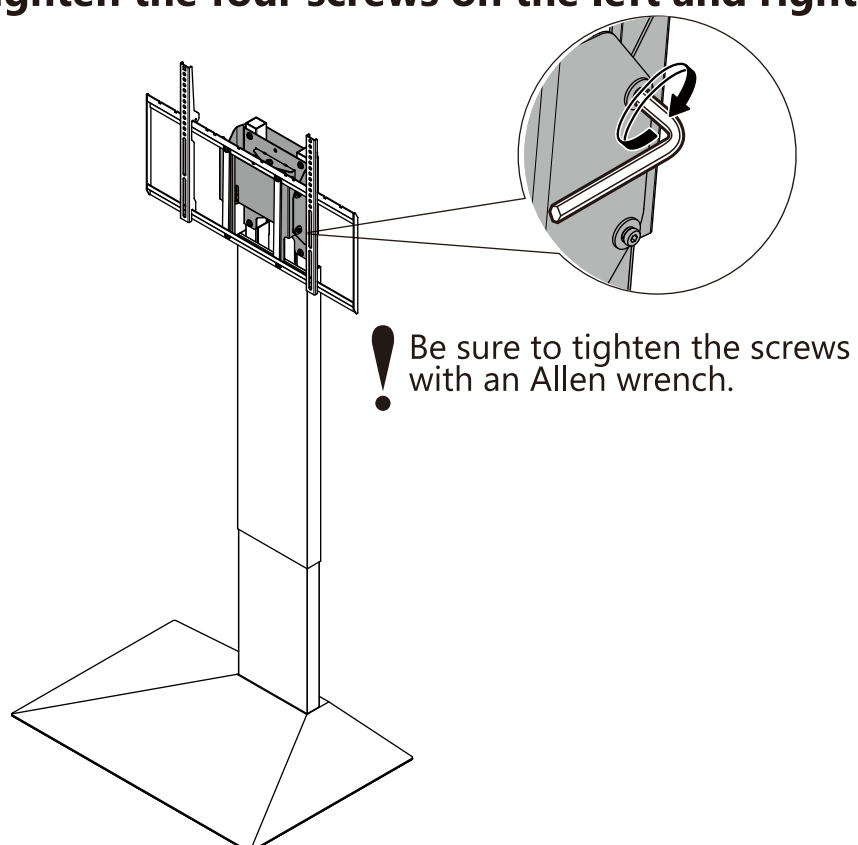

# Step3 | Install the TV to the TV stand

## 1 Hook the TV to the frame

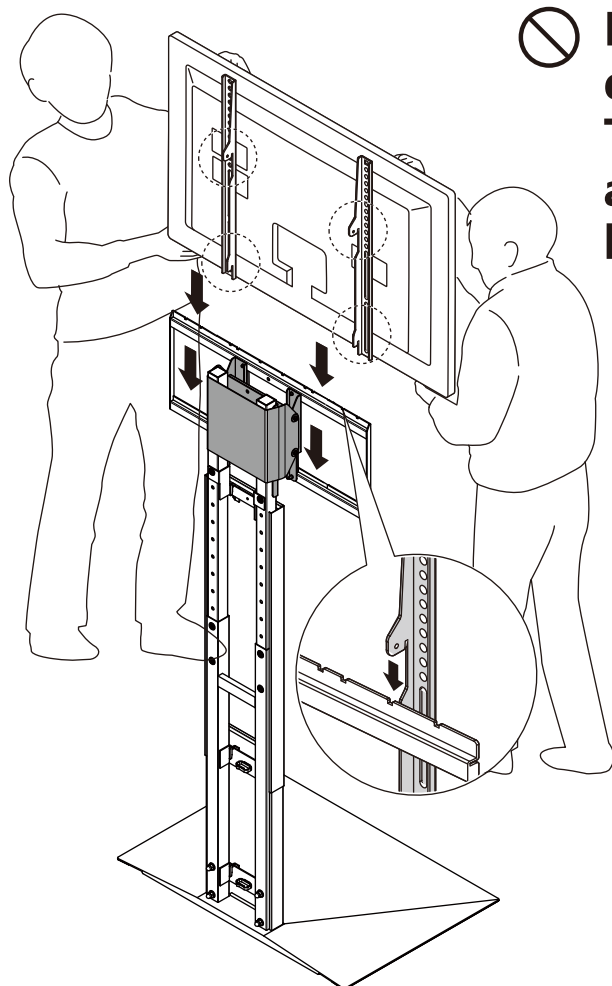

⊘ Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard.

Refer to the instruction manual of the TV for how to hold the TV.

⚠ Two or more persons do the installation



Before assembling

Step1

Step2

Step3


## 2 Attach the stoppers

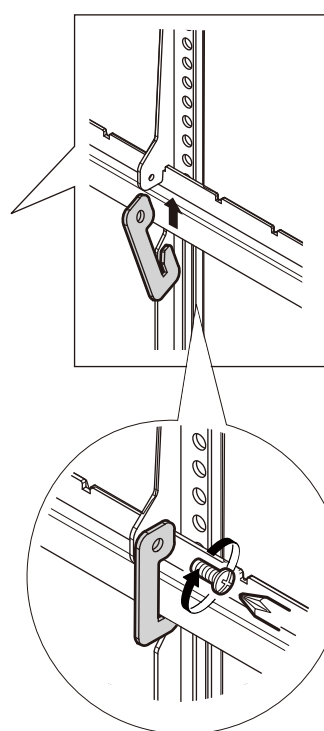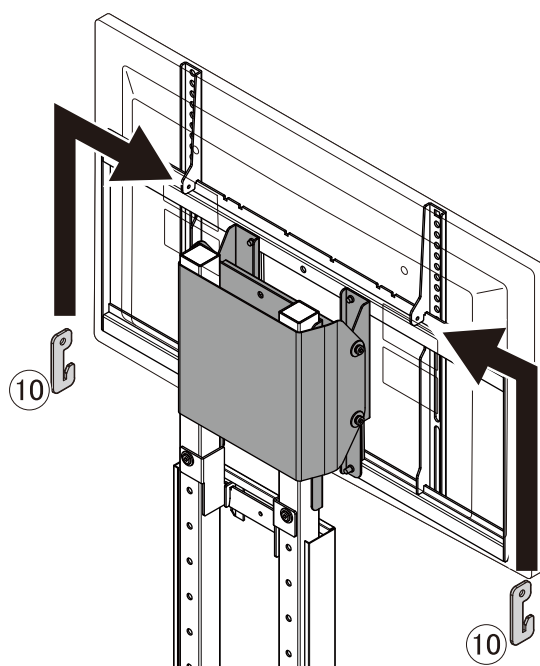


TV tilt adjustment method  
Safety precautions

## If further adjustments are needed

You can adjust the tilt of the TV by adjusting the screw tightening position of the mounting bracket. Adjust using the allowance between screws and screw holes.

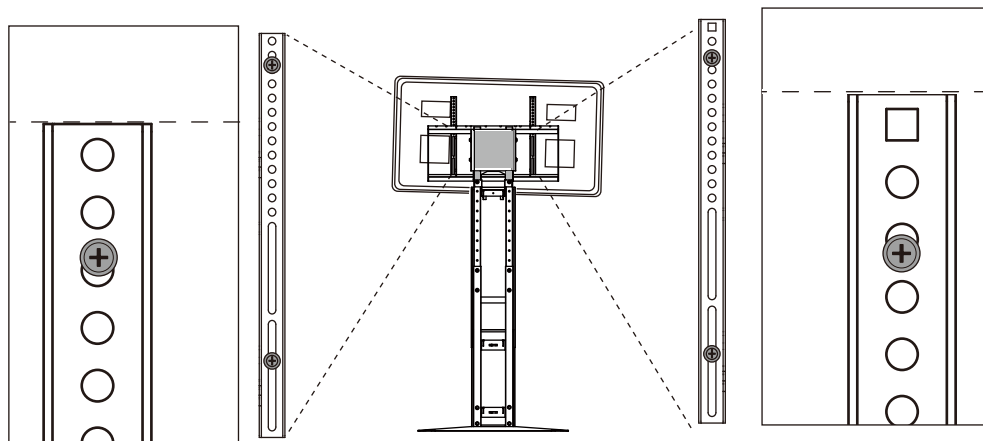


### 1. Tighten the upper and lower screws (only one mounting bracket)

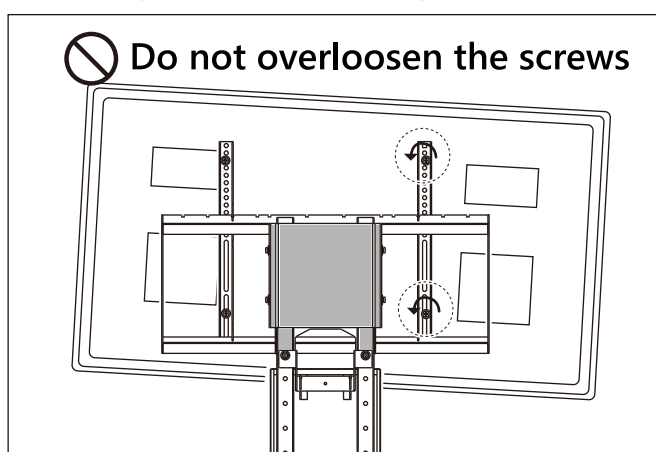


before adjustment

after adjustment

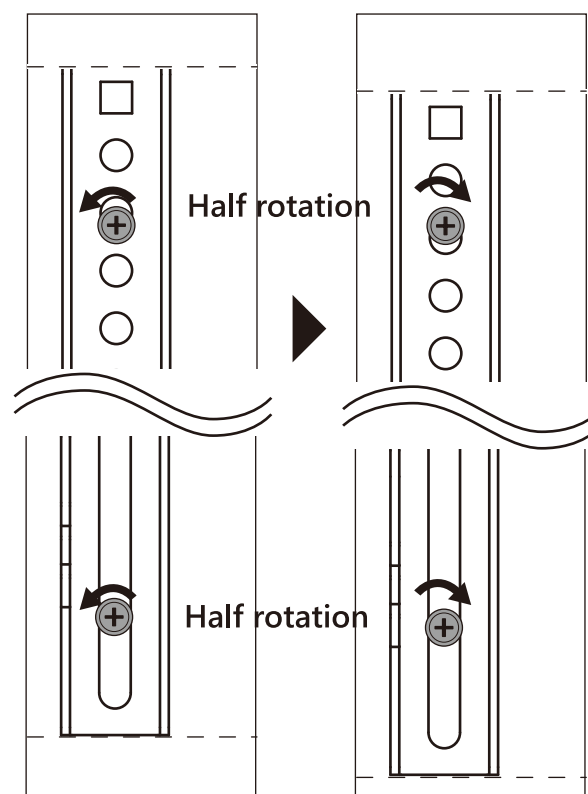

### 2. Tilt until the TV is level

### 3. Tighten the screw while holding the TV so that it does not move

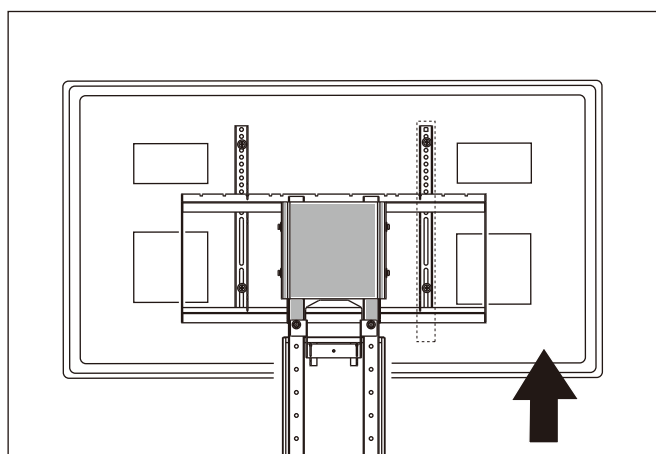

This explains how to raise the lower one, but it is also possible to lower the higher one in the same way.




## How to adjust the tilt angle of the TV


After dismantling the TV, loosen the screws on the left and right sides to fix the angle. The angle can be adjusted up to 6° upward and 6° downward.



**Be sure to dismantle the TV before adjusting the tilt angle.**

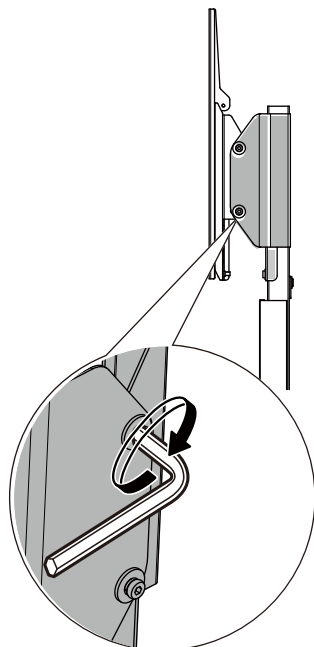


**Tighten screws securely after adjustment.**

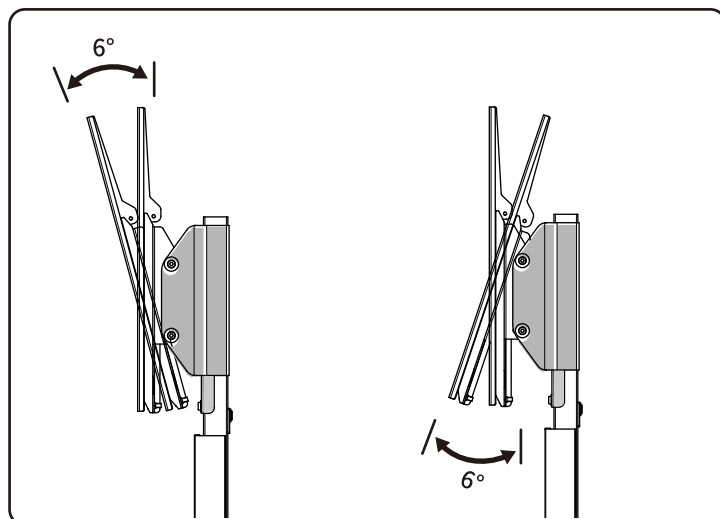

Depending on the height setting of the stand and the mounting position of the brackets, the TV may interfere with the stand when adjusting the angle downward.

## How to adjust the swivel angle of the TV

Hold the TV stand frame and move it slowly.

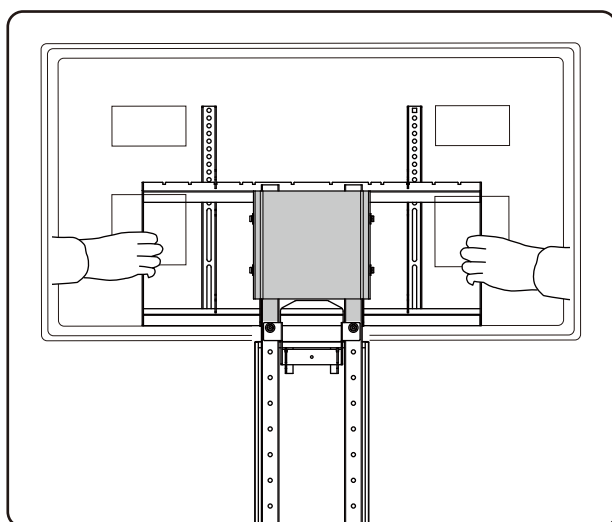

**There is no angle stopper for the swivel angle adjustment.**



**When adjusting the swivel angle, please be careful not to put your hand in the gap between the movable parts.  
Especially for families with small children, please be careful.**



**Be careful not to hit a wall or other objects during swivel adjustment.**

Before assembling


Step1

Step2

Step3

TV tilt adjustment method  
Safety precautions

## [Sold Separately] Installation of HDD HOLDER

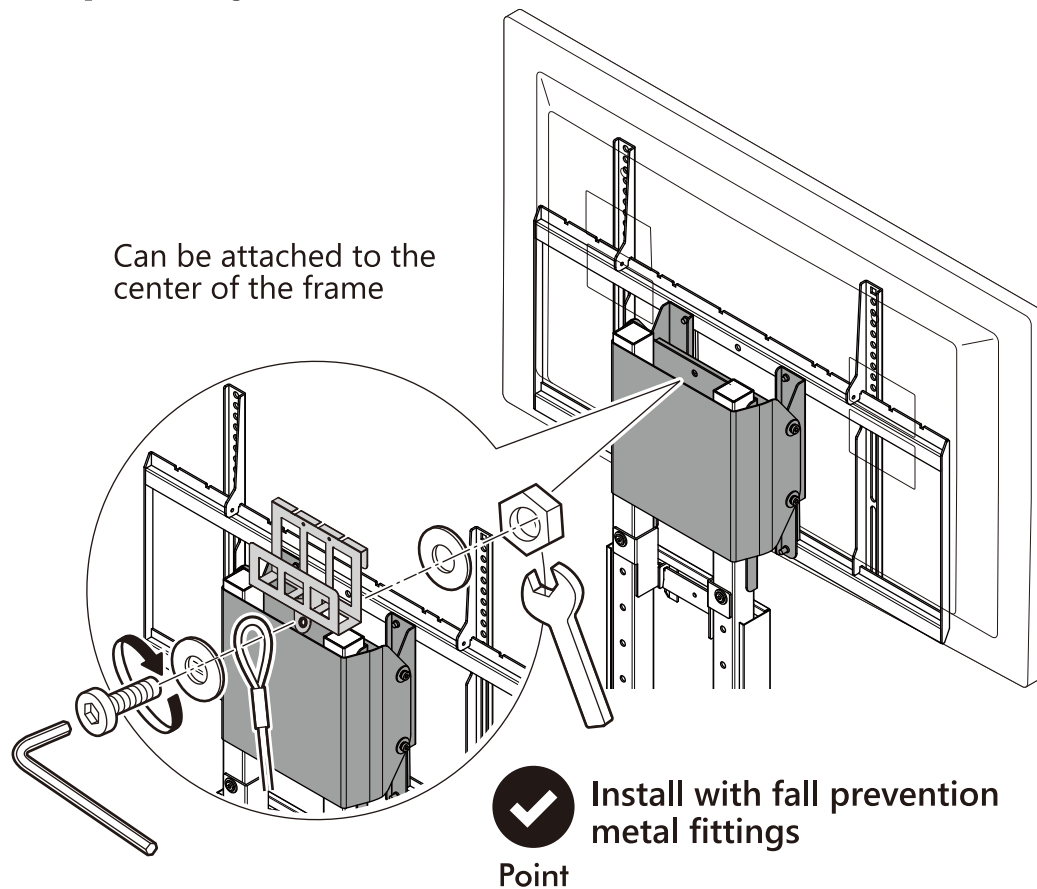


# ! Safety precautions

Failure to abide by the following advisories may result in personal injury or property damage:




## Securely tighten bolts and screws in place before installing the TV

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

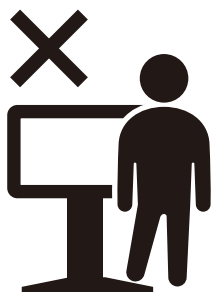


## Do not step on the base

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

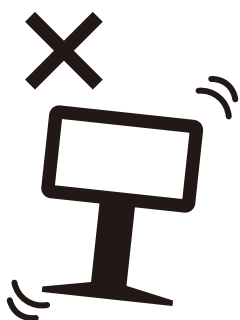


## Do not install the TV stand on a unstable place

Install on a flat and stable place with sufficient load bearing strength. (Do not install on sloped or uneven surfaces, unstable surfaces such as carpets, or deformed surfaces)

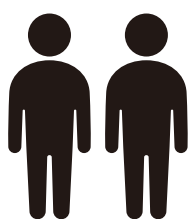

## Do not move the TV stand with the TV installed

The TV stand may fall over or the TV may fall off, resulting in damage or injury.

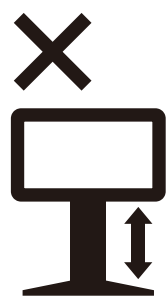

## Do not adjust the height with the TV installed

The TV stand may fall over or the TV may fall off, resulting in damage or injury.



## Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard

Refer to the instruction manual of the TV for how to hold the TV.



## Never allow children to climb, hang or move the TV stand and TV.

The TV stand may fall over or pinch your toes, resulting in damage or injury.



## Take safety precautions when not moving the TV stand.

Consider using the fall prevention strap or some stoppers.

Before assembling

Step1

Step2

Step3

TV tilt adjustment method  
Safety precautions

Nakamura Co.Ltd. assumes no responsibility for damage or injury

of any kind because of tipping over the stand and TV in case of earthquake or accident.



## Caution

If the following precautions are not observed, injury or property damage may occur.

### 1 Assembly and installation

#### 1. Causes of falls and damage

Be sure to assemble and install on a stable and flat surface. Spread a thick cloth or cardboard over the workspace so as not to damage the floor or walls.

#### 2. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or, air conditioning.

#### 3. Causes of fire and electric shock

When installing or removing a flat-screen TV from this product, be sure to turn off the power switch of the flat-screen TV, unplug the power plug from the outlet, and disconnect external connection cords (such as the cord between the antenna and TV). Otherwise, the cord may be damaged, resulting in fire or electric shock.

### 2 During use

#### 1. Causes of falls, injury and damage

Do not stand or hang on the product or use it for anything other than a TV stand.  
Do not apply a concentrated load to the TV stand. (It may tilt).  
Be careful not to pinch hands or fingers.

#### 2. Causes of fire and discoloration

Do not use near a fire or heat source such as a stove or heater.

#### 3. Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

### 3 Care and maintenance

#### Causes of cracking, discoloration and deformation

Do not wipe the surface with a damp cloth.  
Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.

- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt, and wipe off any residual moisture with a dry cloth.

- Check the screws regularly and tighten them securely if they are loose. (Once a month)