



マルチデバイスホルダー

組立説明書（第1版）

この度は、お買い上げいただき誠にありがとうございました。
この商品を末永く、安全にお使いいただくために、
この「組立説明書」をよく読み正しくご使用ください。
また、これらを必要に応じて見られるよう、大切に保管してください。

免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



注意

- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

この商品は日本の株式会社ナカムラの企画・品質管理によって中国（原産国）で製造しました。
品質向上の為に改良に伴い一部仕様が異なる場合があります。

販売元 株式会社ナカムラ
〒145-0065 東京都大田区東雪谷 4-20-10

公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ
——— コンシェルジュデスク ———



0120-777-570

（平 日 10:00～17:00）
（土日祝 10:00～15:00）



マルチデバイスホルダー

品 番	D05000044
種 類	マルチデバイスホルダー
サ イ ズ	W16 D7.5 H8 cm (ラック外寸)
材 質	スチール
表 面 加 工	粉体塗装
重 量	1.4kg
原 産 国	中国
耐 荷 重	1.5kg (ラック 1 個あたり)

注意

- 本製品の取り付け時に、HDD の電源コードや USB ケーブルを抜き差しする場合は、HDD の動作が止まっていることを確認してから行なってください。
- 本製品は、テレビをテレビスタンドから外した状態で取り付けてください。
- 本製品は、ラックに収まる小型機器（HDD、モデム、ルーター、電源タップなど）や小物の収納用として設計されています。それ以外の用途には使用しないでください。

注意

注意を無視した取扱いをすると、物質損害を被ったり、障害を負う可能性があります。

1 組立・設置の注意

1-1. けが、破損の原因

取り付けの際は、ネジでしっかり固定する。

1-2. 変色、破損の原因

屋内で使用する。直射日光や熱、冷暖房の風があたらない場所に置く。

2 使用の注意

におい

開梱時、梱包材や塗料などのにおいが残っている場合は、固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

3 お手入れの注意

ひび割れや変色、変形の原因




表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。（化学ぞうきんはその注意書きに従う）


※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取る。

※ねじは定期的に点検し、緩んでいるときはしっかり締める。（目安：1 カ月に 1 度）

付属部品の確認

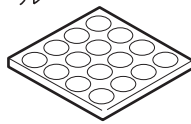
A	 × 8	結束バンド  × 4	保護シール  × 1
---	---	--	--

本体部品の確認

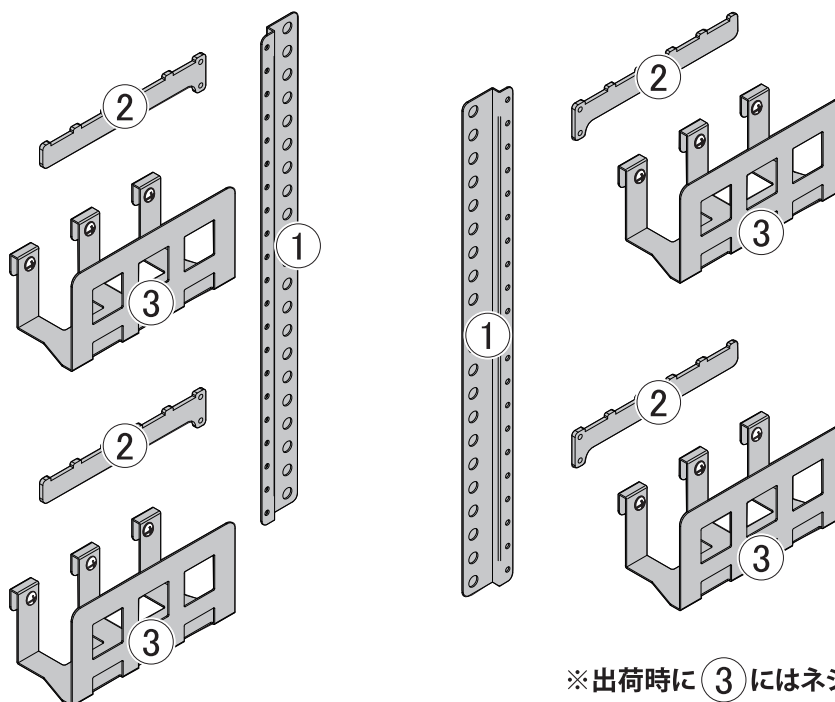


※出荷時に ③ にはネジが取り付けられています。
付属部品 A と共通ネジ

取付位置について

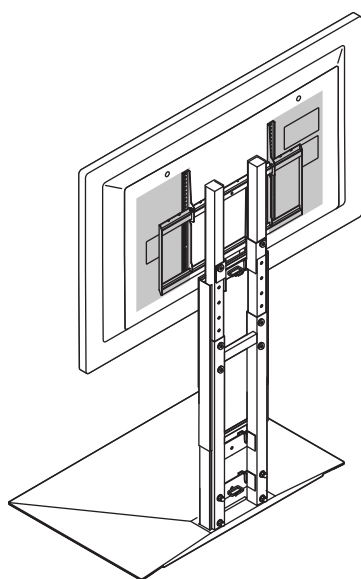

本製品は、図の  の
任意の位置で取付可能です。

Point テレビ取付金具と重ねて取り付けます。

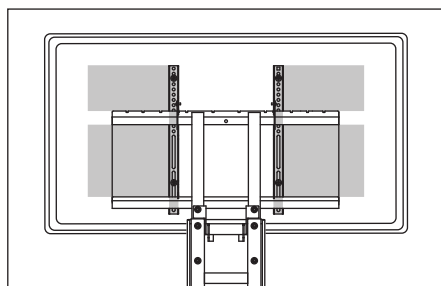

●ご使用のテレビ仕様（重量・重心）と本製品取付位置によっては、
全体の重量バランスが悪くなり、スタンドの安定性に影響します。
（小型の軽量テレビをご使用の際は、ラックの取付位置を低めに
するなどの対応をお願いします。）

以降の手順では、推奨位置での取付説明となっています。

テレビの段差やコードが干渉する場合は、最終ページの **取付位置の調整方法** をご確認ください。

本体部品の取付

1

取付について

テレビ取付金具に重ねて取り付けます。
使用する付属部品につきましては、
テレビスタンドの取説をご確認ください。

テレビ取付金具について




Point

テレビスタンドのタイプにより、
テレビ取付金具の形状・長さが異なります。
①の小さな穴がテレビの両端側にくるように取り付けます。

取付例 -1


左用金具・右用金具の
使い分けがあるタイプ

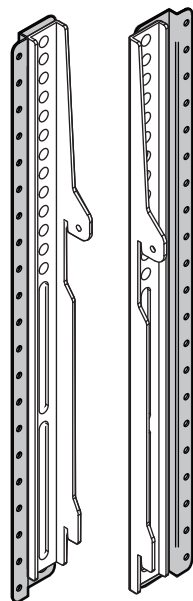

テレビ取付金具の
左右に注意

取付例 -2


左用金具・右用金具の
使い分けがあるタイプ

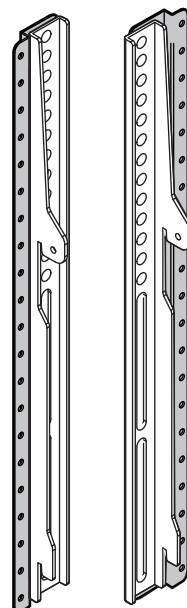


テレビ取付金具の
左右に注意

取付例 -3

大型テレビ用金具

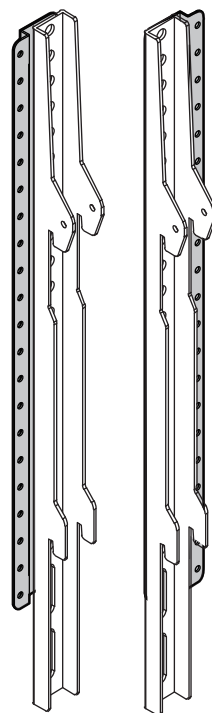


①とテレビ取付金具の
上端を合わせる

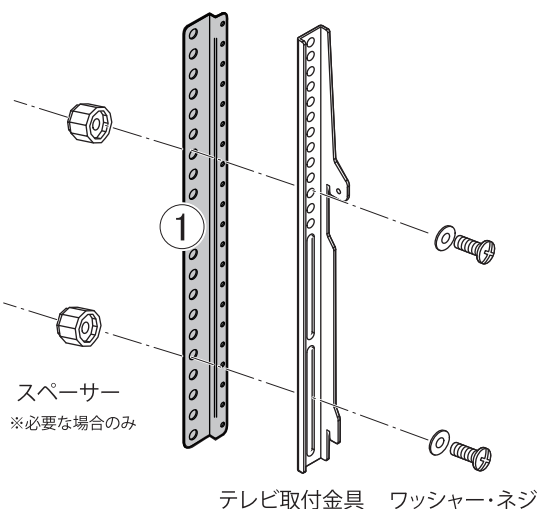


下記イラストは組立の一例です。テレビスタンドの取説もあわせてご確認ください。

スペーサーを使用しない場合

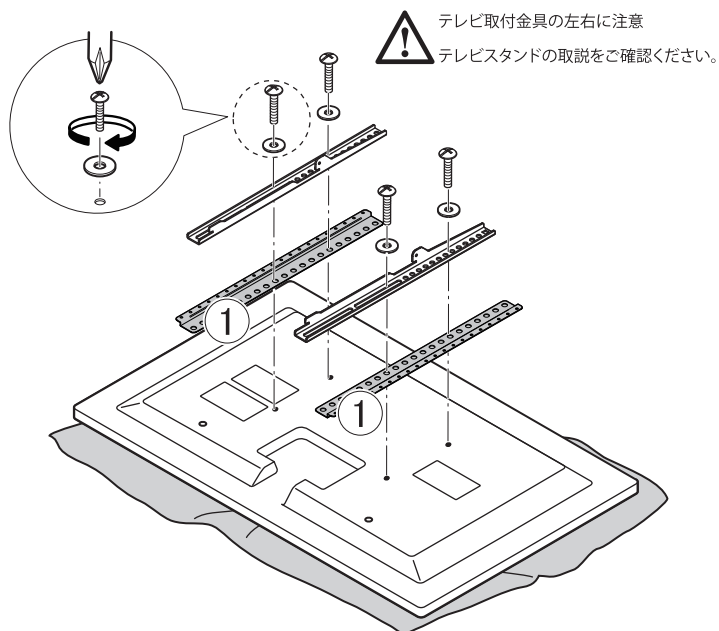

スペーサーを使用する場合

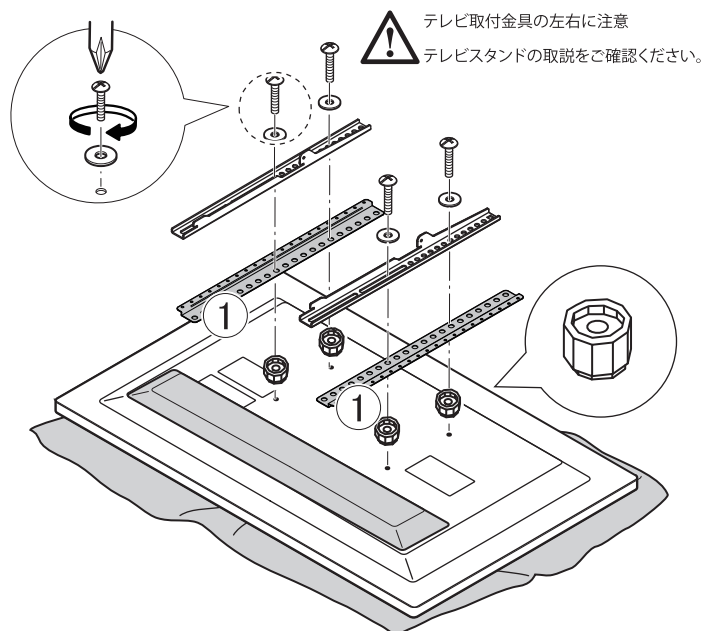





取付位置について






テレビの段差やコードが
干渉しない位置に
Point 取り付けてください。



図の 部には
取り付けられません。
Point

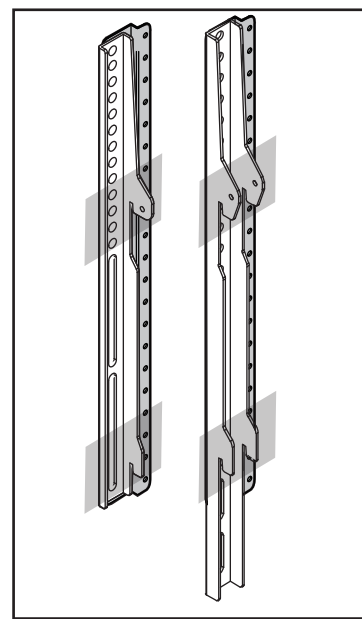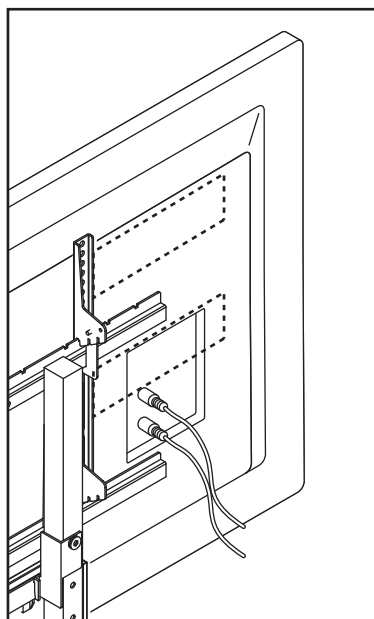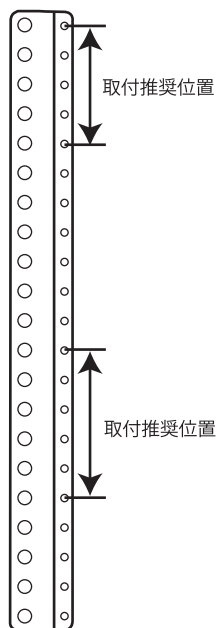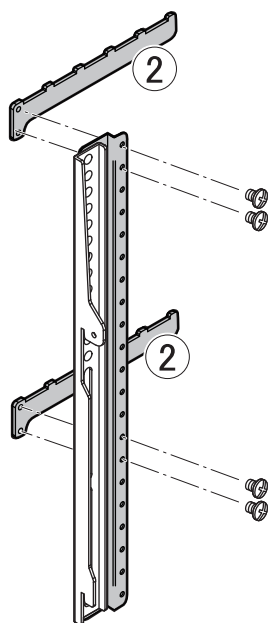


2

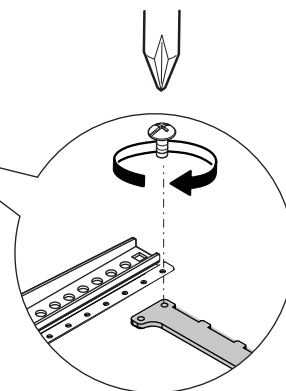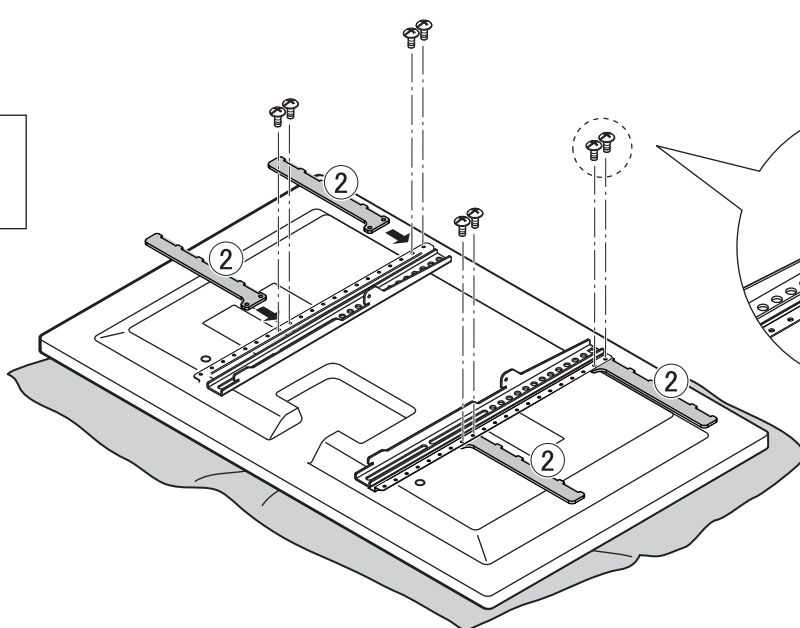

3

下記イラストは組立の一例です。
テレビスタンドの取説をご確認ください。

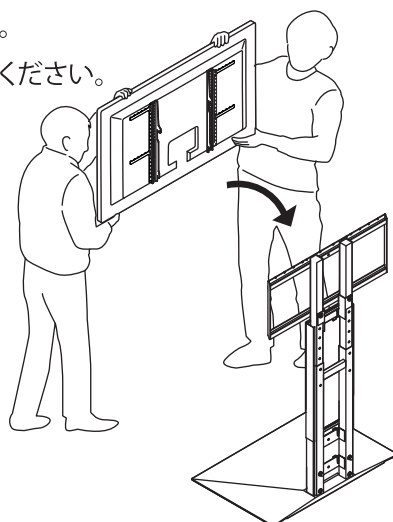

**テレビ画面に強い力が加わる
ような持ち方をしない**



テレビの持ち方は、
テレビの取扱説明書でご確認ください。



テレビの設置は2人以上でおこなう

4

保護シール

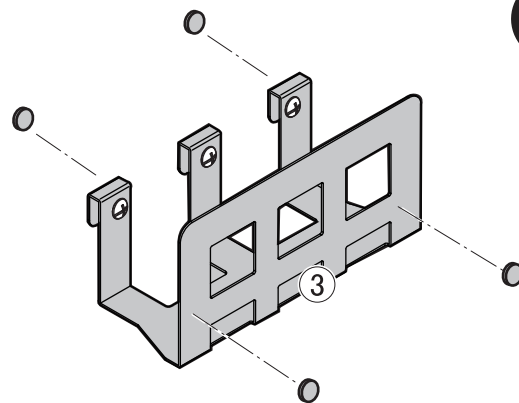

テレビと接触する面と
壁に接触する可能性のある面に
取り付けます。

Info

5





Point

③ が動かなくなるまで、
締め付ける。




Point

3つのフックのうち、2つ以上が掛かる
位置で取付が可能です。
(3段階調節)

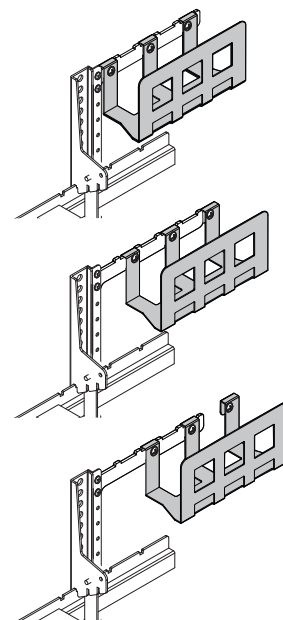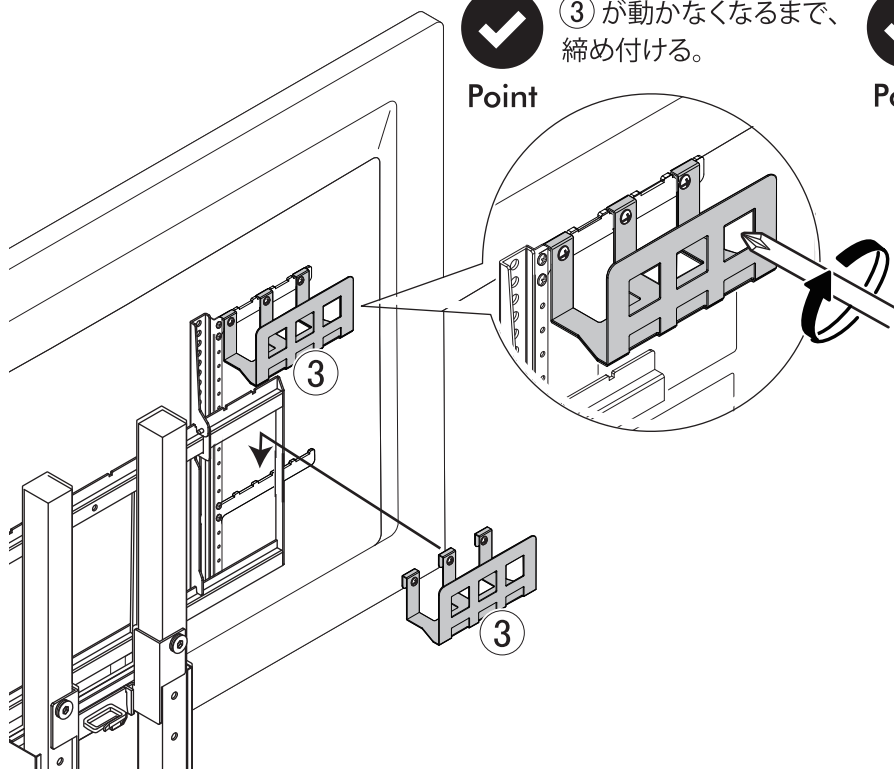

6

結束バンド

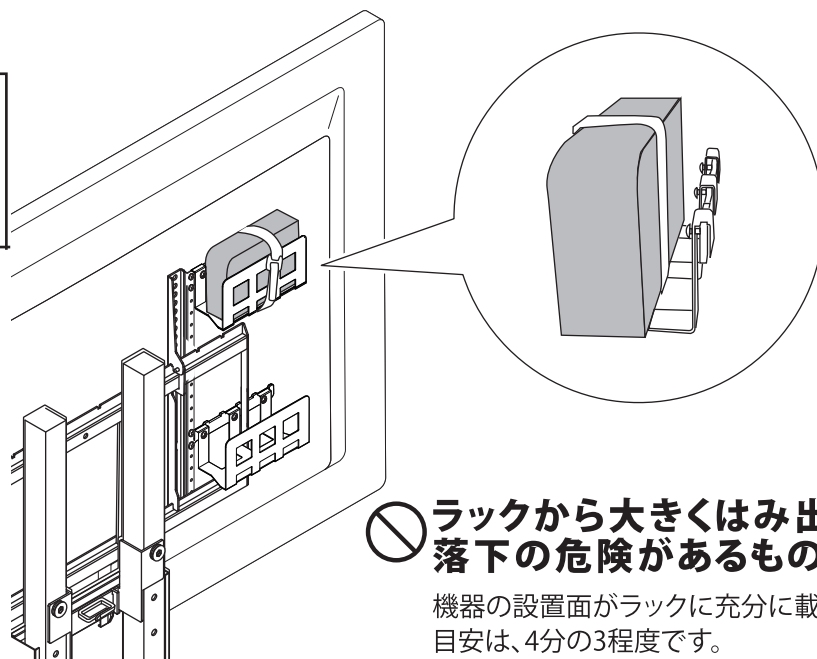

ラックから大きくはみ出して
落下の危険があるものは収納しない。

機器の設置面がラックに十分に載っていること
目安は、4分の3程度です。

取付位置の調整方法

テレビ取付金具との重ね方について




取付位置の調整可能範囲は、

テレビ背面の4つのネジ穴の縦幅により異なります。



Point

ネジ穴の縦幅が 10cm, 20cm, 30cm の場合は、調整が可能です。


ネジ穴の縦幅 40cm の場合は
位置調整はできません。

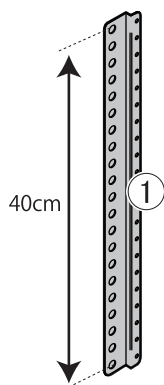


ネジ穴の縦幅 20cm の場合

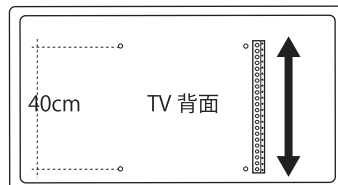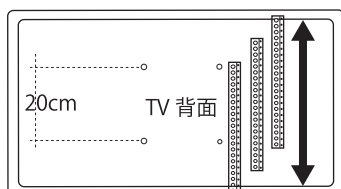


取付例 - A

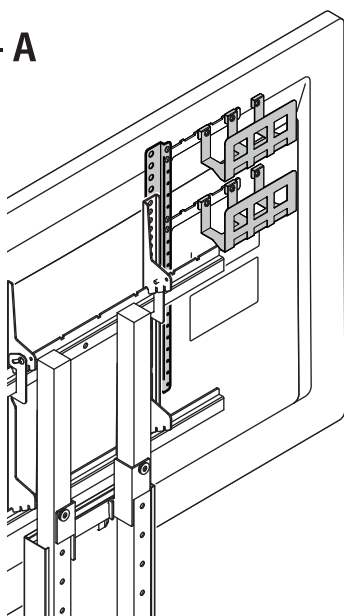


ネジ穴の縦幅 20cm の場合

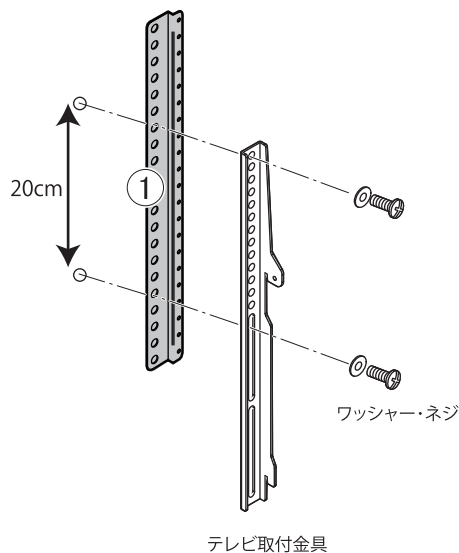

取付例 - B

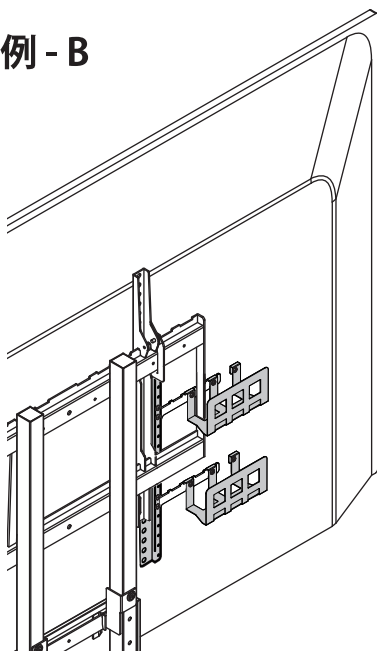

大型テレビ用金具
ネジ穴の縦幅 30cm の場合

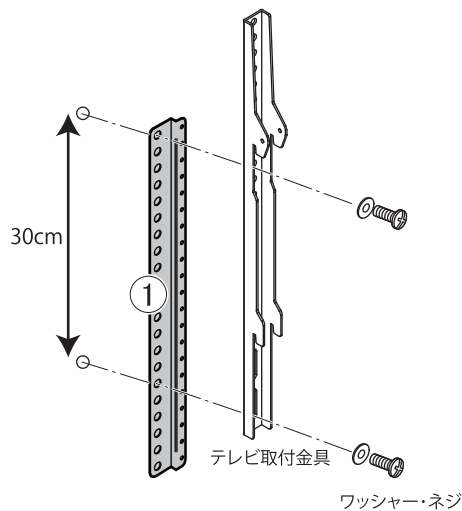



MULTI DEVICE HOLDER

Assembly Instructions [1st Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.



caution

· THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.

· KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.

This product was manufactured in China (country of origin)
under the planning and quality control of Nakamura Corporation of Japan.
Some specifications may differ due to improvements for better quality.

Nakamura Co. Ltd.

Officail brand site : <https://equals.tokyo/>

Contact us in English : info-gl@nakamura-jpn.co.jp



MULTI DEVICE HOLDER

model number	WLMH95119
product ID	D05000044
type	Multi-device Holder
rack of outer size	W16cm X D7.5cm X H8cm
material	steel
surface finish	powder coating
weight	3 lbs / 1.4kg
country of origin	China
maximum load	3.3 lbs / 1.5kg (each rack)

caution

- When installing the HDD power cord or USB cable when installing this product, make sure that the HDD operation has stopped before.
- Please attach this product with the TV stand off the TV stand.
- This product is designed for storage of small equipment (HDD, modem, router, power tap, etc.) that fits in racks and small items. Do not use for other applications.

 **Caution** If the following precautions are not observed, injury or property damage may occur.

1 Assembly and installation

1-1. Causes of injury and damage

When installing, secure it firmly with screws.

1-2. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or air conditioning.

2 During use

Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

3 Care and maintenance

Causes of cracking, discoloration and deformation




Do not wipe the surface with a damp cloth.

Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.


- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt and wipe off any residual moisture with a dry cloth.

- Check the screws regularly and tighten them securely if they are loose. (Once a month)

Accessory parts

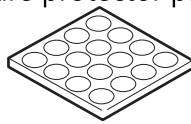
A	 × 8	cable ties  × 4	furniture protector pad  × 1
---	---	---	--

Main body parts

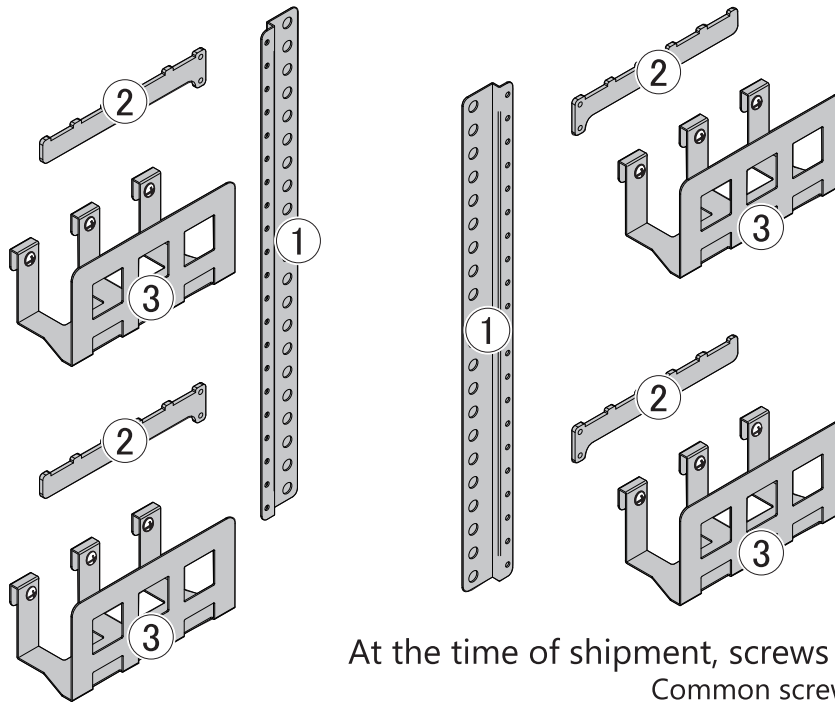

At the time of shipment, screws are attached to ③
Common screw with accessory A


Mounting position

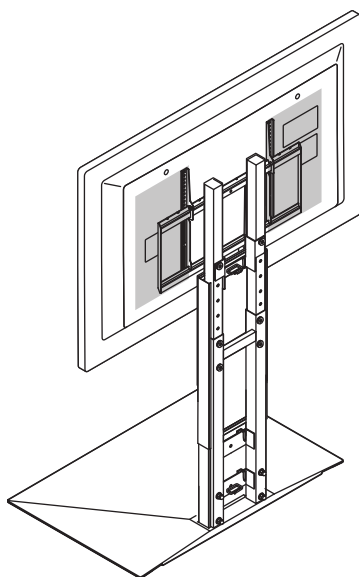

Point

This product can be installed at any position shown in the gray area

Install it on top of the TV mounting bracket.

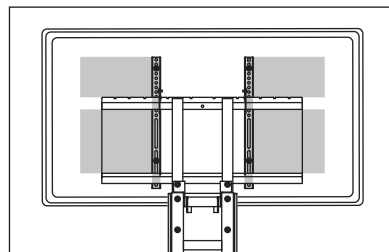

- Depending on the TV specifications (weight / center of gravity) you are using and the mounting position of this product, the overall weight balance may become poor, which may affect the stability of the stand. (When using a small lightweight TV, take measures such as lowering the rack mounting position.)

In the following procedure, the installation instructions are given in the recommended position.
If there is a step on the TV or the cord interferes, please check the last page.

How to adjust the mounting position


Installation of main body parts

1

Installation

It is mounted on top of the TV mounting bracket.

For the accessories to be used, refer to the instruction manual of the TV stand.

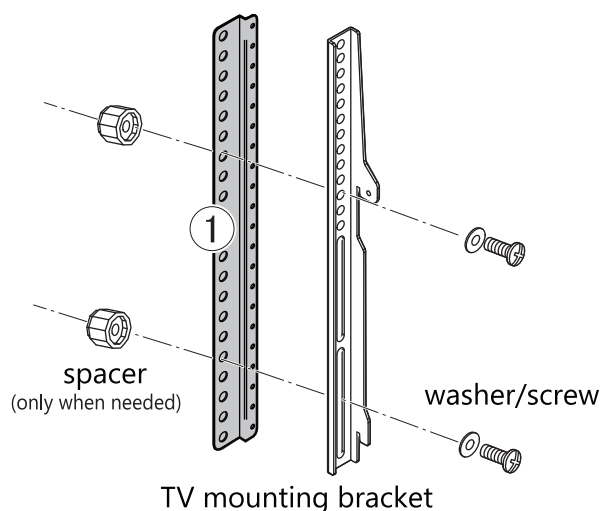

TV mounting brackets




Point

The shape and length of the TV mounting bracket differ depending on the type of TV stand.

Install so that the small holes in ① are on both side ends of the TV.

Installation example -1


A type that uses different types of metal fittings for the left and right

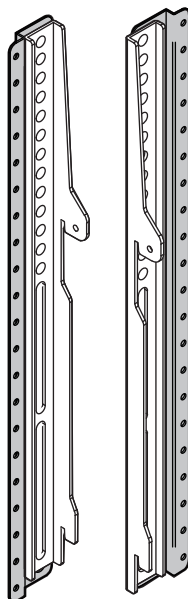

Be careful of the left and right sides of the TV mounting bracket

Installation example -2


A type that uses different types of metal fittings for the left and right

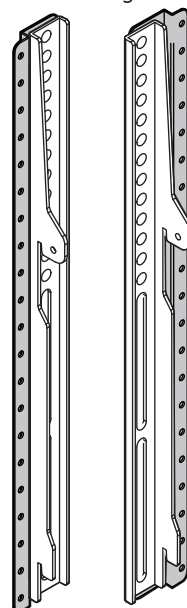

Be careful of the left and right sides of the TV mounting bracket

Installation example -3


Large TV bracket

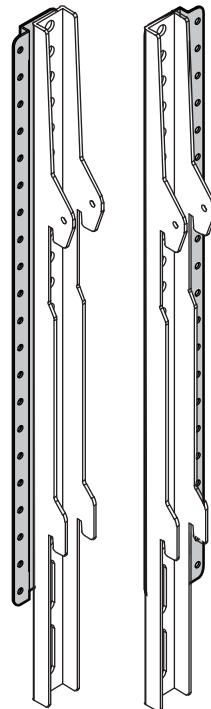


Align ① with the top edge of the TV mounting bracket

The illustration below is an example of assembly.
Please also check the instruction manual of the TV stand.



When not using spacers

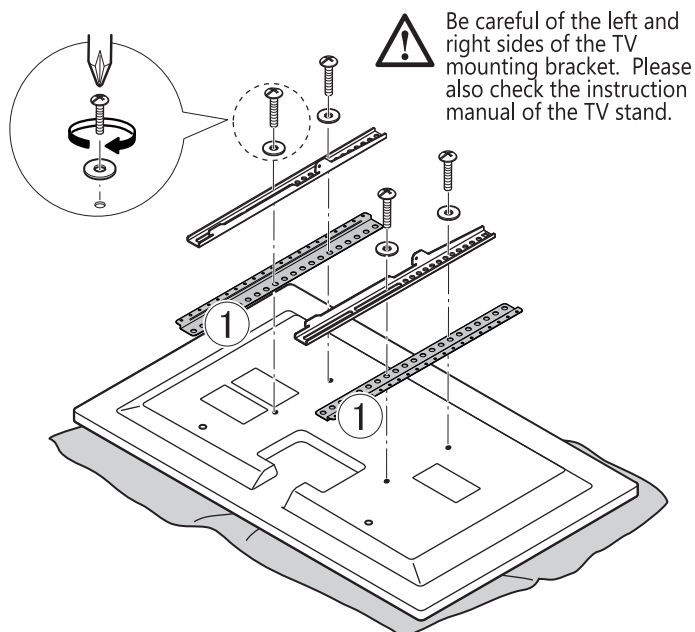

When using spacers

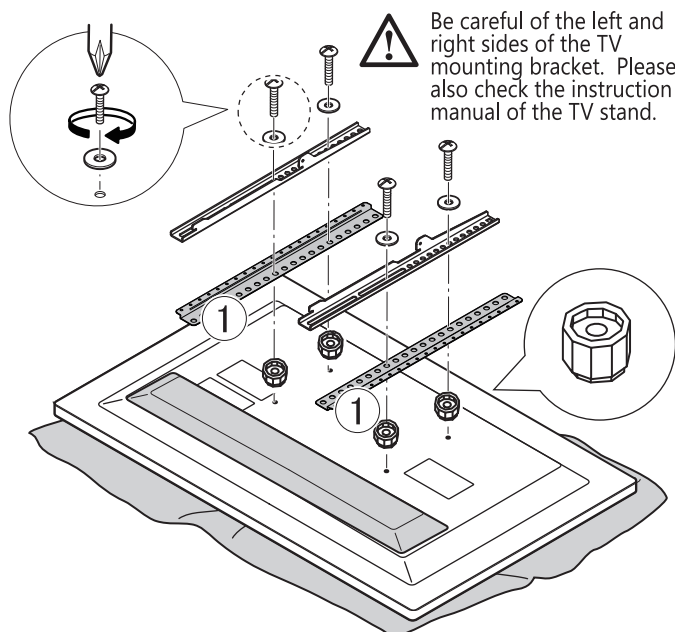


Mounting position

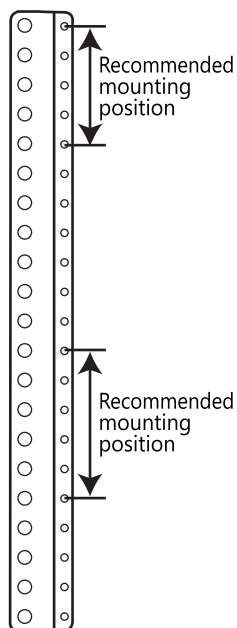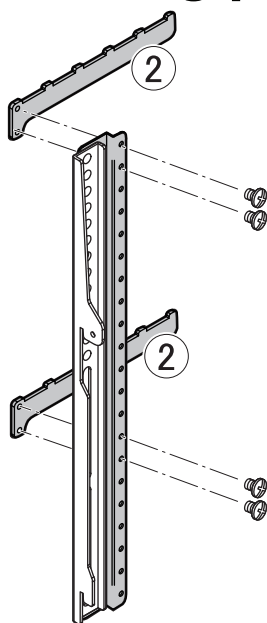


Install it in a position where the steps and cords of the TV do not interfere.

Point


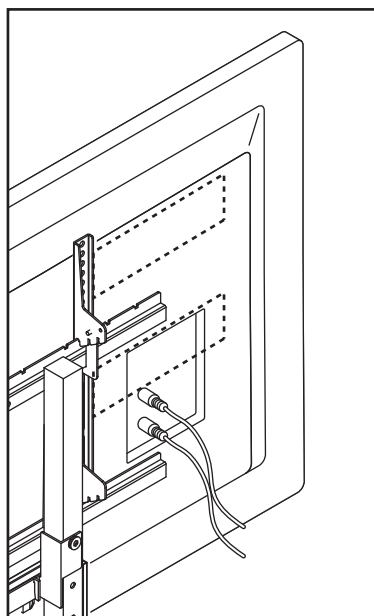


Cannot be installed in the gray area

Point

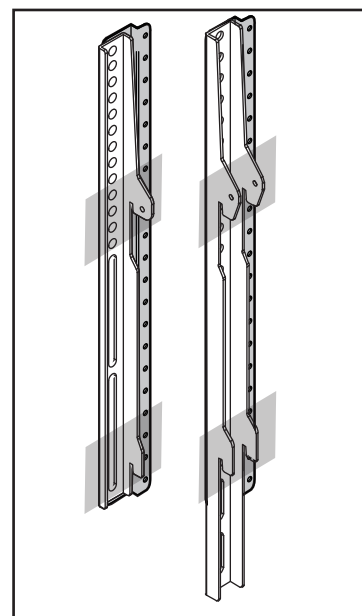


2

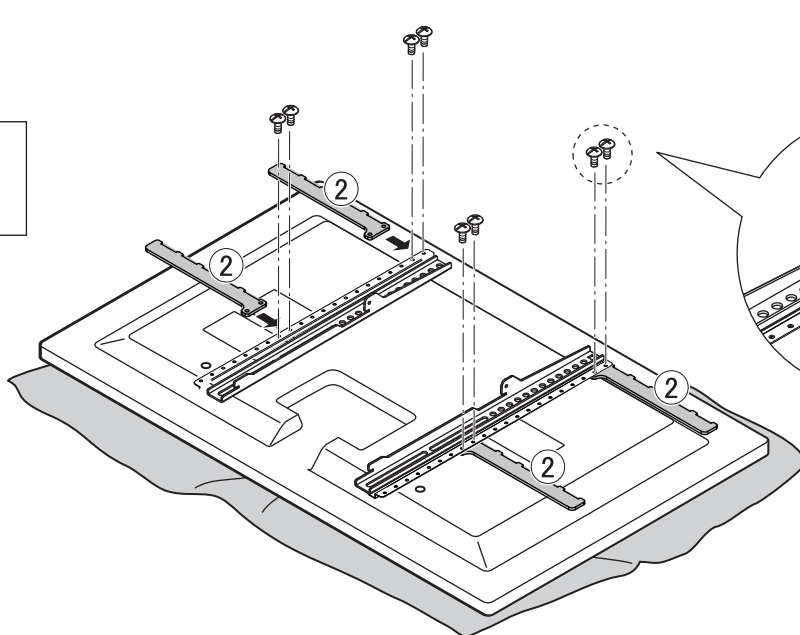

3

The illustration below is an example of assembly. Please check the instruction manual of the TV stand.

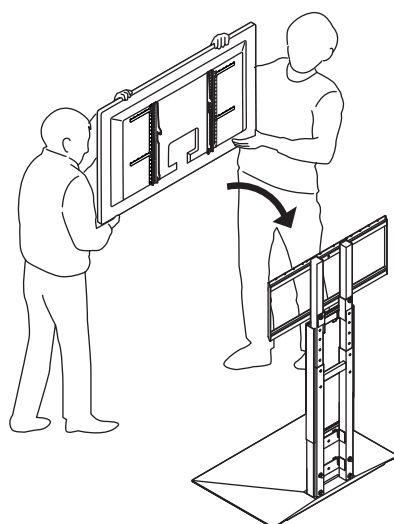

Do not apply pressure directly to the TV screen. TV screen can be damaged when pressed too hard



Refer to the instruction manual of the TV for how to hold the TV.



Two or more persons do the installation

4

furniture protector pads

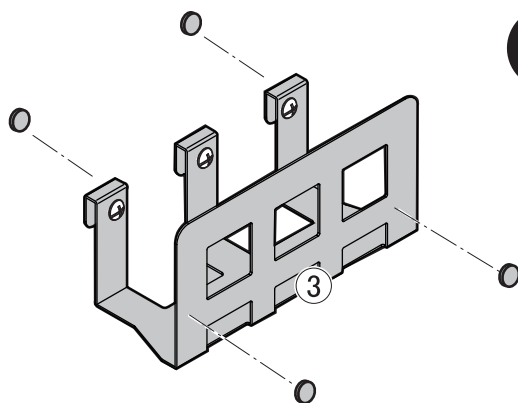

Info

Attach it to the surface that comes in contact with the TV and the surface that may come into contact with the wall.

5





Point

Tighten until ③ does not move




Point

It can be installed at the position where two or more of the three hooks hang. (3 step adjustment)

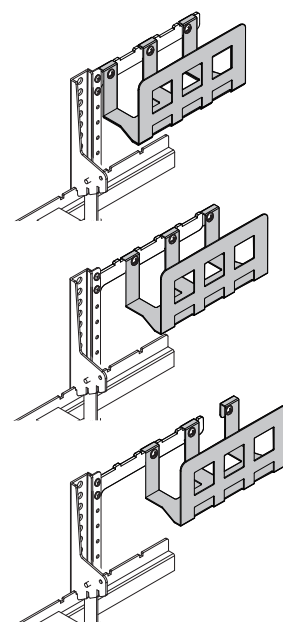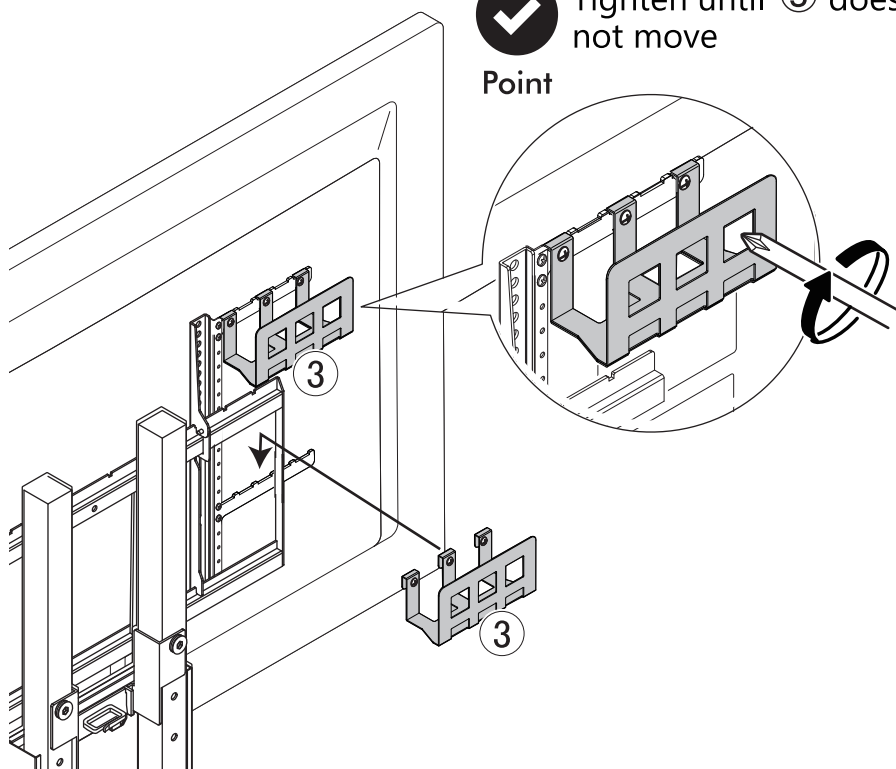

6

cable ties

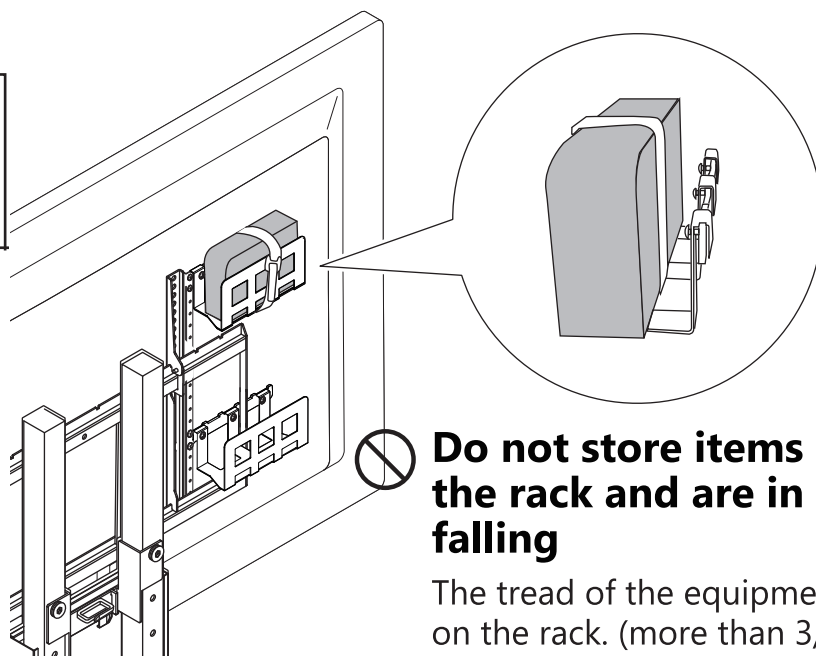


Do not store items overhung the rack and are in danger of falling

The tread of the equipment is well placed on the rack. (more than 3/4)

How to adjust the mounting position


Installation on the TV mounting bracket

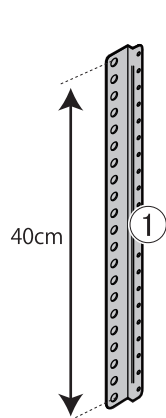


Point

The adjustable range of mounting depends on the vertical width of the four screw holes on the back of the TV. If the vertical width of the screw hole is 10cm, 20cm, 30cm, it can be adjusted.


When the vertical width of the screw hole is 20cm

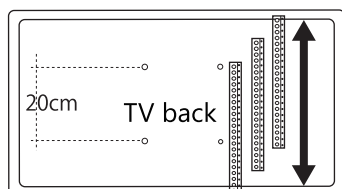


The position cannot be adjusted when the vertical width of the screw hole is 40cm

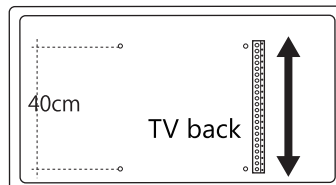


Installation example - A

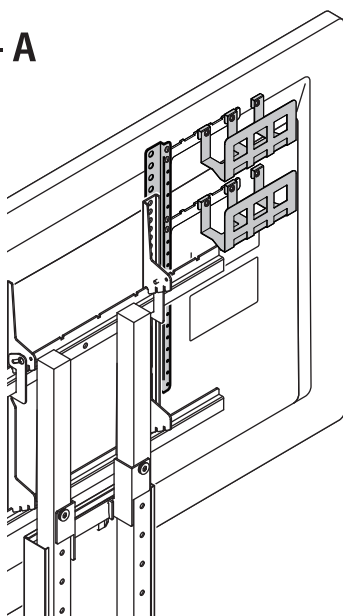

When the vertical width of the screw hole is 20cm

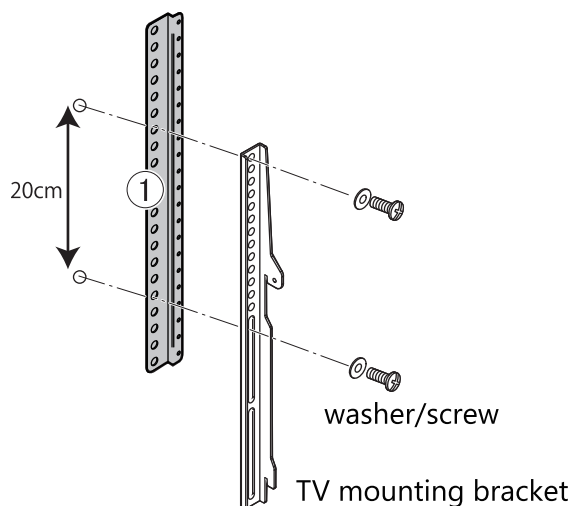

Installation example - B

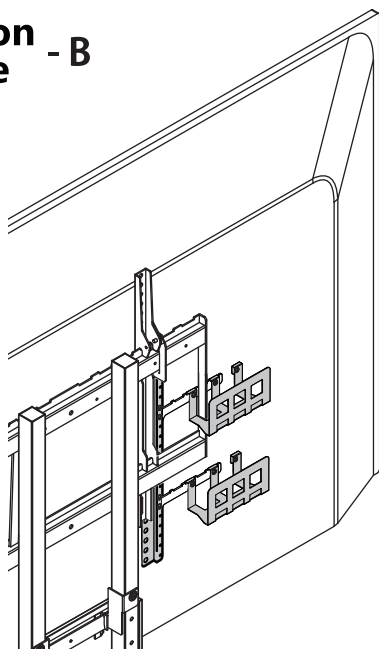

Metal fittings for large TVs

When the vertical width of the screw hole is 30cm

