



収納付きゲーム機棚板

組立説明書（第1版）

この度は、お買い上げいただき誠にありがとうございました。
この商品を末永く、安全にお使いいただくために、
この「組立説明書」をよく読み正しくご使用ください。
また、これらを必要に応じて見られるよう、大切に保管してください。

免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- ・本製品の組み立ては、お子様の手の届かないところで実施してください。

- ・以下の場合、当社はいかなる損害賠償の責任も負いません。

- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。

この商品は日本の株式会社ナカムラの企画・品質管理によって中国（原産国）で製造しました。
品質向上の為に改良に伴い一部仕様が異なる場合があります。

販売元 株式会社ナカムラ
〒145-0065 東京都大田区東雪谷 4-20-10



公式ブランドサイト <https://equals.tokyo/>

製品についてのお問い合わせ
——— コンシェルジュデスク ———




0120-777-570 (平 日 10:00～17:00)
(土 日 祝 10:00～15:00)

耐荷重と棚板の取り付けについてのご注意

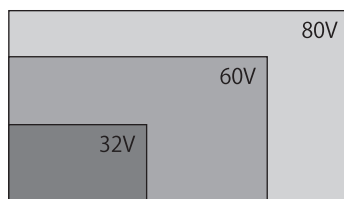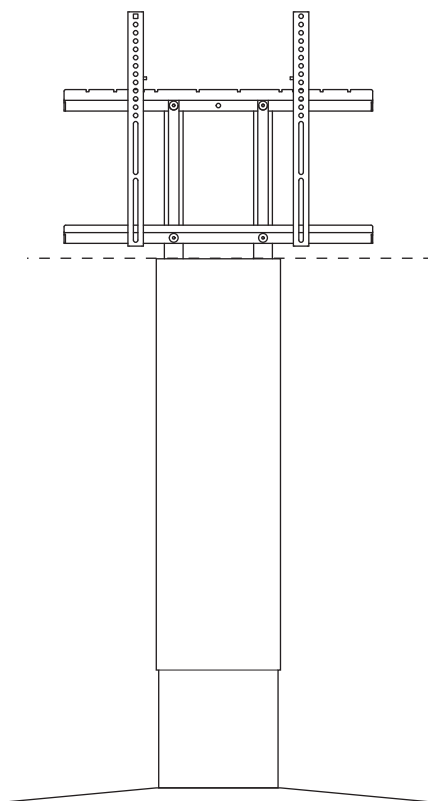

1. テレビの重量がスタンドの
TV 耐荷重を超えていないこと



サウンドバー専用棚




専用棚板

専用棚板


2. 棚板に載せる総重量は **15kg** まで

3. 棚板の取り付けは**最大 3 枚**まで
※種類を問わず


各棚板の耐荷重

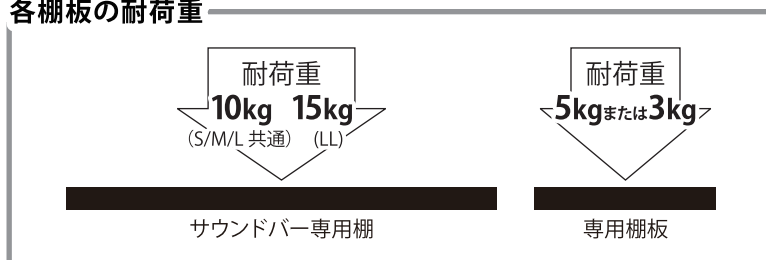


※2022 年 8 月現在

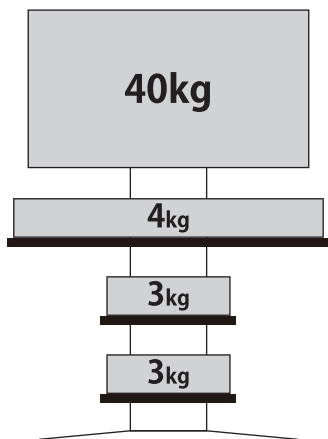


棚板の有無に関わらず、
テレビの重量は耐荷重を超えていないこと

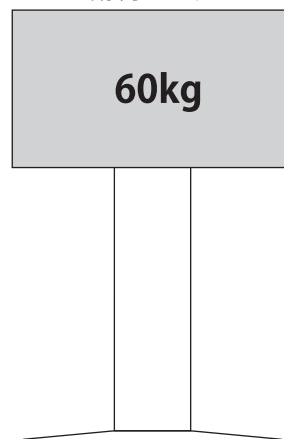

棚板に載せる総重量は**15kg**まで

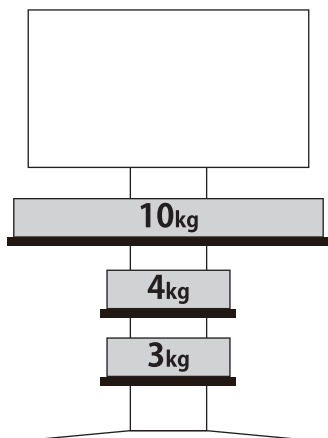

棚板の取り付けは**最大 3 枚**まで

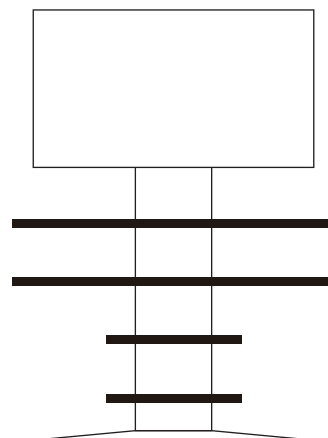


安全上のご注意



注 意

人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。

人への危害、財産の損害を防止するため、必ずお守りください。

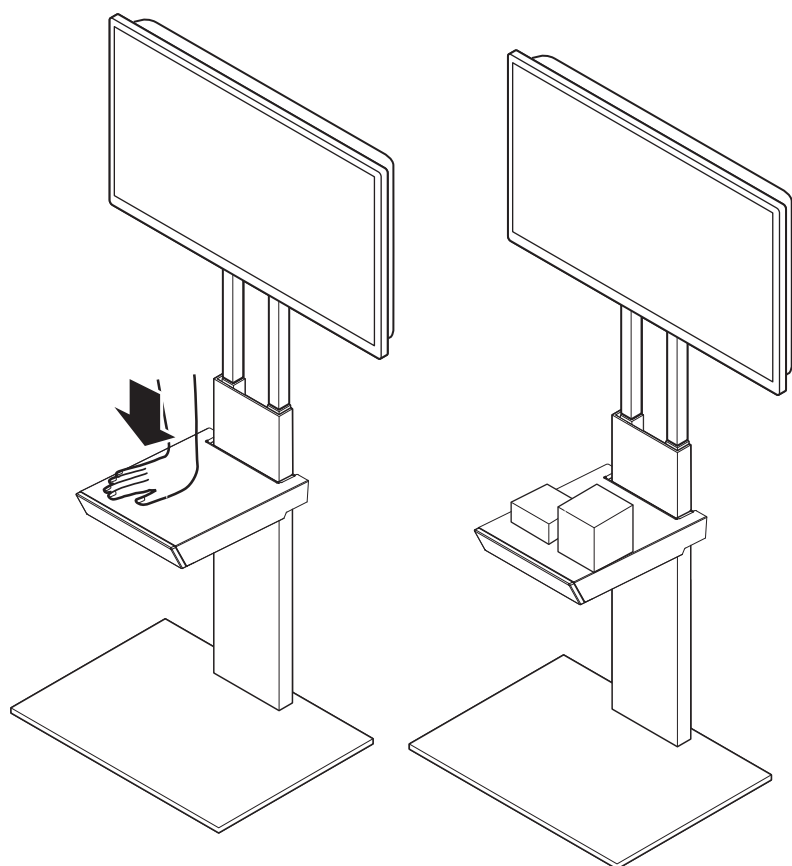


手をつかない。

テレビスタンドが倒れたり、棚板が脱落して、破損やけがの原因となります。



荷重を偏らせない。

テレビスタンドが倒れたり、棚板が脱落して、破損やけがの原因となります。

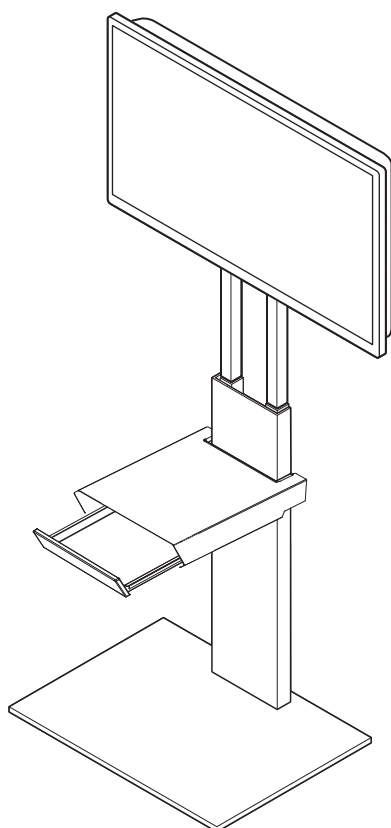

**引出しの開閉は静かに
おこなってください。**

引出しが脱落して、破損やけがの原因となります。




棚板の角に注意する。

特に「V2 Low type」や「S1」に「ゲーム機棚板」を使用する場合、スタンドのベースよりも棚板が手前に出っぱります。



収納付きゲーム機棚板

品 番	D05-24 (WH) / 25 (BK)
種 類	収納付きゲーム機棚
サ イ ズ	W30 D43 H7cm
材 質	スチール
表 面 加 工	粉体塗装
重 量	5kg
原 産 国	中国
耐 荷 重	全体5kg (うち引出し1kg, フック各0.5kg)

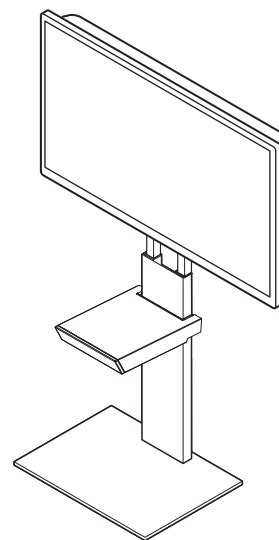

⚠ 注意

注意を無視した取扱いをすると、物質損害を被ったり、障害を負う可能性があります。

1 組立・設置の注意

1-1. けが、破損の原因

取り付けの際は必ず 2 人以上で行い、ネジでしっかり固定する。

1-2. 変色、破損の原因

屋内で使用する。直射日光や熱、冷暖房の風があたらない場所に置く。

1-3. 転倒、けが、破損の原因

棚板に手をついたり、集中的に荷重をかけない。

棚板の高さを調整する際は、設置された機器を取り外してから行う。

2 使用の注意

におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、風通しのよいところへしばらく放置する。

3 お手入れの注意

ひび割れや変色、変形の原因

表面を水気の多いぞうきんなどでふかない。

クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)




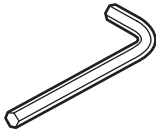

※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1 カ月に 1 度が目安です。)


付属部品の確認

紛失の時の為に、余分に入れている部品もあります。余った部品は予備です。
※表の数は、必要数です。



本体組立用部品

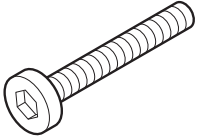A	 × 2	B	 × 2	C	 × 2
D	 × 1	ジェルシート  × 4			


本体部品の確認

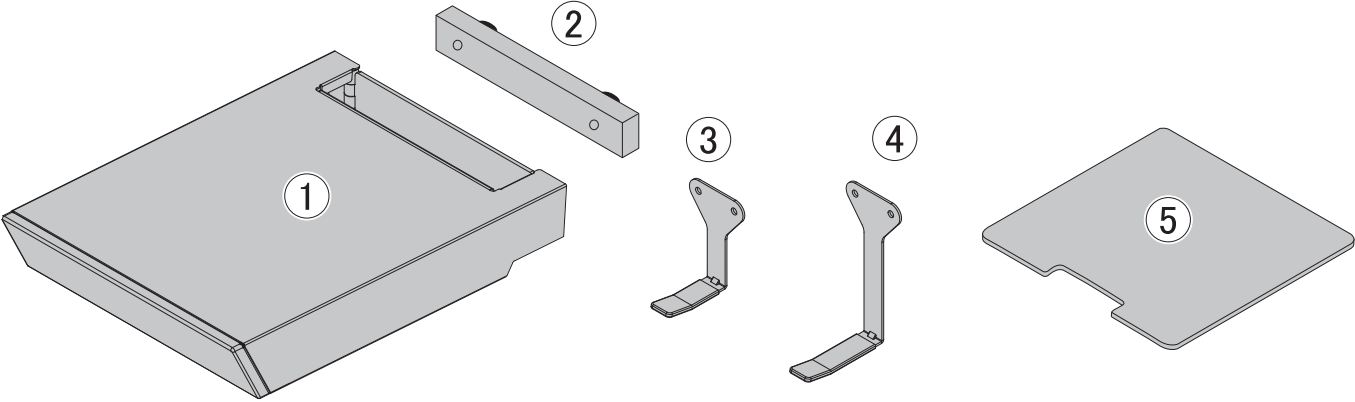

1

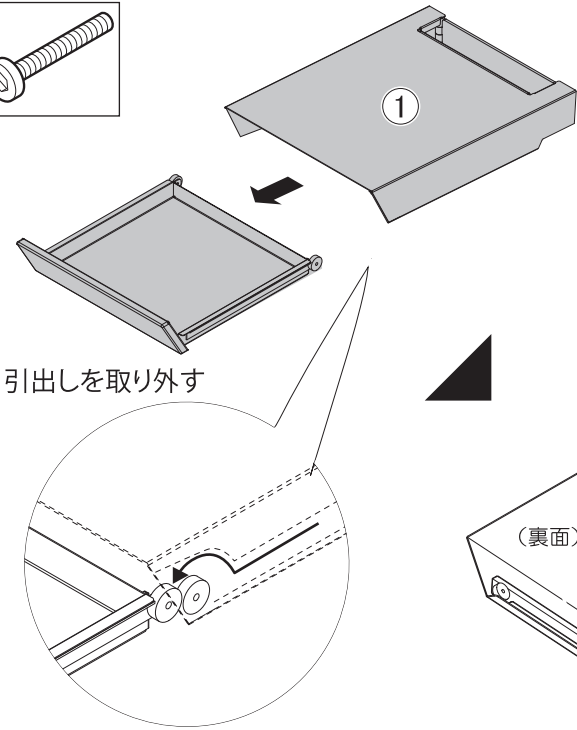

引出しを取り外す

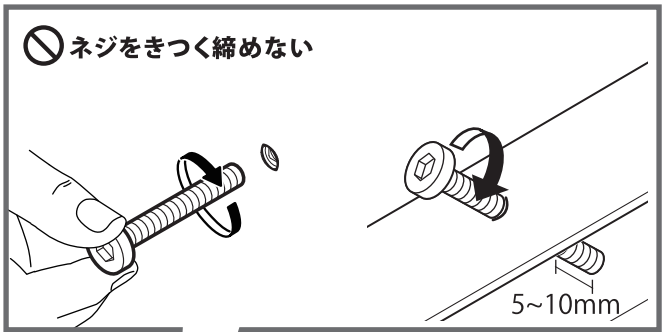


ネジをきつく締めない


5~10mm

棚板 ① に
固定用板 ② を取り付ける

⚠ ② が落下しないように
注意してください。

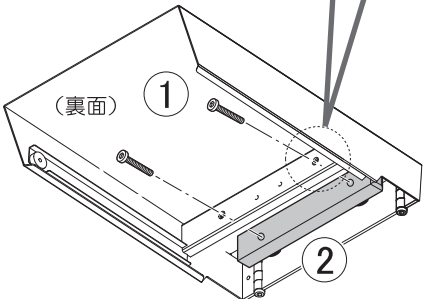


2





⚠️ ②が落下しないように
注意してください。


ネジをゆるめて外す

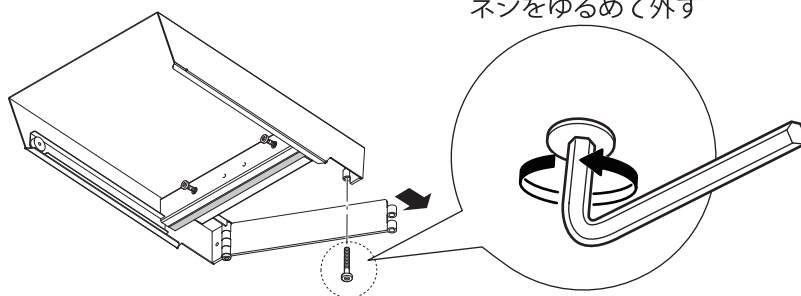

⚠️ 棚板の取り付けは
2人以上で行う

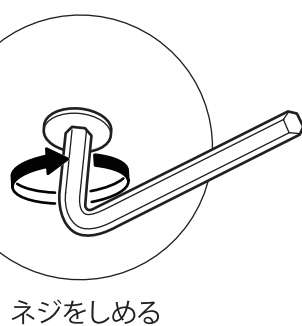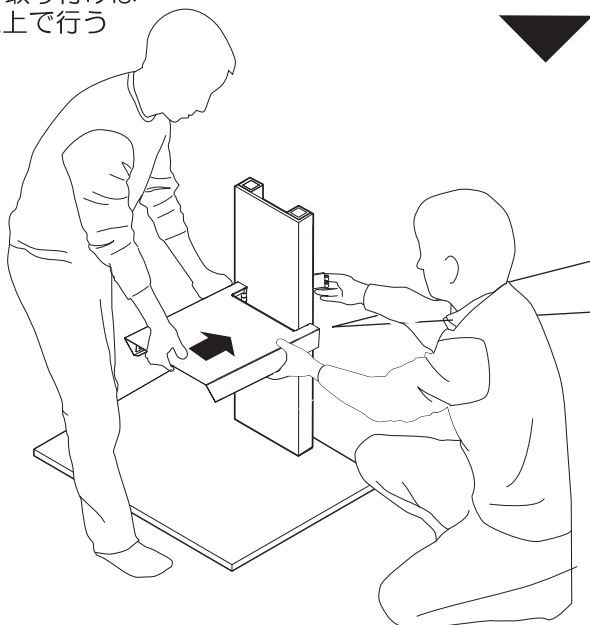



ネジをしめる

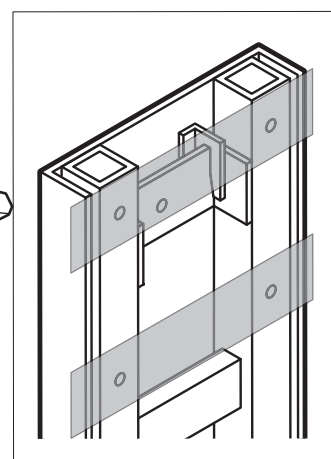

Point




図の 部分には
棚板を取り付けられません。

3 棚板を好みの高さで固定してネジを本締めする

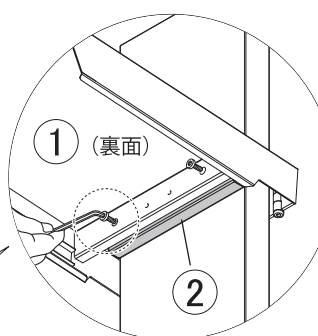


ネジをしめて固定する

ゆるむ

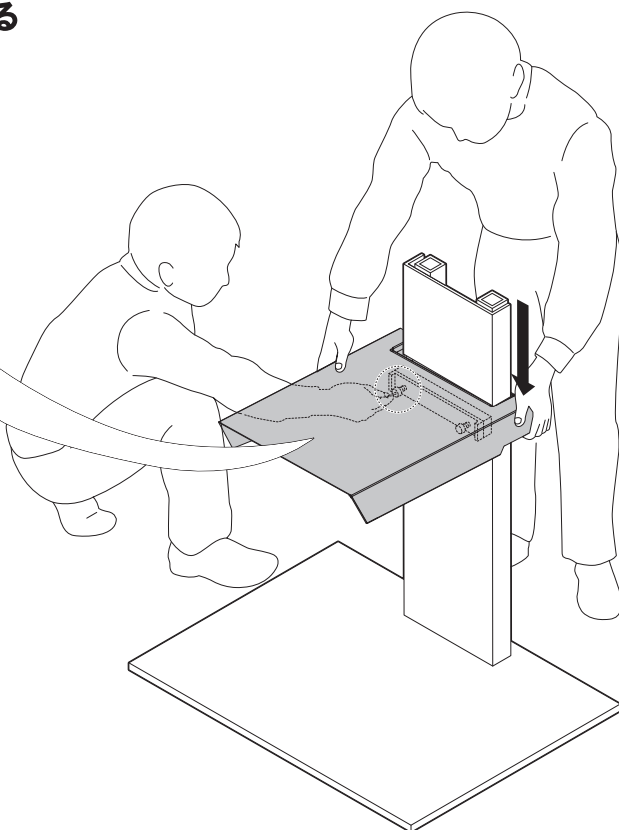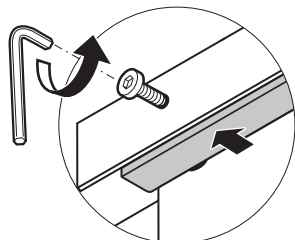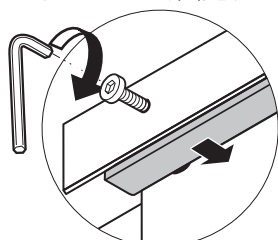


4 フックの取付

必要により指定の場所に取り付けてください。

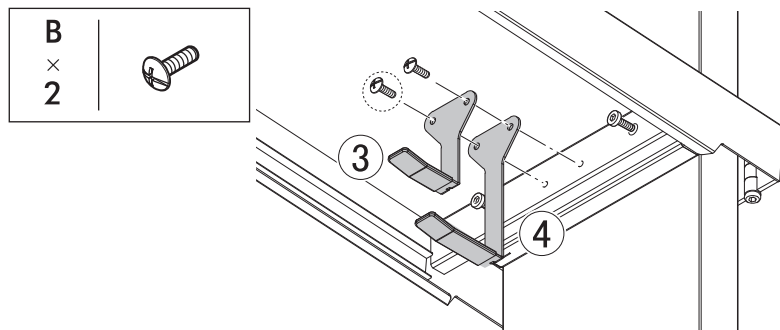

引出しを戻す

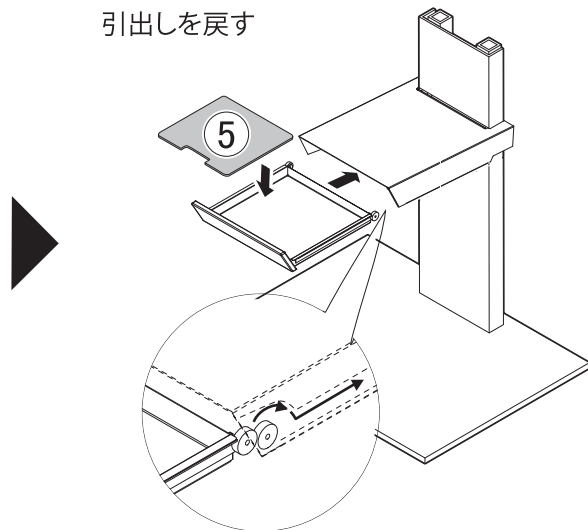

5 ジェルシートを機材の底面に貼る


ジェルシート

- ・貼る部分のホコリ・汚れ・油分をアルコールシートなどで取り除いてから貼ってください。
- ・ジェルシートが汚れた場合は、水洗いして乾かせば繰り返し使用できます。
- ・ブルーレイプレイヤーやゲーム機などを外す場合は、ゆっくりと動かして剥がしてください。



Point

機材底面の脚周辺の
平らな面に貼る
脚などの凸部に貼ると安定しません。

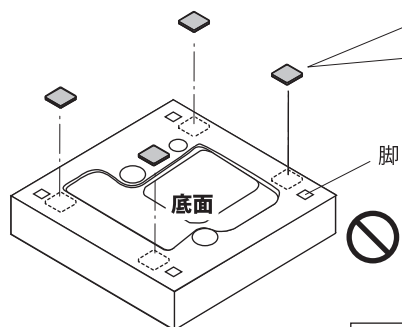


通風孔などを
ふさがない。




Info


高さのある大きな
脚付きの場合は、
脚の裏に貼ります。

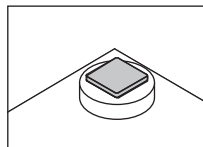



両面

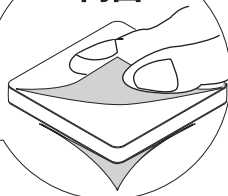

上から軽く押し付けてから、
しっかりと固定されていることを確認する

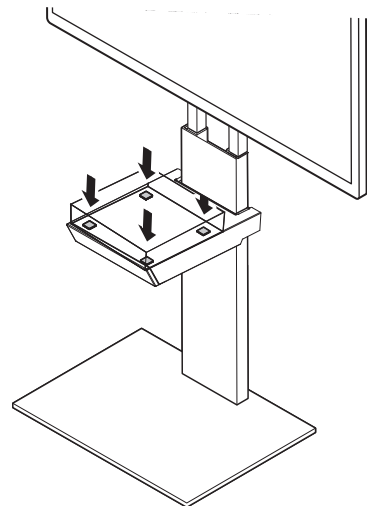

6

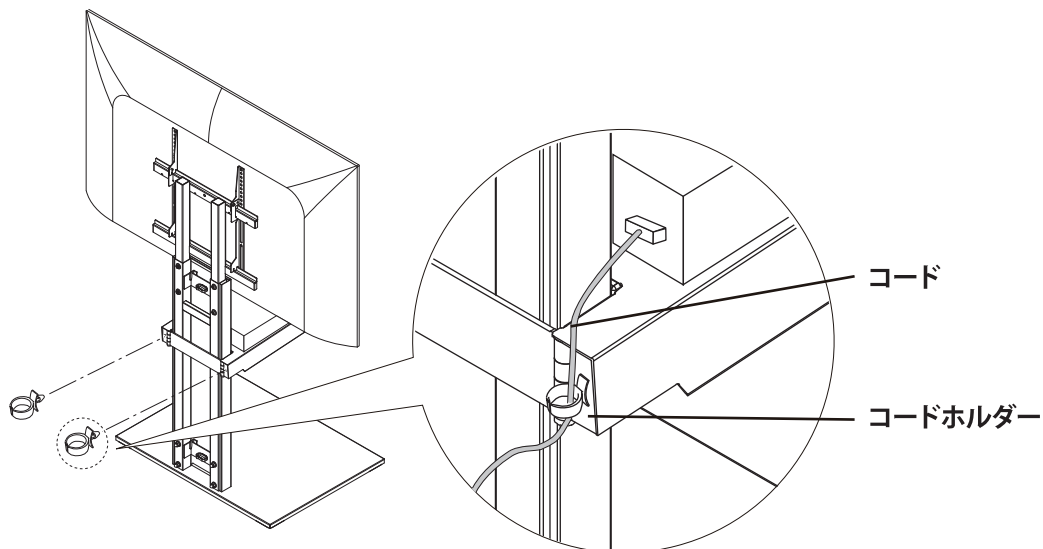



SHELF FOR GAME

Assembly Instructions [1st Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly.

Also, keep this in a safe place so that you can refer to it as needed.

Please Note

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.



· THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.
· KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.

Nakamura Co. Ltd. shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.



This product was manufactured in China (country of origin)
under the planning and quality control of Nakamura Corporation of Japan.
Some specifications may differ due to improvements for better quality.

Nakamura Co. Ltd.


Official brand site : <https://equals.tokyo/>

Contact us in English : info-gl@nakamura-jpn.co.jp

Precautions regarding load capacity and installation of shelf

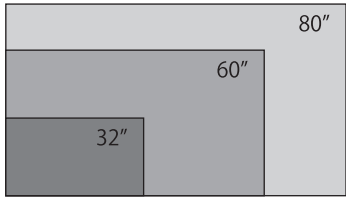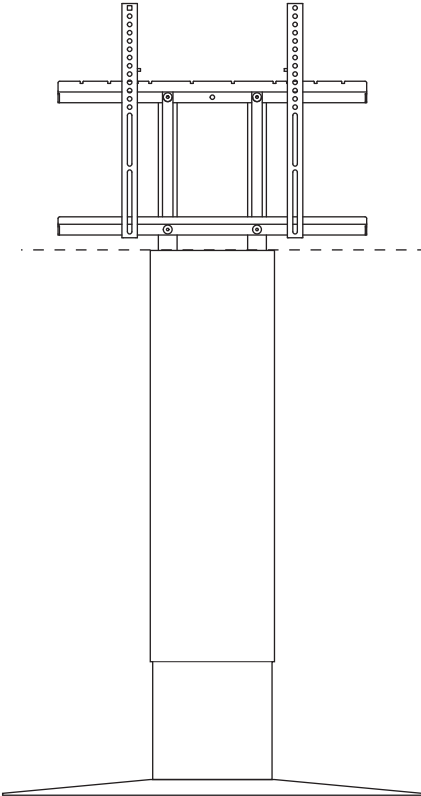

- 1. The weight of the TV does not exceed the TV load capacity of the stand
- 2. The total weight that can be placed on all shelves is up to **22 lbs / 10kg**
- 3. **Up to 3 shelves** can be attached (Regardless of type)

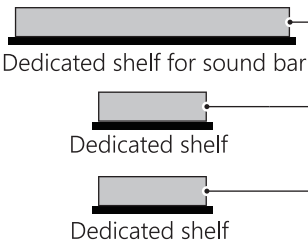

Load capacity of each shelf


Maximum load
22 lbs/10kg (S/M/L)
33 lbs/15kg (XL)

Dedicated shelf for sound bar


Maximum load
11 lbs/5kg
OR
6.6 lbs/3kg
(depending on model)

Dedicated shelf


as of August 2022

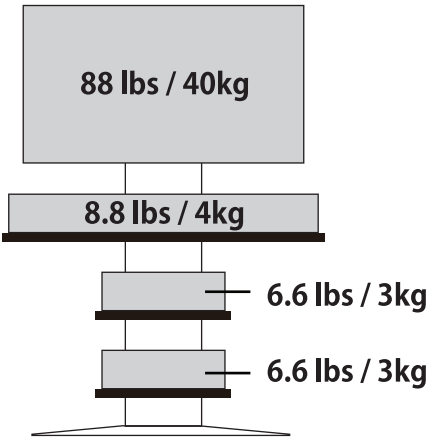


The weight of the TV, with or without shelves, does not exceed the load capacity

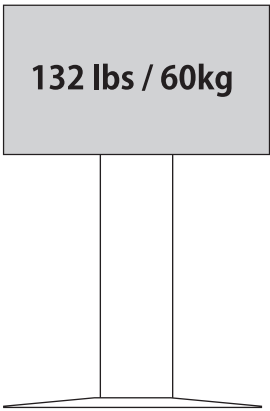

The total weight on all shelves is no more than **22 lbs / 10kg**

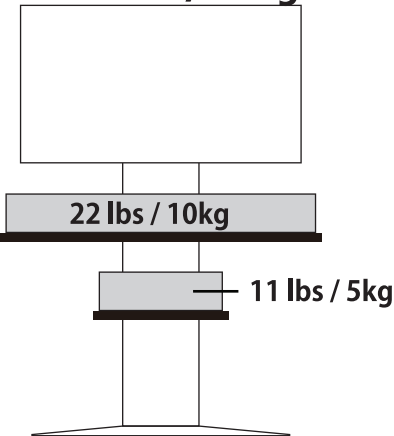

Up to **3 shelves** can be attached

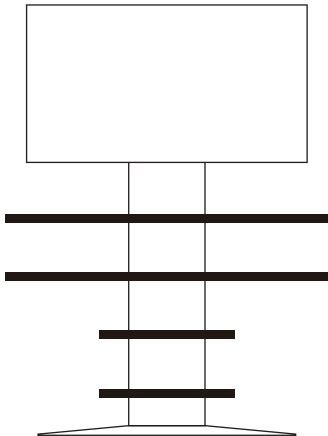


Safety precautions



caution

Failure to abide by the following advisories may result in personal injury or property damage:

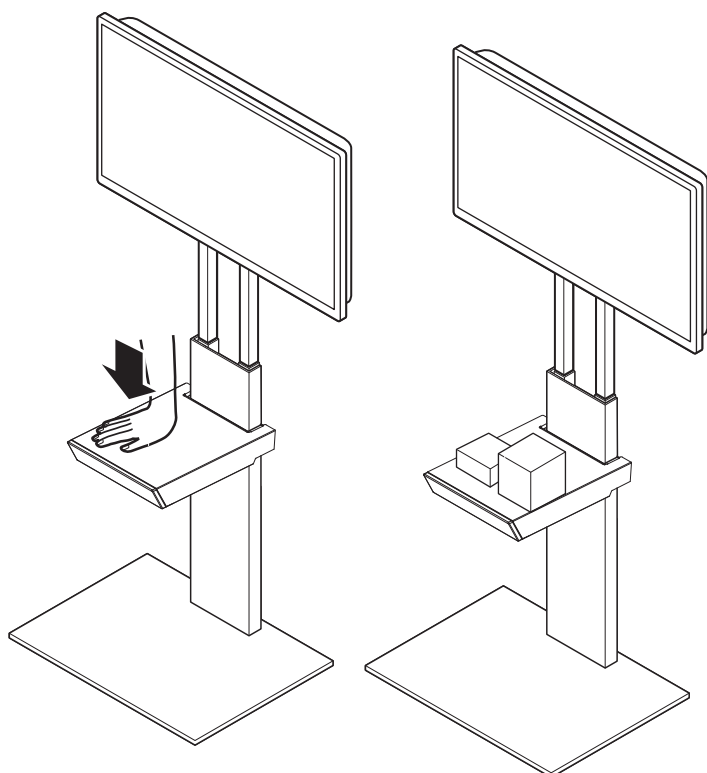


Do not push by hand from the top

The TV stand may fall over or the shelf board may fall off, resulting in damage or injury.



Do not place loads unevenly

The TV stand may fall over or the shelf board may fall off, resulting in damage or injury.

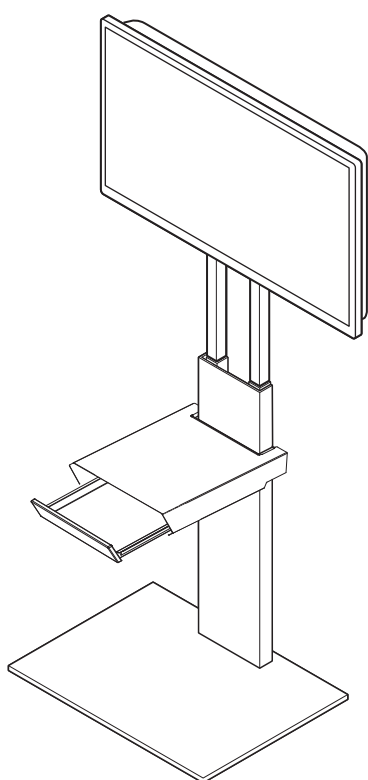

Open and close the drawer gently.

The drawer may fall off and cause damage or injury.




Be careful of the corners of the shelves

Especially when using "Game console shelf board" with "V2 Low type" or "S1", the shelf board protrudes in front of the base of the stand.



SHELF

model number	D05-24(WH) / 25(BK)
type	shelf for game
size	W30cm X D43cm X H7cm
material	steel
surface finish	powder coating
weight	11 lbs / 5kg
country of origin	China
maximum load	Overall 5kg (1kg for drawers and 0.5kg for hooks)

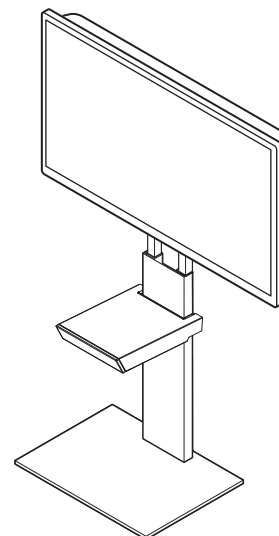

Caution If the following precautions are not observed, injury or property damage may occur.

1 Assembly and installation

1-1. Causes of injury and damage

When installing, secure all parts firmly with screws. Two or more persons install the shelves.

1-2. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or air conditioning.

1-3. Causes of falls, injury and damage

Do not push by hand from the top and apply heavy loads.

Before adjusting the height of the shelf board, remove the installed equipment and any contents of the shelves.

2 During use

Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

3 Care and maintenance

Causes of cracking, discoloration and deformation

Do not wipe the surface with a damp cloth.

Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.

- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt and wipe off any residual moisture with a dry cloth.






- Check the screws regularly and tighten them securely if they are loose. (Once a month)

Accessory parts


Some parts are included in case of loss. The extra parts are spares.

- The number in the tables is the required number.

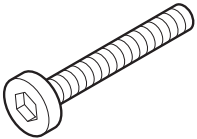
Body assembly parts

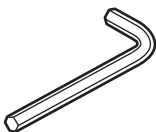A	 × 2	B	 × 2	C	 × 2
D	 × 1	Gel sheet  × 4			



Main body parts

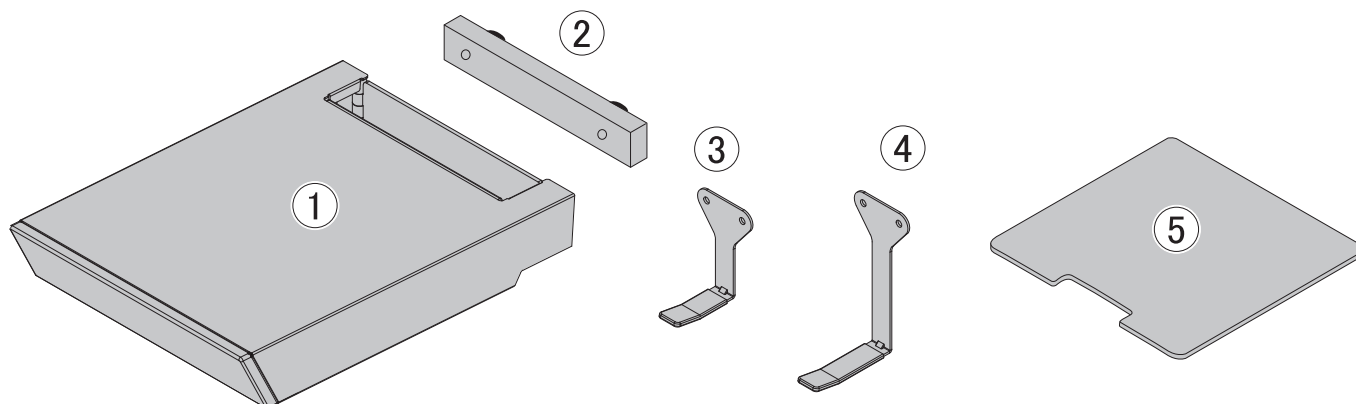

1

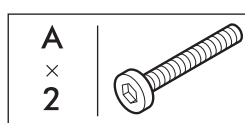


Take out the drawer

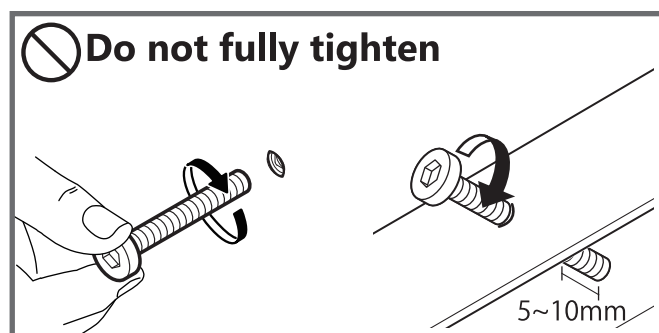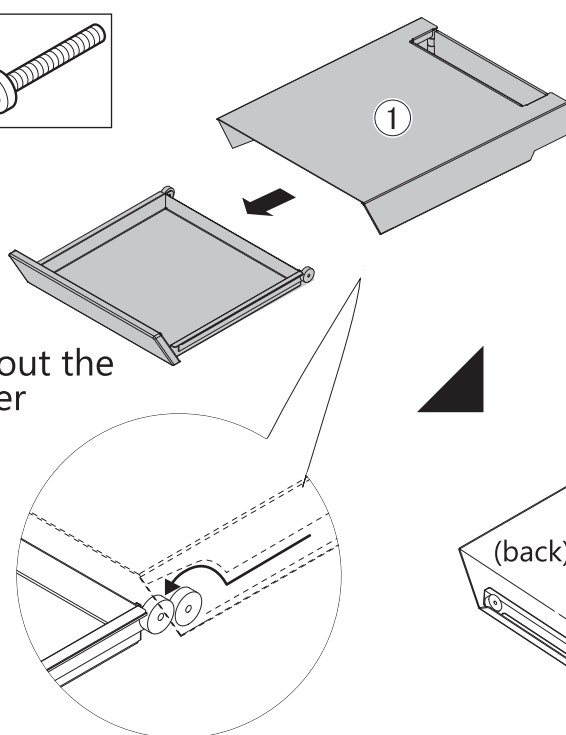


Attach the fixing plate ② to the shelf plate ①

⚠ Be careful not to drop ②

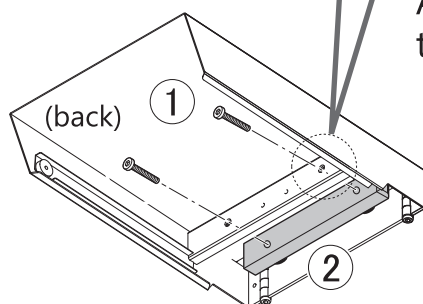


2


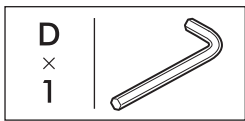


⚠ Be careful not to drop ②


⚠ Two or more persons do the installation

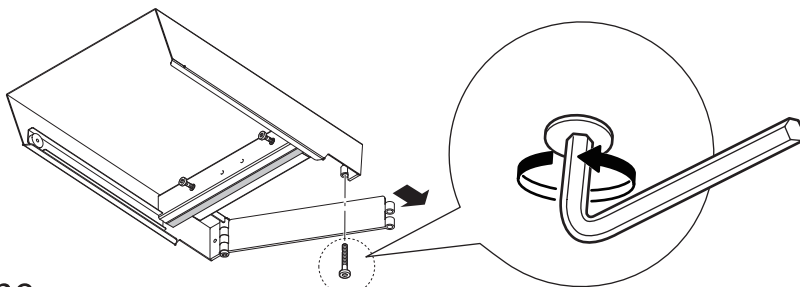

Loosen and remove the screw

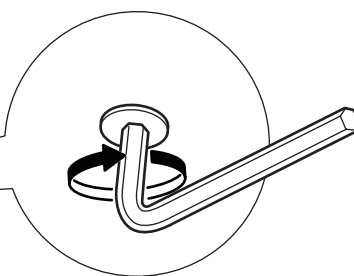
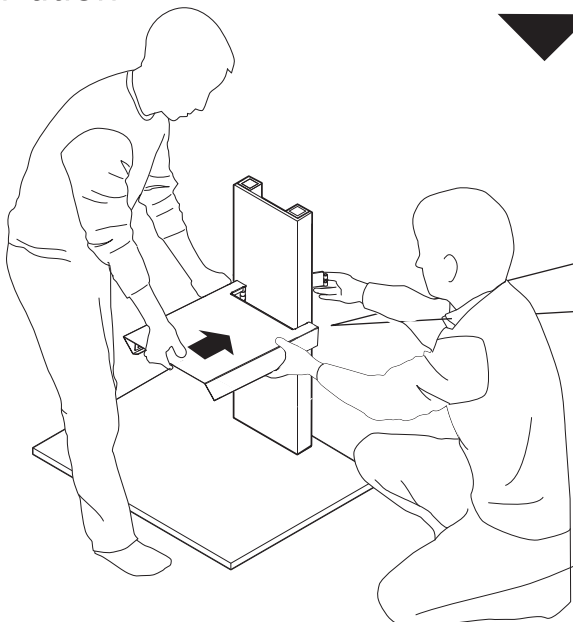


Tighten the screw

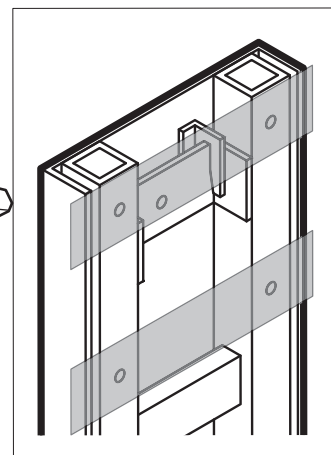




Shelf boards cannot be attached in the gray area

3 Fix the shelf board at the desired height and fully tighten the screws

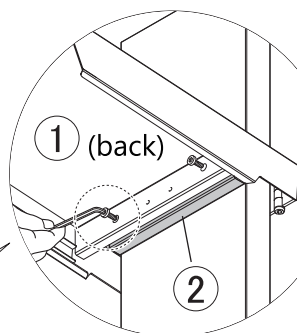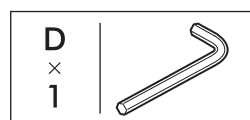



Tighten the screws to fix

Loosen

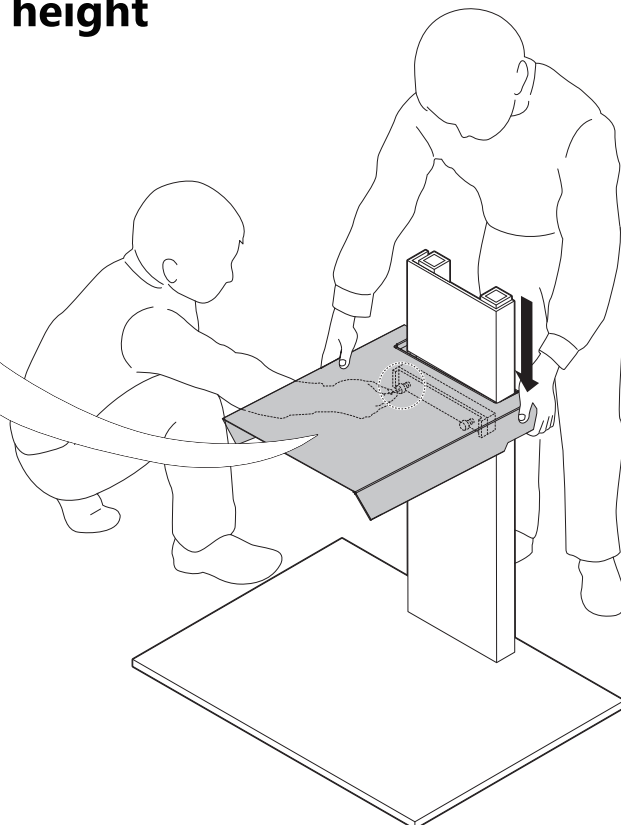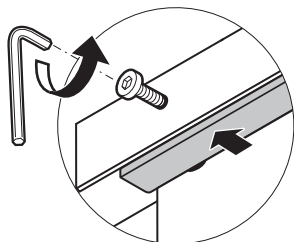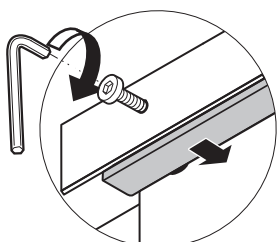


4 Attaching the hook

Please install in the designated place if necessary

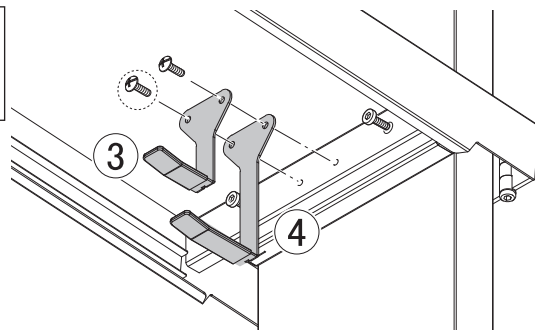

Return the drawer

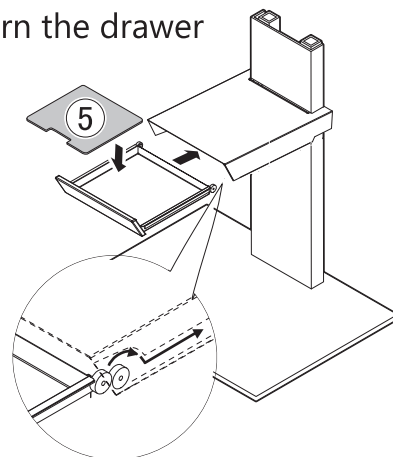

5 Stick the gel sheet on the bottom of the equipment

Gel sheet



- Remove dust, dirt, and oil from the part to be pasted with an alcohol sheet before pasting.
- If the gel sheet becomes dirty, you can use it repeatedly by washing it with water and drying it.
- When removing the Blu-ray player or game console, move it slowly to remove it.



Point

Stick it on the flat surface around the legs on the bottom of the equipment. If you stick it on the raised part of the leg, it will not be stable.

Double-sided

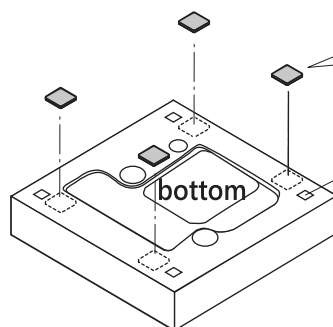
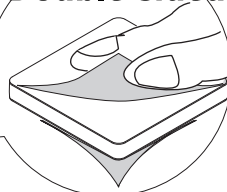


Do not block ventilation holes



Info

If the equipment has large tall legs, stick them on the back of the legs.

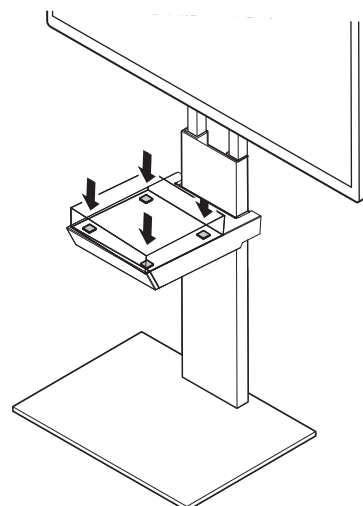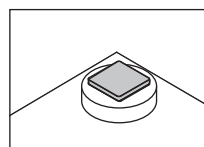

Press lightly from above, then make sure it is firmly fixed.

6

