

# サウンドバー棚板

# 組立説明書 (第5版)

この度は、お買い上げいただき誠にありがとうございました。 この商品を末永く、安全にお使いいただくために、 この「組立説明書」をよく読み正しくご使用ください。 また、これらを必要に応じて見られるよう、大切に保管してください。

### 免責事項

- ・本製品または本製品の一部の誤使用や誤用に起因するいかなる損害や負傷について、当社は一切の責任を負いません。
- ・当社は、間接的損害や派生的損害についても一切責任を負いません。



- ・本製品には、飲み込むと窒息する恐れのある小さな部品が含まれています。
- 本製品の組み立ては、お子様の手の届かないところで実施してください。
- ・以下の場合、当社はいかなる損害賠償の責任も負いません。
- 1) お客様が本製品を第三者に転売または再販された場合。
- 2) 不注意や不適切な取り扱いによる故障や破損の場合。
- 3) 他の製品との組合せにより生じた故障及び損傷の場合。
- 4) 天災、火災、環境破壊、有害物質、戦争、異常電圧、外部要因による故障または損傷の場合。
- 5) 本来の目的以外の用途に使用された場合。


この商品は日本の株式会社ナカムラの企画・品質管理によって台湾(原産国)で製造しました。 品質向上の為の改良に伴い一部仕様が異なる場合があります。

販売元 株式会社ナカムラ 〒145-0065 東京都大田区東雪谷 4-20-10

イコールズ公式 ブランドサイト https://equals.tokyo/

# 耐荷重と棚板の取り付けについてのご注意


3<sub>kg</sub>

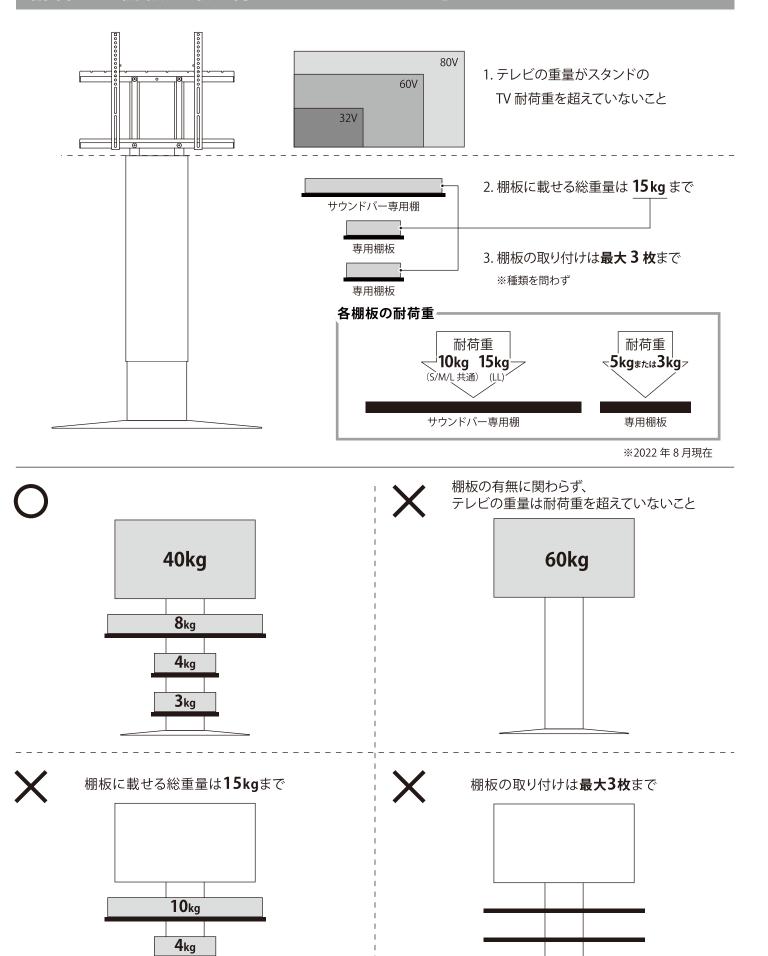

# 安全上のご注意



人が傷害を負う可能性及び物的損害の発生が想定される内容を示しています。 人への危害、財産の損害を防止するため、必ずお守りください。

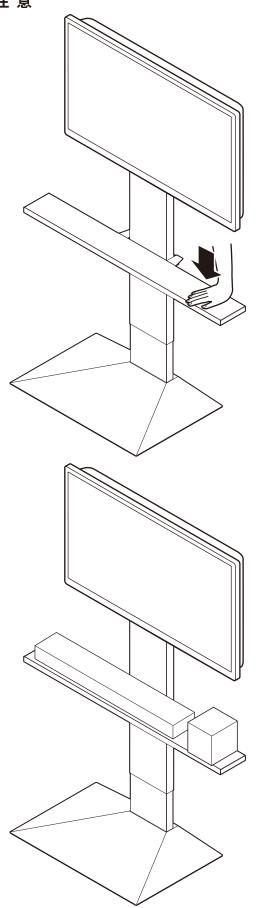



# 手をつかない。

テレビスタンドが倒れたり、棚板が脱落して、 破損やけがの原因となります。




## 荷重を偏らせない。

テレビスタンドが倒れたり、棚板が脱落して、 破損やけがの原因となります。



# サウンドバー棚板

品 番	BK : M05-149 (S) / 150 (M) / 151 (L) WH : M05-178 (S) / 179 (M) / 180 (L)
種 類	サウンドバー専用棚
サイズ	W 60/95/118 D19.5 /19.5/21.5 H 4.5 cm
材質	スチール
表面加工	粉体塗装
重量	2.5 / 3 / 3.5 kg
原産国	
耐荷重	10kg

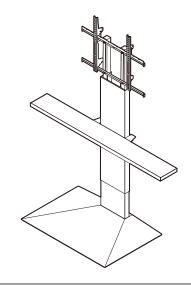

## ⚠ 注意

注意を無視した取扱いをすると、物質損害を被ったり、障害を負う可能性があります。

#### \_\_\_\_\_ **1** 組立・設置の注意

#### 1-1. けが、破損の原因

取り付けの際は必ず2人以上で行い、ネジでしっかり固定する。

#### 1-2. 変色や破損の原因

屋内で使用する。直射日光や熱、冷暖房の風があたらない場所に置く。

### 1-3. 転倒、けが、破損の原因

棚板に手をついたり、集中的に荷重をかけない。

棚板の高さを調整する際は、設置された機器を取り外してから行う。

### 1-4. 火災や故障の原因

サウンドバーの通風孔をふさぐと内部に熱がこもり、火災の原因となることがあるので、

通風孔をふさがないように設置する。

### 2 使用の注意

#### におい

開梱時、梱包材や塗料などのにおいが残っている場合があります。固く絞った布でよく拭き、

風通しのよいところへしばらく放置する。

### 3 お手入れの注意

#### ひび割れや変色、変形の原因

表面を水気の多いぞうきんなどでふかない。


クレンザー、シンナー、ベンジン、アルコール、灯油などは使わない。(化学ぞうきんはその注意書きに従う)


※薄めた中性洗剤を浸した柔らかい布を固く絞って汚れを落とし、乾いた布で水分をよくふき取ってください。

※ねじは定期的に点検し、緩んでいるときはしっかり締めてください。(1カ月に1度が目安です。)

# 付属部品の確認


# 本体部品の確認

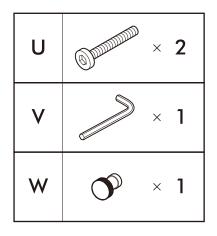

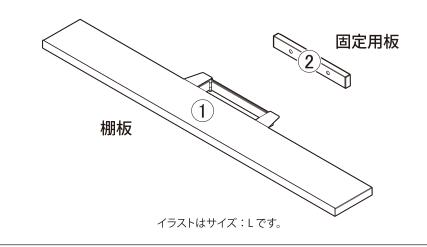




### 2 本体に棚板をはさむ

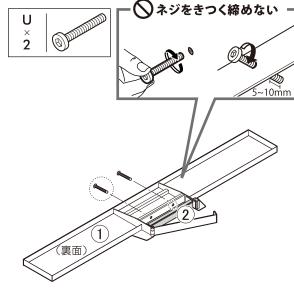









棚板の取り付けは2人以上でおこなう。

脱着は固定用板 2 がゆるんでいる状態でおこなってください。

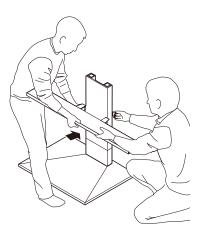

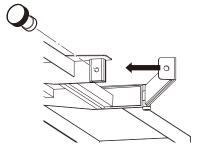




棚板を本体にあてがい、

W を入れておく。

Point 3 で固定することにより、 ロックされます。

## 3 高さを決めて棚板を固定する

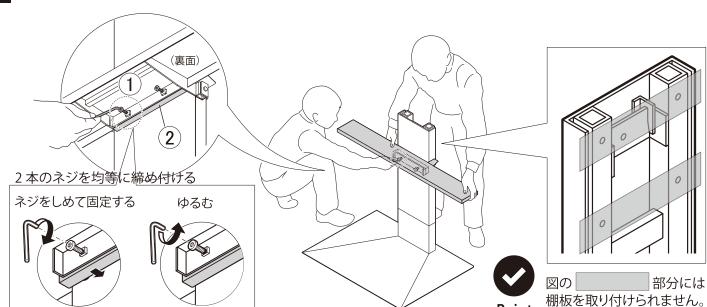



# **Assembly Instructions** [5th Edition]

Thank you for purchasing this product.

In order to use this product safely and for many years, please read this document carefully and use the product correctly. Also, keep this in a safe place so that you can refer to it as needed.

## **Please Note**

- Nakamura Co. Ltd. assumes no responsibility for damage or injury of any kind because of the misuse or improper application of any part of this product in any way by any person.
- · Nakamura Co. Ltd. shall not be liable for any indirect or consequential damages whatsoever.
  - **•THIS PRODUCT CONTAINS SMALL ITEMS THAT COULD BE A CHOKING HAZARD IF SWALLOWED.**
  - ·KEEP ALL PRODUCTS OUT OF THE REACH OF CHILDREN WHILE ASSEMBLING.

Nakamura Co. Ltd., in its own name or as EQUALS, shall not be responsible for any damages in the following cases:

- 1) When the customer resells the product to a third party.
- 2) In case of failure or damage due to careless or improper handling.
- 3) In case of failure or damage caused by use in combination with other products.
- 4) In case of natural disaster, fire, environmental destruction, harmful substances, war, abnormal voltage or malfunction or damage due to external factors.
- 5) If product is used for purposes other than the original purpose.


This product was manufactured in Taiwan (country of origin) under the planning and quality control of Nakamura Corporation of Japan. Some specifications may differ due to improvements for better quality.


Nakamura Co. Ltd.

Officail brand site: https://equals.tokyo/

Contact us in English: info-gl@nakamura-jpn.co.jp

## Precautions regarding load capacity and installation of shelf

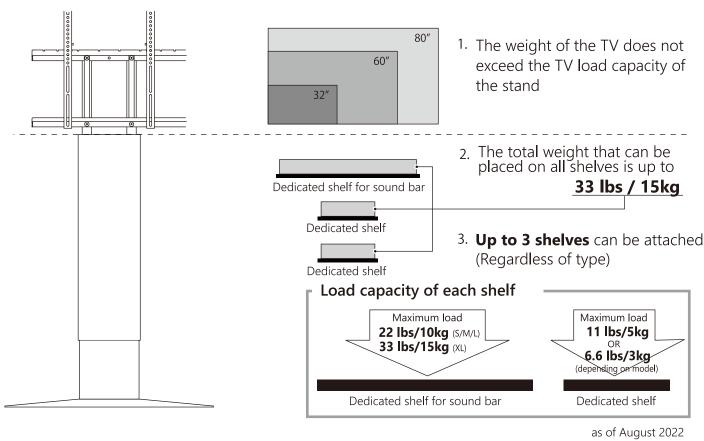


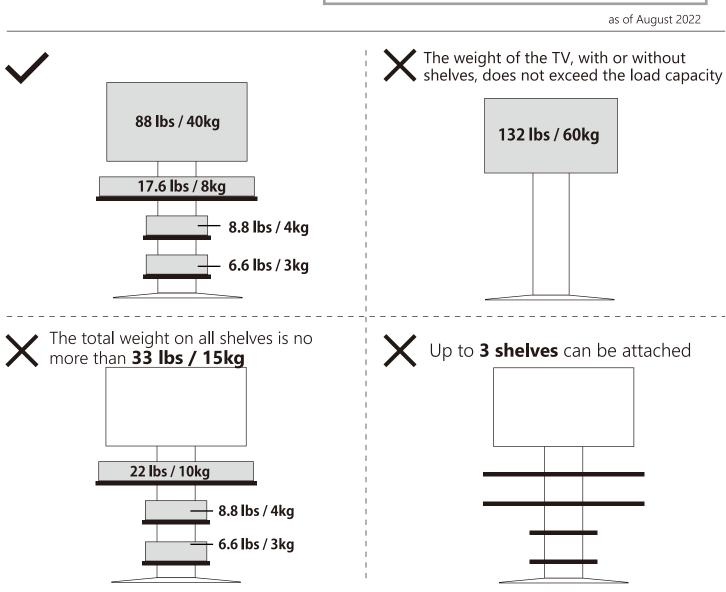

# Safety precautions



Failure to abide by the following advisories may result in personal injury or property damage:

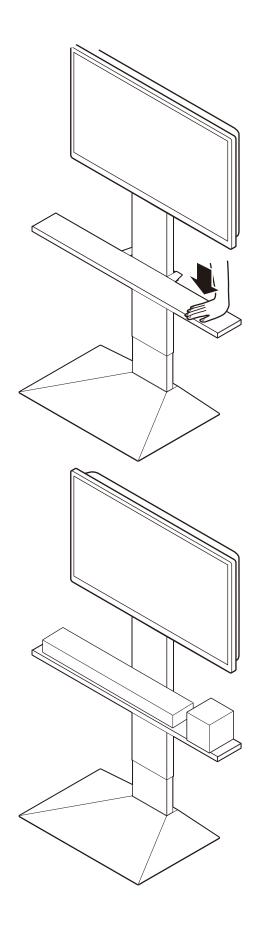



The TV stand may fall over or the shelf board may fall off, resulting in damage or injury.




The TV stand may fall over or the shelf board may fall off, resulting in damage or injury.



# **SOUNDBAR SHELF**

model number	BK: M05-149(S) / 150(M) / 151(L) WH: M05-178(S) / 179(M) / 180(L)			
type	soundbar shelf			
size	W60/95/118cm X D19.5/19.5/21.5cm X H4.5cm			
material	steel			
surface finish	powder coating			
weight	5.5/6.6/7.7 lbs   2.5/3/3.5kg			
country of origin	Taiwan			
maximum load	22 lbs / 10kg			

DI/ NAOF 440/C) /4F0/NA) /4F4/L)

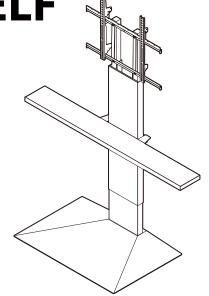

# **△**Caution

If the following precautions are not observed, injury or property damage may occur.

## 1 Assembly and installation

### 1-1. Causes of injury and damage

When installing, secure all parts firmly with screws. Two or more persons install the shelves.

### 1-2. Causes of discoloration and damage

For indoor use. Keep away from direct sunlight, as well as direct airflow from heating or air conditioning.

### 1-3. Causes of falls, injury and damage

Do not push by hand from the top and apply heavy loads.

Before adjusting the height of the shelf board, remove the installed equipment and any contents of the shelves.

### 1-4. Cause of fire or malfunction

If you block the ventilation holes of the sound bar, heat may be trapped inside and cause a fire, so install it so that the ventilation holes are not blocked.

## 2 During use

### Cause of odor

When unpacking, there may be residual smells from packing materials or paint. Wipe well with a clean dry cloth and leave in a well-ventilated place for a while.

## 3 Care and maintenance

## Causes of cracking, discoloration and deformation


Do not wipe the surface with a damp cloth.


Do not use cleanser, thinner, benzene, alcohol, kerosene, etc.


- Use a soft cloth soaked in a diluted neutral detergent, tightly wrung, to remove dirt and wipe off any residual moisture with a dry cloth.
- Check the screws regularly and tighten them securely if they are loose. (Once a month)

# **Accessory parts**

# Main body parts

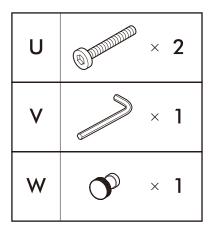

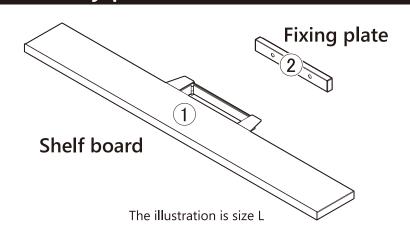


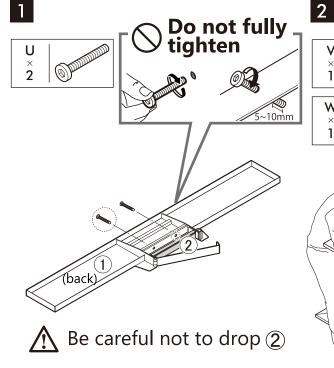

# **⚠** caution

Insert the shelf board in the main body

Make sure that the fixing plate (2) is loose before attaching or detaching

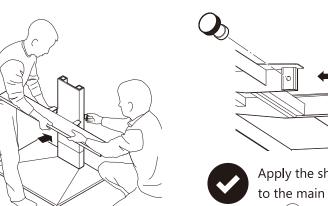



Apply the shelf board to the main body and put (W) in it.

It is locked by fixing it with 3

## 3 Determine the height and fix the shelves

